


Audi A3 Sportback (5D)
Audi A3 (3D)

(07/2008 - 01/2013)
(07/2008 - 04/2012)

A-067


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

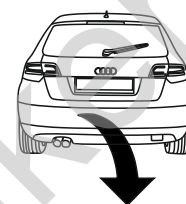



YES NO






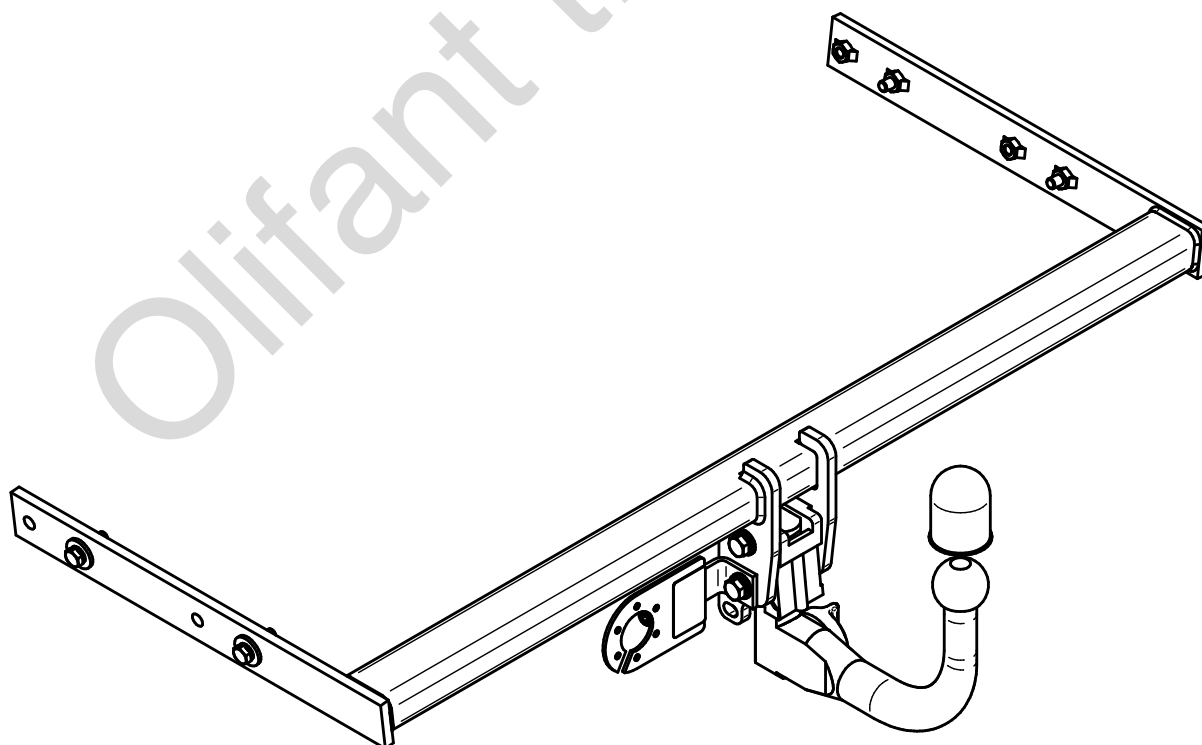


YES NO







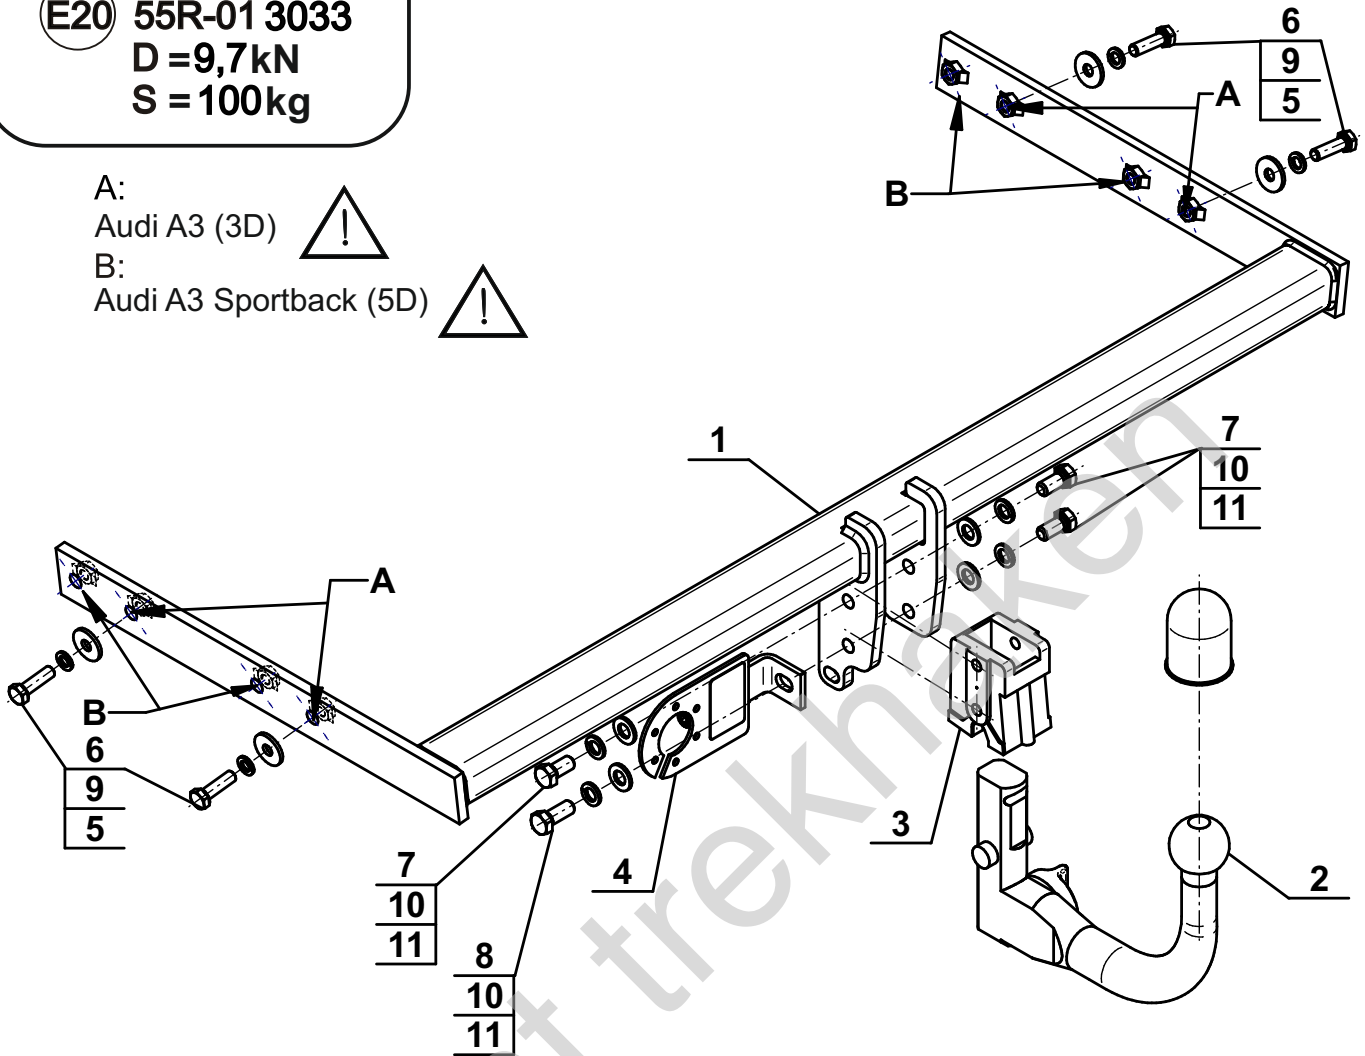


Typ: A-067
 A50-X
 (E20) 55R-01 3033
 D = 9,7kN
 S = 100kg

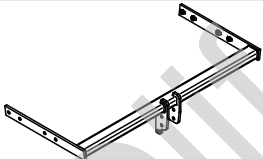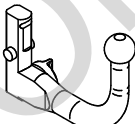A:
 Audi A3 (3D) 
 B:
 Audi A3 Sportback (5D) 




1		x1
2	 (ACS-6004)	x1
3		x1
4	 =  (CZ-050.00)	x1

5		Ø30/Ø10,5x3	x4
6		M10x35 (PN/M-82105) (8.8)	x4
7		M12x25 (PN/M-82105) (8.8)	x3
8		M12x30 (PN/M-82105) (8.8)	x1
9		Ø10,2	x4
10		Ø12,2	x4
11		Ø13,0	x4




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

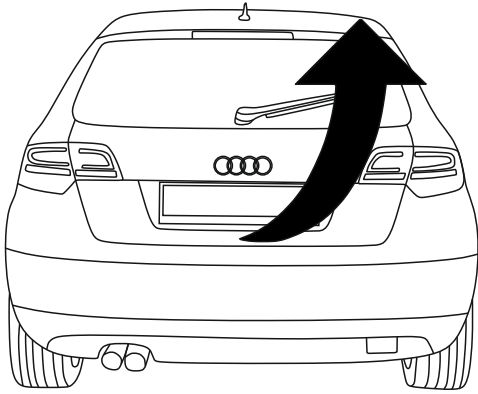

2

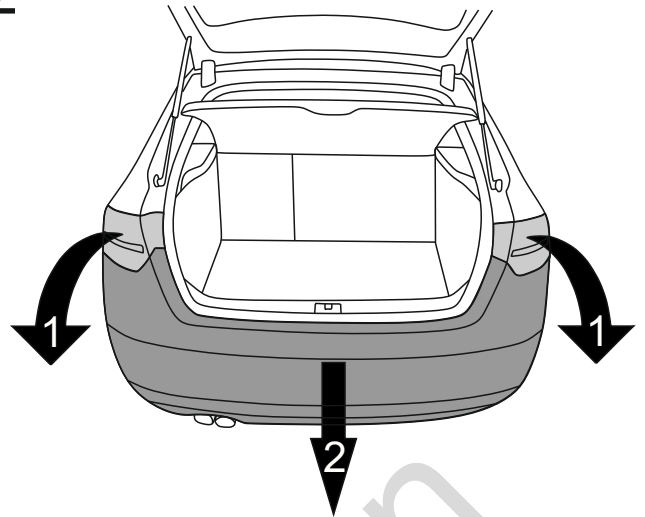


3


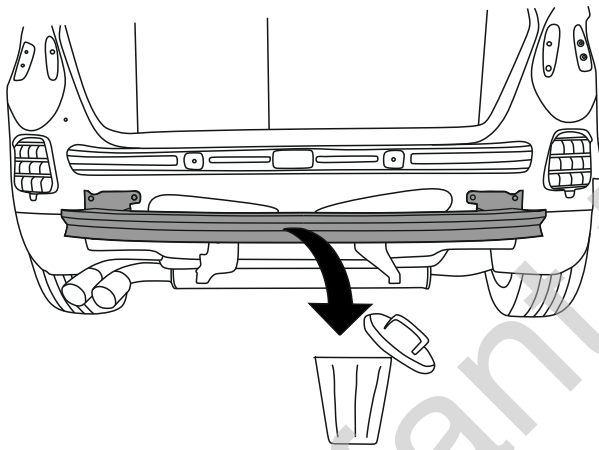


4


A: Audi A3 (3D)
 B: Audi A3 Sportback (5D)




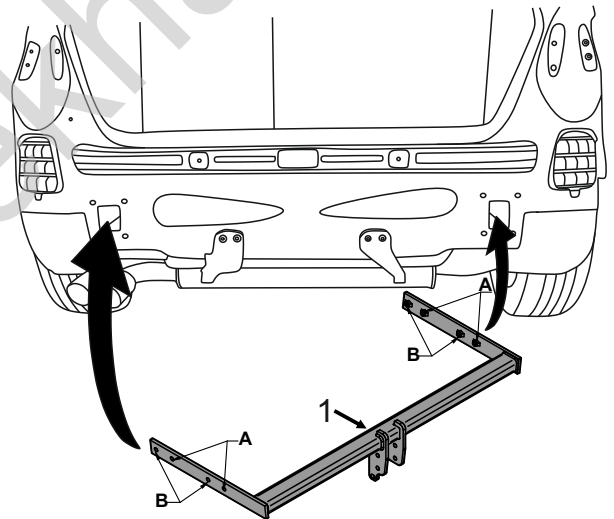


5

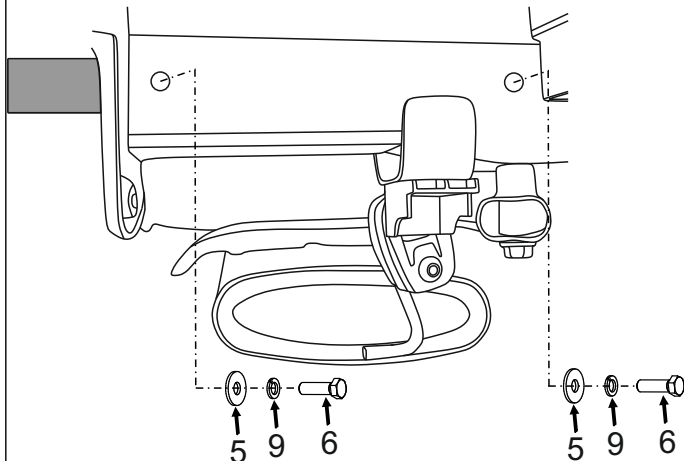

6

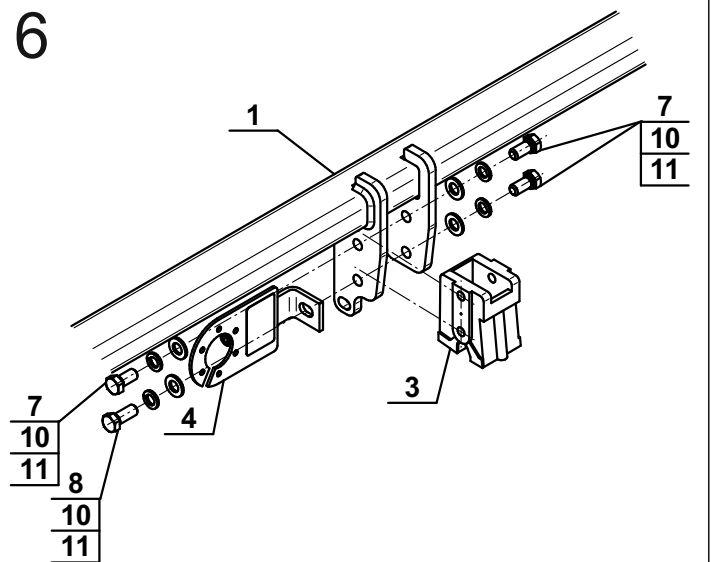

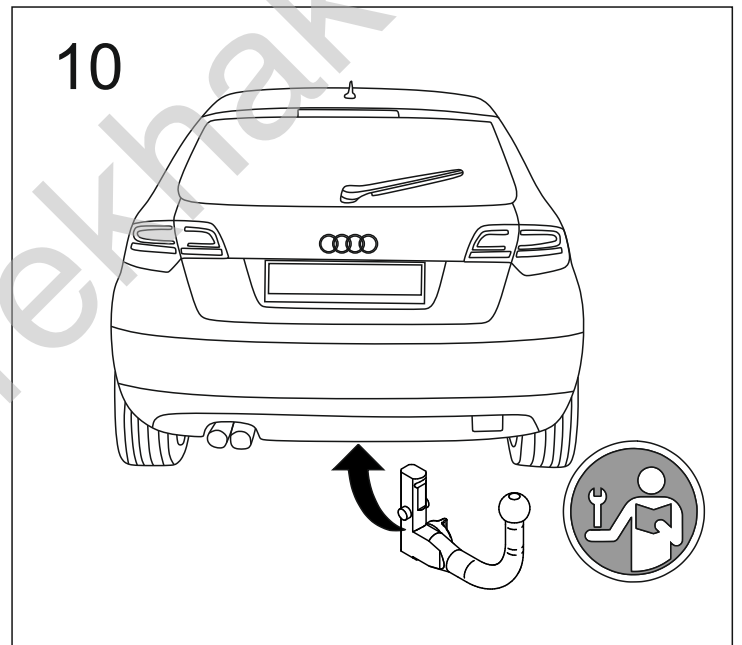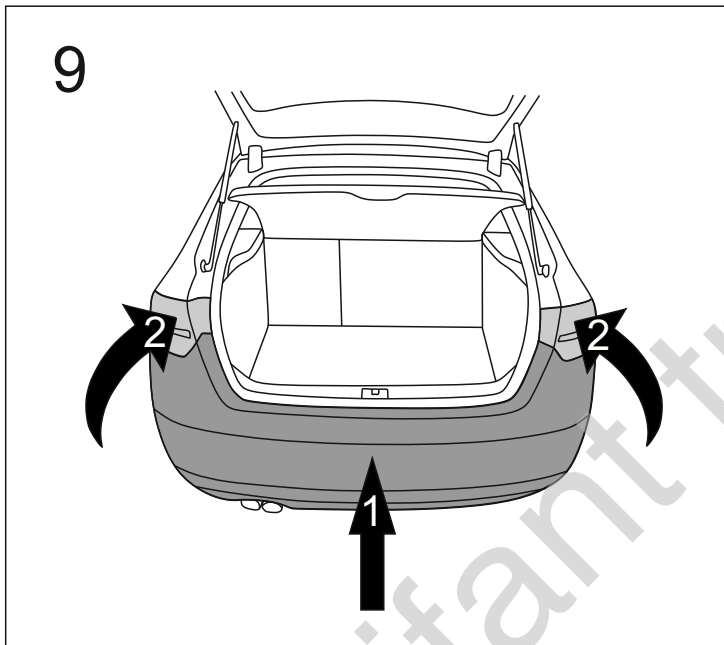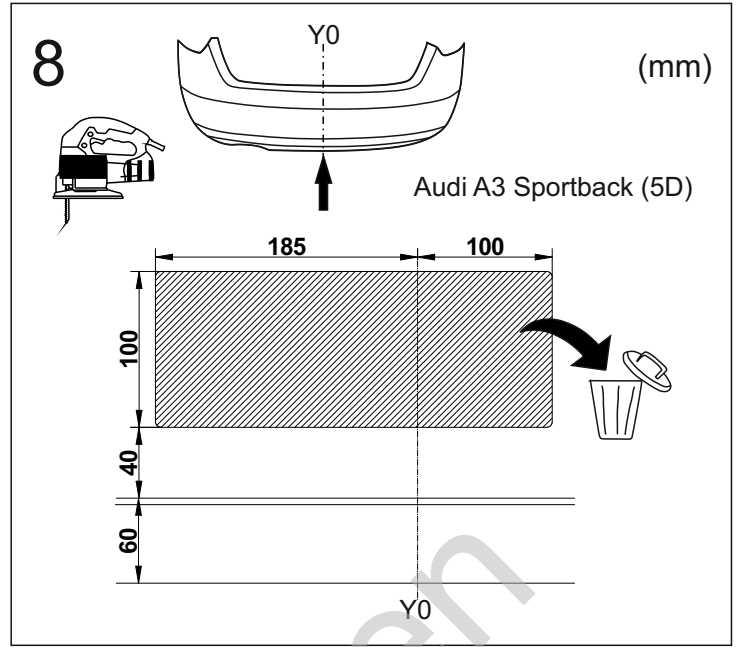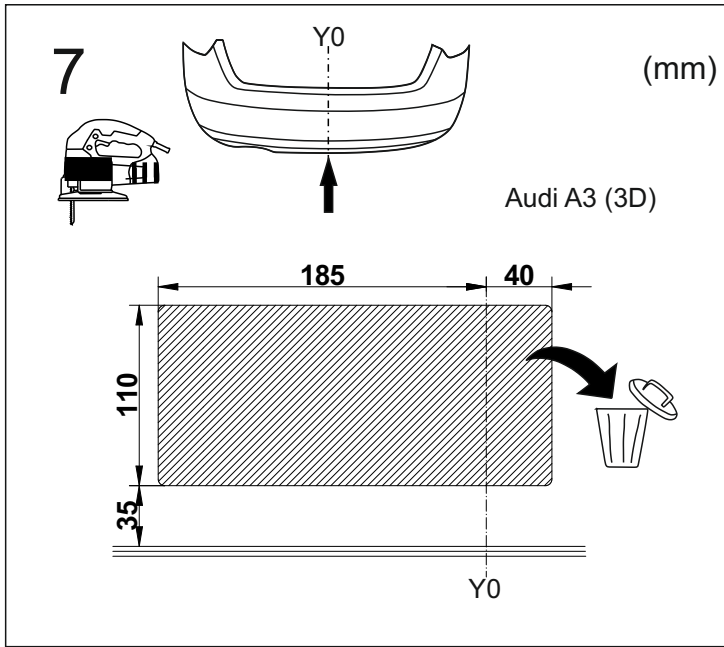

Olifanttrekkraken