


**VW Crafter Van, Minibus**  
**Mercedes Sprinter II Van, Minibus**  
**Mercedes Sprinter III Van, Minibus**

**(2006 -12/2016)**  
**(2006 - →)**  
**(2018 - →)**

**V-033**


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

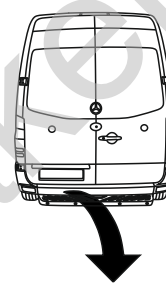



YES  NO



YES  NO

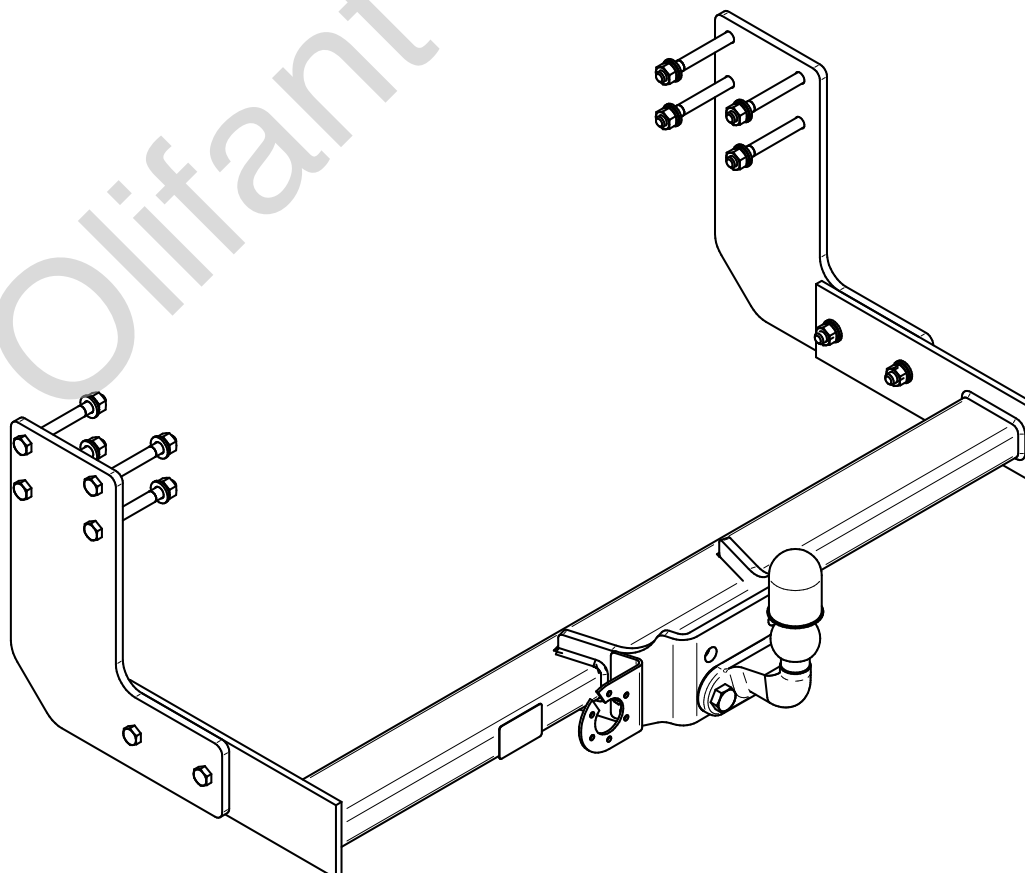







Typ: V-033  
 A50-X  
 E20 55R-02 6132  
 D = 17,2kN  
 S = 140kg

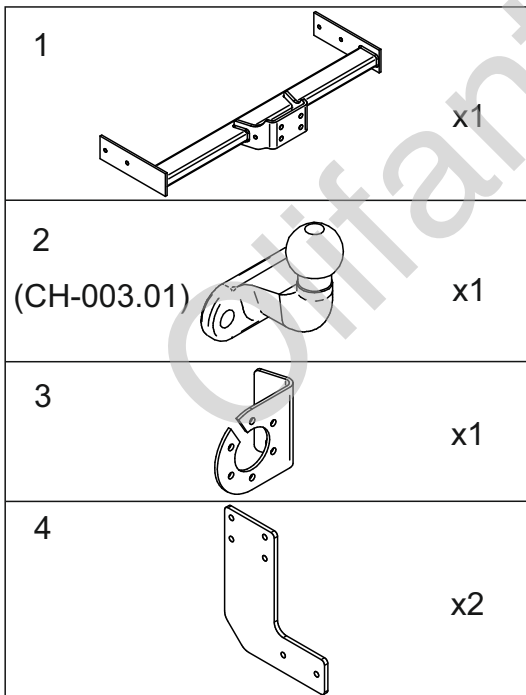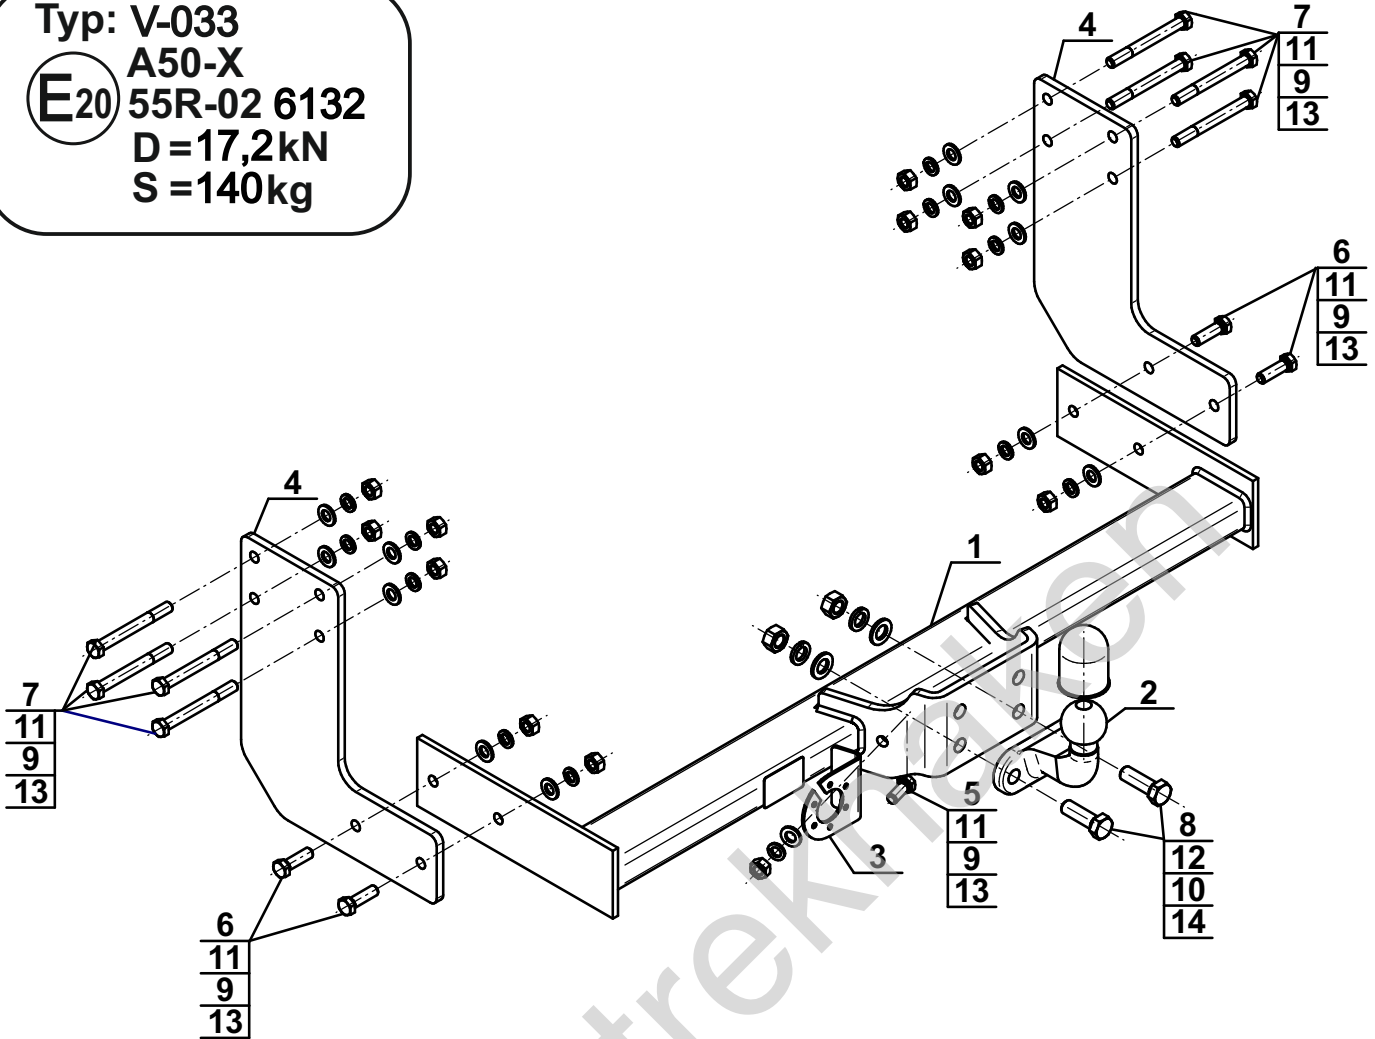


5		M12x30	(PN/M-82105) (8.8)	x1
6		M12x40	(PN/M-82105) (8.8)	x4
7		M12x110	(PN/M-82101) (8.8)	x8
8		M16x50	(PN/M-82105) (8.8)	x2
9		Ø12,2		x13
10		Ø16,3		x2
11		Ø13,0		x13
12		Ø17,0		x2
13		M12 (8)		x13
14		M16 (8)		x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

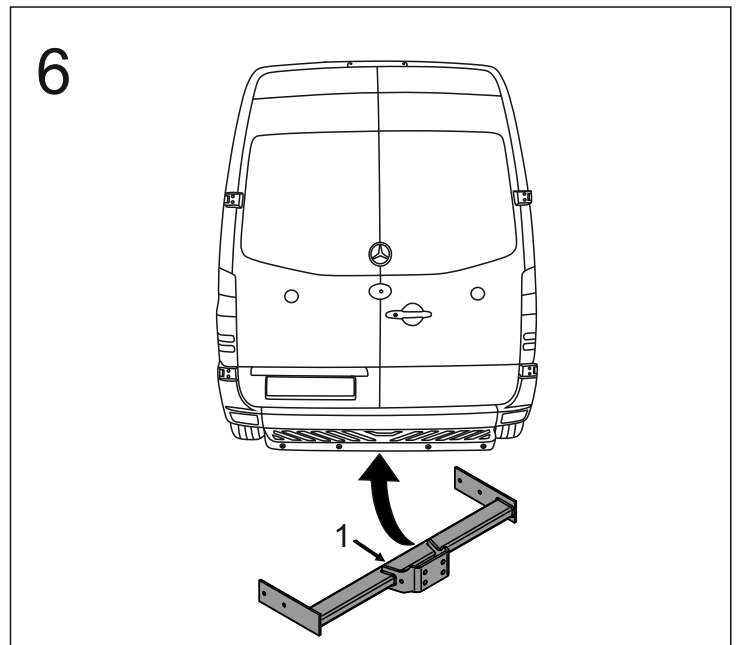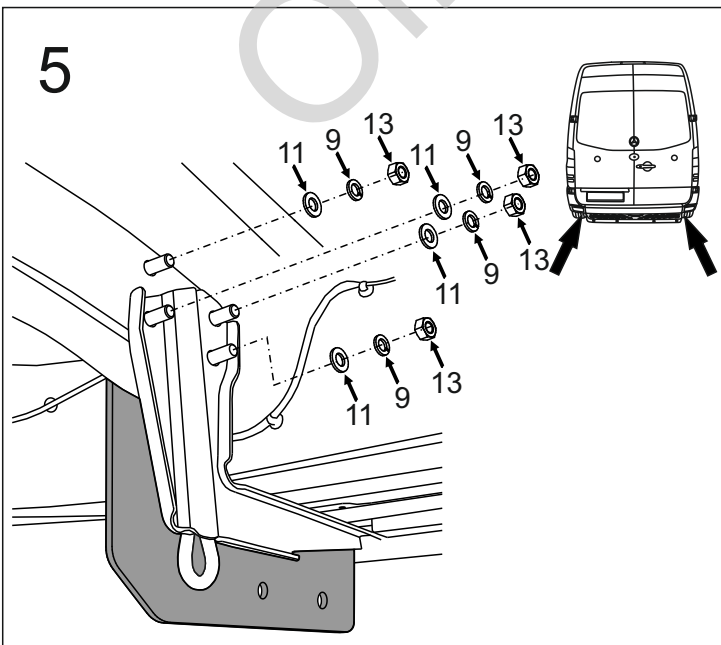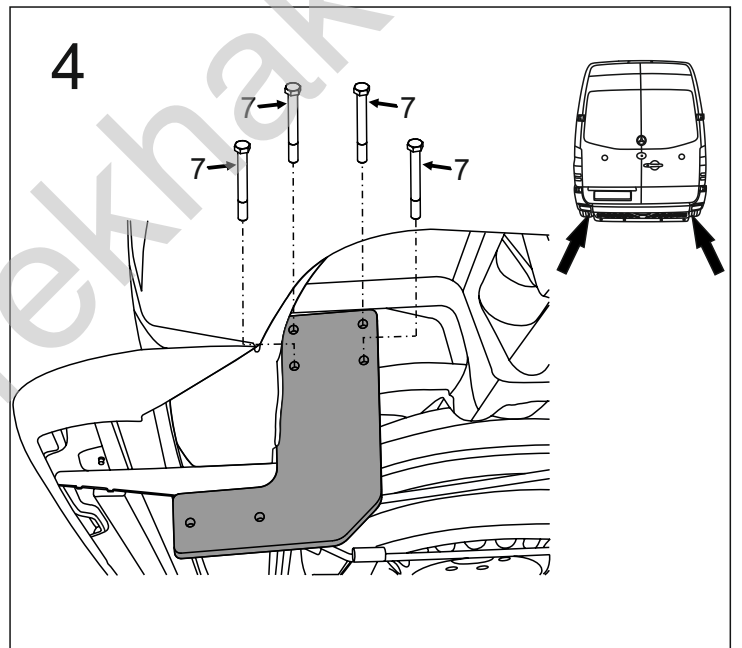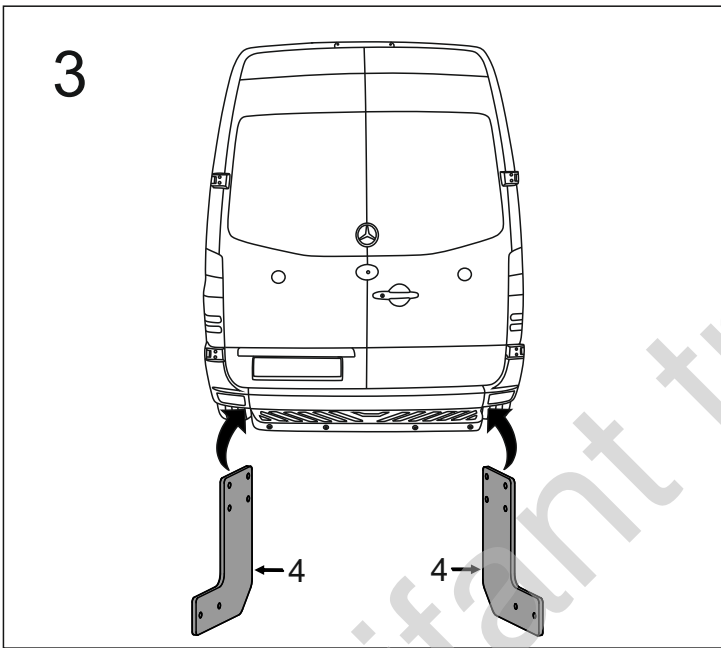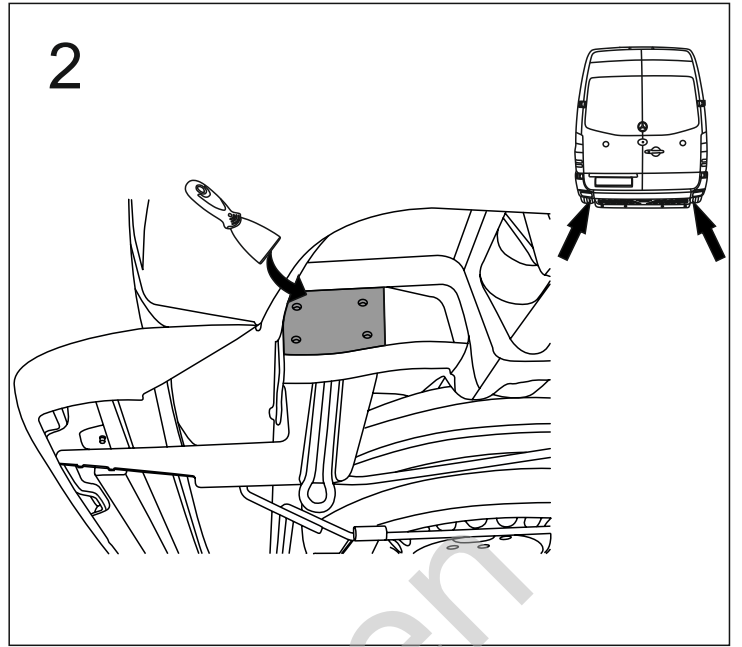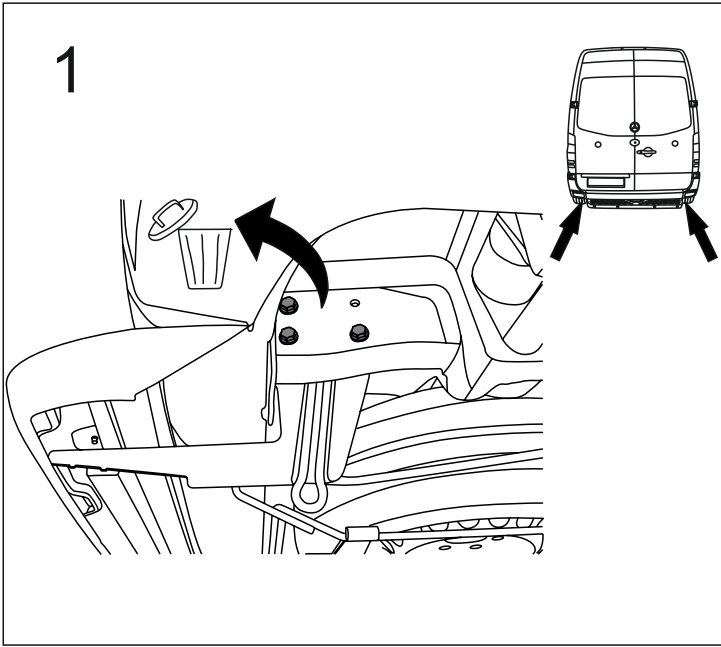

7

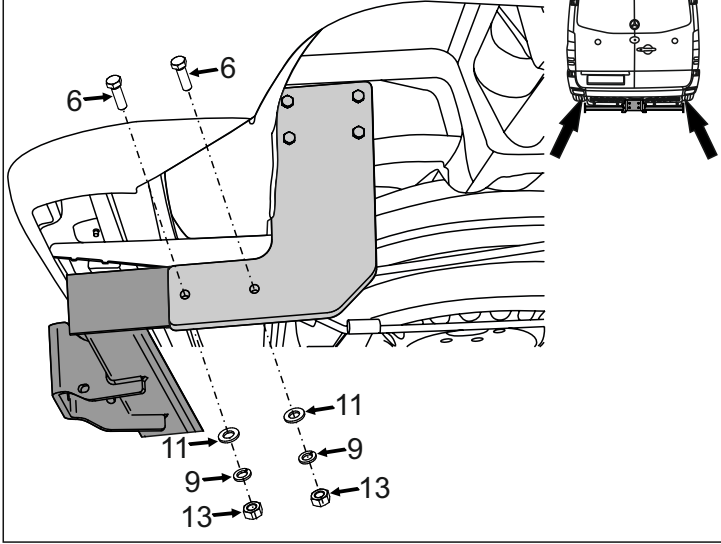

8

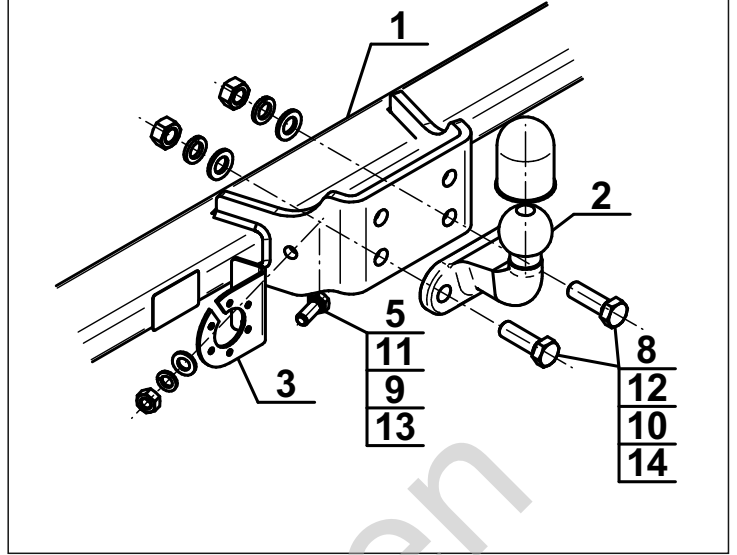

Olifant trekhaken