

**Kia Sorento**  
**Hyundai Santa Fe (DM)**  
**Hyundai Grand Santa Fe (NC)**

**(11/2012 - 2015)**  
**(09/2012 - →)**  
**(2013 - 2019)**

**K-036**


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.




YES  NO



YES  NO

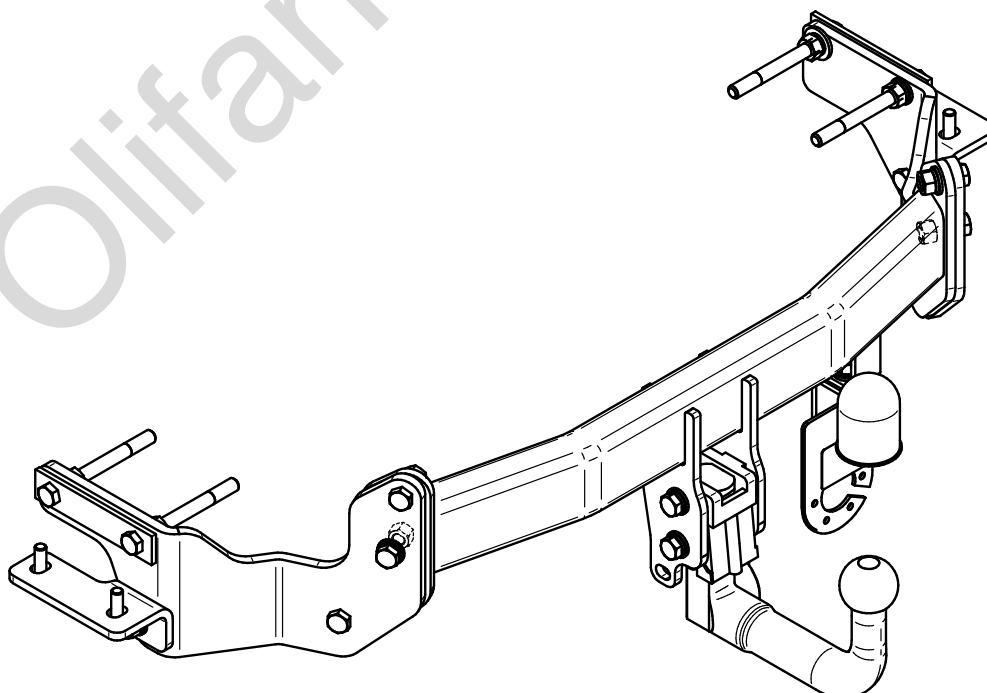

Typ: K-036  
 A50-X  
 E20 55R-01 3472  
 D = 12,6kN  
 S = 100kg

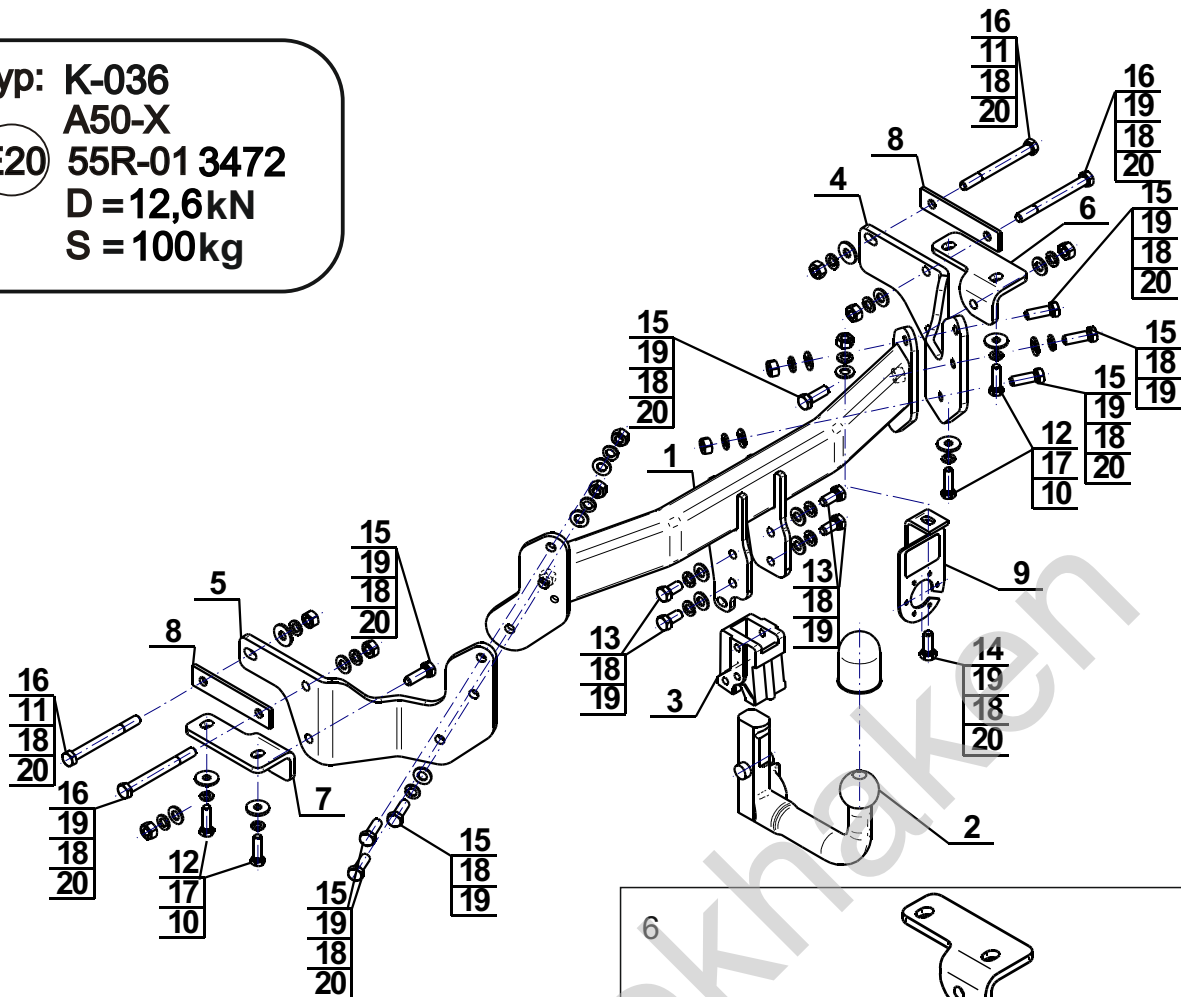


1		x1
2	(ACS-6023)	x1
3		x1
4		x1
5		x1

6		x1
7		x1
8		x2
9	=  (CZ-050.00)	x1
10		Ø30/Ø10,5x3 x4
11		Ø30/Ø12,5x3 x2
12		M10x1,25x35 (PN/M-82105) (8.8) x4
13		M12x25 (PN/M-82105) (8.8) x4
14		M12x30 (PN/M-82105) (8.8) x1
15		M12x35 (PN/M-82105) (8.8) x8
16		M12x120 (PN/M-82101) (8.8) x4
17		Ø10,2 x4
18		Ø12,2 x17
19		Ø13,0 x15
20		M12 (8) x11




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

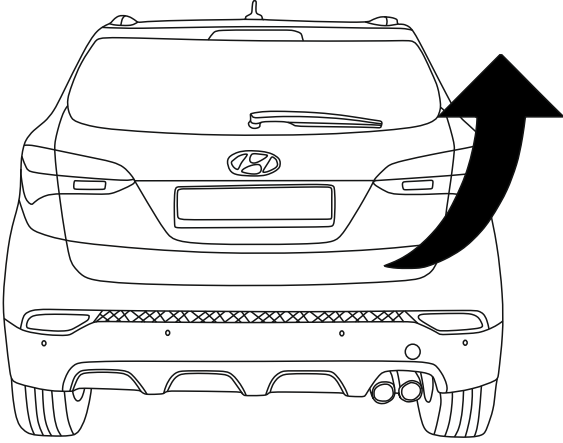


2

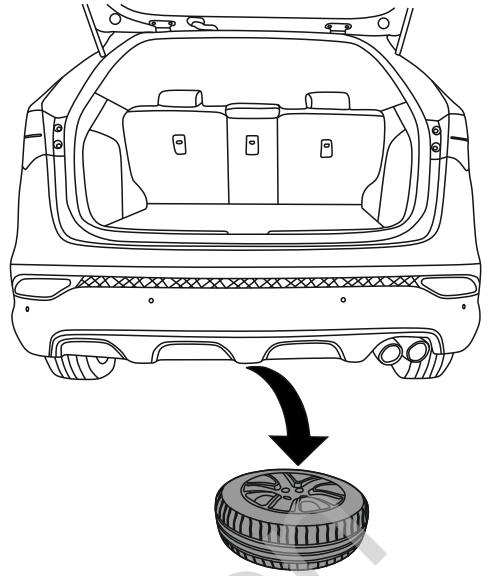


3

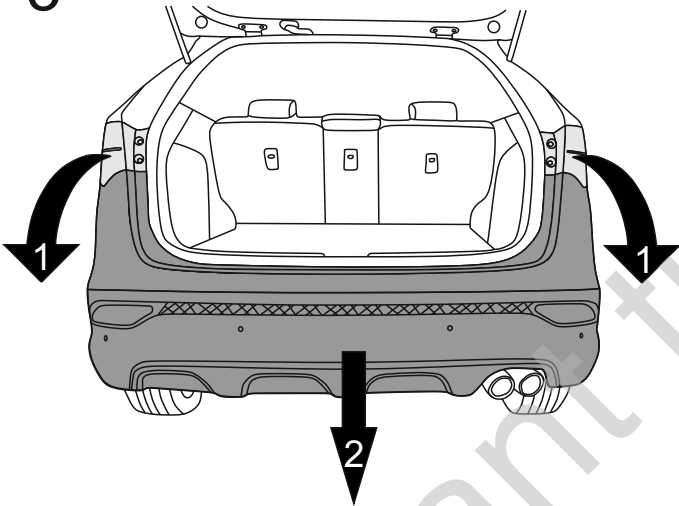


4






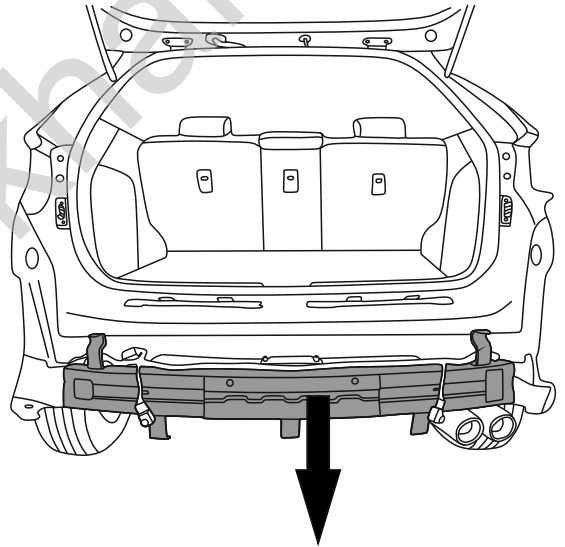


5


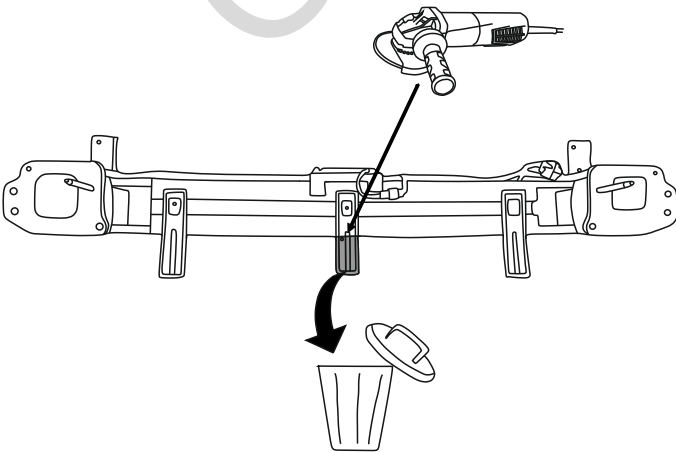


6

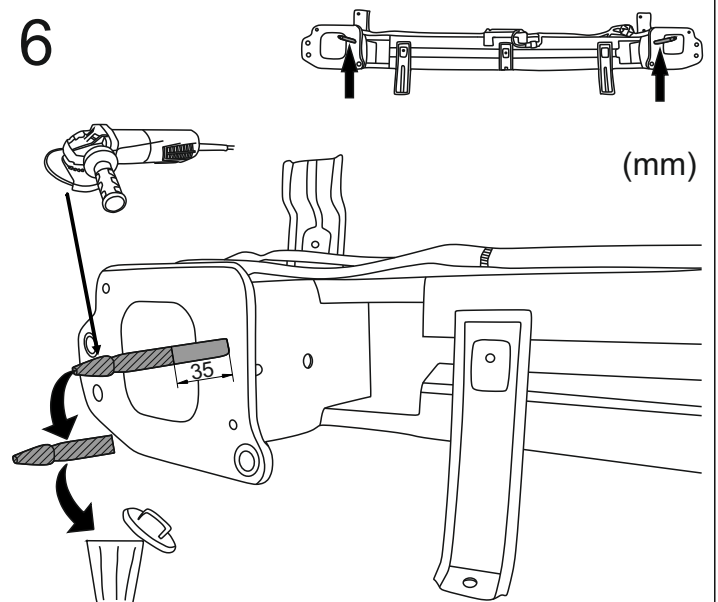


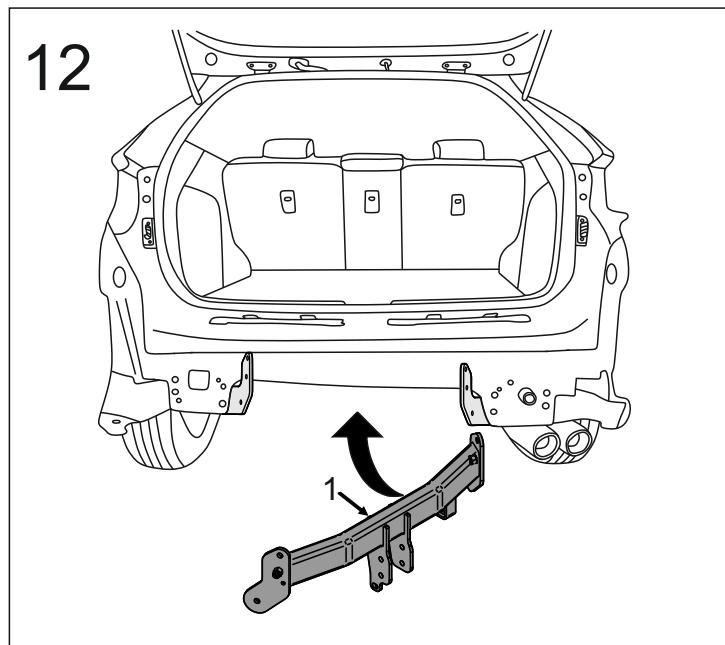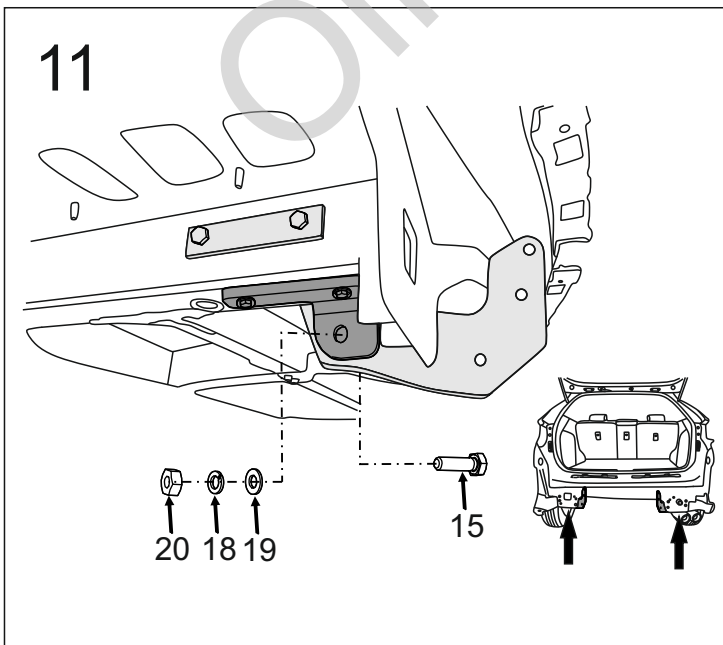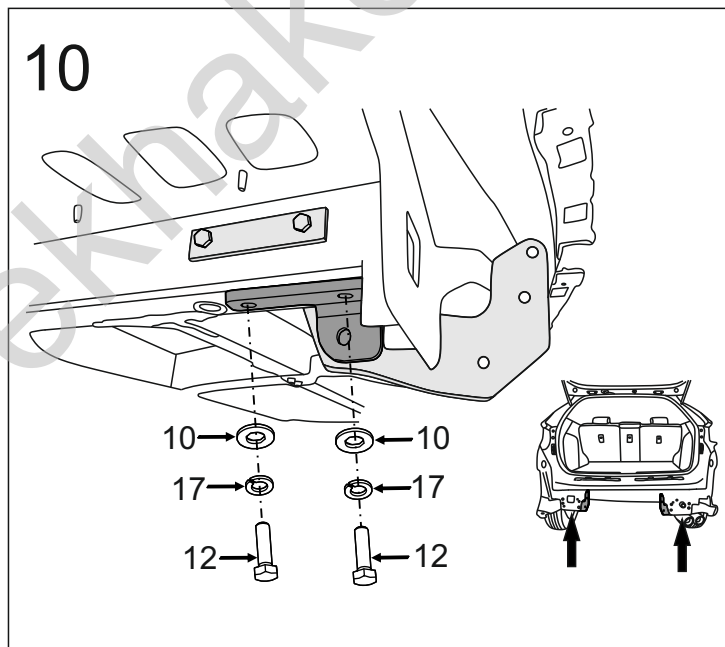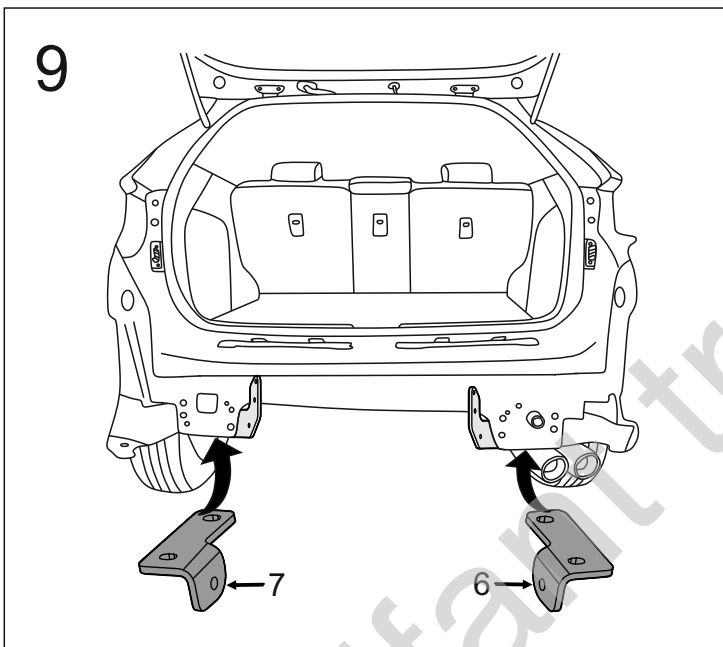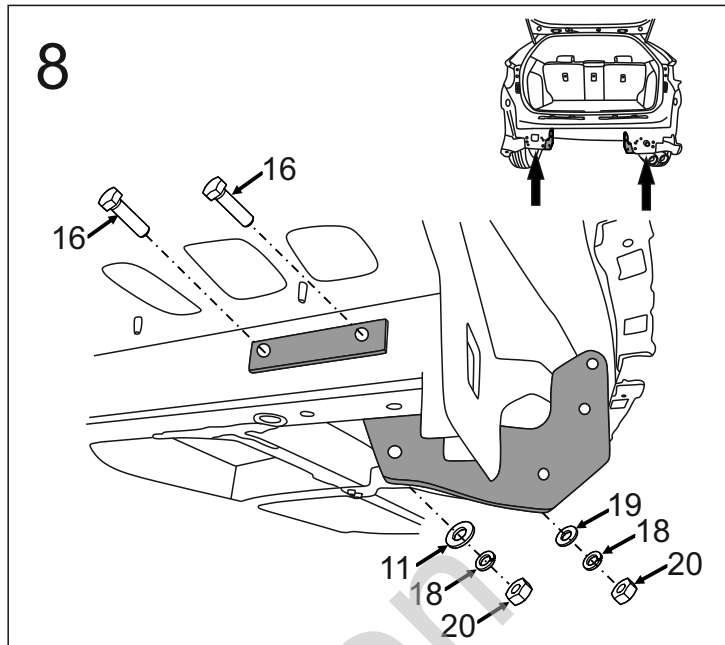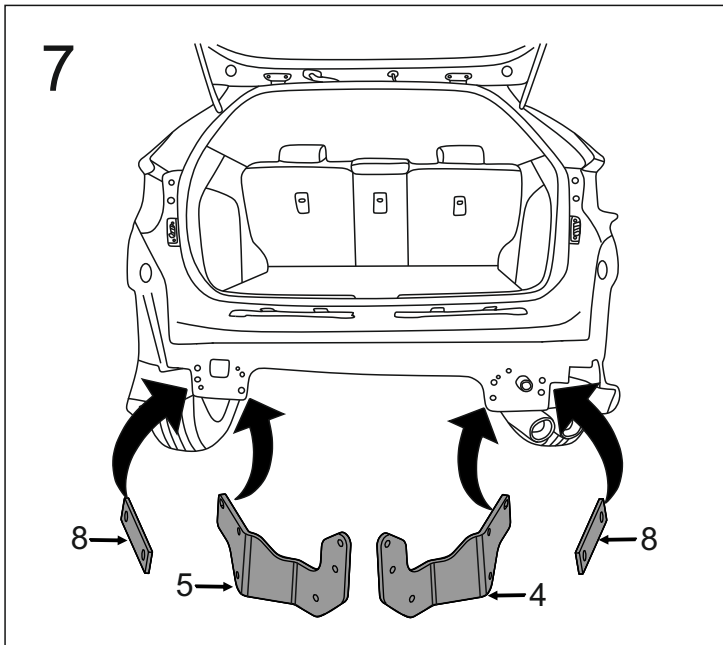


13

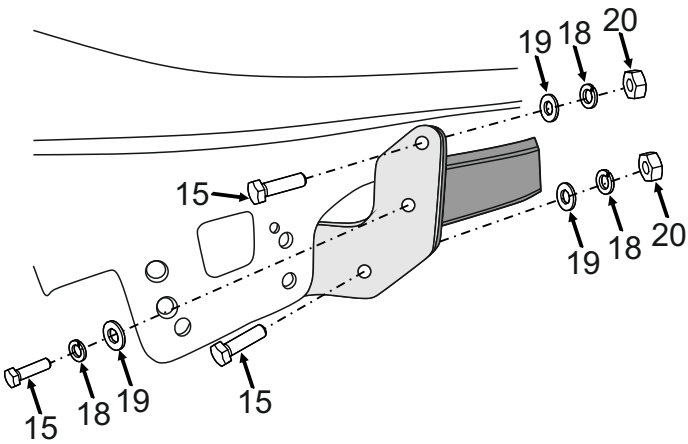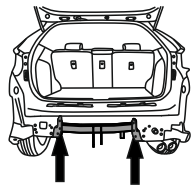

14

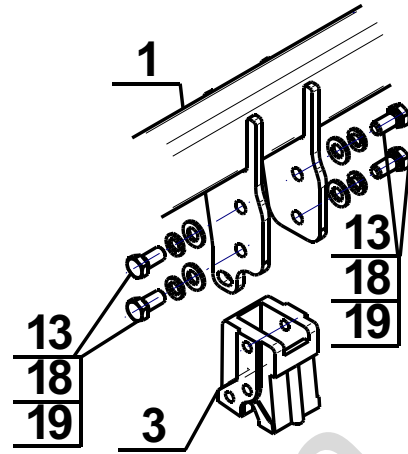


15

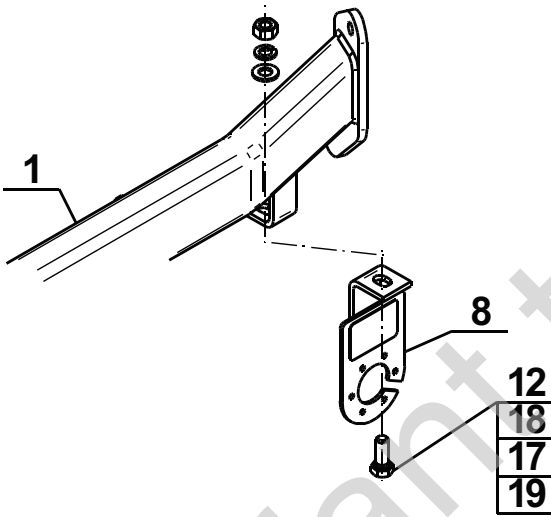


16

Hyundai Grand Santa Fe (NC)

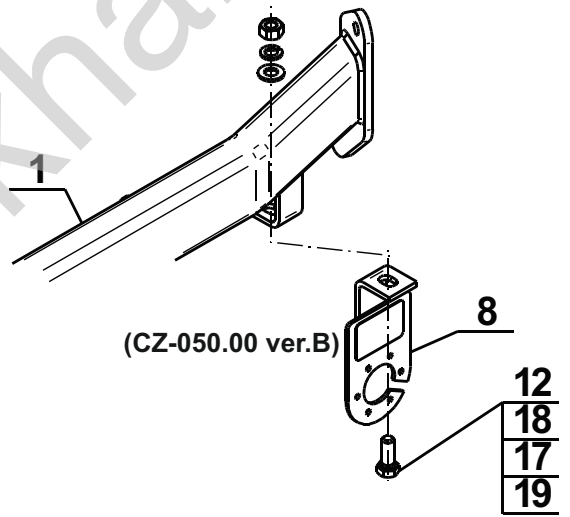

17


(mm)

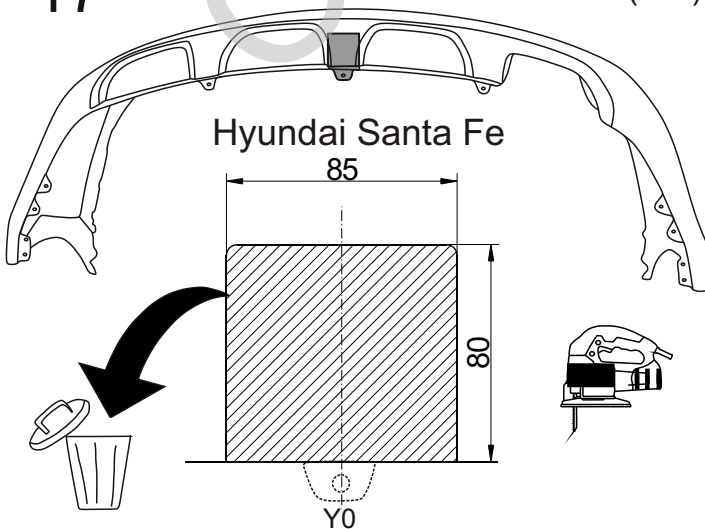


18

Kia Sorento


(mm)

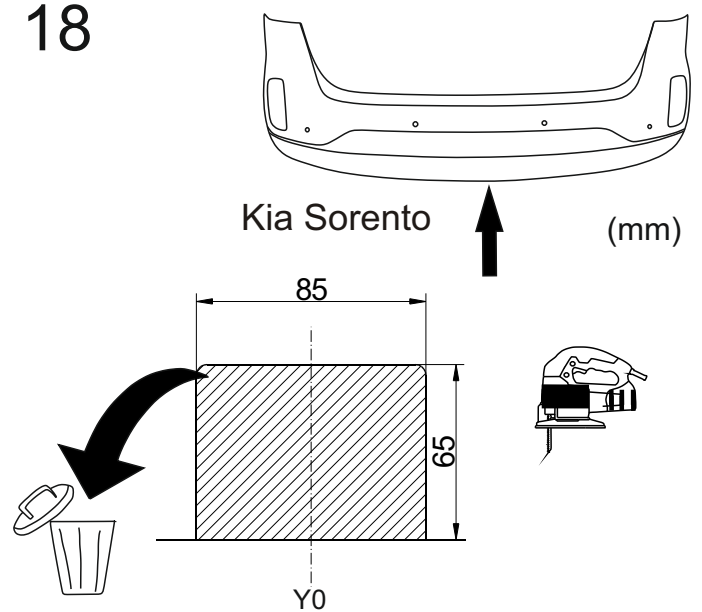


19

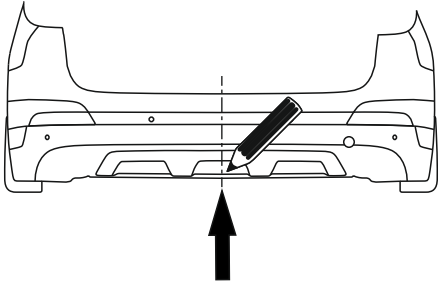


Hyundai Grand Santa Fe

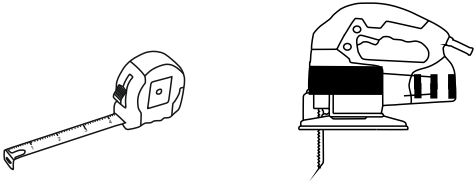


20

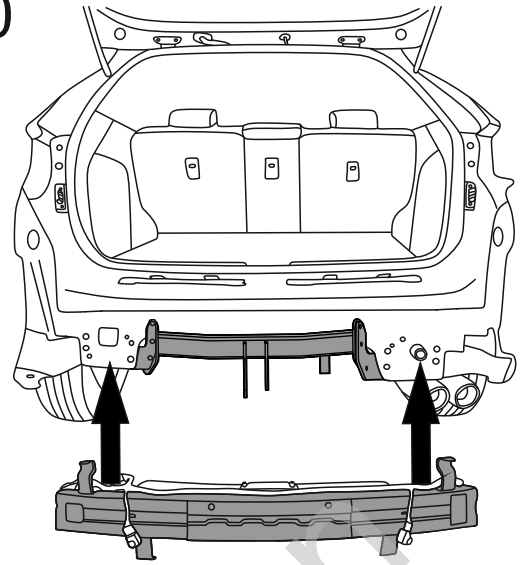

21

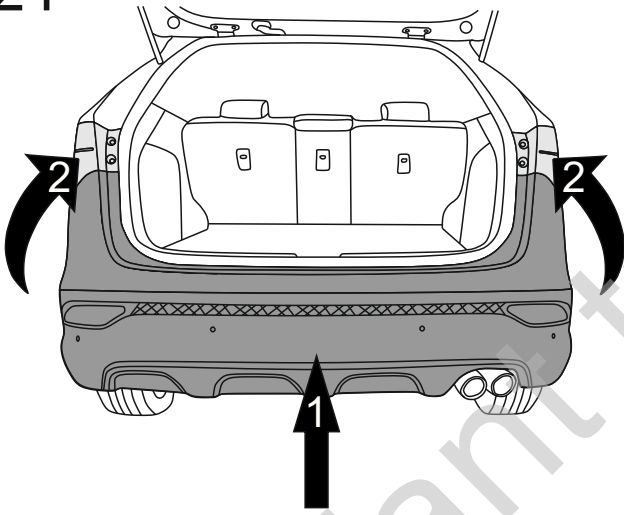

22

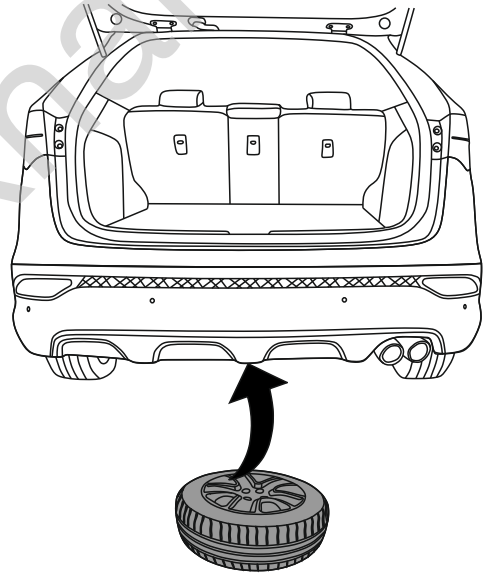

23

