



TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK

Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction  
Instrucciones de montaje | monteringsvejledning



## Fiat Ducato Pickup

06/'06-

## Peugeot Boxer Pickup


06/'06-







## Citroën Jumper Pickup


06/'06-

## Opel Movano III/C

05/'21-

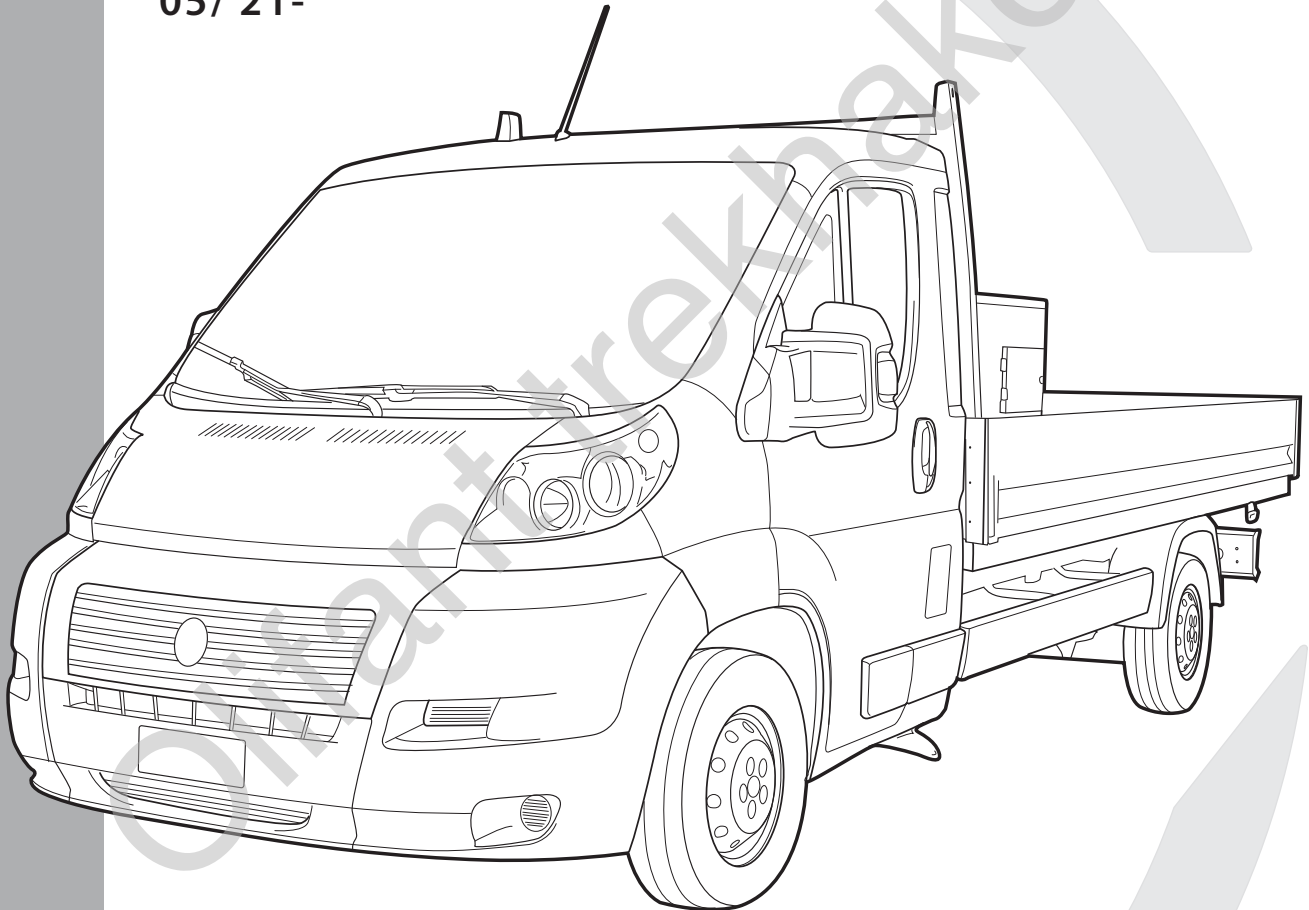

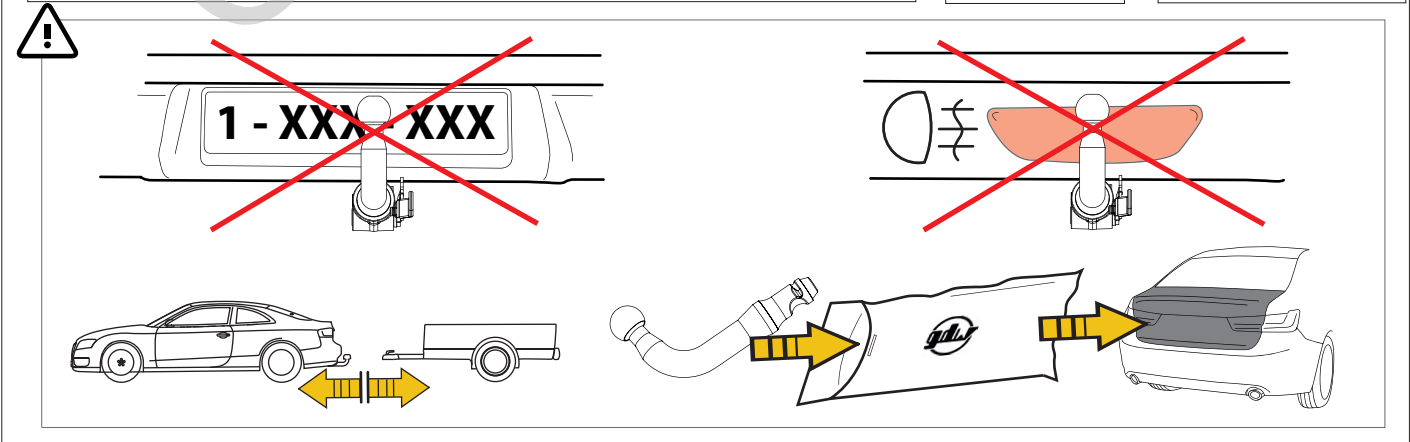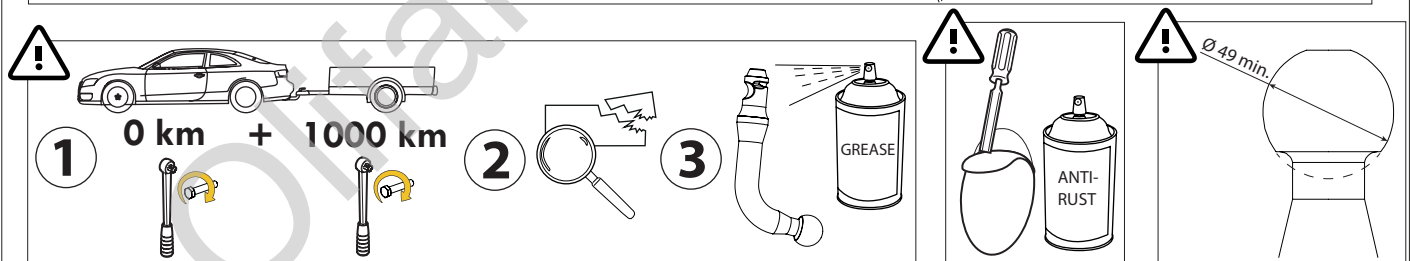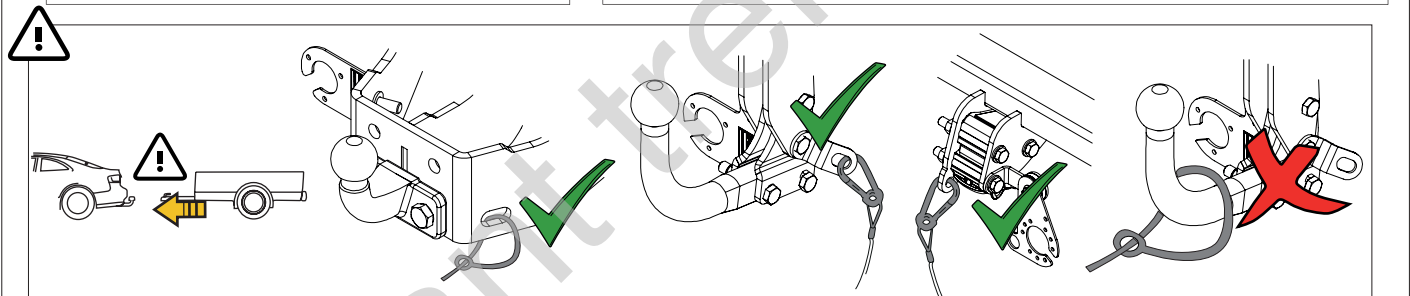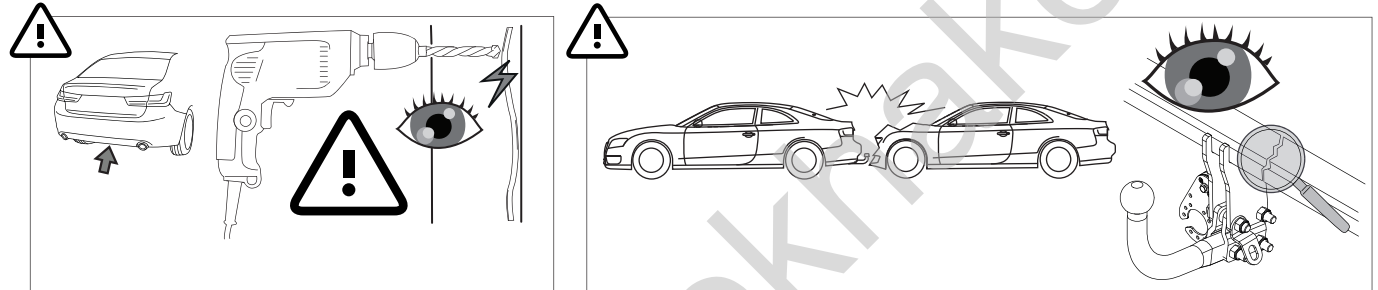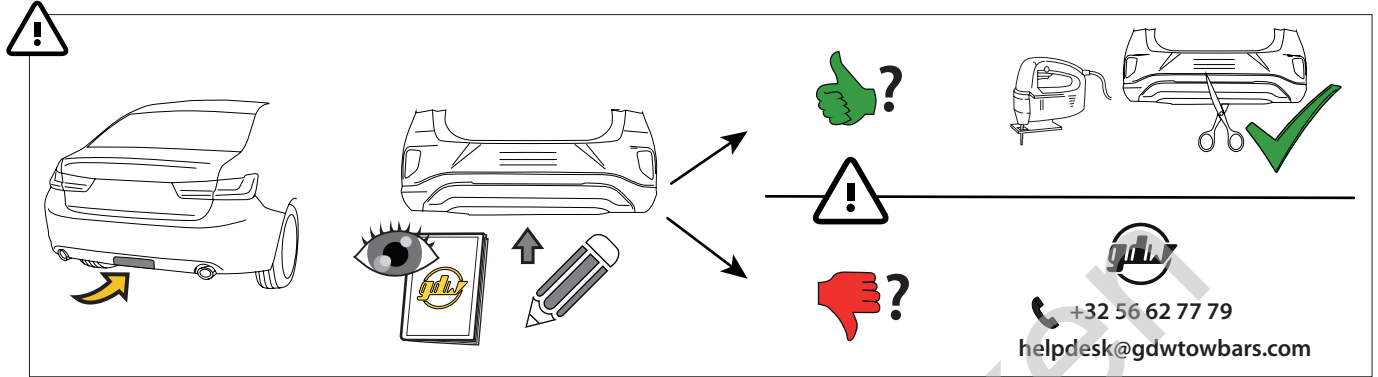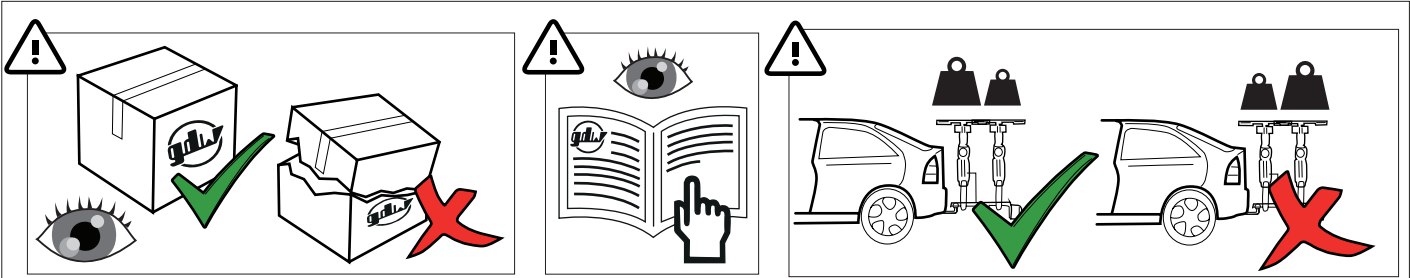

MADE BY  **D 15,85** **F** **E6**  
 BELGIUM **S 120** EC-N° 55R-02 1785  
 REF N° 1579 SERIAL N° XXXX





**DESCRIPTION**  
 Fiat Ducato PU + Peugeot Boxer PU +  
 Citroën Jumper PU + Opel Movano III/C




$$D = \frac{\text{max kg (car)} \times \text{max kg (trailer)}}{\text{max kg (car)} + \text{max kg (trailer)}} \times 0.00981 \leq 15,85 \text{ kN}$$

$$S = \begin{matrix} \downarrow \\ \leq 120 \text{ kg} \end{matrix} \quad \begin{matrix} \downarrow \\ \leq 3000 \text{ kg} \end{matrix}$$


**See the Certificate Of Conformity (COC) of your vehicle or contact your dealer to verify the max. trailer weight of your car!**

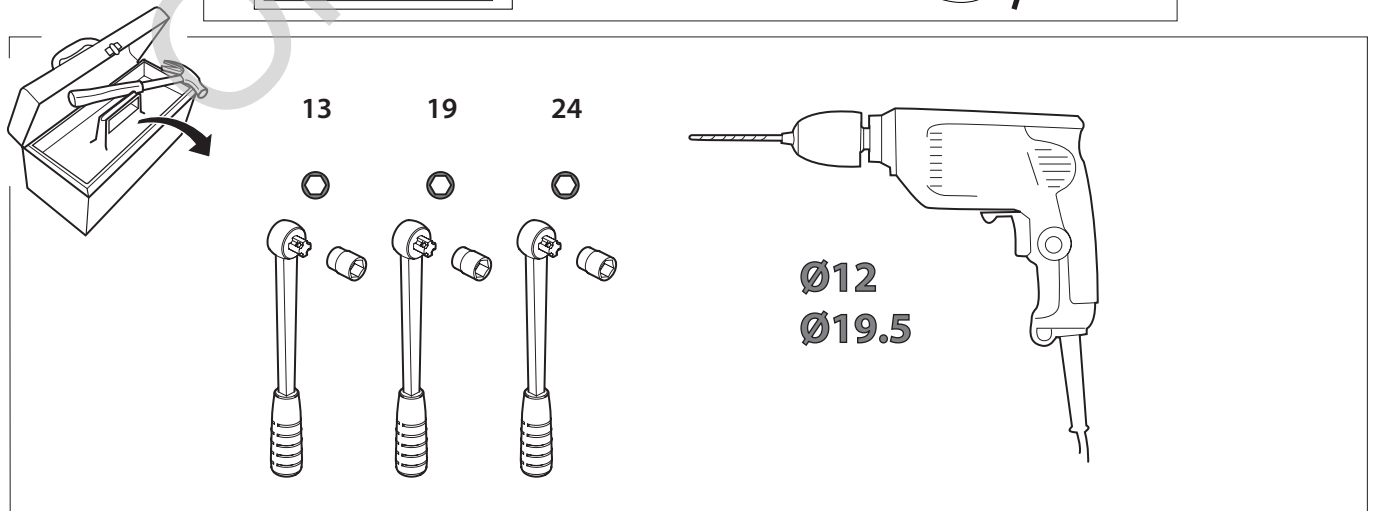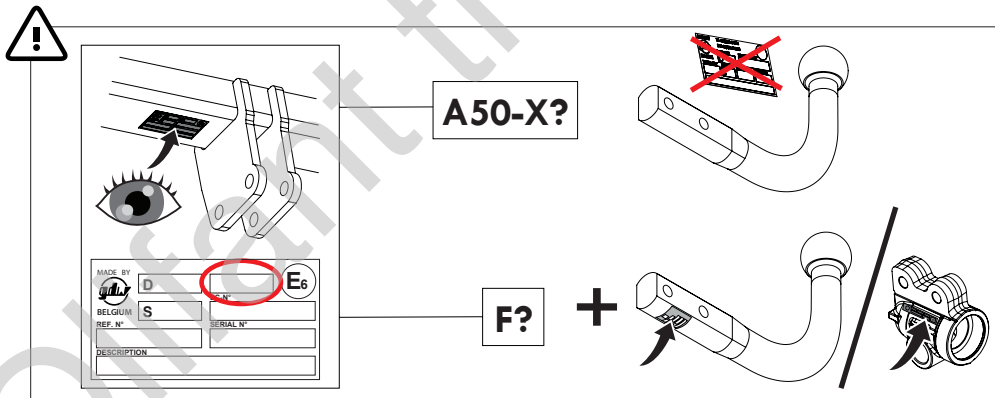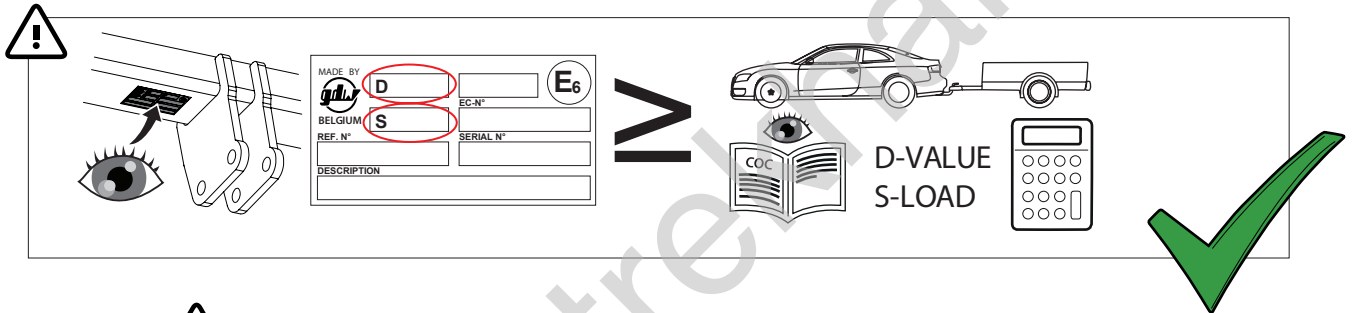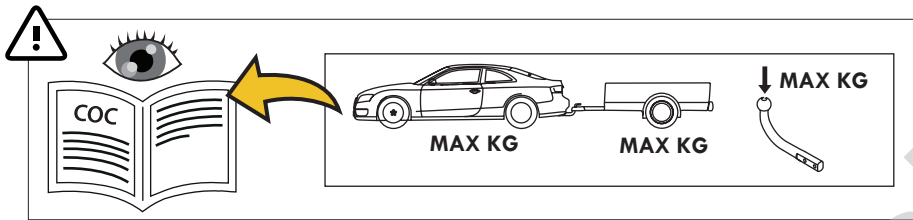


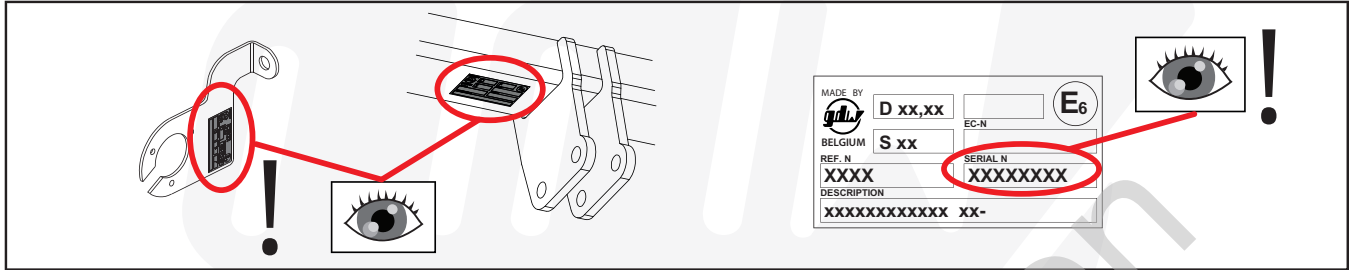









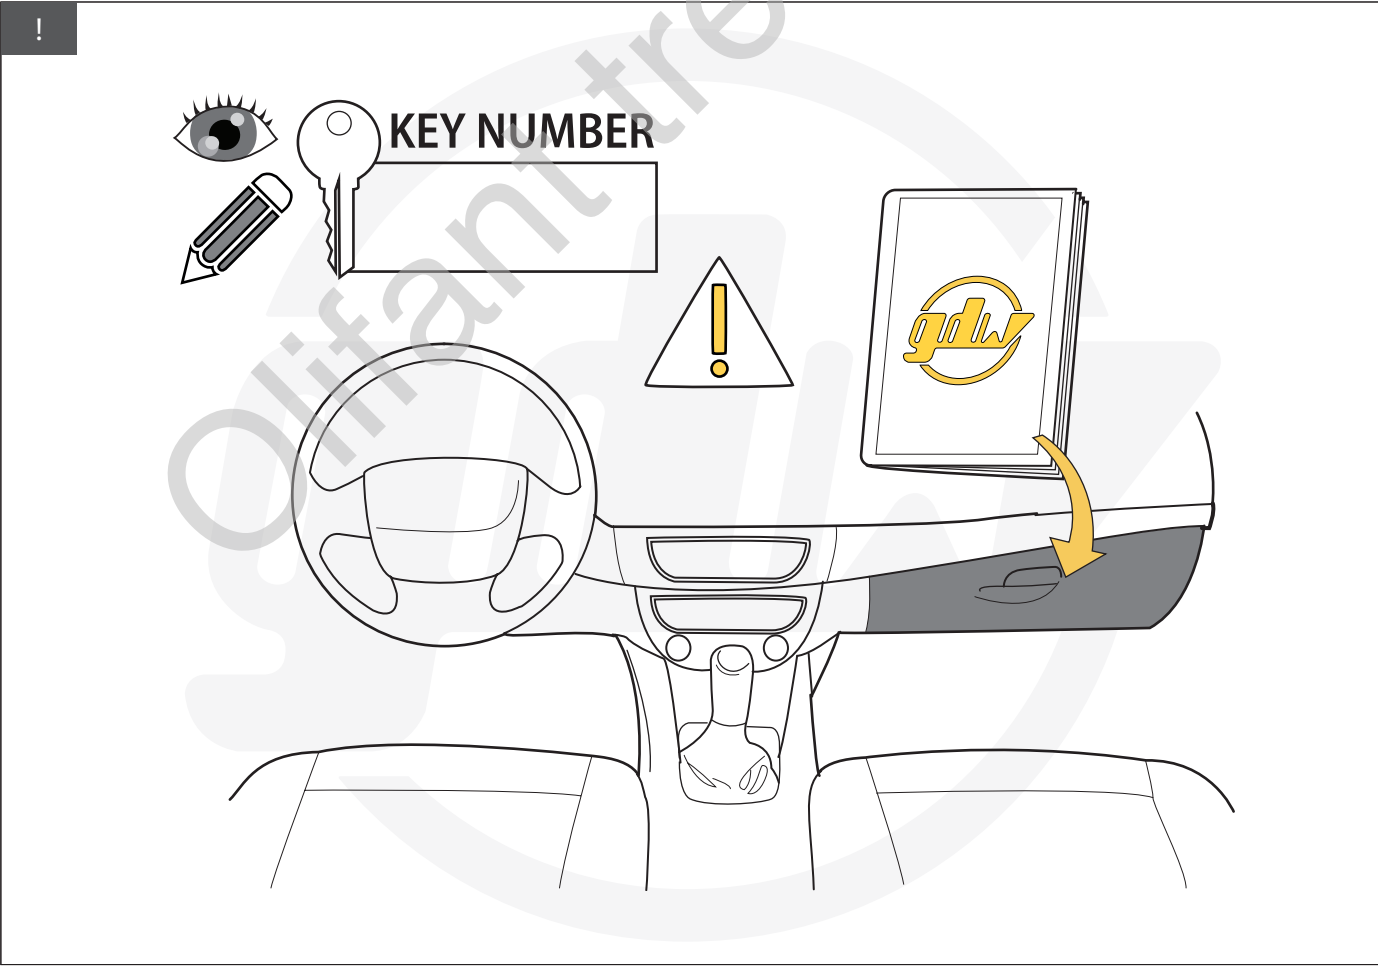

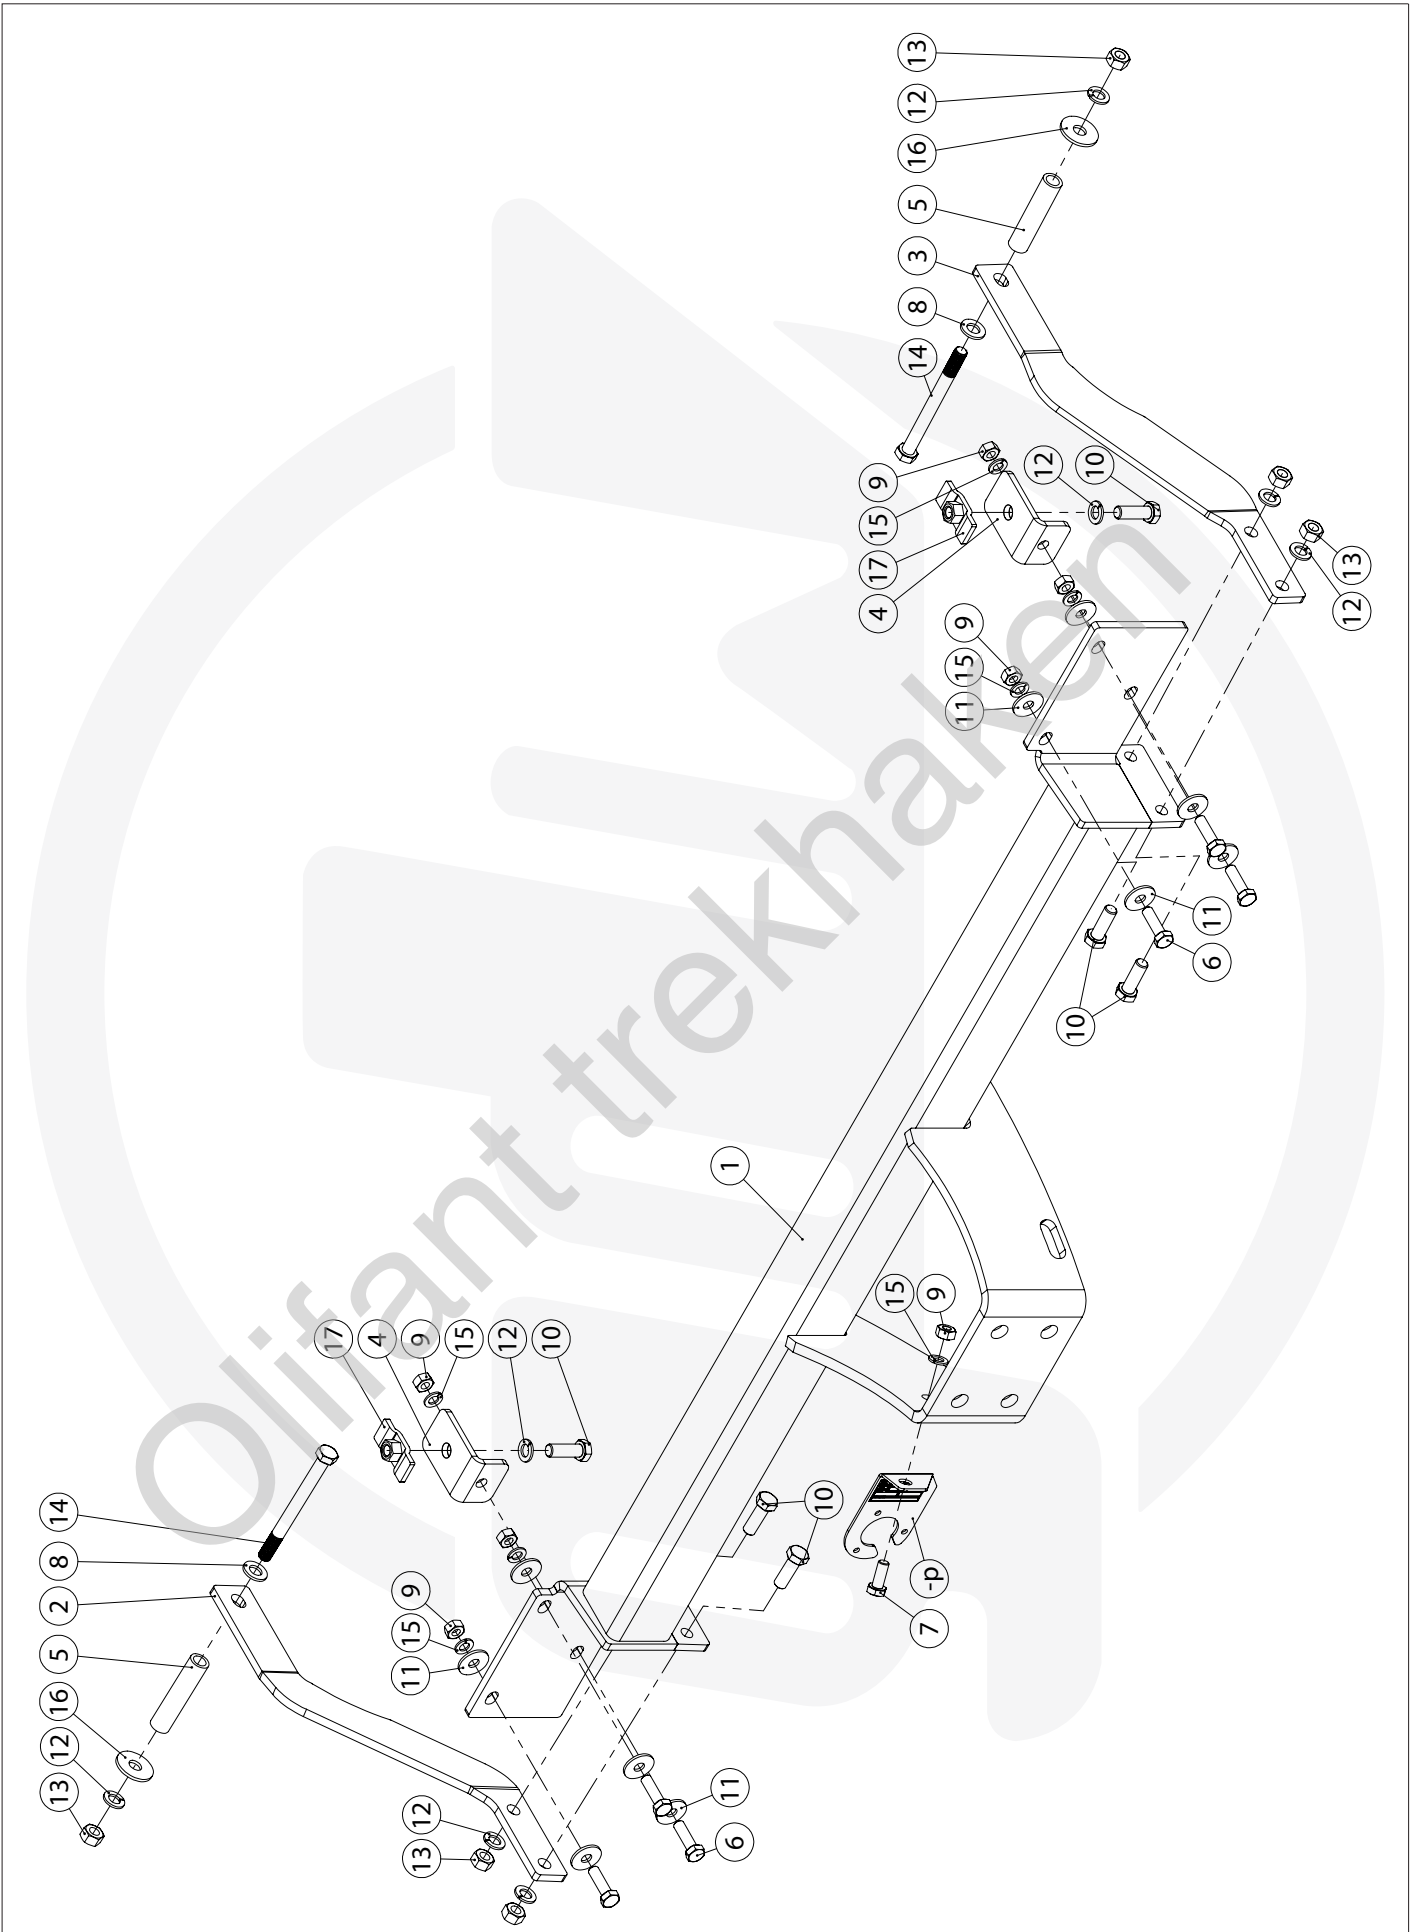

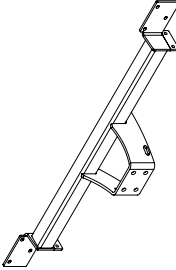





**helpdesk@gdwtowbars.com**  
**+32 56 62 77 79**





Monday	08:00 - 12:00	12:30 - 16:30
Tuesday	08:00 - 12:00	12:30 - 16:30
Wednesday	08:00 - 12:00	12:30 - 16:30
Thursday	08:00 - 12:00	12:30 - 16:30
Friday	08:00 - 12:00	12:30 - 15:30



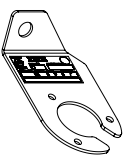


1		X1	GDW REF. 1579
2		X1	GDW REF. 2
3		X1	GDW REF. 3
4		X2	GDW REF. 4
5		X2	GDW REF. 5
6		X6	DIN933-M10X35 10.9
7		X1	DIN933-M10X25
8		X2	DIN125-A12-14OHV-ELVZ
9		X7	DIN934-M10 KL10
10		X6	DIN933-M12X35
11		X10	DIN9021-M10-ELVZ
12		X8	DIN128A-M12
13		X6	DIN934-M12
14		X2	DIN931-M12X130
15		X7	DIN128A-M10
16		X2	DIN9021-M12-ELVZ
17		X2	GDW REF. 902.004


-P		X1	GDW REF. P29
----	---	----	--------------

Geleverd met - Livré avec - Delivered with Gelifert mit - Elementos adjuntos - Leverages med		X1	GDW REF. 740.000
		X2	DIN128A-M16
		X2	DIN933-M16X50
		X2	DIN934-M16


1

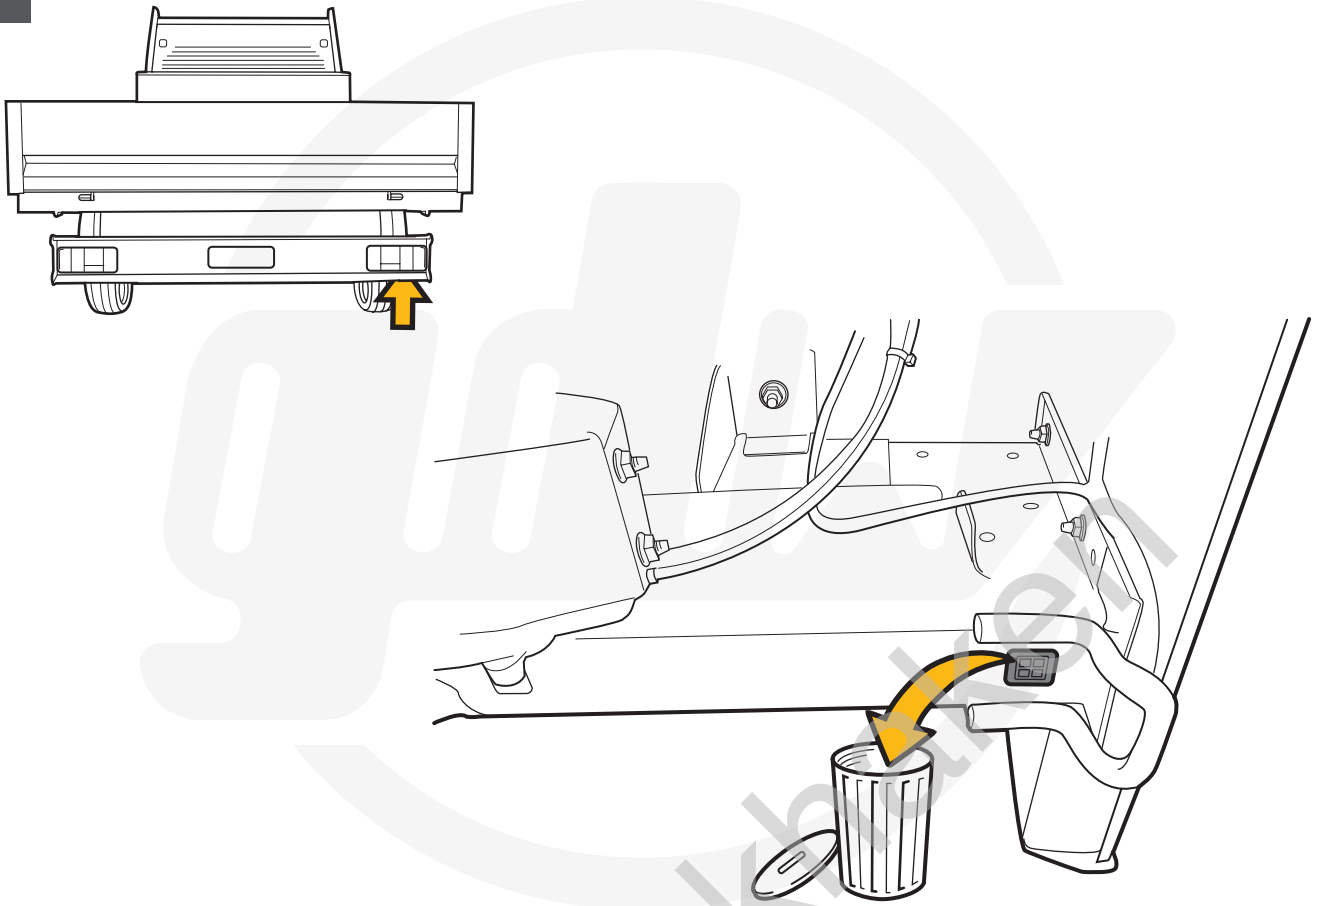


2

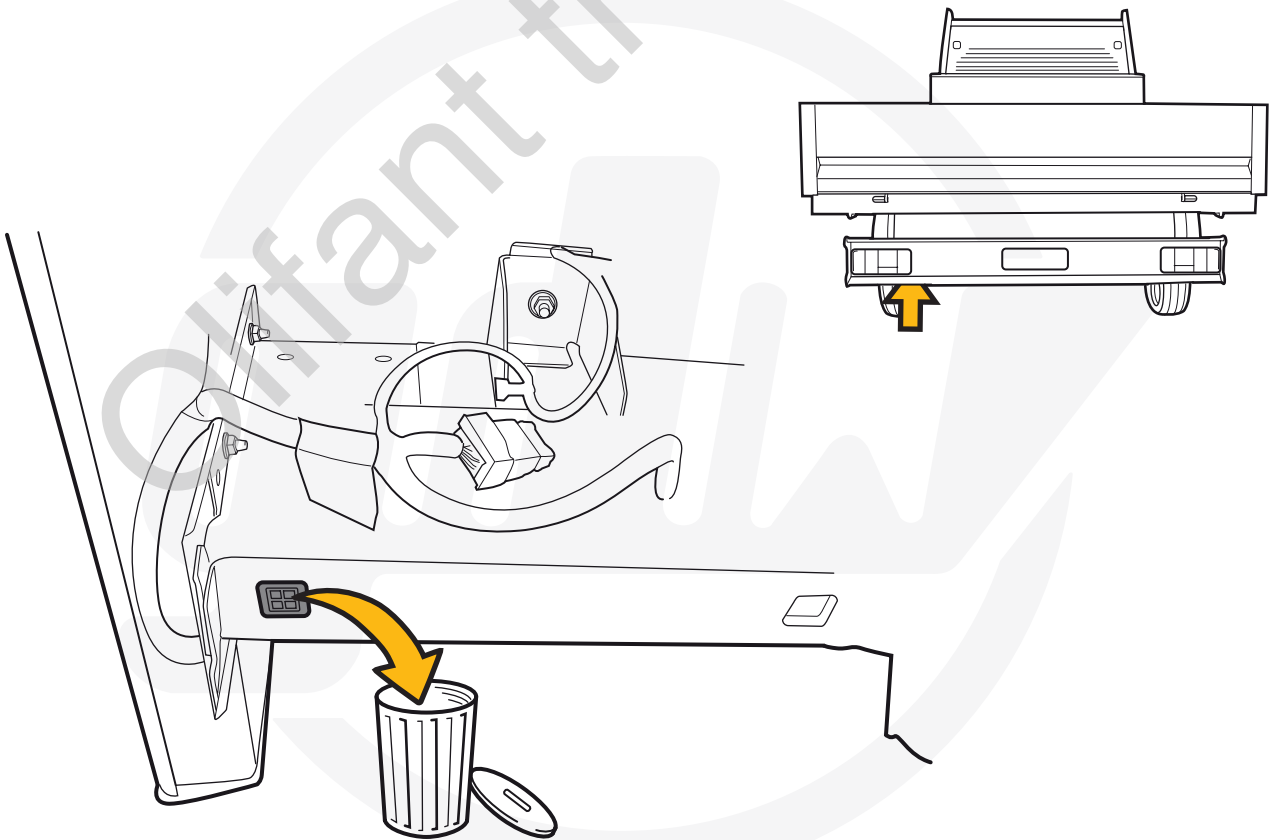



3


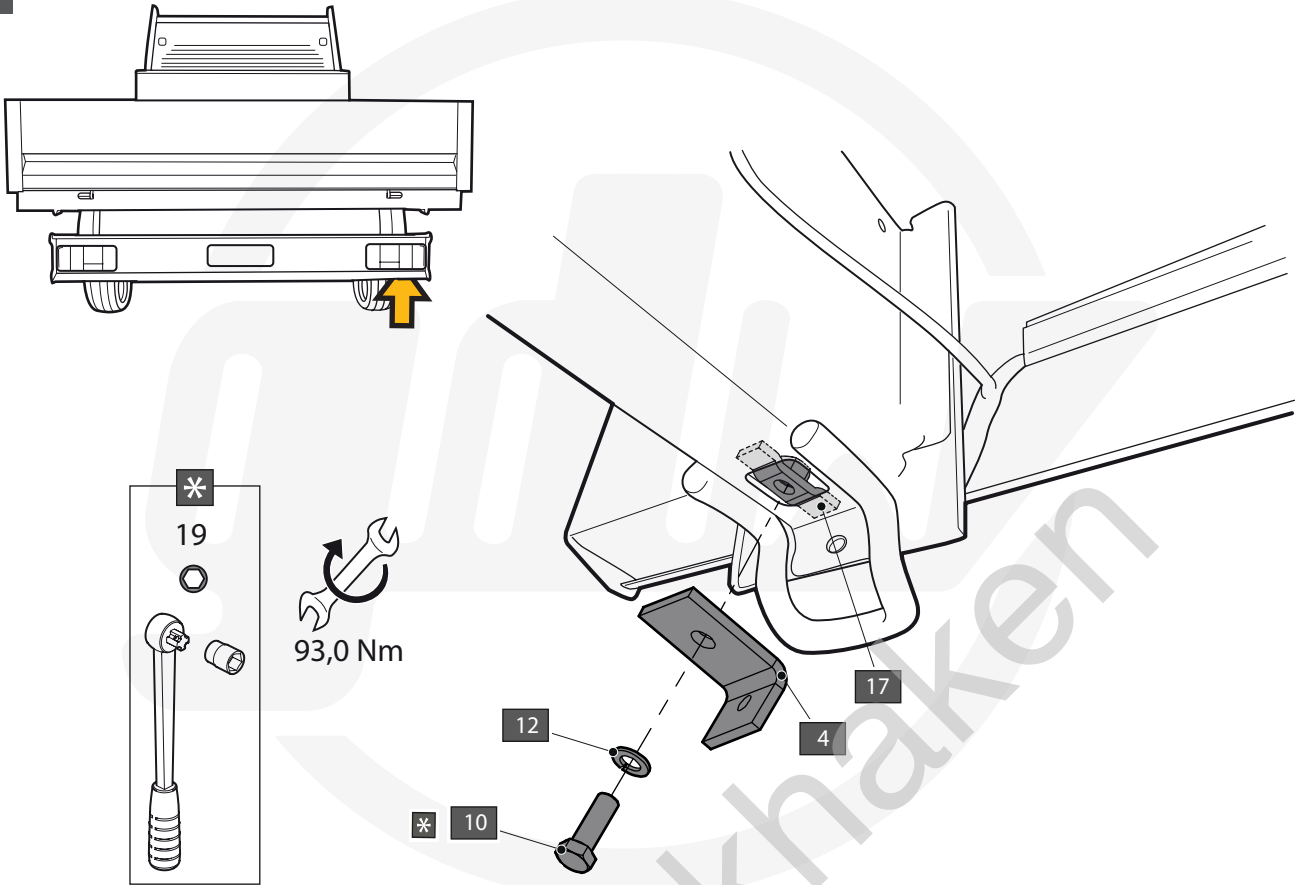


4

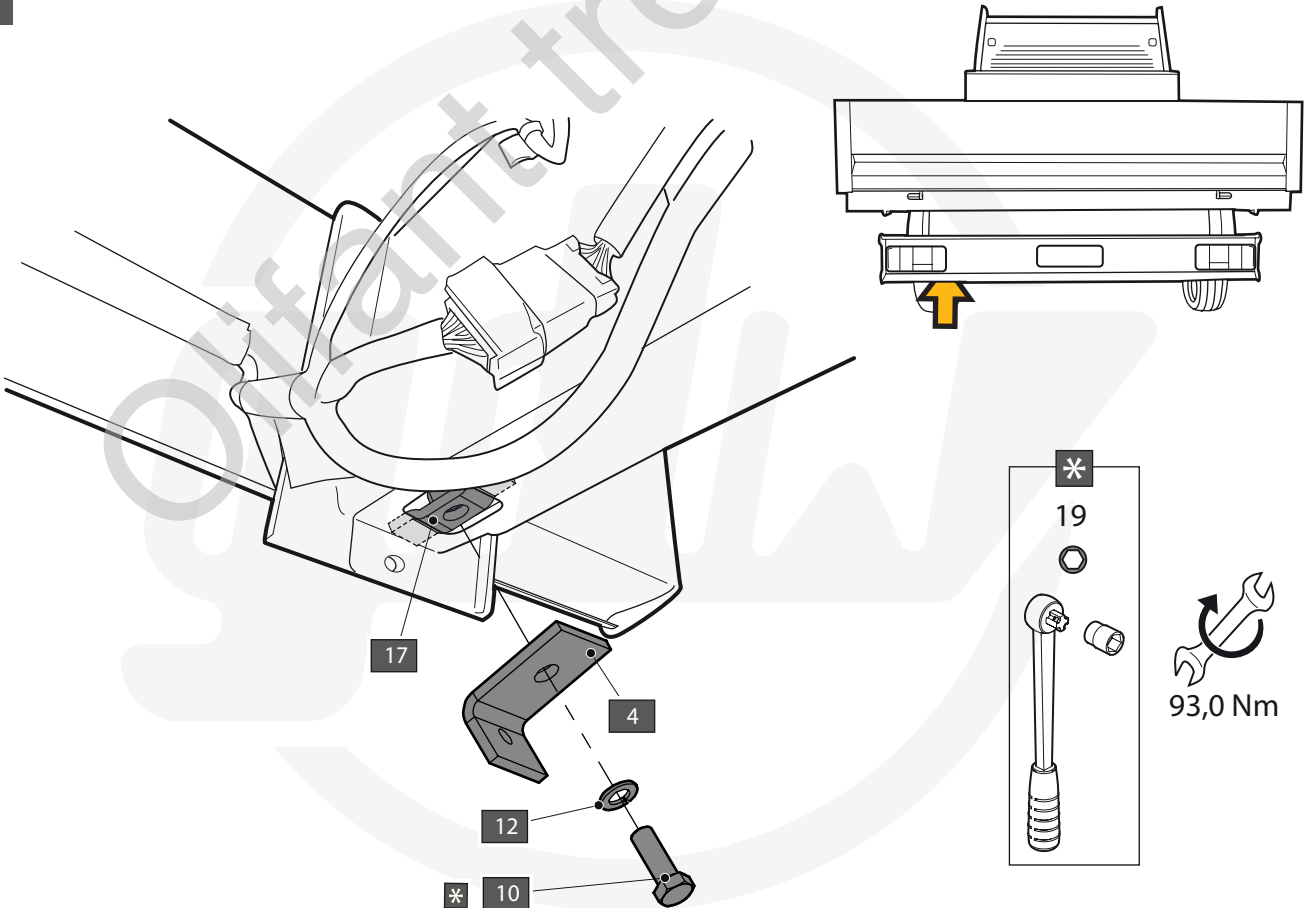





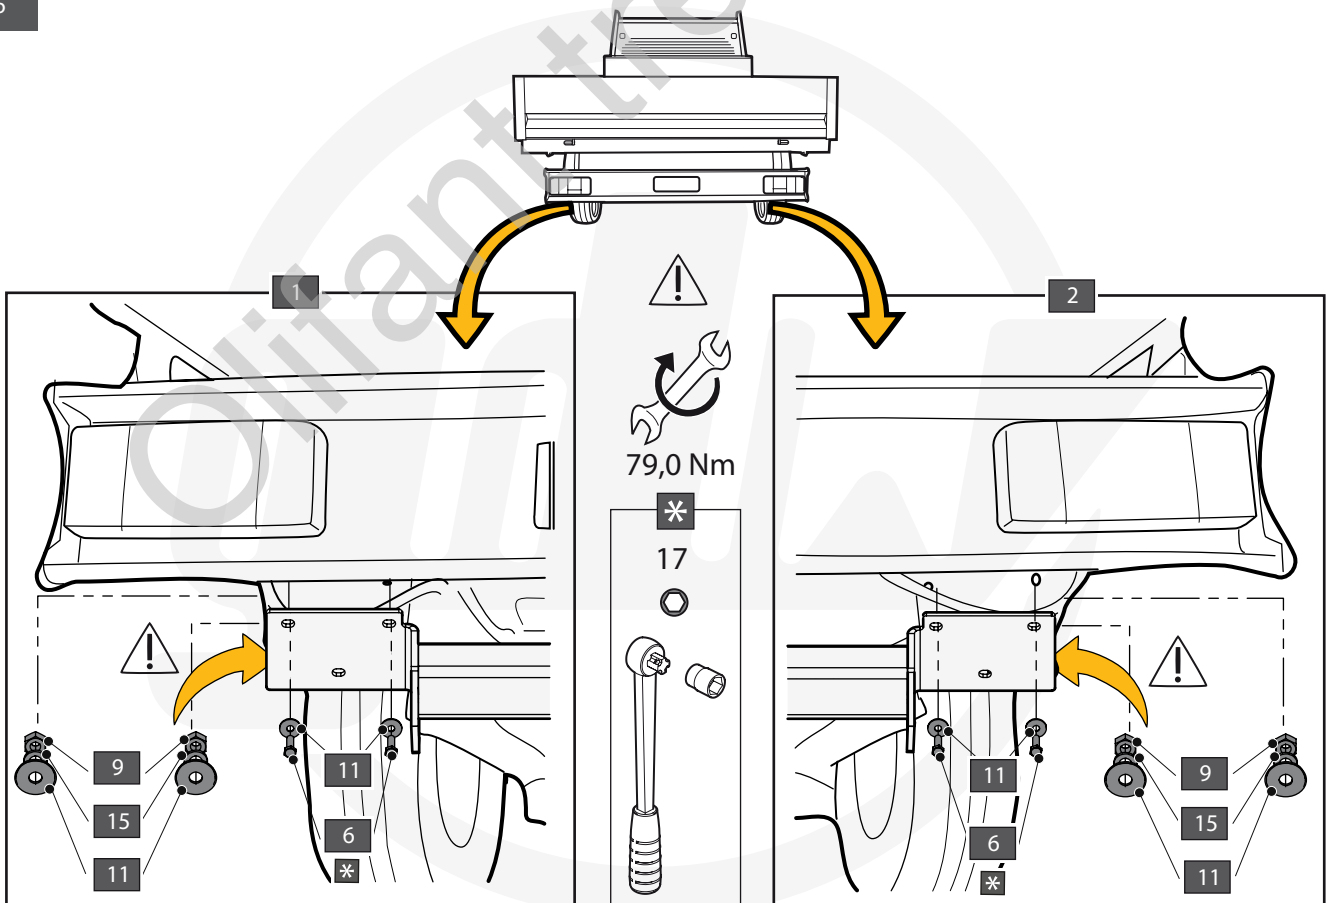
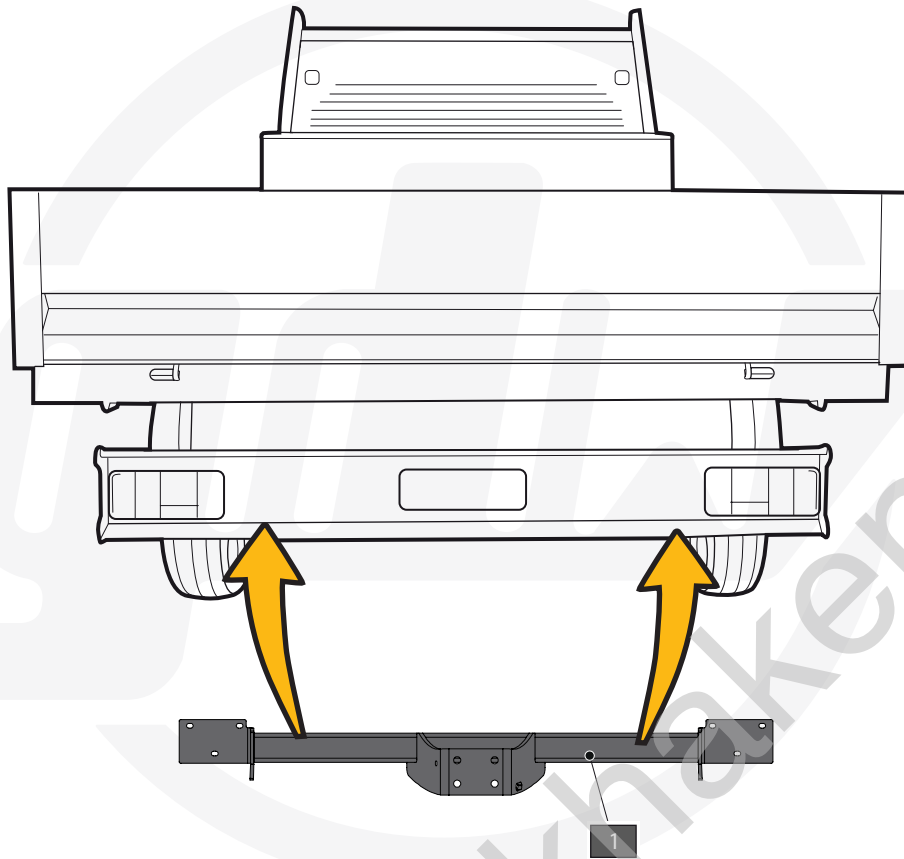


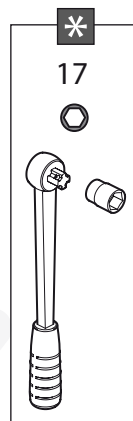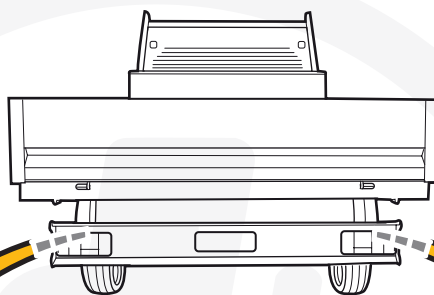

1


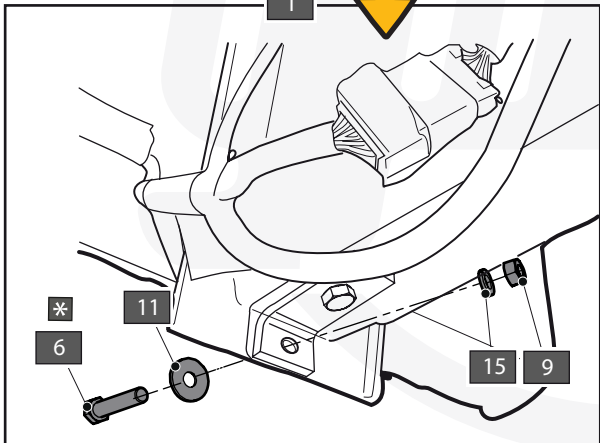



2

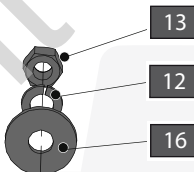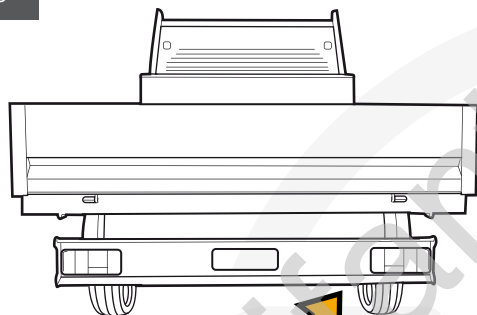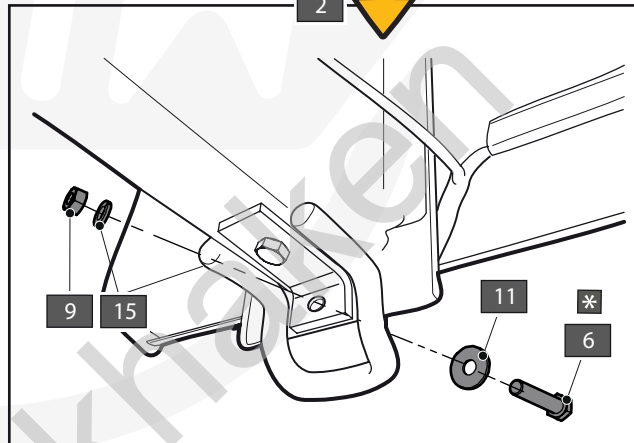


STEP 10

Fiat Ducato Pick Up '06 L4/XL



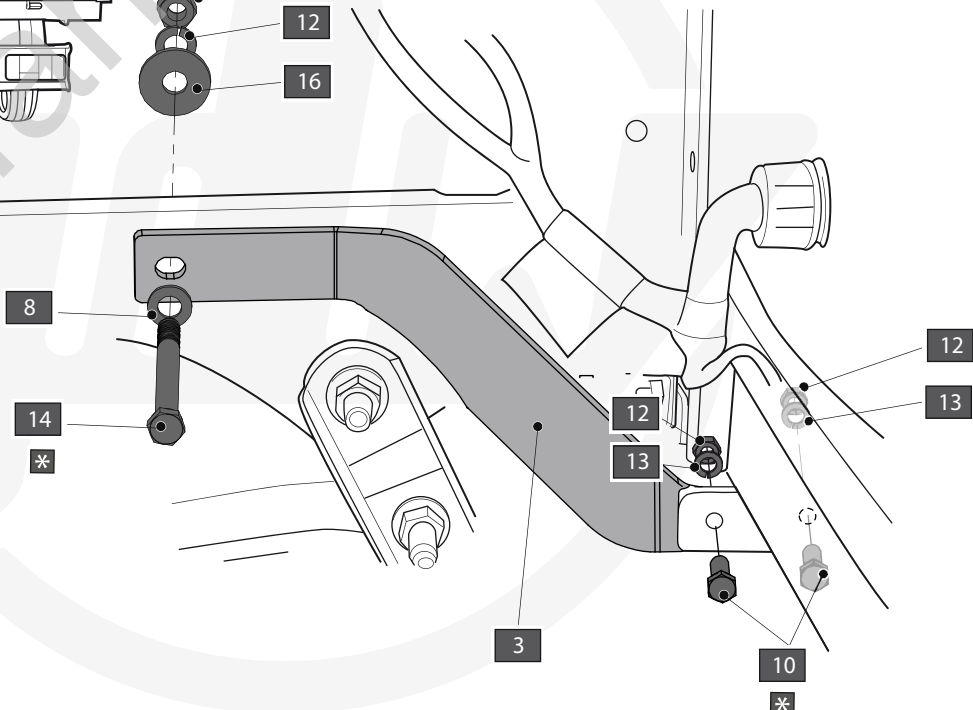
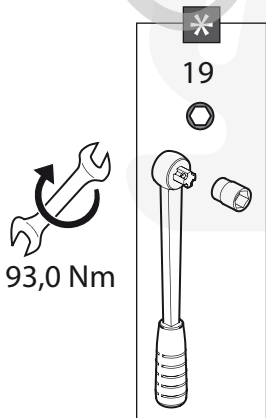


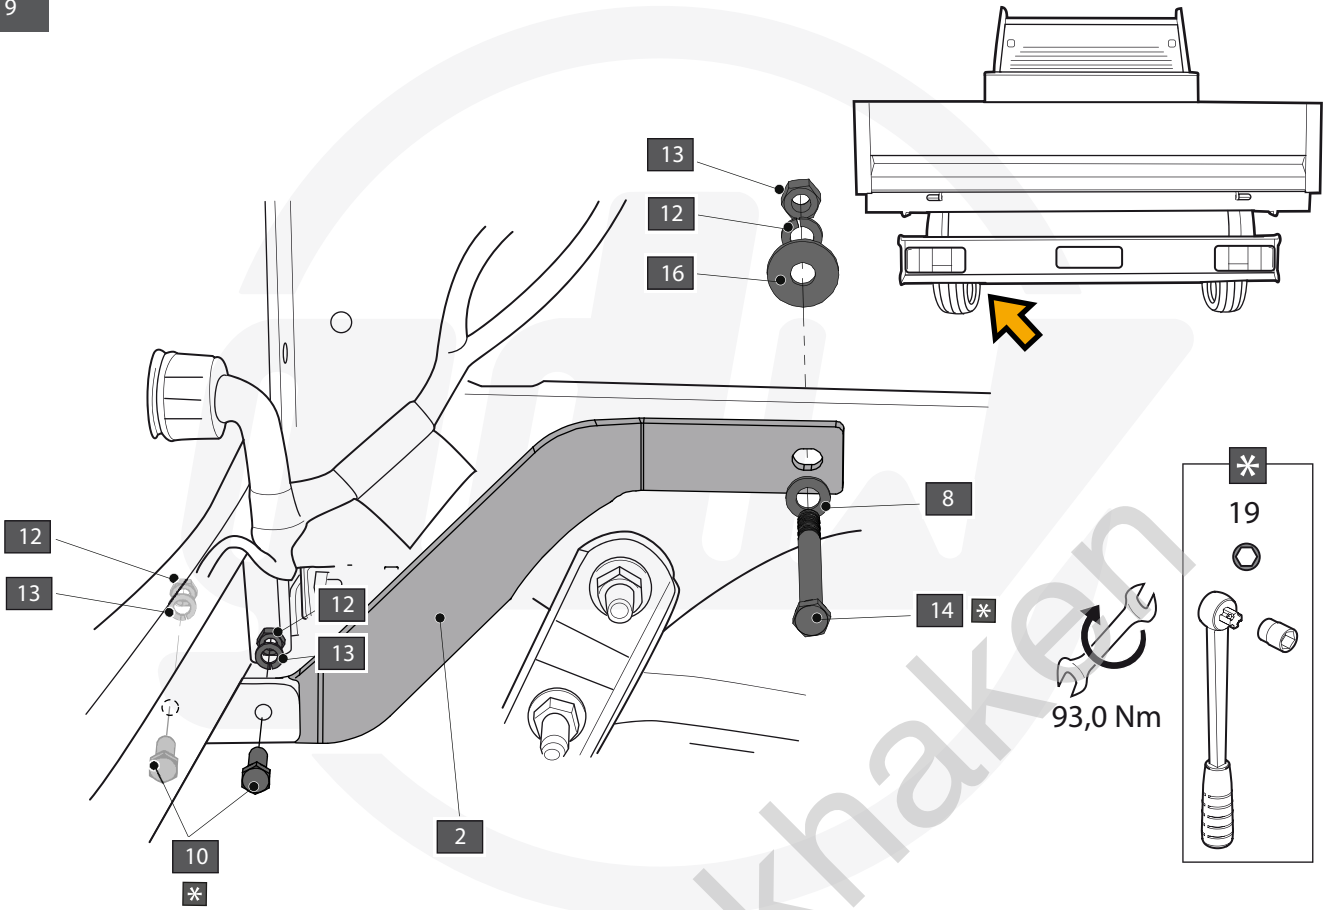

Fiat Ducato Pick Up '06 **L4/XL**



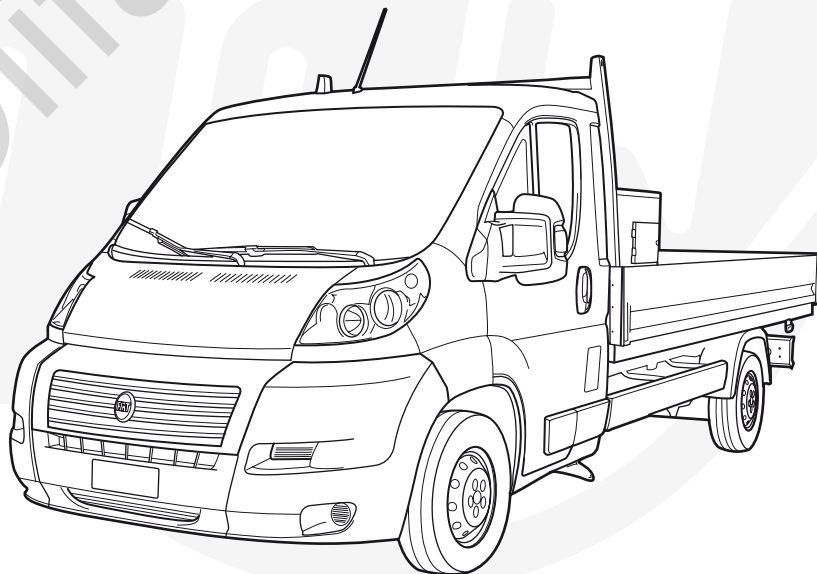


11

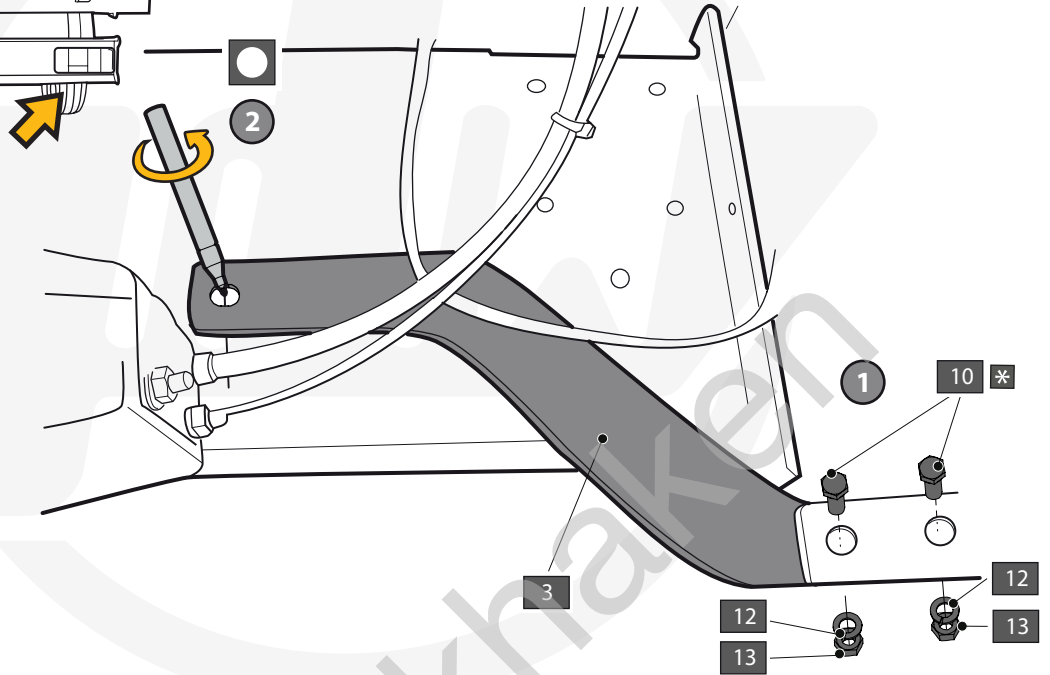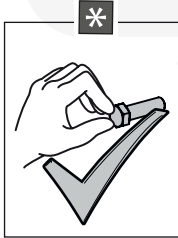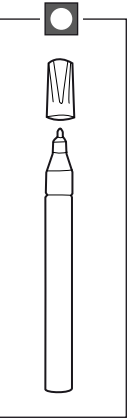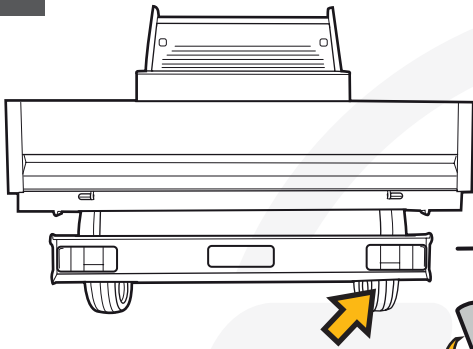



Fiat Ducato Pick Up '06 **L4/XL**

12

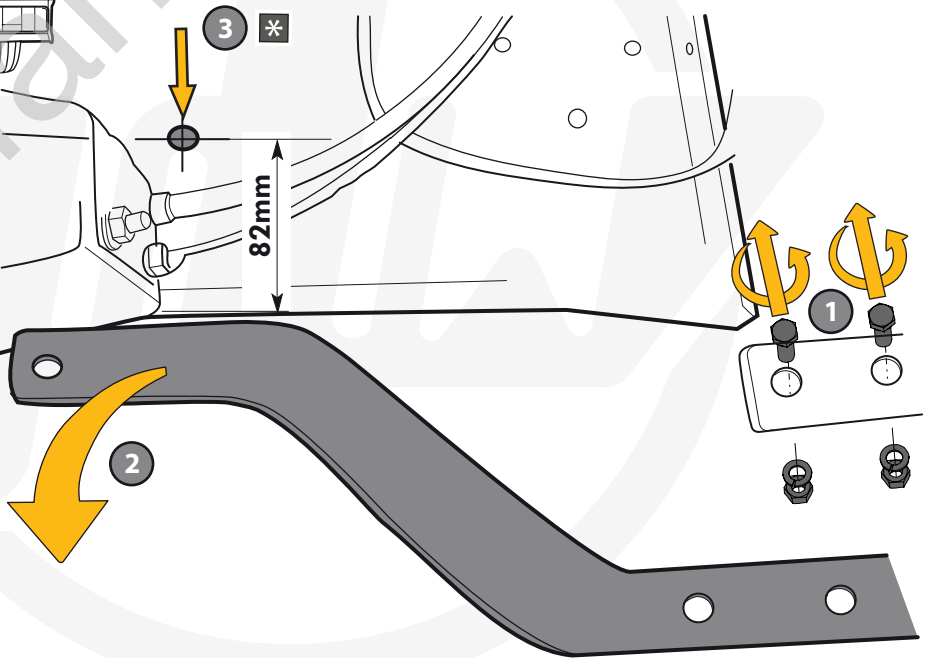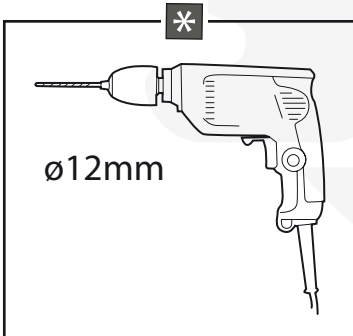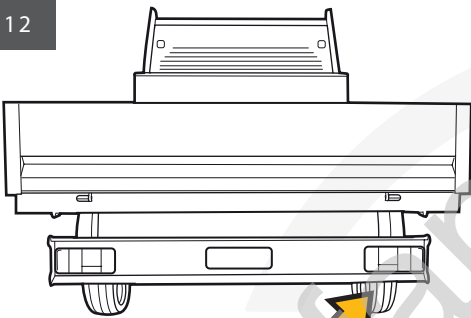


Fiat Ducato Pick Up '06 **L4/XL**



13

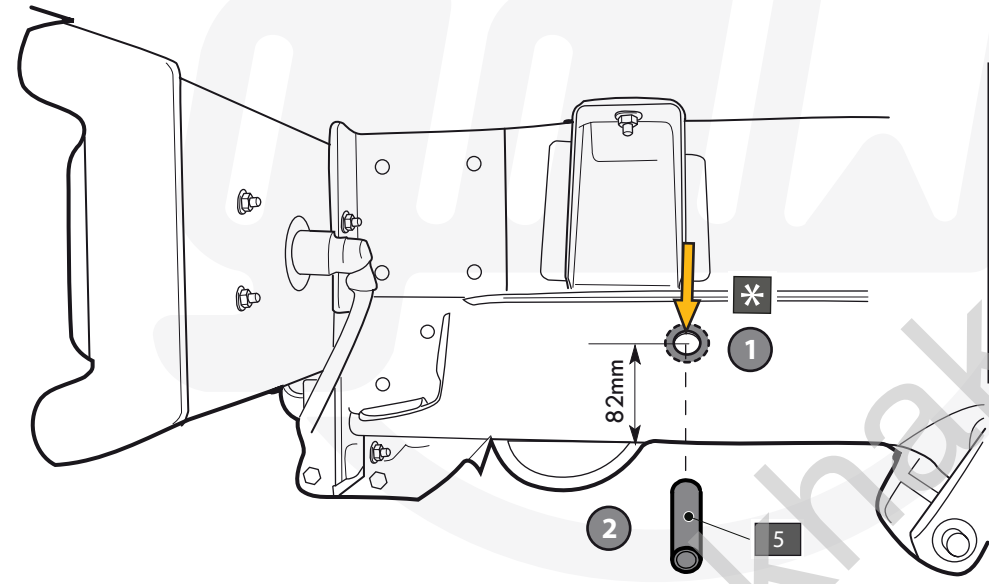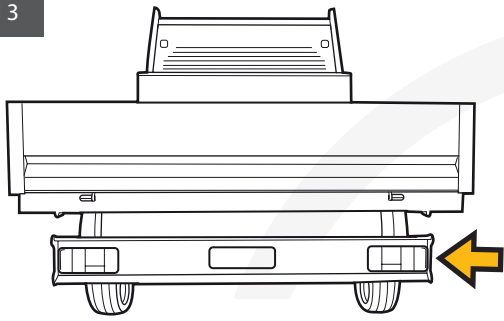

Fiat Ducato Pick Up '06 L4/XL

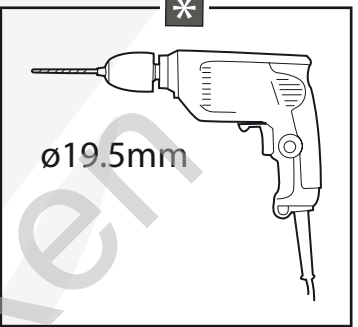

14


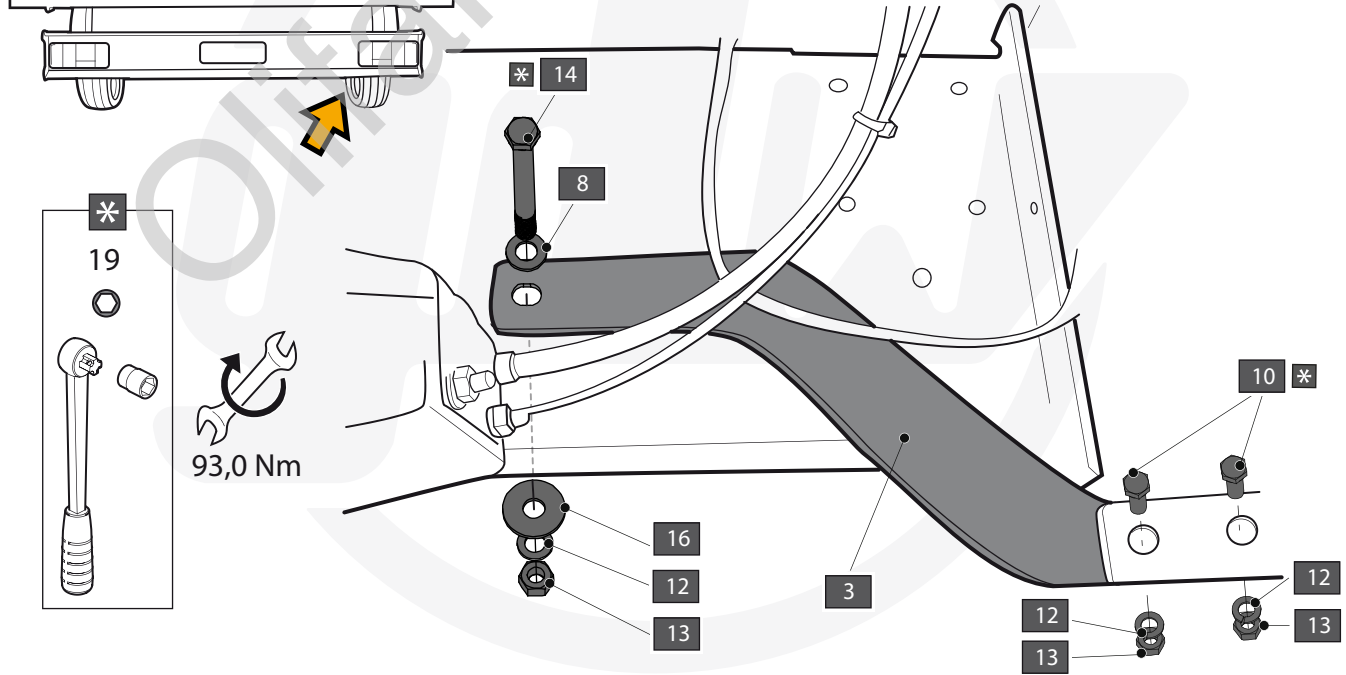
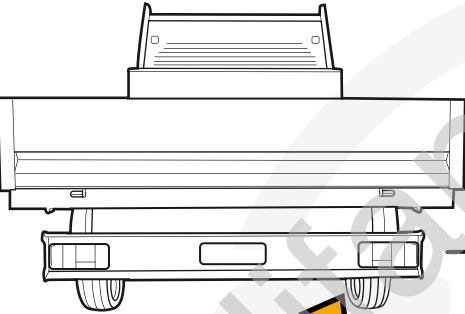


Fiat Ducato Pick Up '06 L4/XL

15






Fiat Ducato Pick Up '06 L4/XL

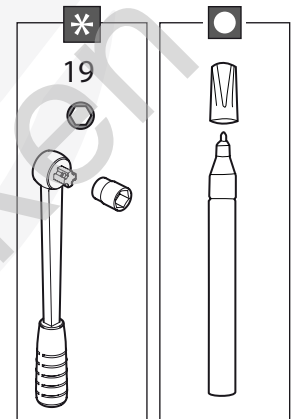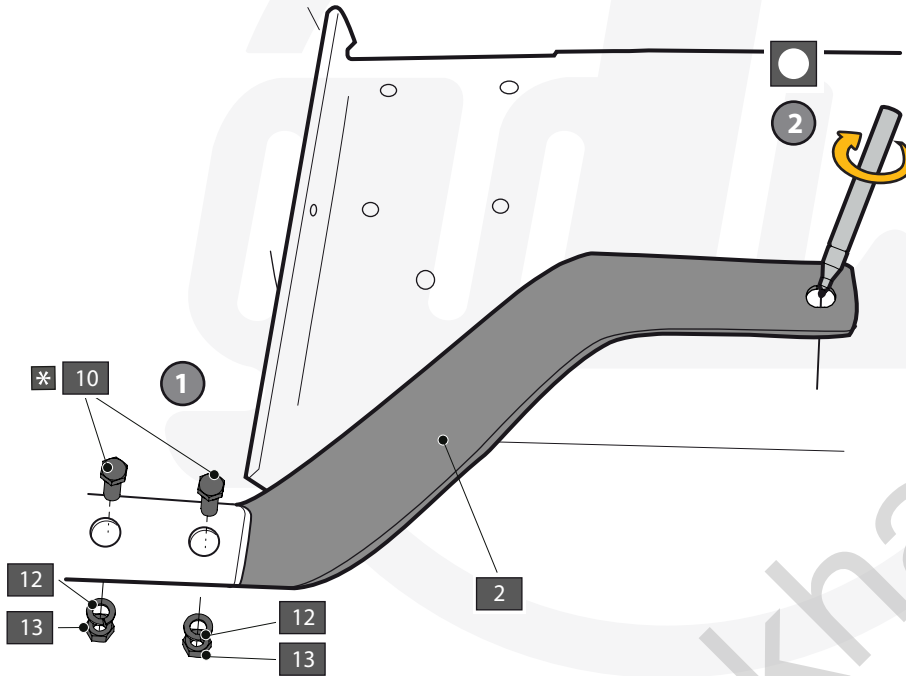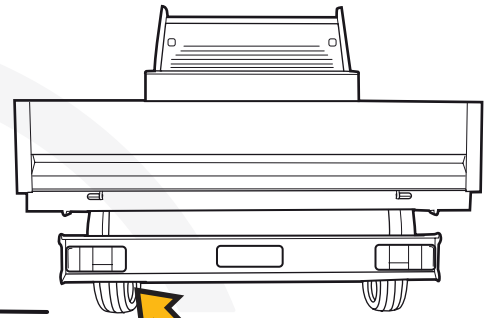

16






Fiat Ducato Pick Up '06 L4/XL

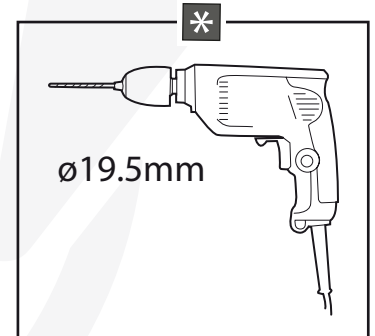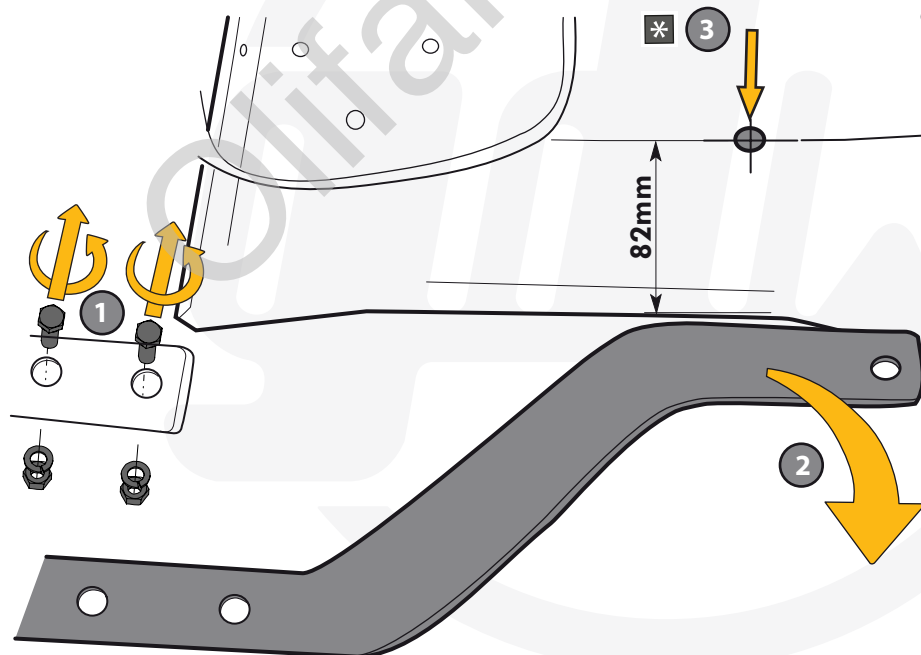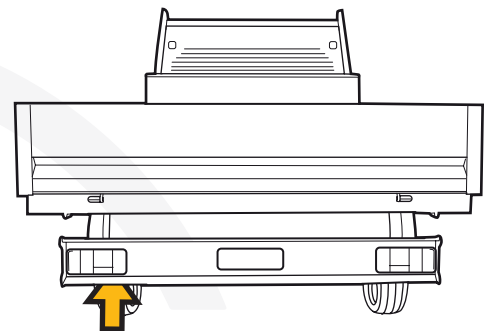

17





Fiat Ducato Pick Up '06 **L4/XL**

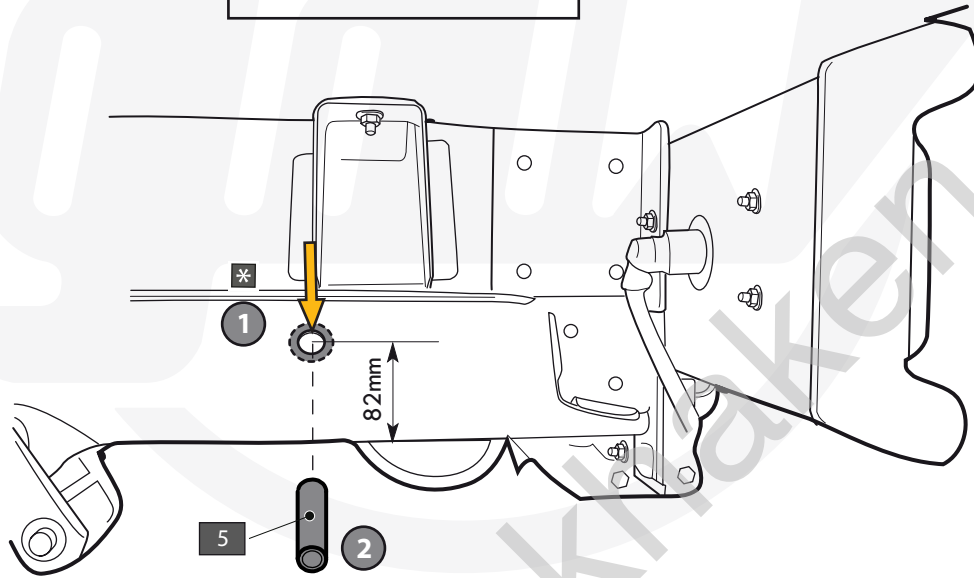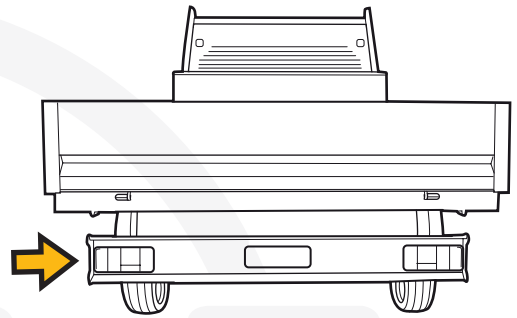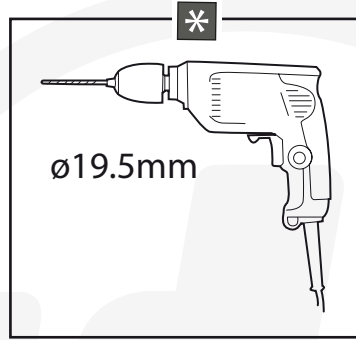


18



Fiat Ducato Pick Up '06 **L4/XL**

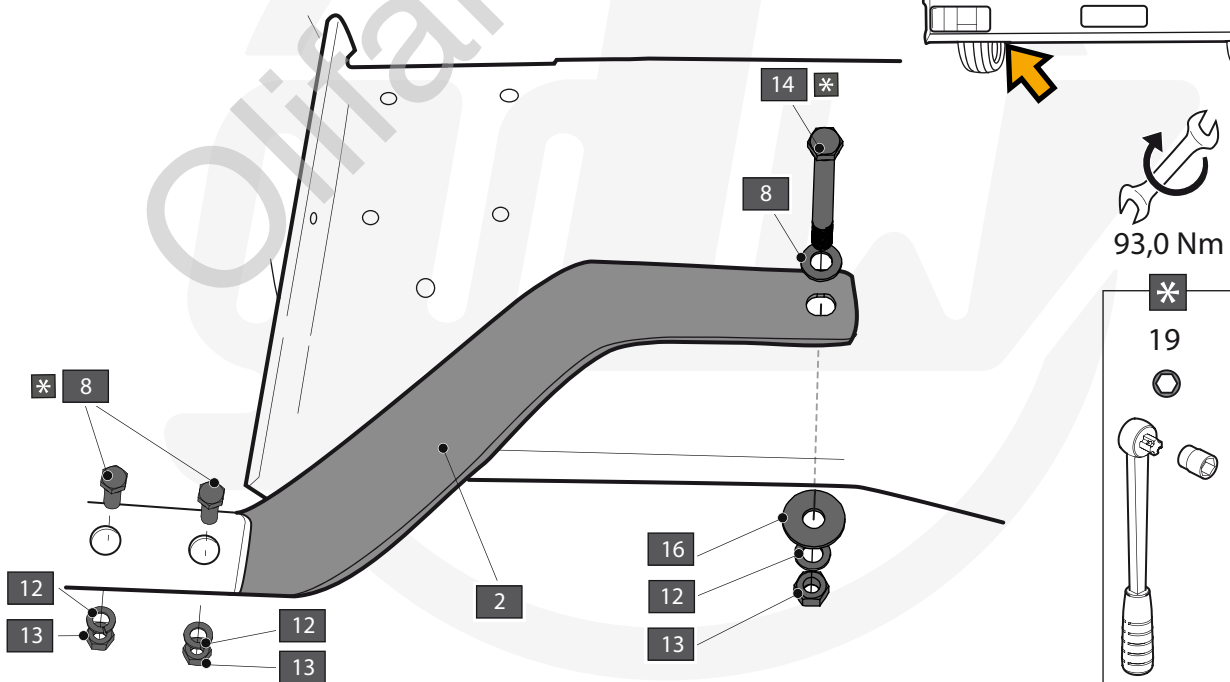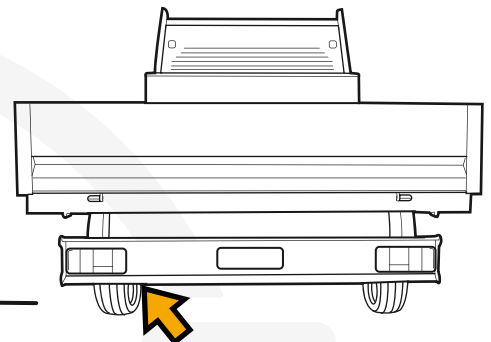

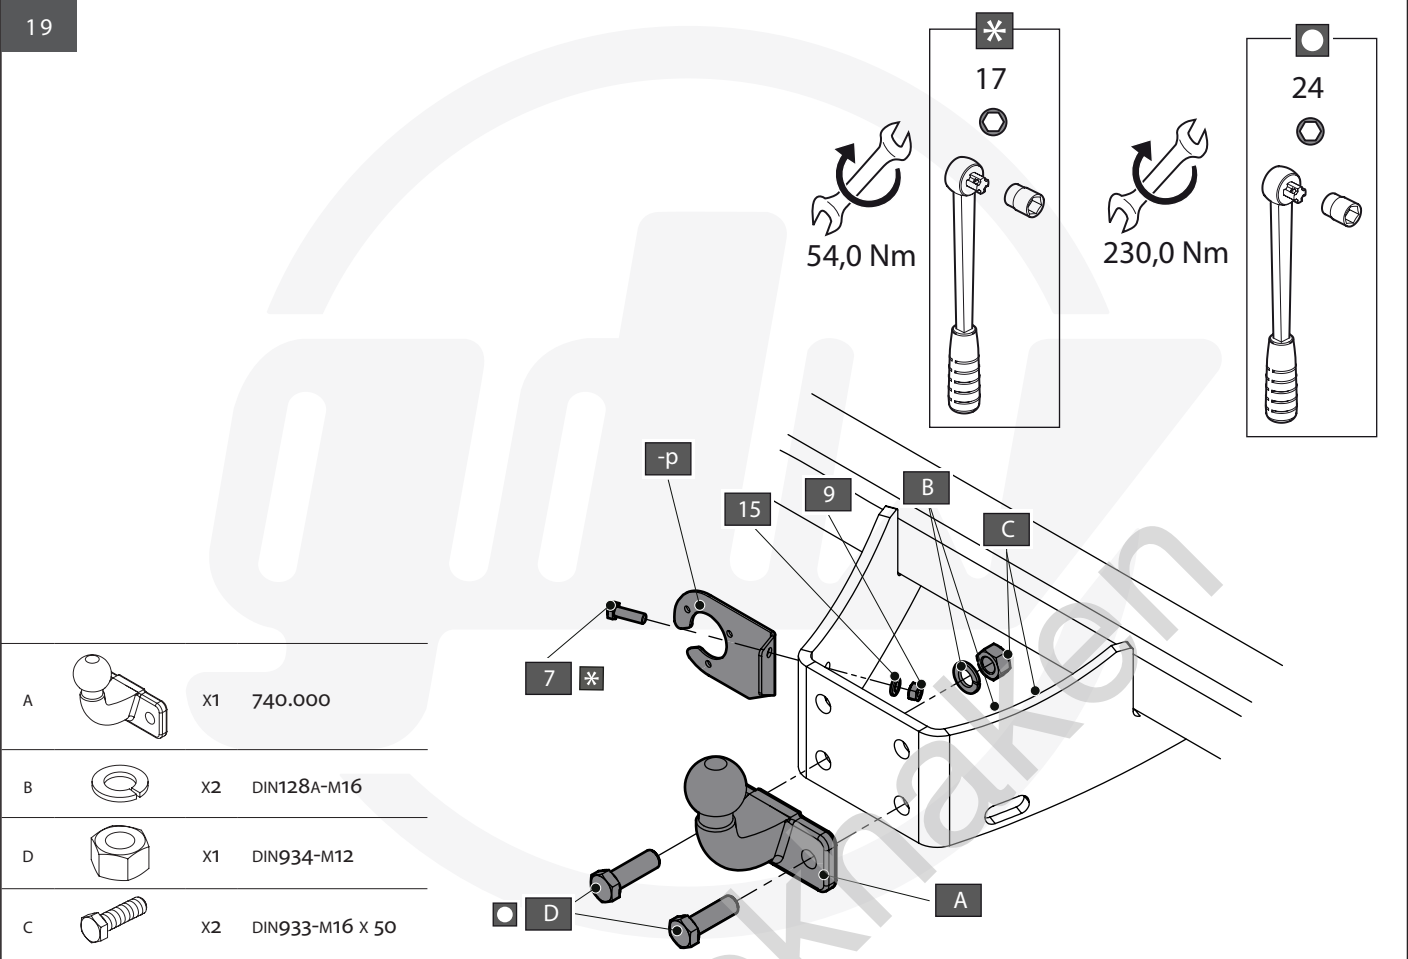

Olifant trekkebaars