



TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK  
Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction  
Instrucciones de montaje | monteringsvejledning



## Audi Q3 (type F3B)

07/'18 -



STANDARD



ADVANCED



S-LINE

## Audi Q3 Sportback (type F3N)


06/'19 -



STANDARD







S-LINE







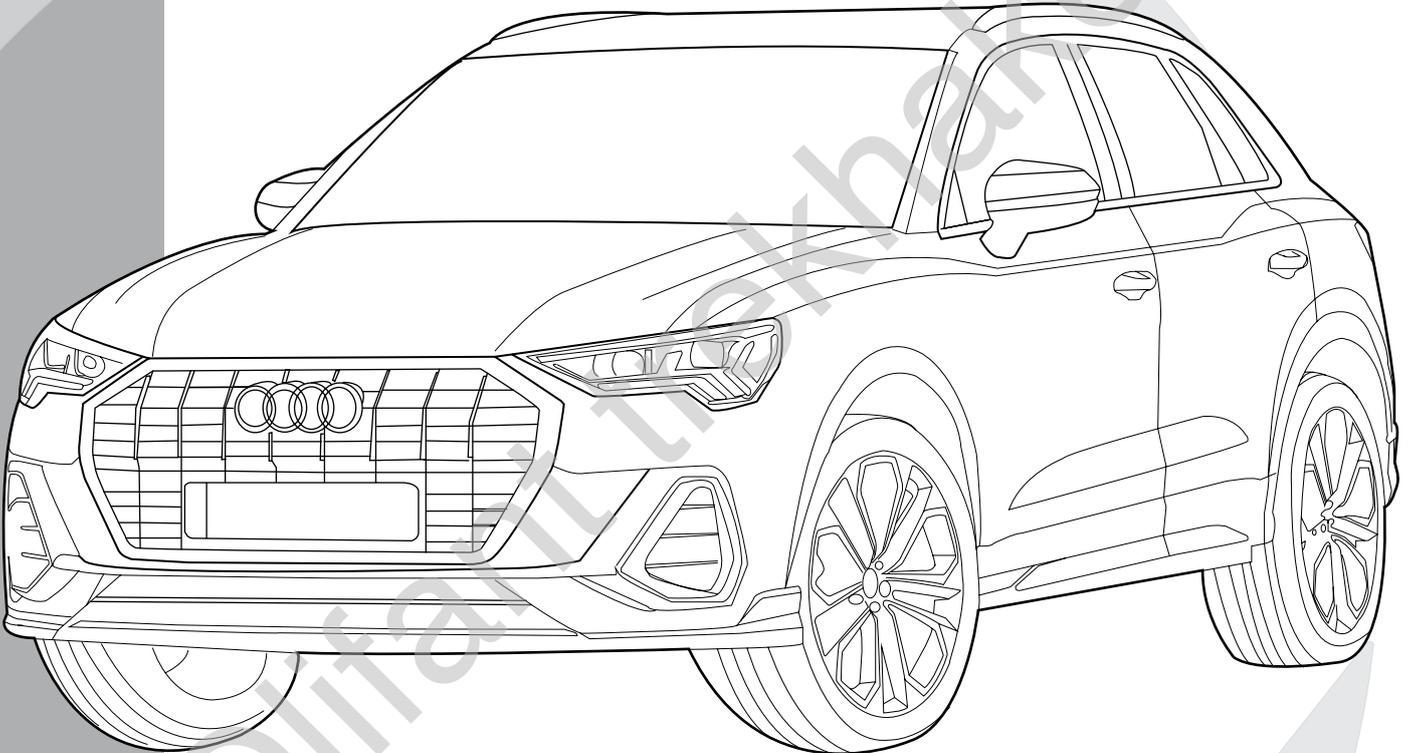


See the Certificate Of Conformity (COC) of your vehicle or contact your dealer to verify the max. trailer weight of your car!


MADE BY	D 11,25	F	E6
	EC APPROVAL N°		
BELGIUM	S 110	55R-011516	
REF N°	SERIE N°		
2363T60	XXX		
OMSCHRIJVING			
Audi Q3 07/'18- + Audi Q3 Sportback 06/'19-			

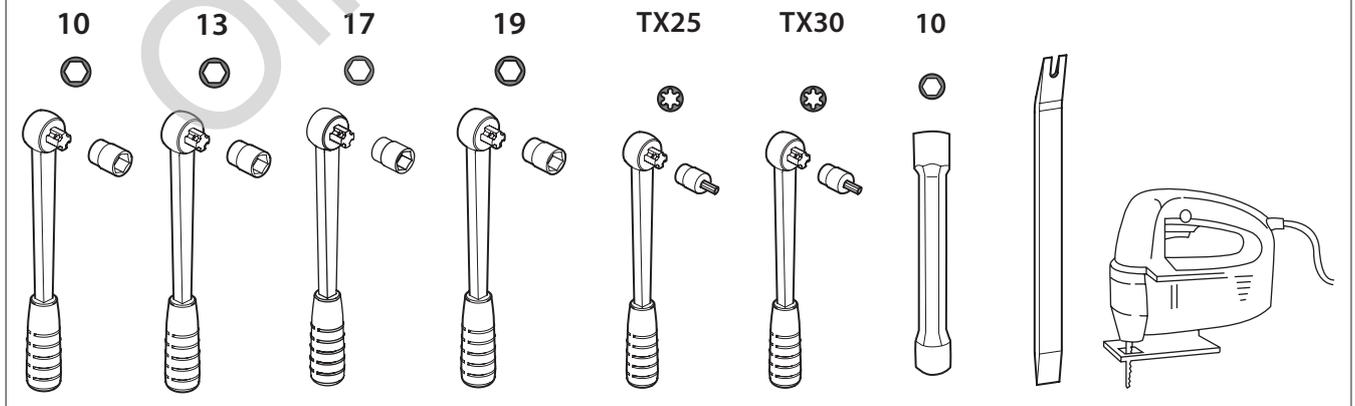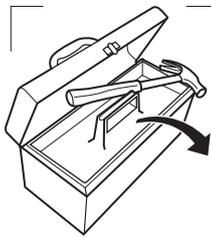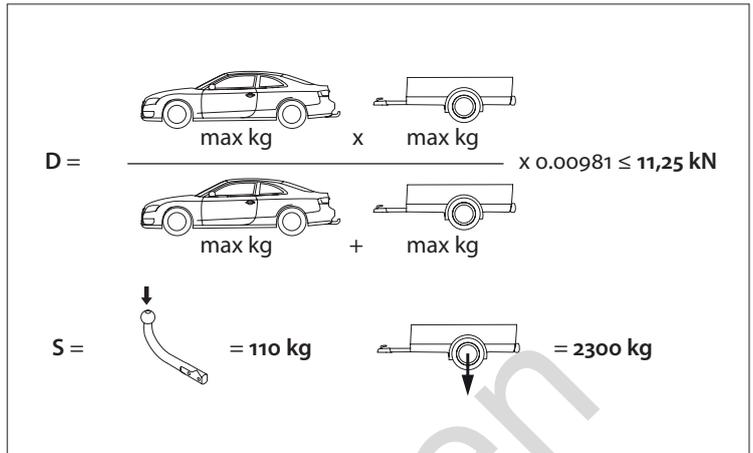

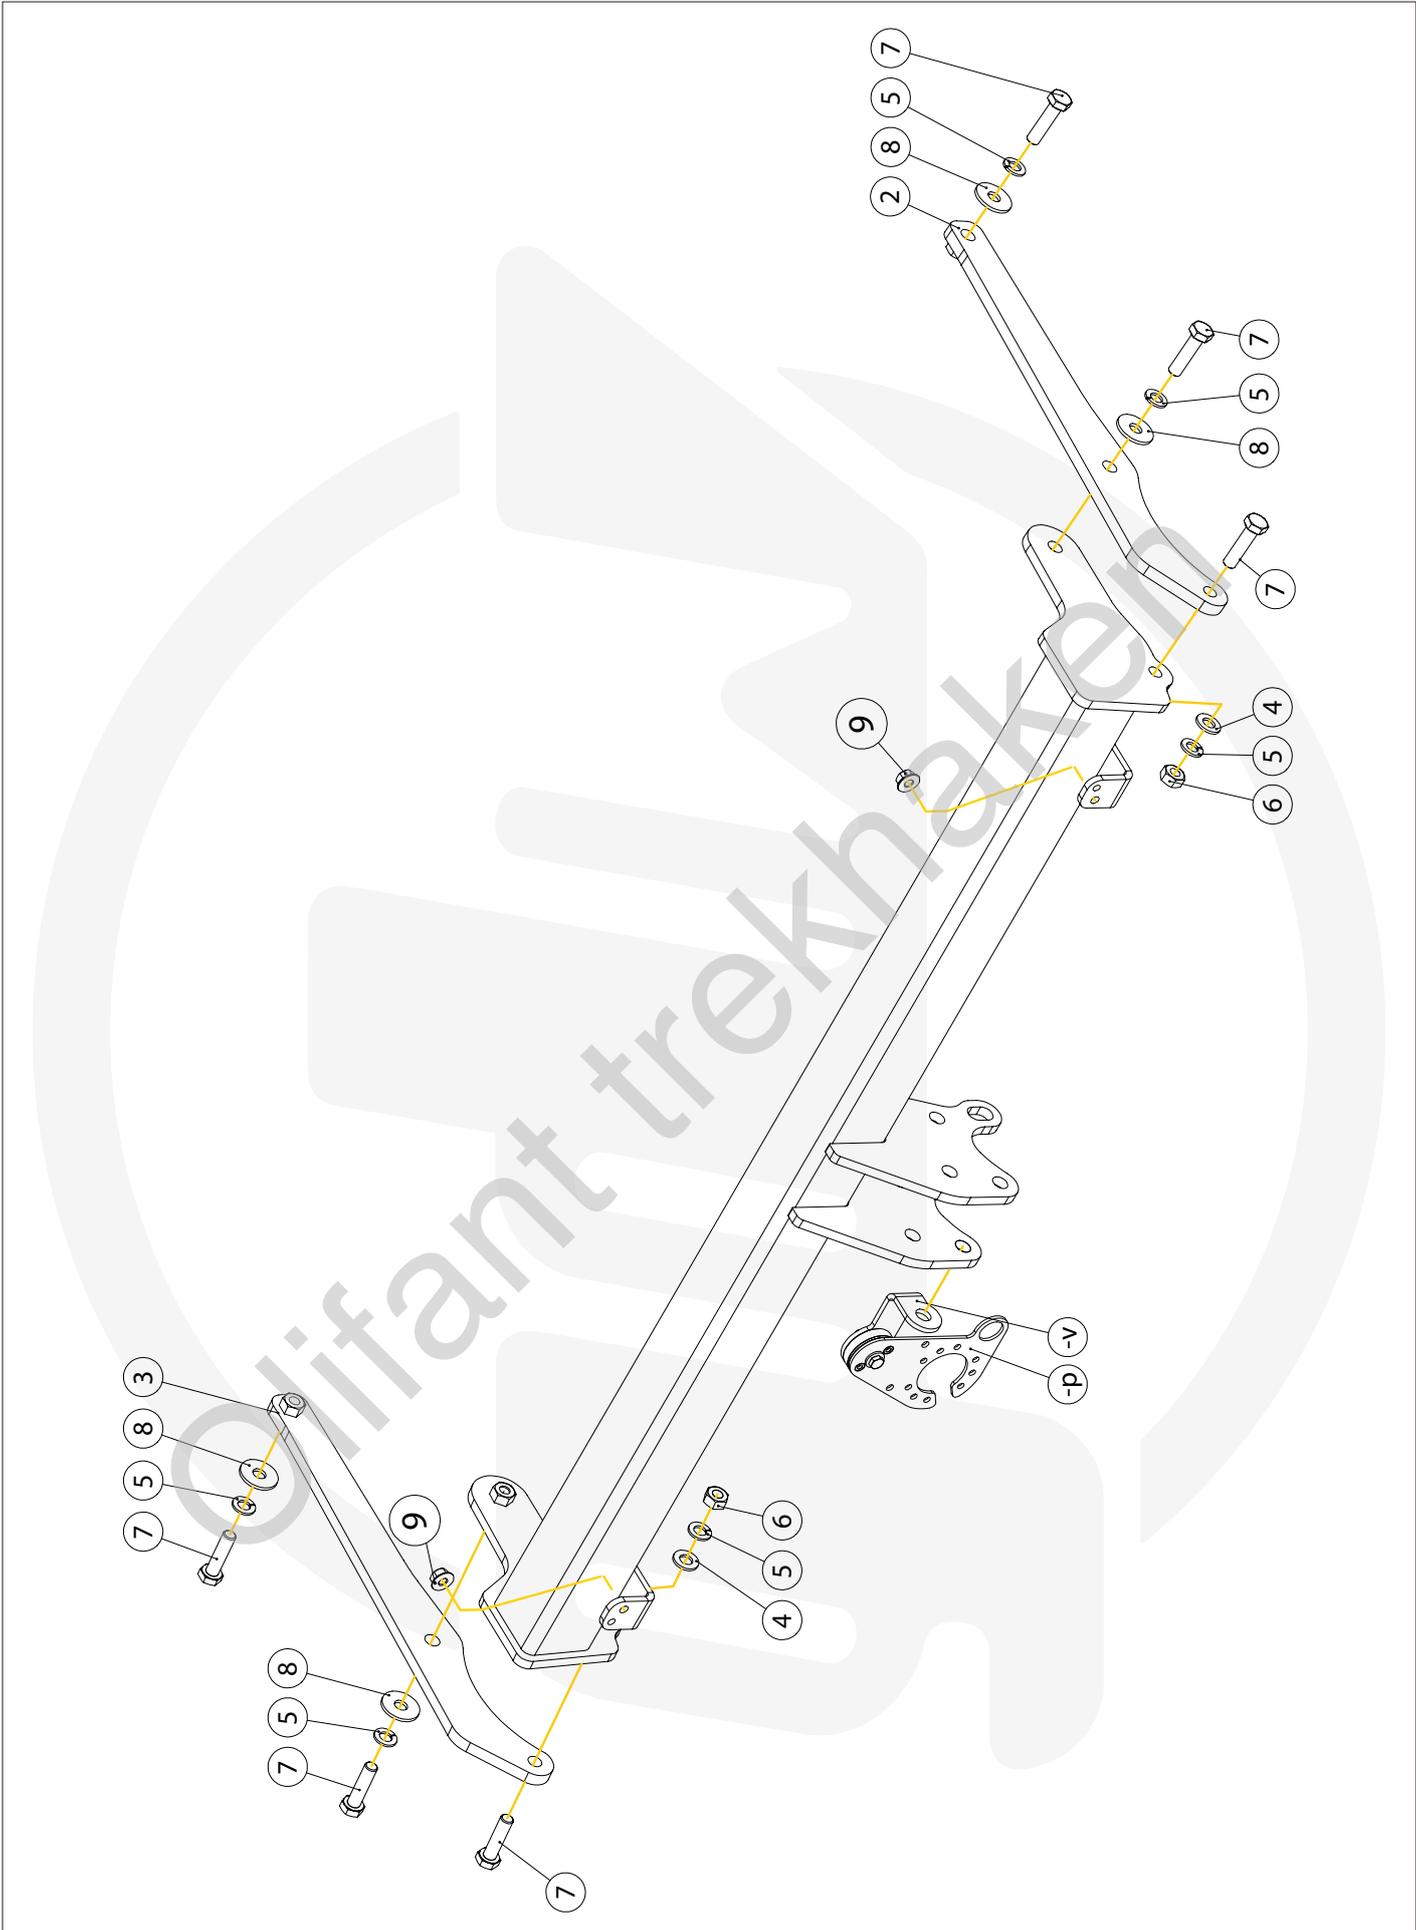


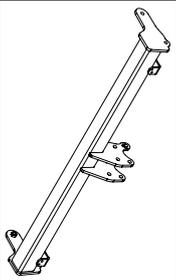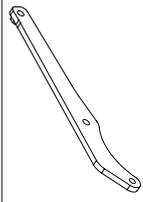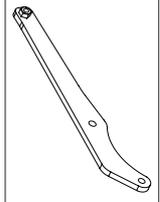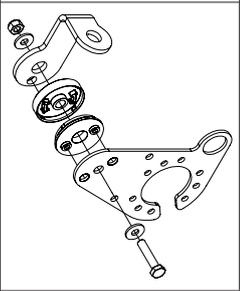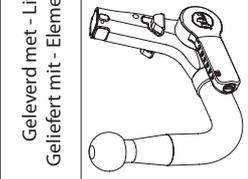
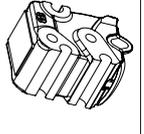
1		X1	GDW REF. 2363T60	
2		X1	GDW REF. 2	
3		X1	GDW REF. 3	
4		X2	DIN125-A10-14OHV-ELZ	
5		X6	DIN 128A-M10	
6		X2	DIN 934-M10	
7		X6	DIN933-M10X40	
8		X4	DIN9021-M10-ELVZ	
9		X2	DIN6923-M6	
-V		X1	GDW REF. 908.095	
		X1	GDW REF. P46	
		X1	DIN985-M6	
		X2	6,2 X 15,4 X 1,6 (NYLON)	
		X1	GDW REF. 718.16.002	
		X1	GDW REF. 718.16.003	
		X1	GDW REF. 908.094	
		X1	DIN933-M6 X 30	
		X1	GDW REF. 908.101	
		X1	GDW REF. 960.VO602	Geleverd met - Livré avec - Delivered with Gefelefert mit - Elementos adjuntos - Leverages med
		X1	GDW REF. 740.200	
		X1	GDW REF. 912.003	
		X1	GDW REF. 740.112	
		X1	GDW REF. 740.111	
		X1	GDW REF. 740.114	
		X1	GDW REF. 718.15.001	
		X1	GDW REF. SYST60-10	
		X3	DIN931-M12X110-8.8	
		X3	DIN128A-M12	
		X6	DIN125A-M12	
		X3	DIN934-M12	

1

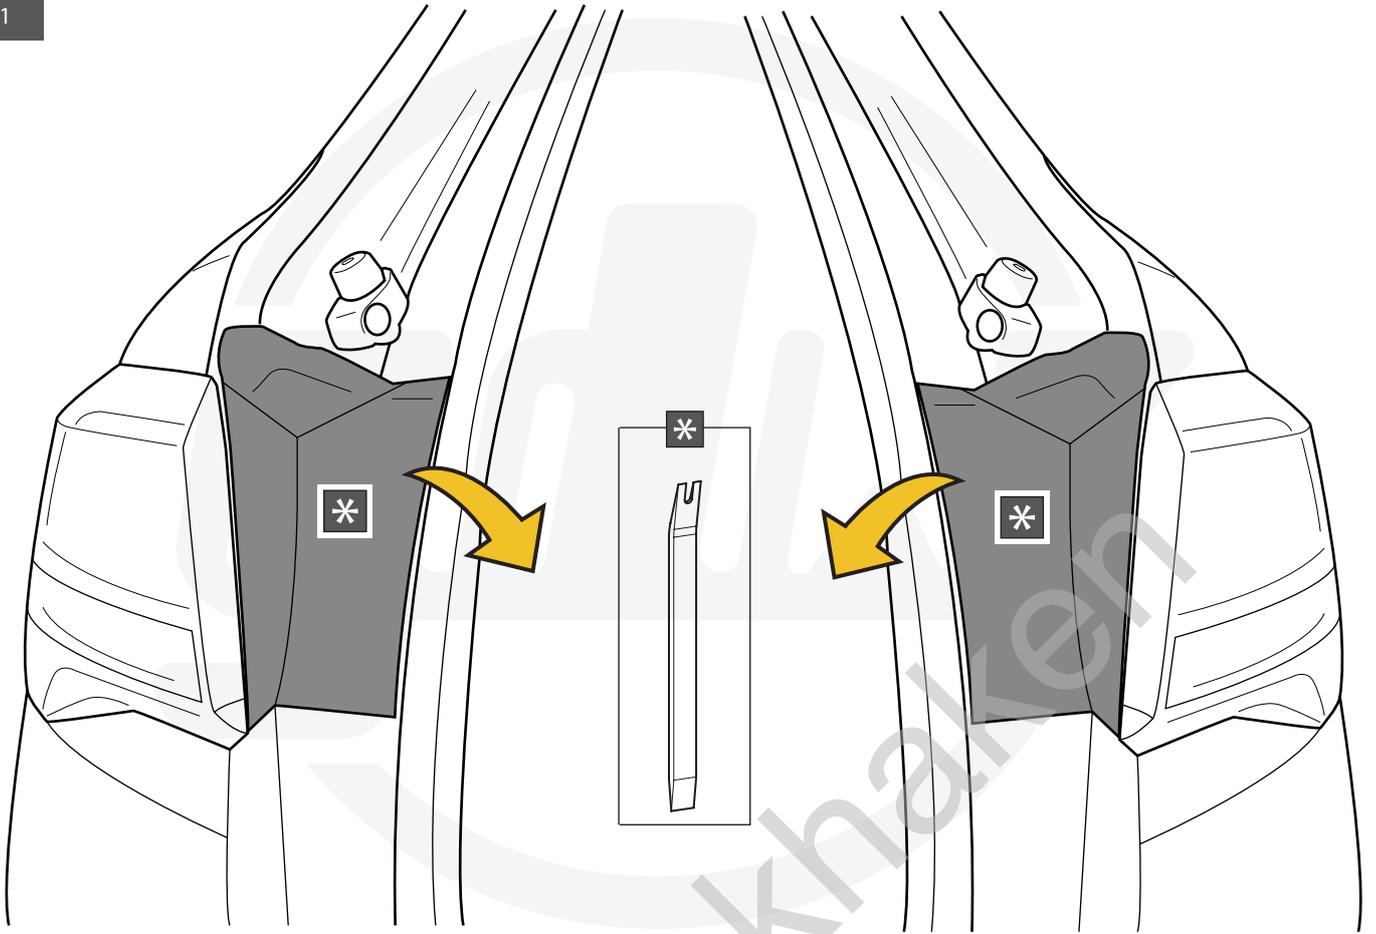


2

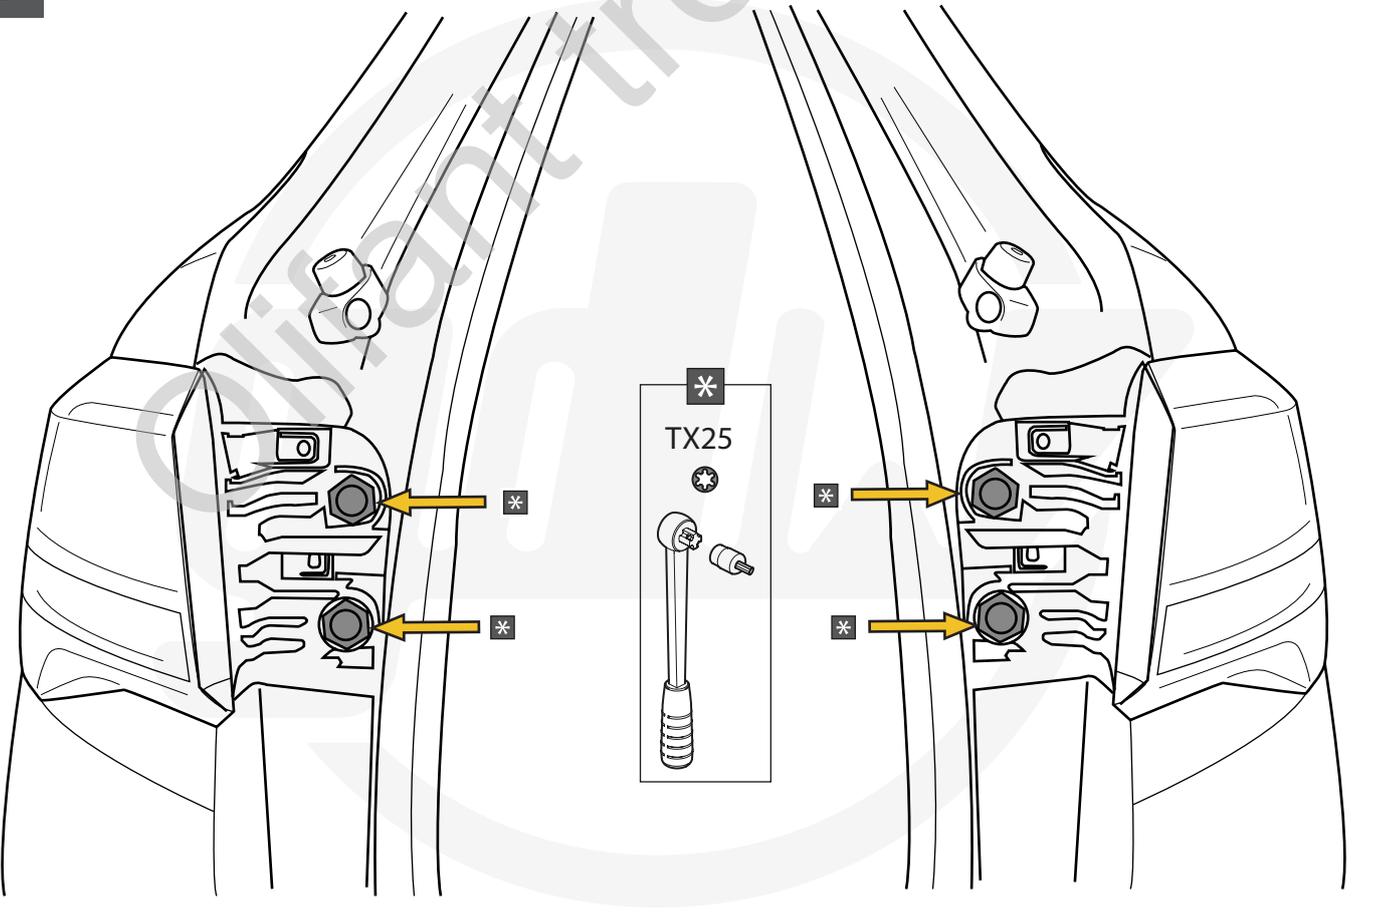


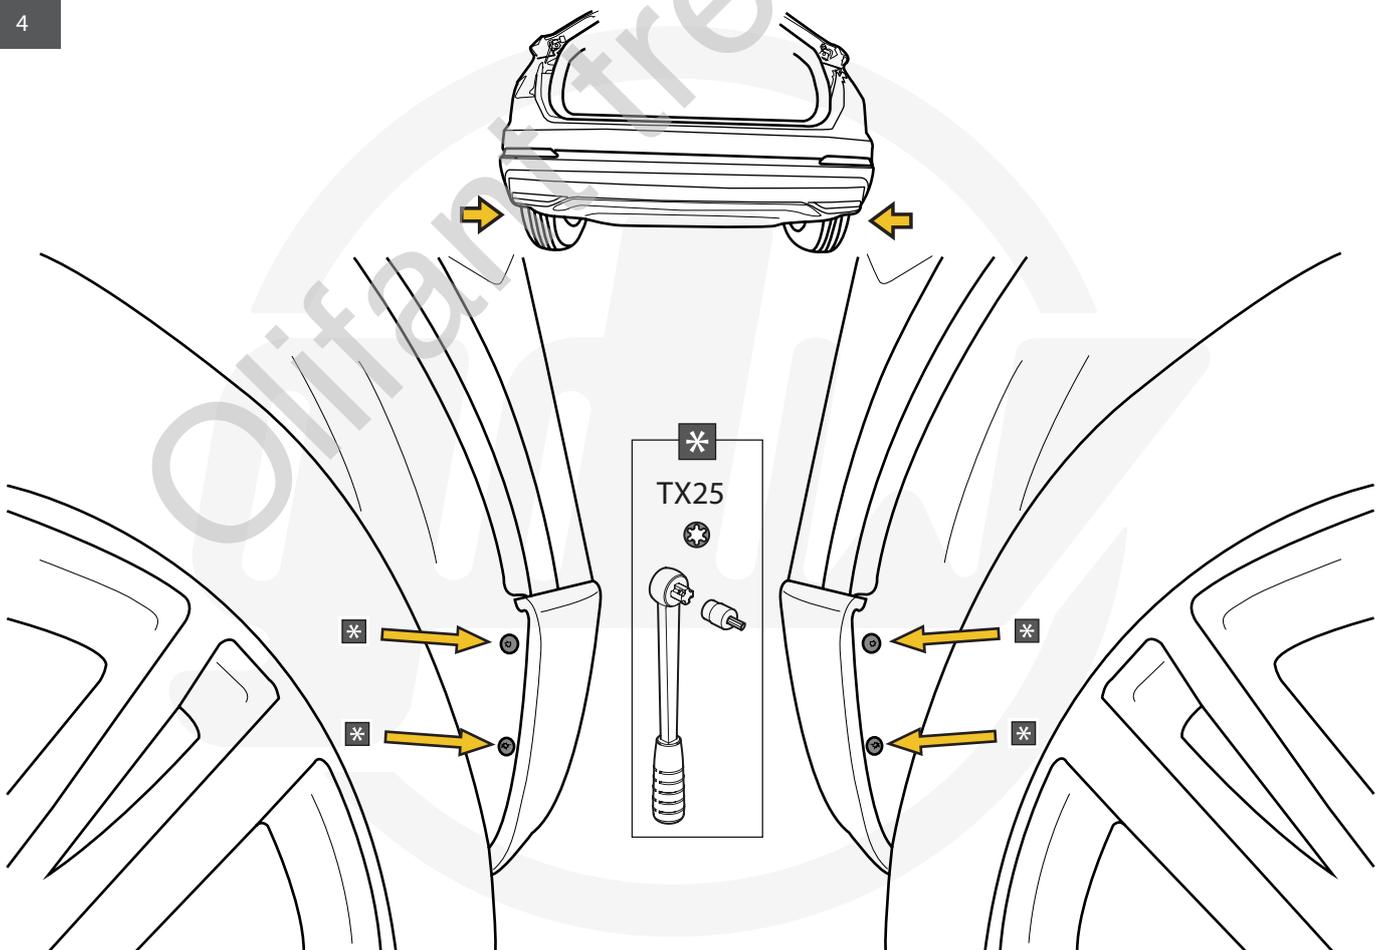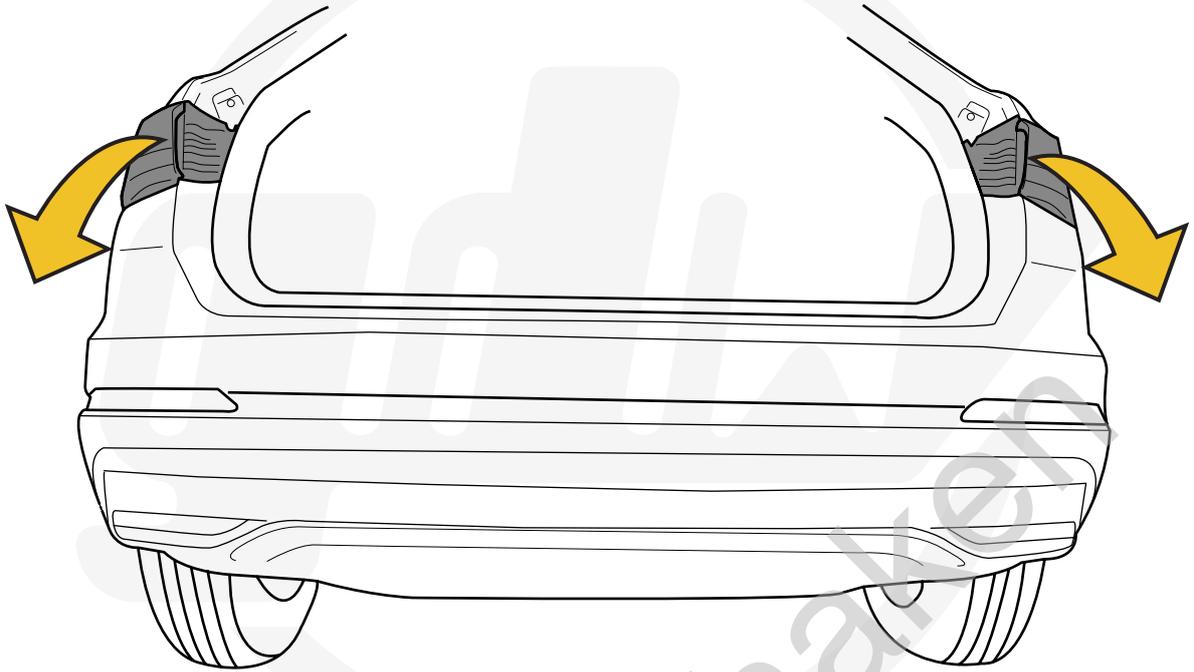

5

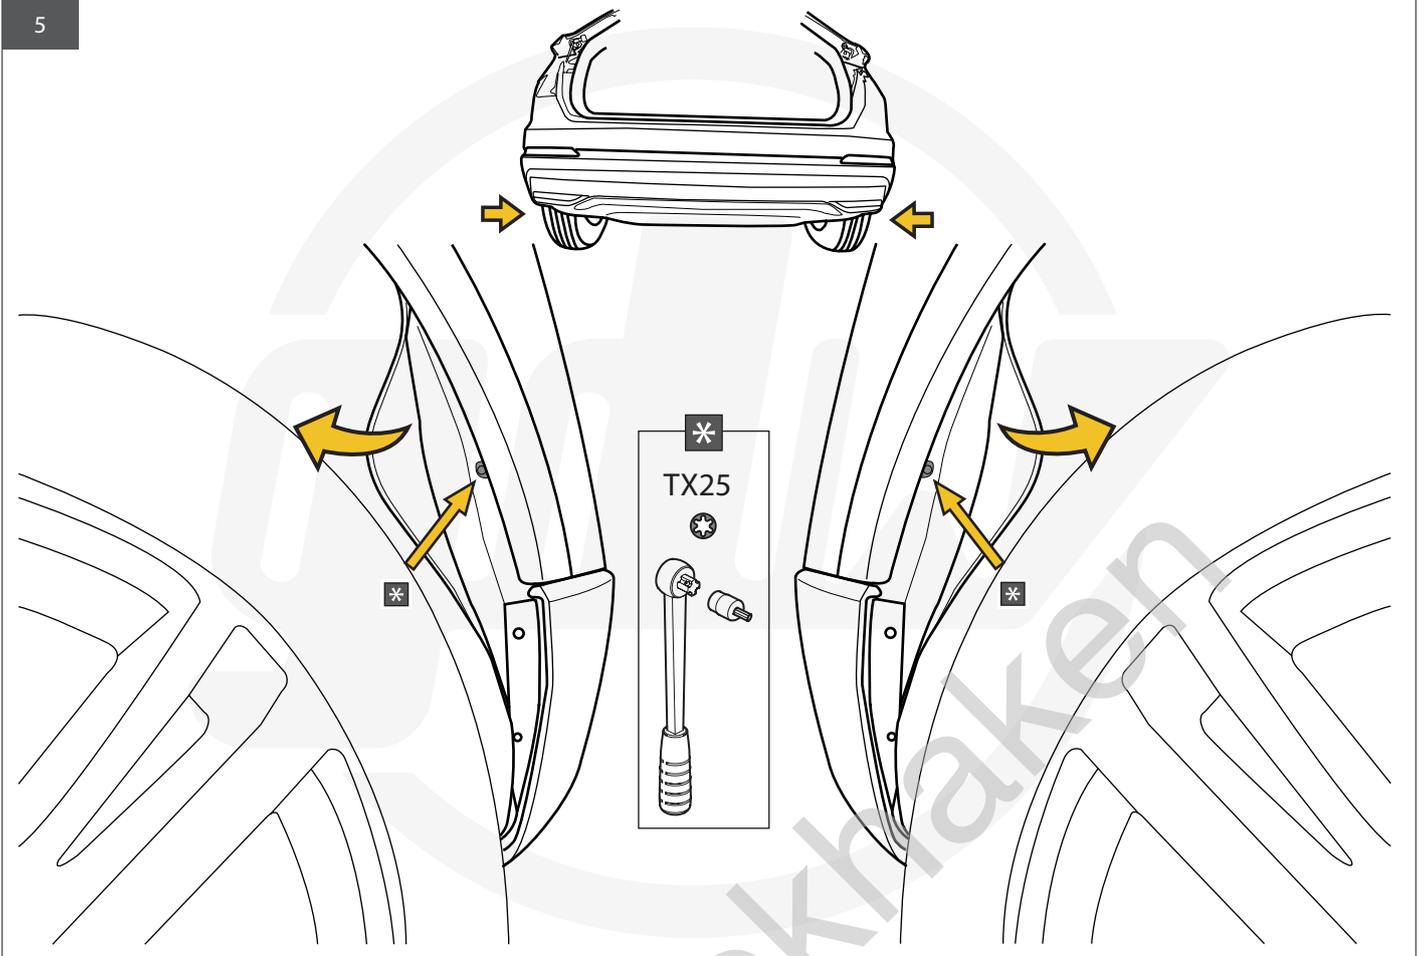


6

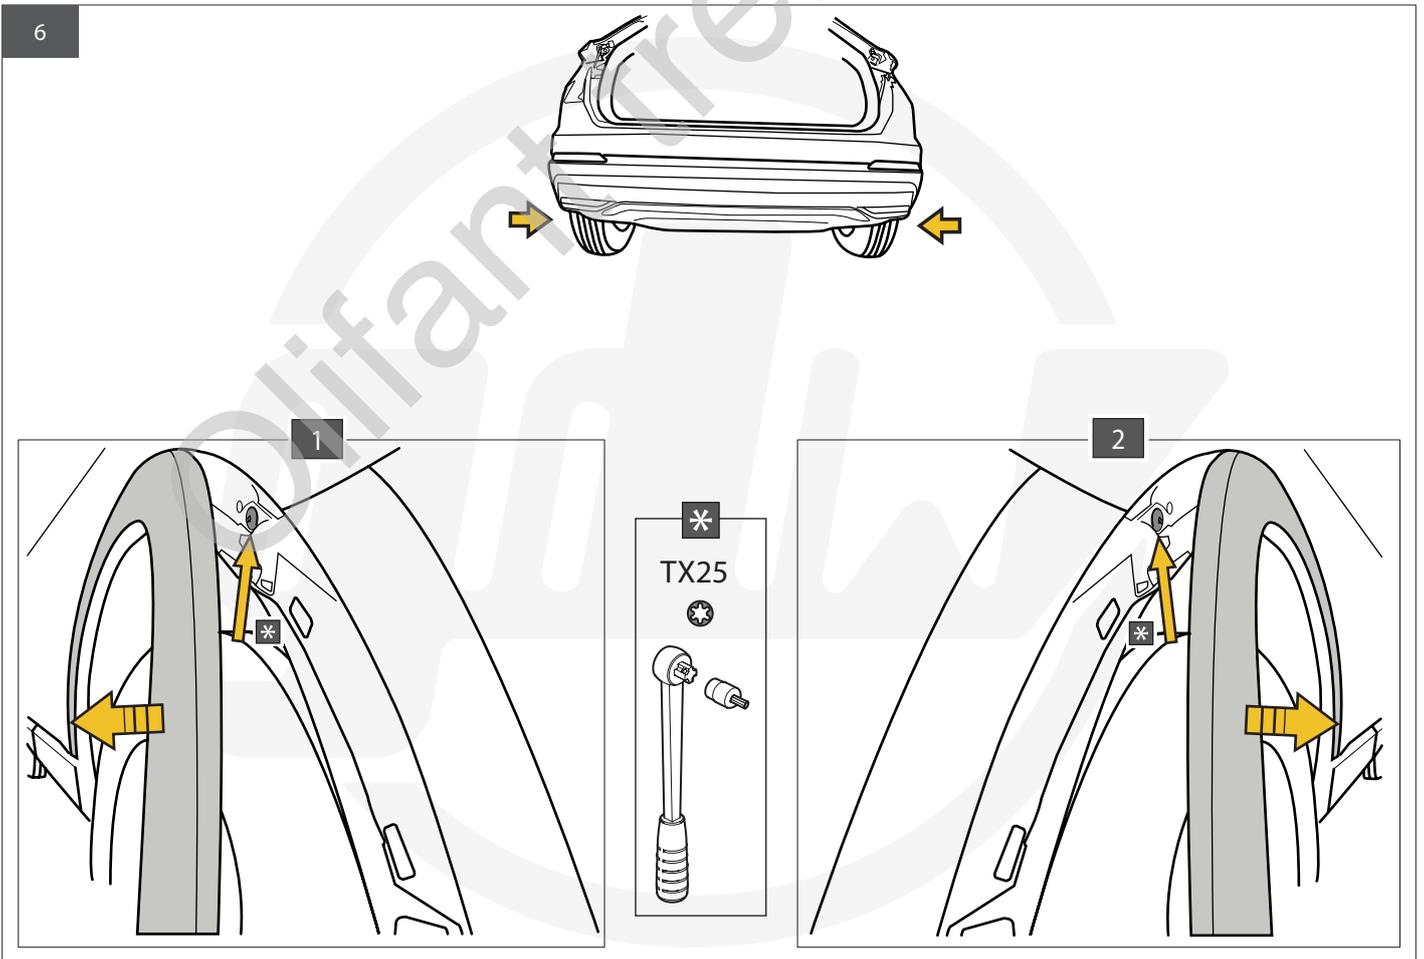


7




x2





Ø 3

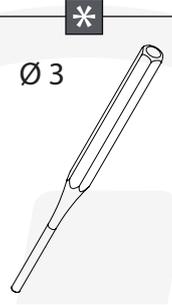




**ONLY Q3 SPORTBACK**

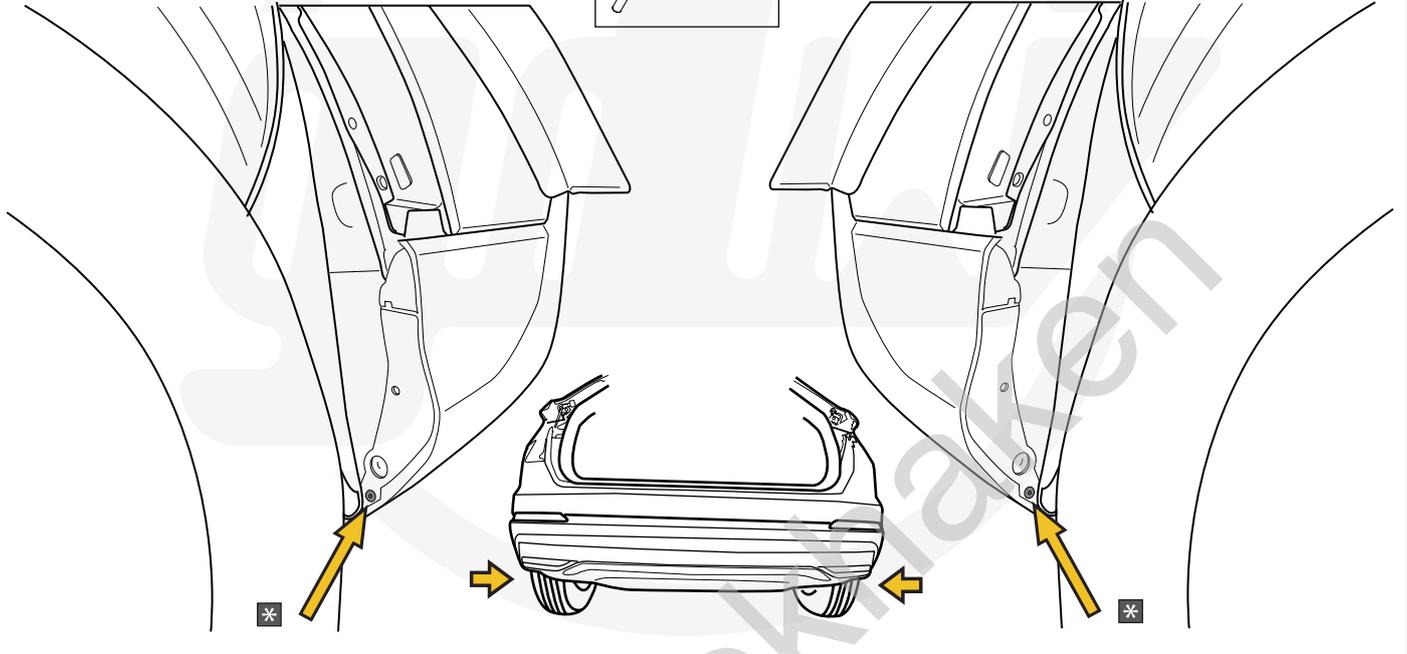




8

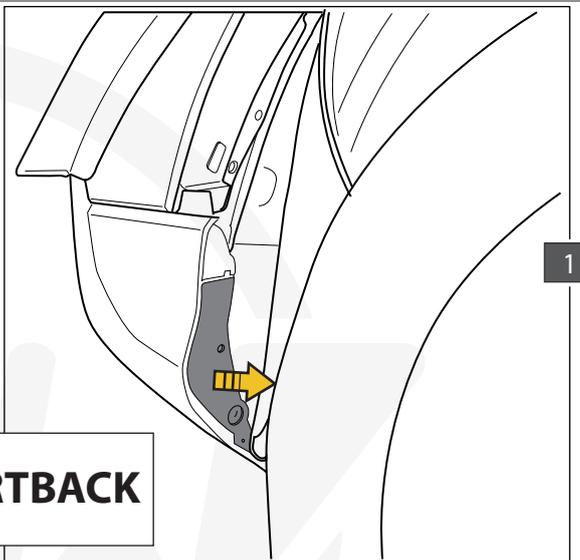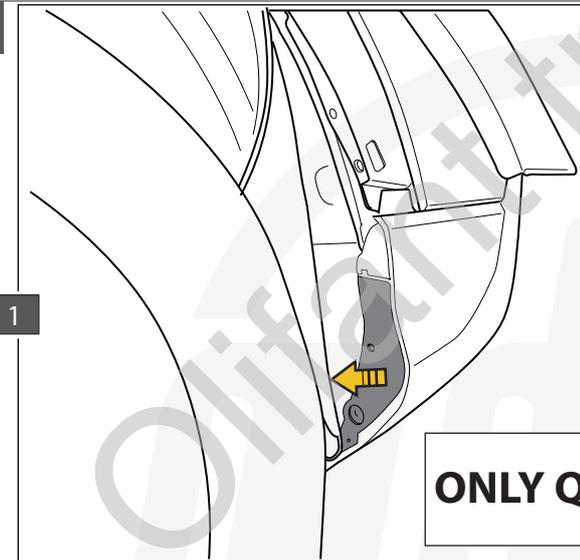



**ONLY Q3 SPORTBACK**




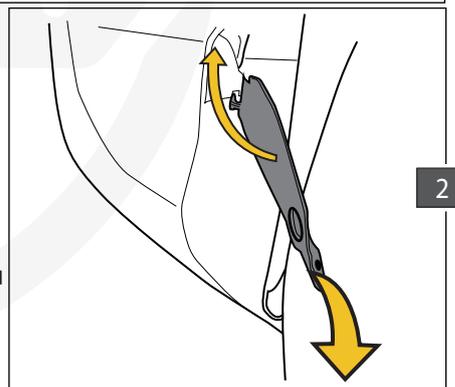
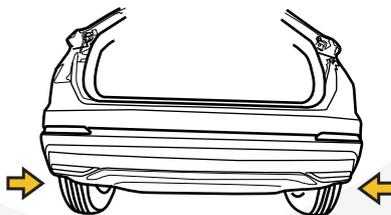
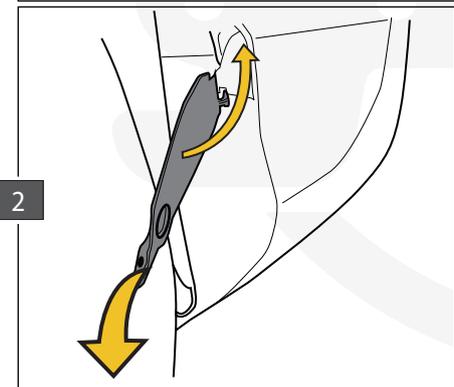




9

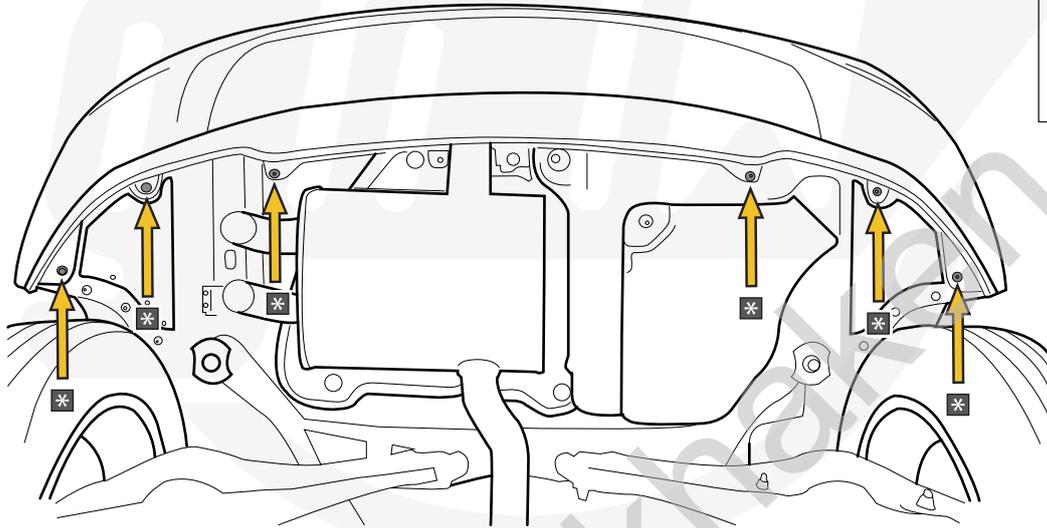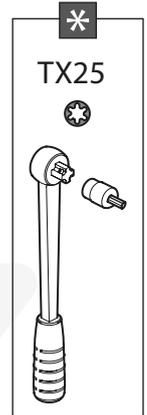
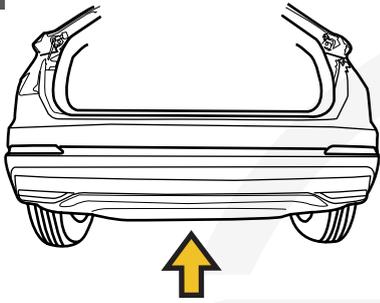


10


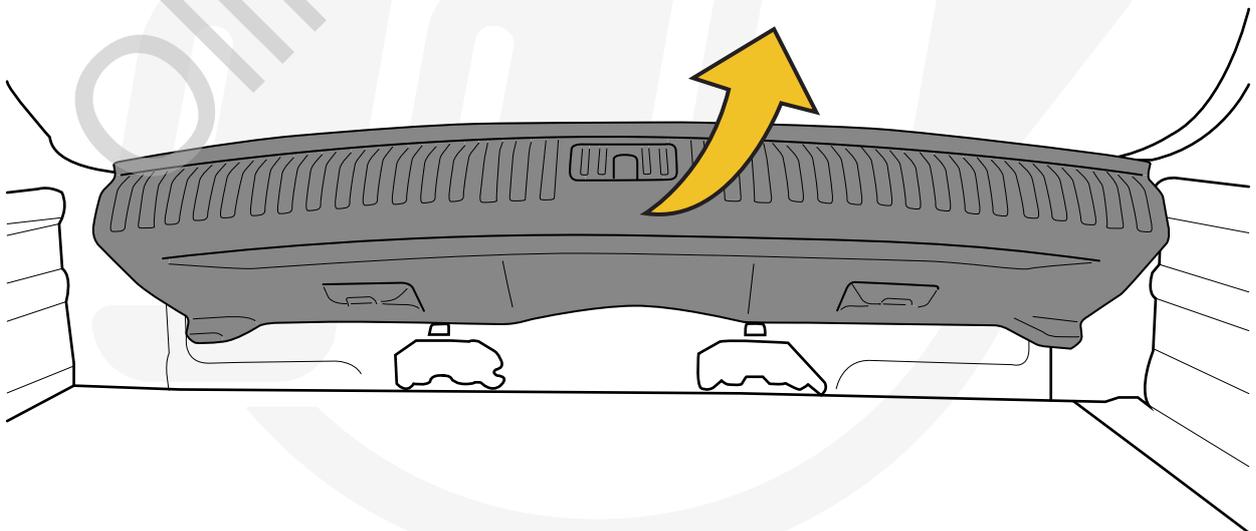
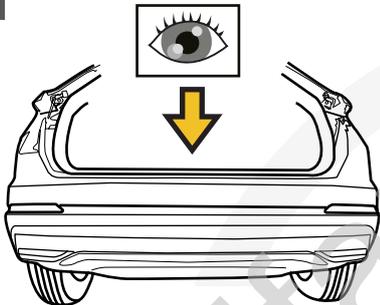


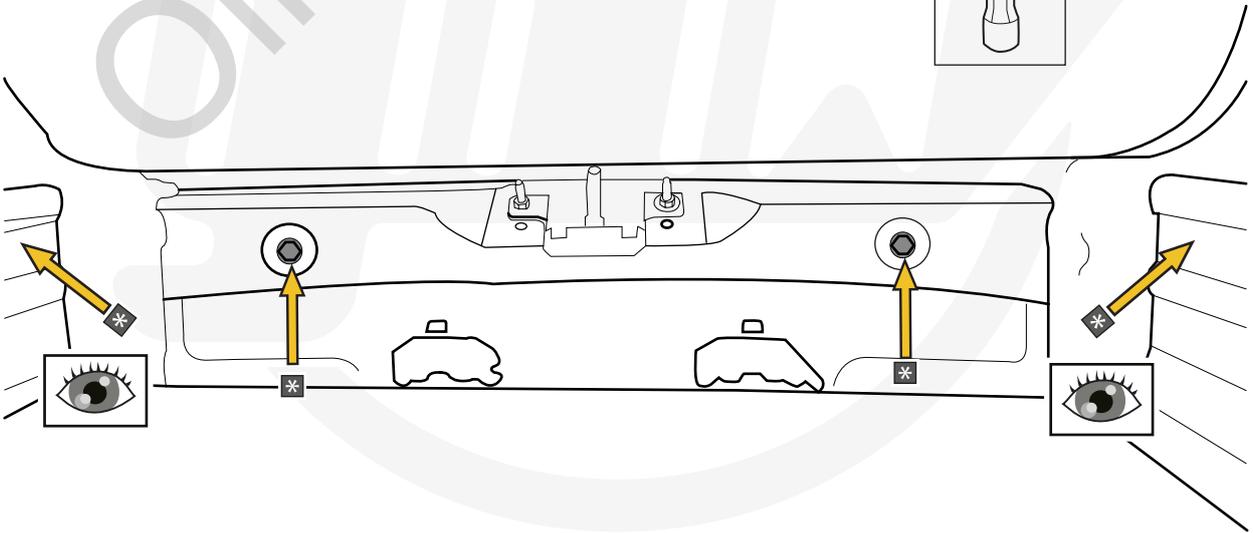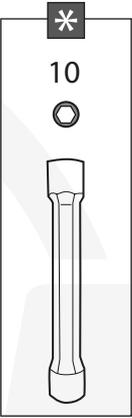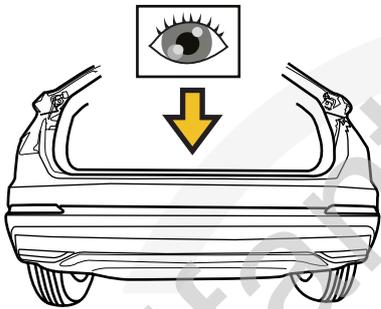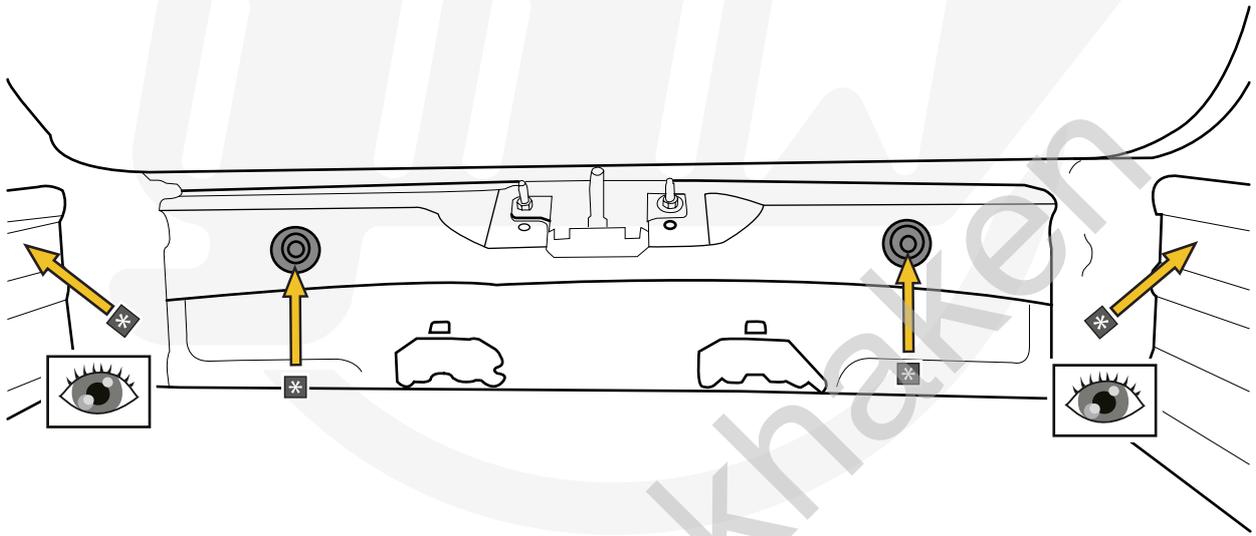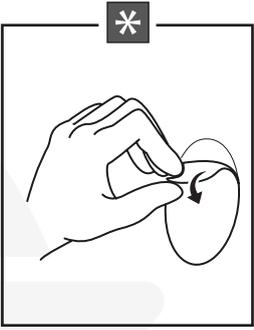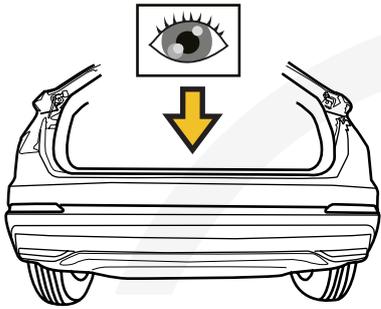


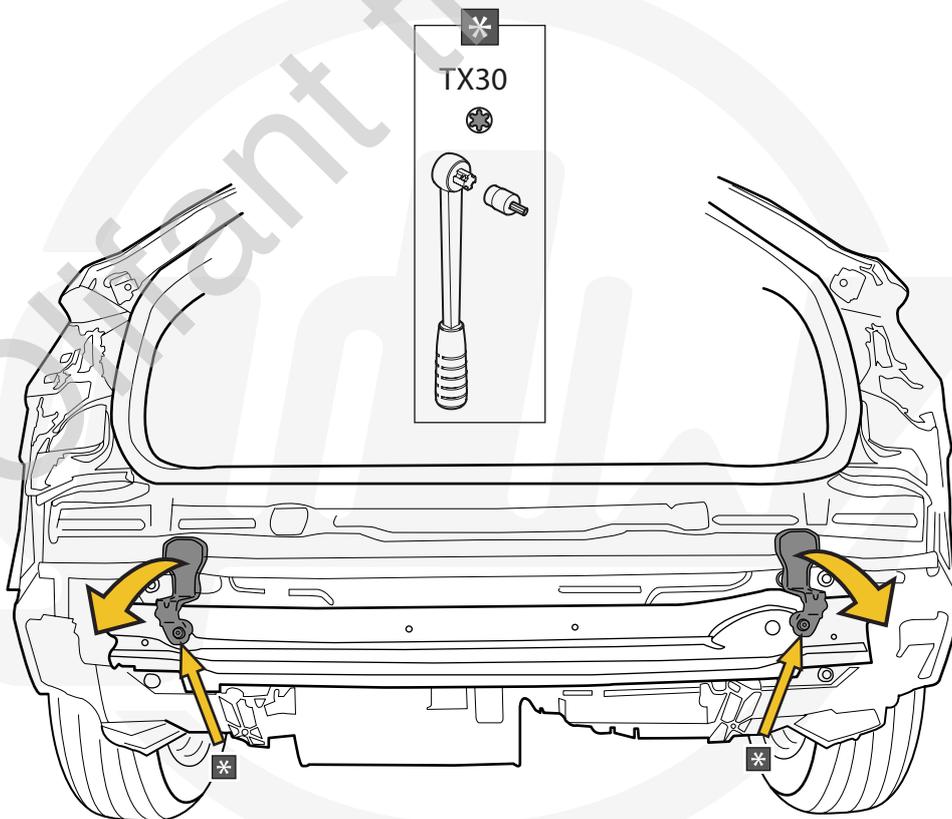
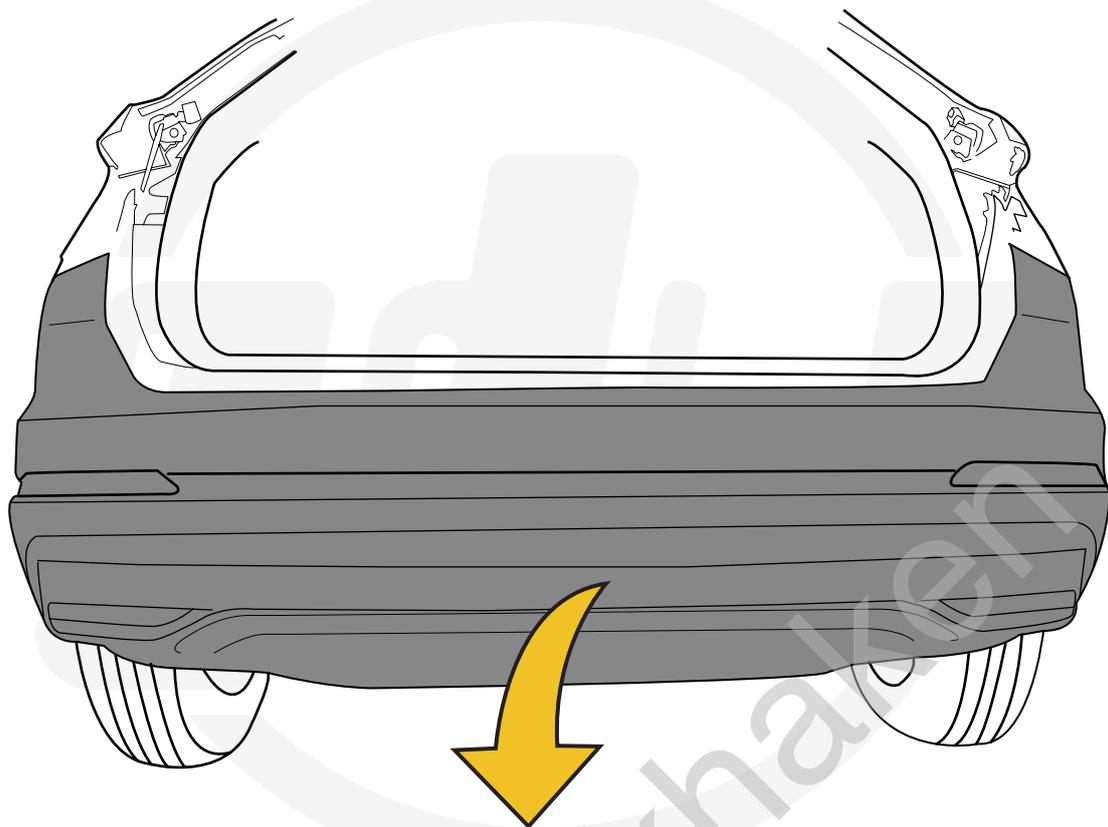


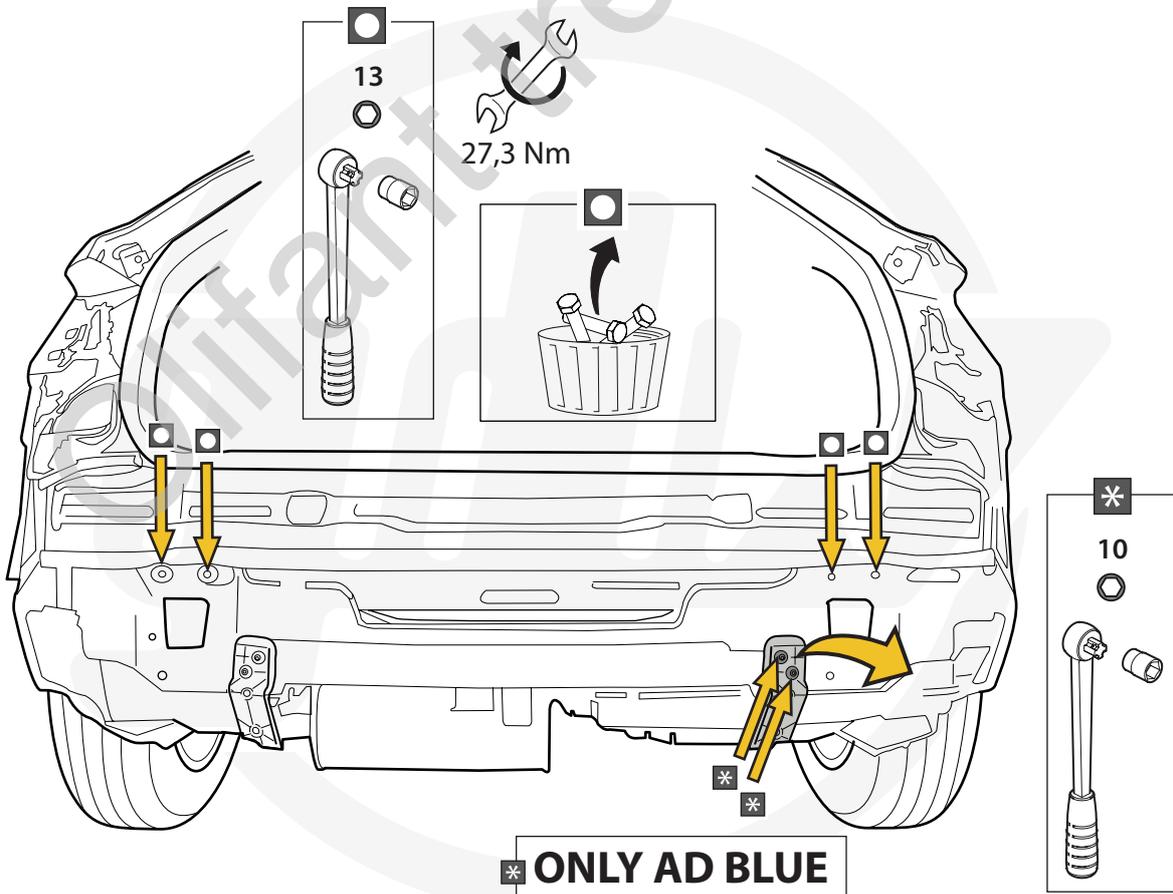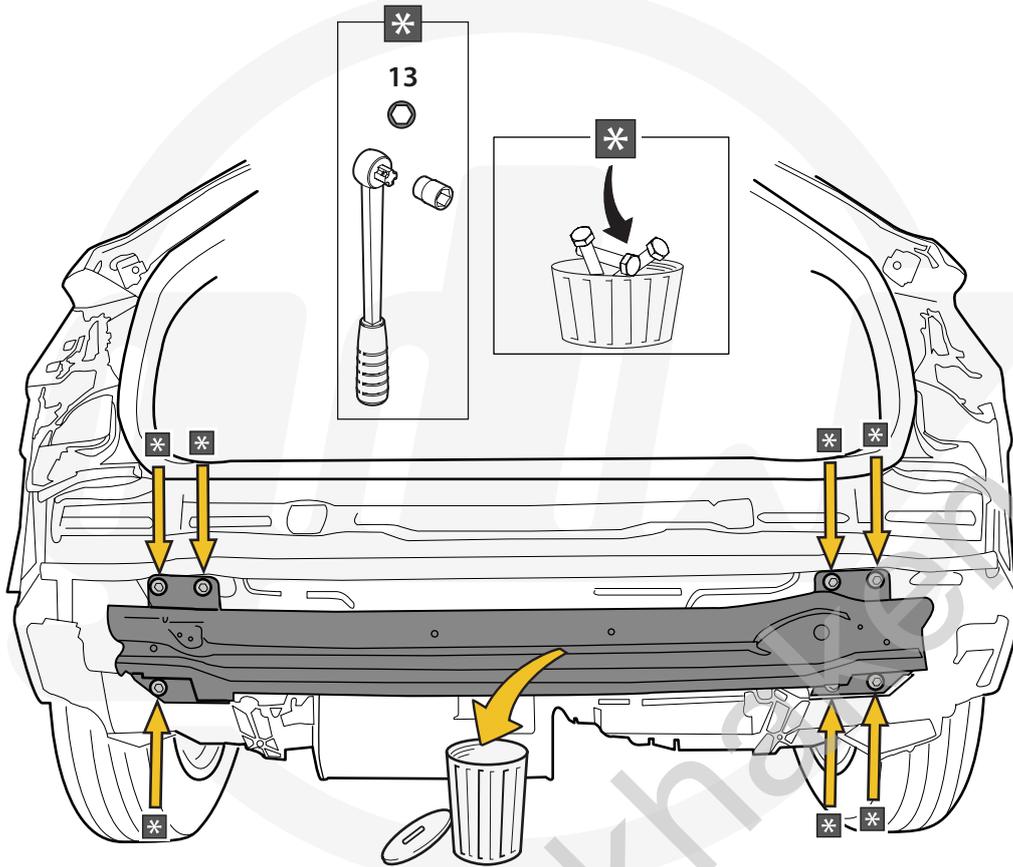


ONLY AD BLUE

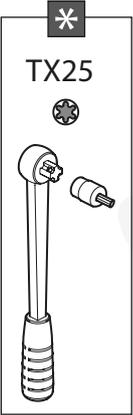
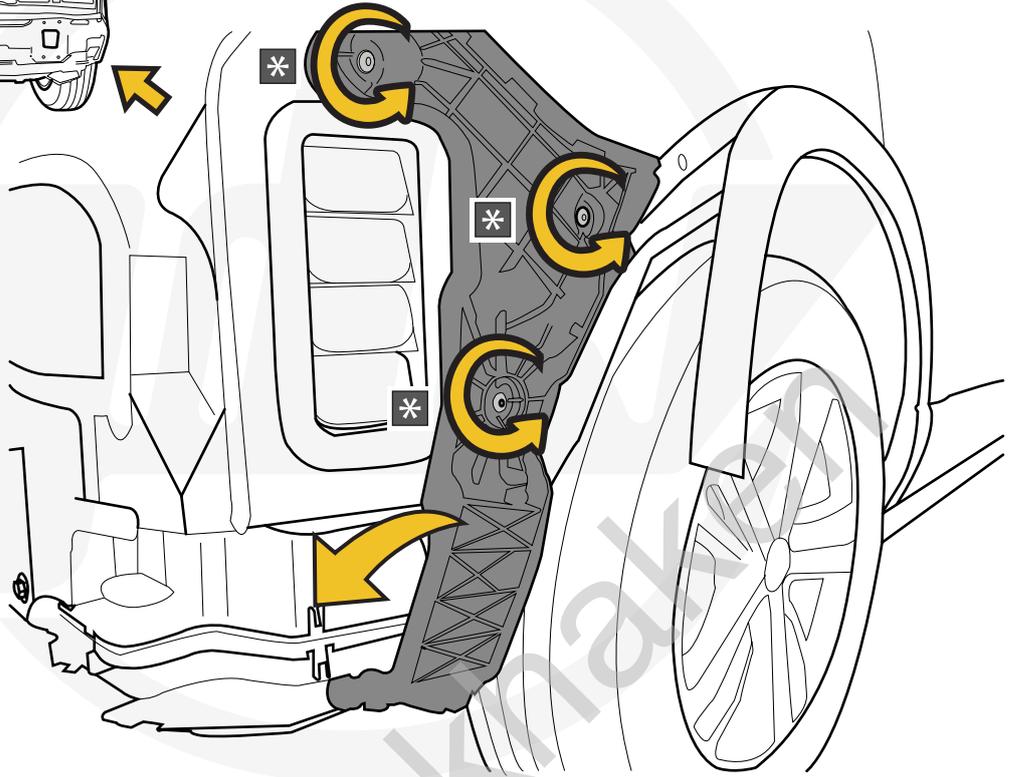
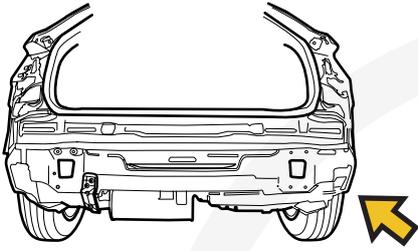







ONLY AD BLUE






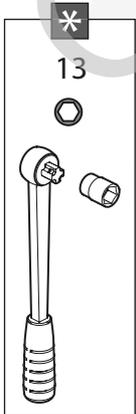
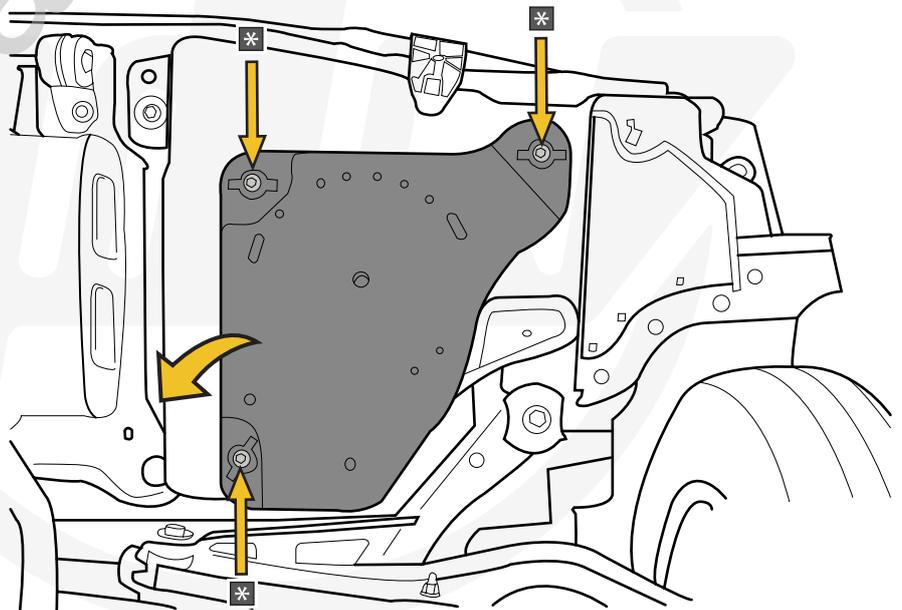
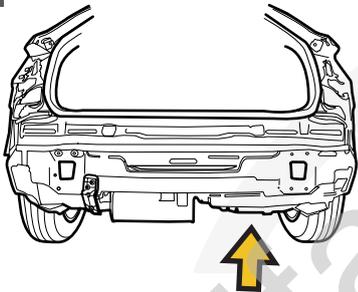








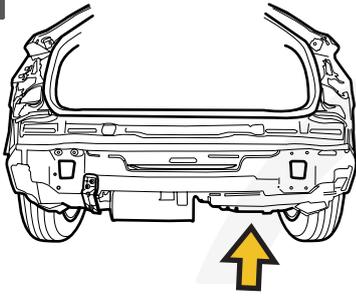




**ONLY AD BLUE**

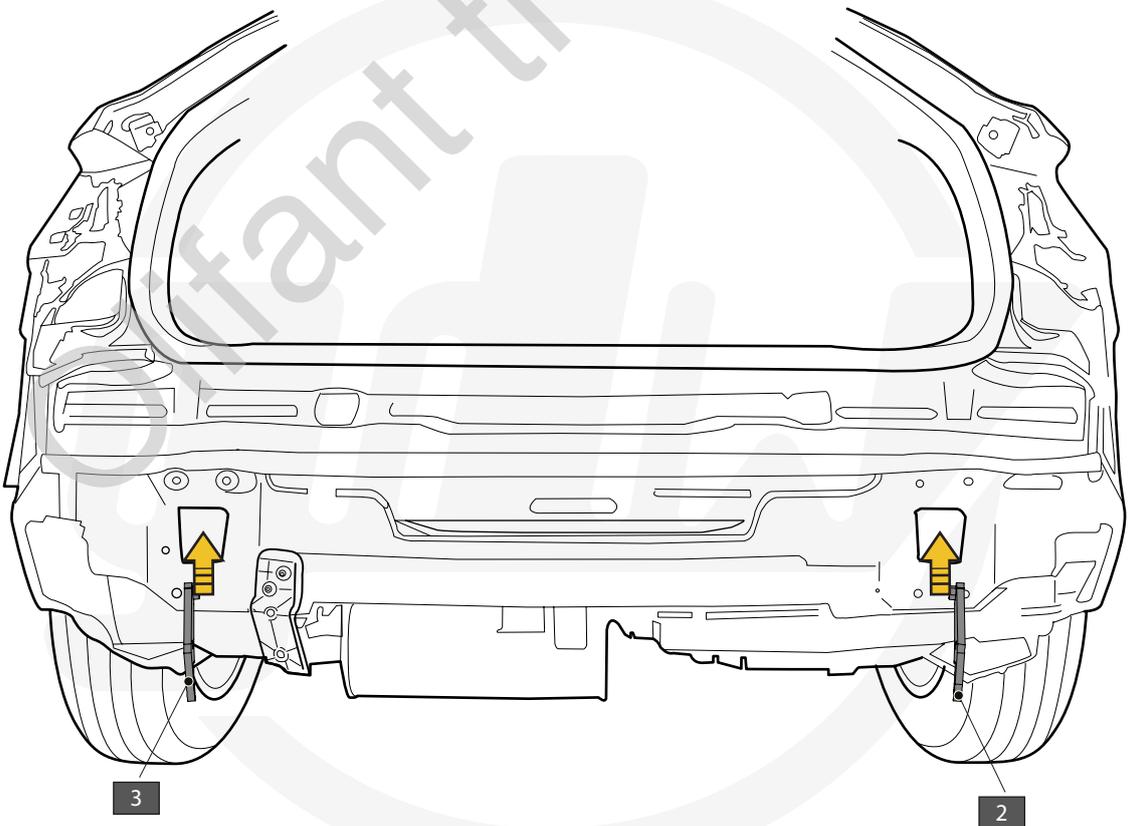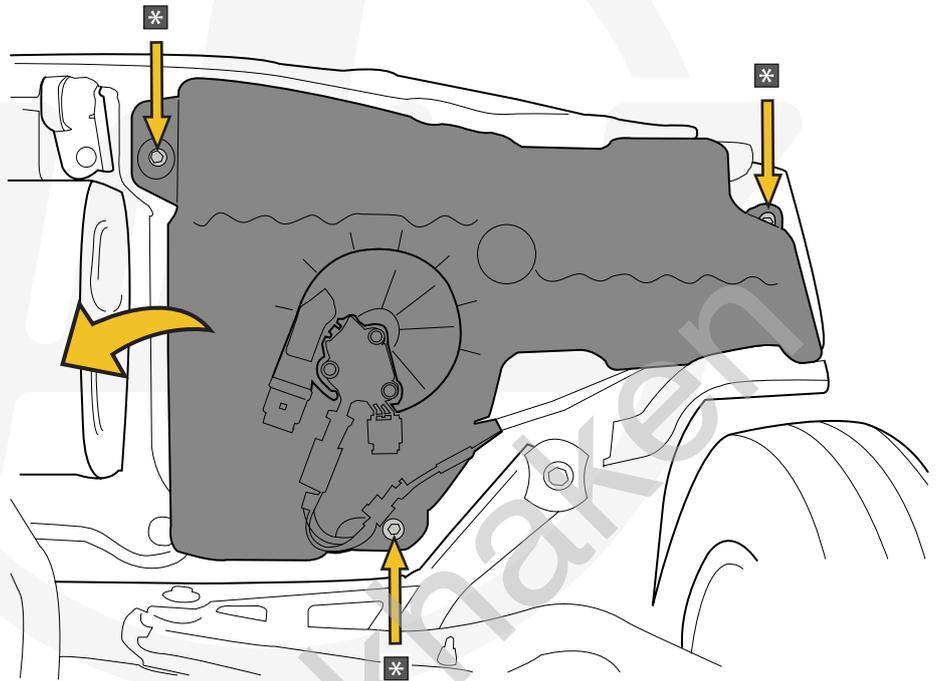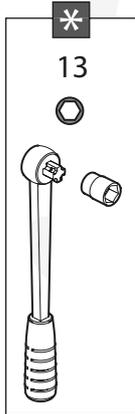

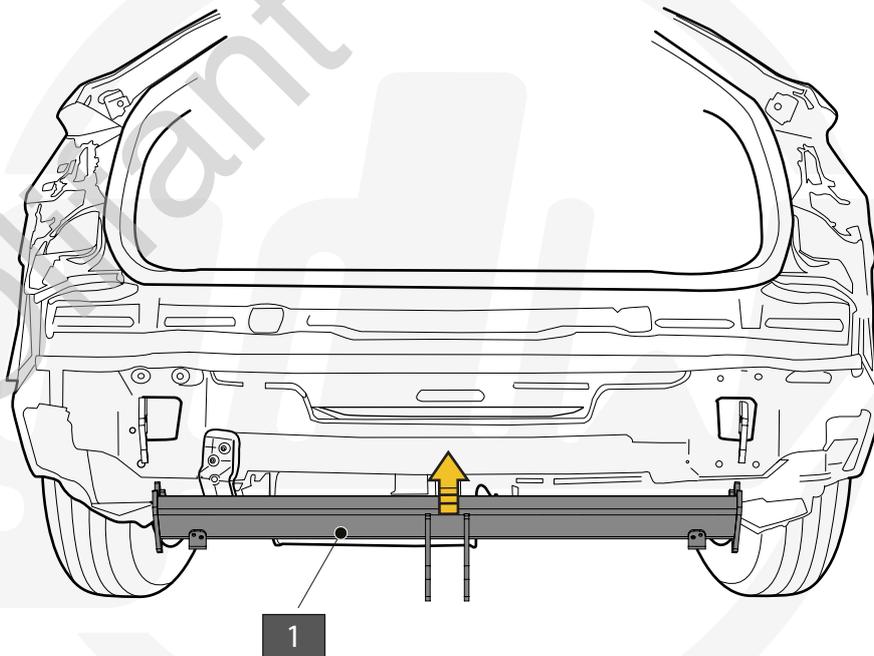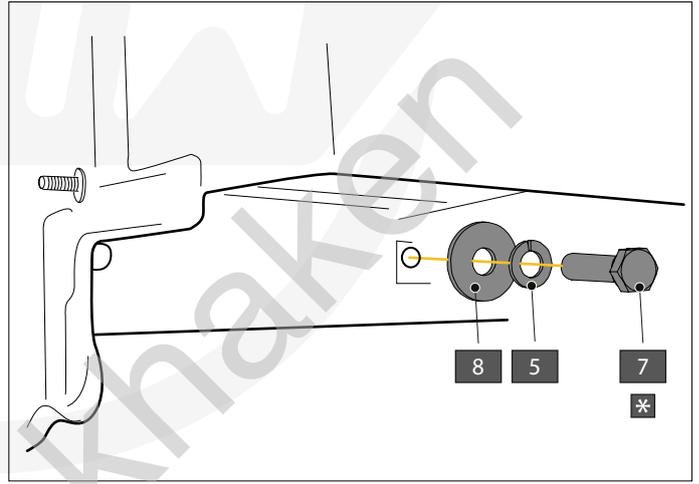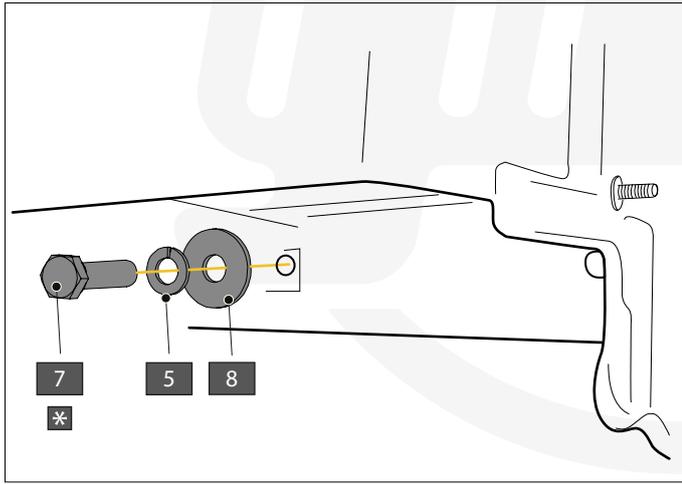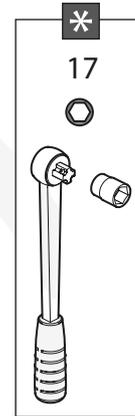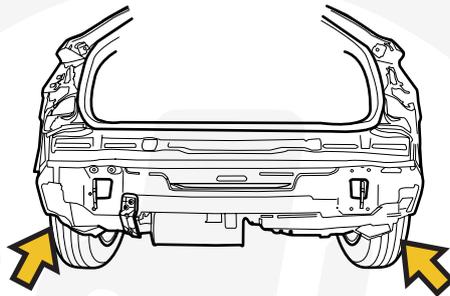

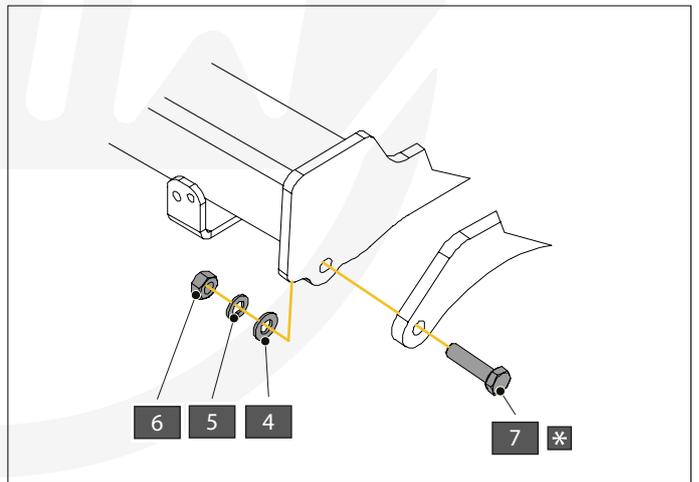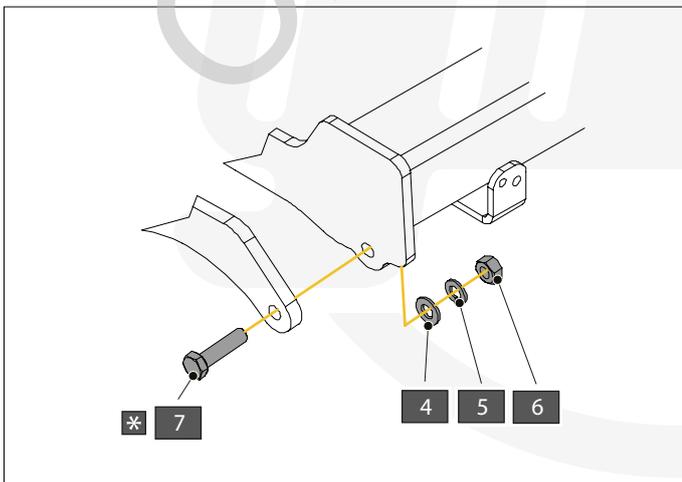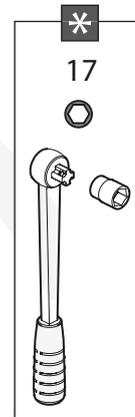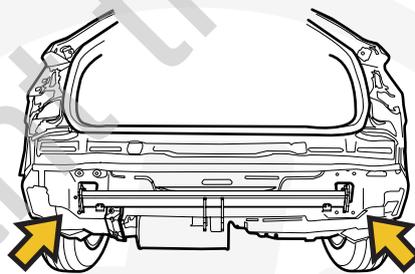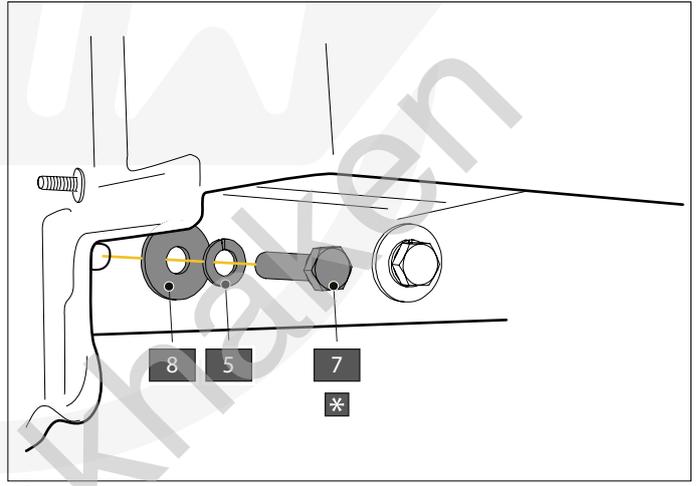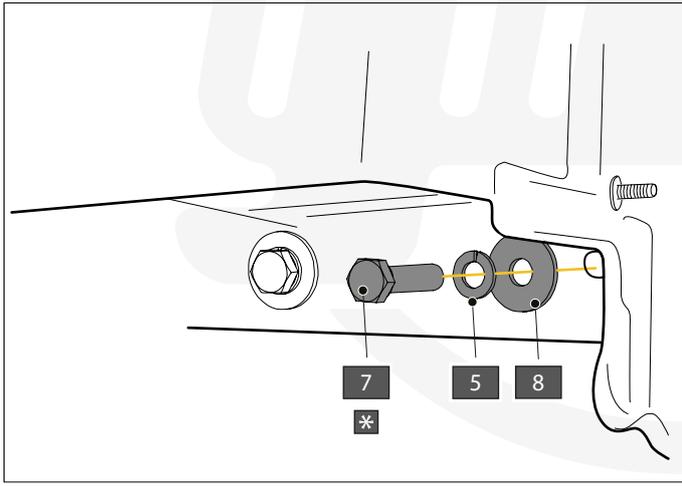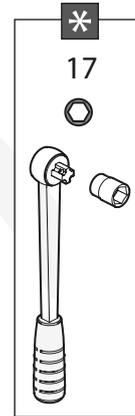
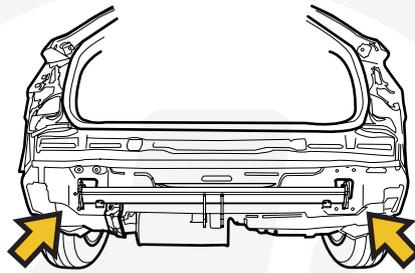


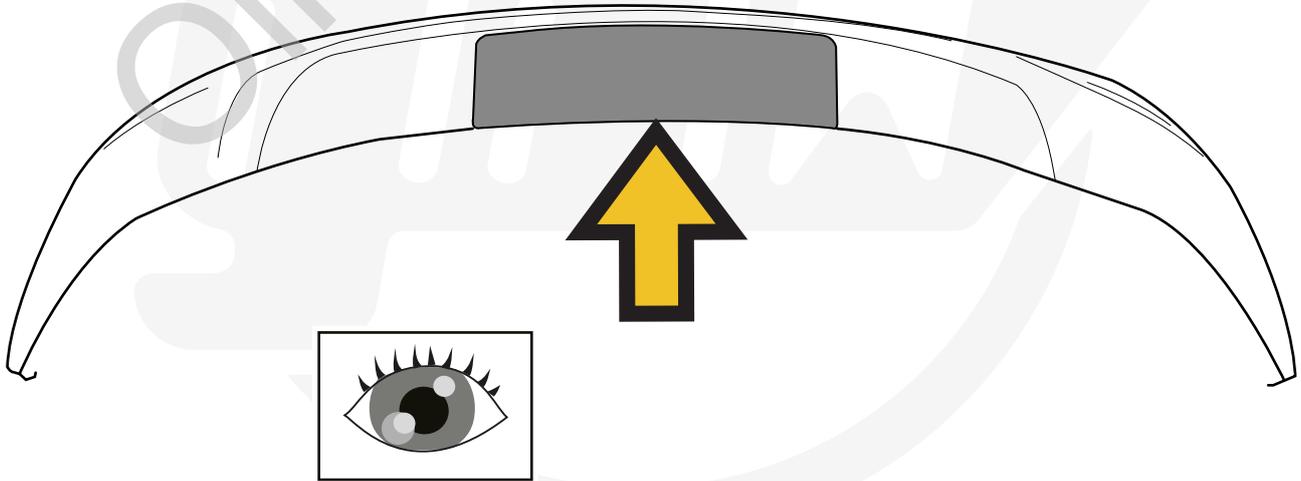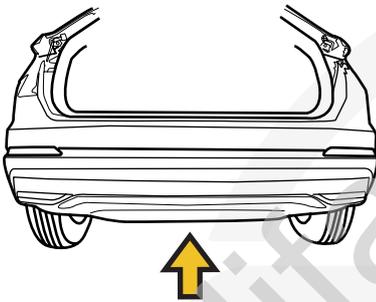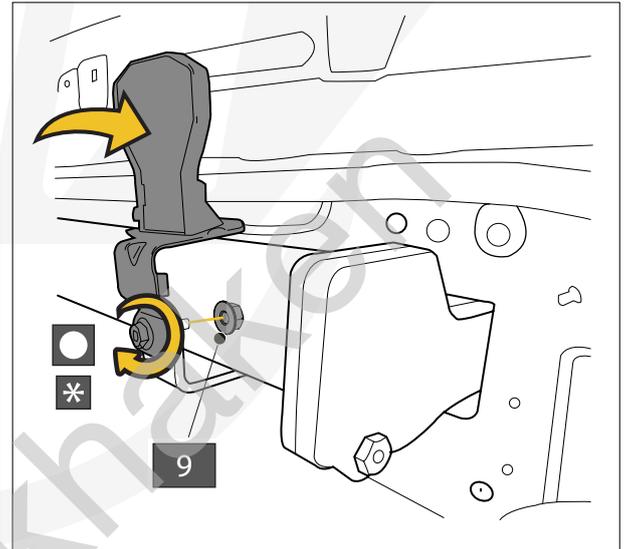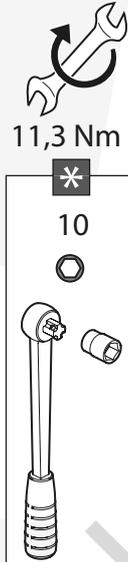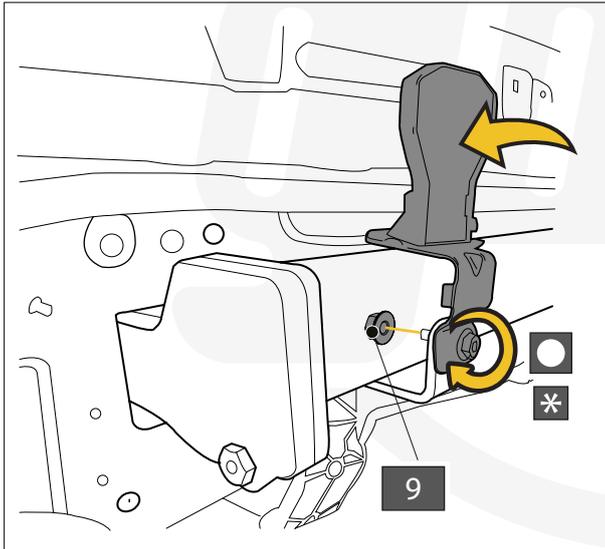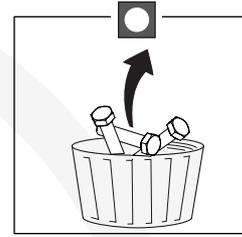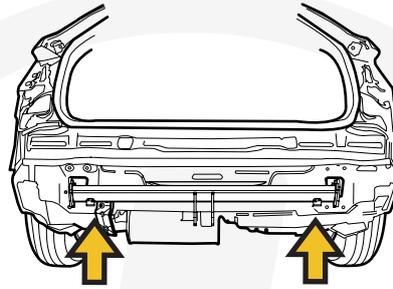


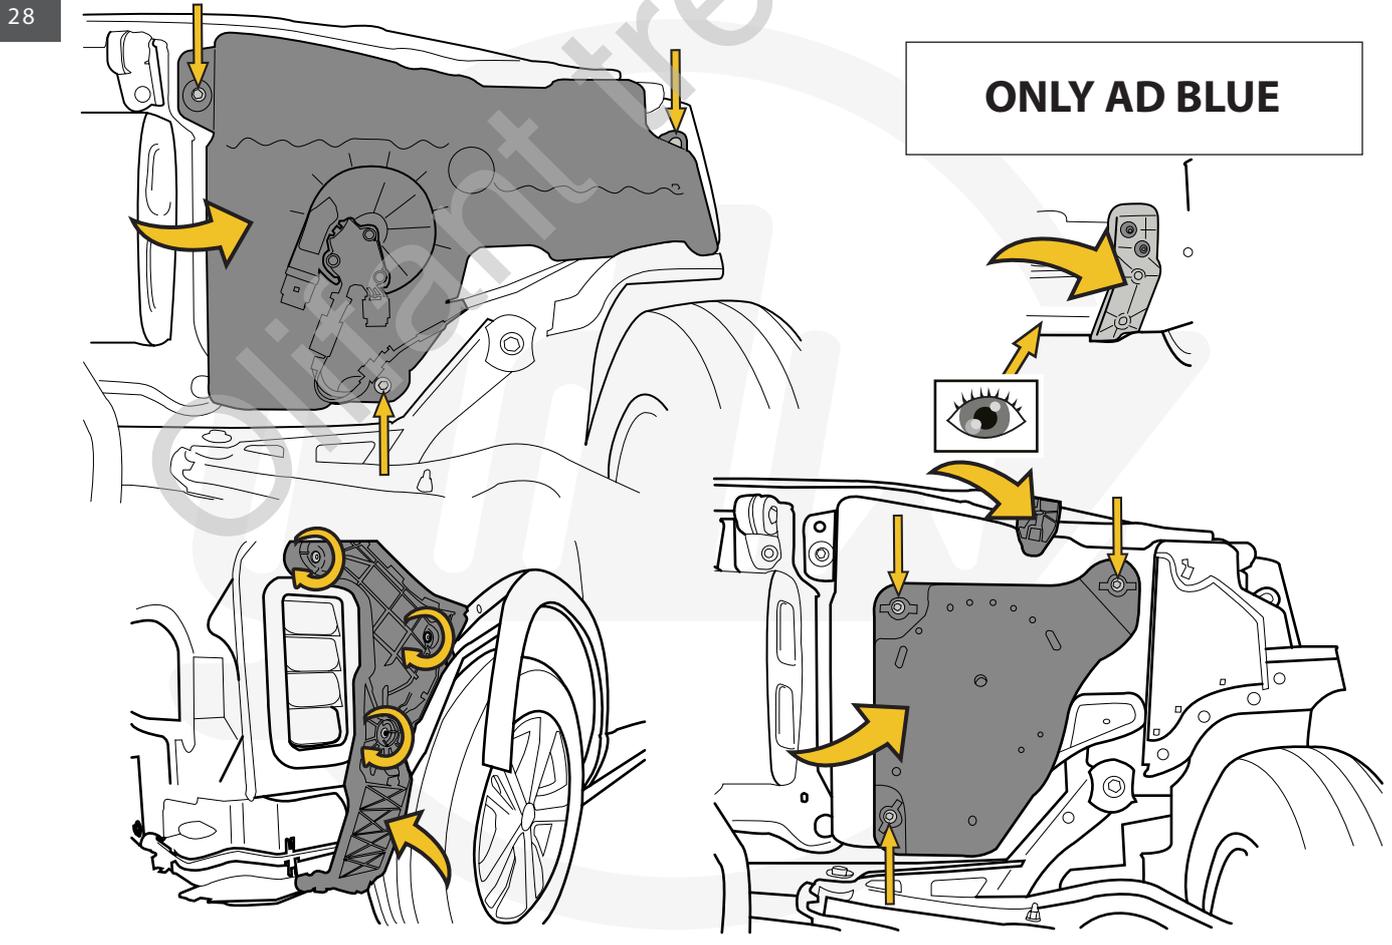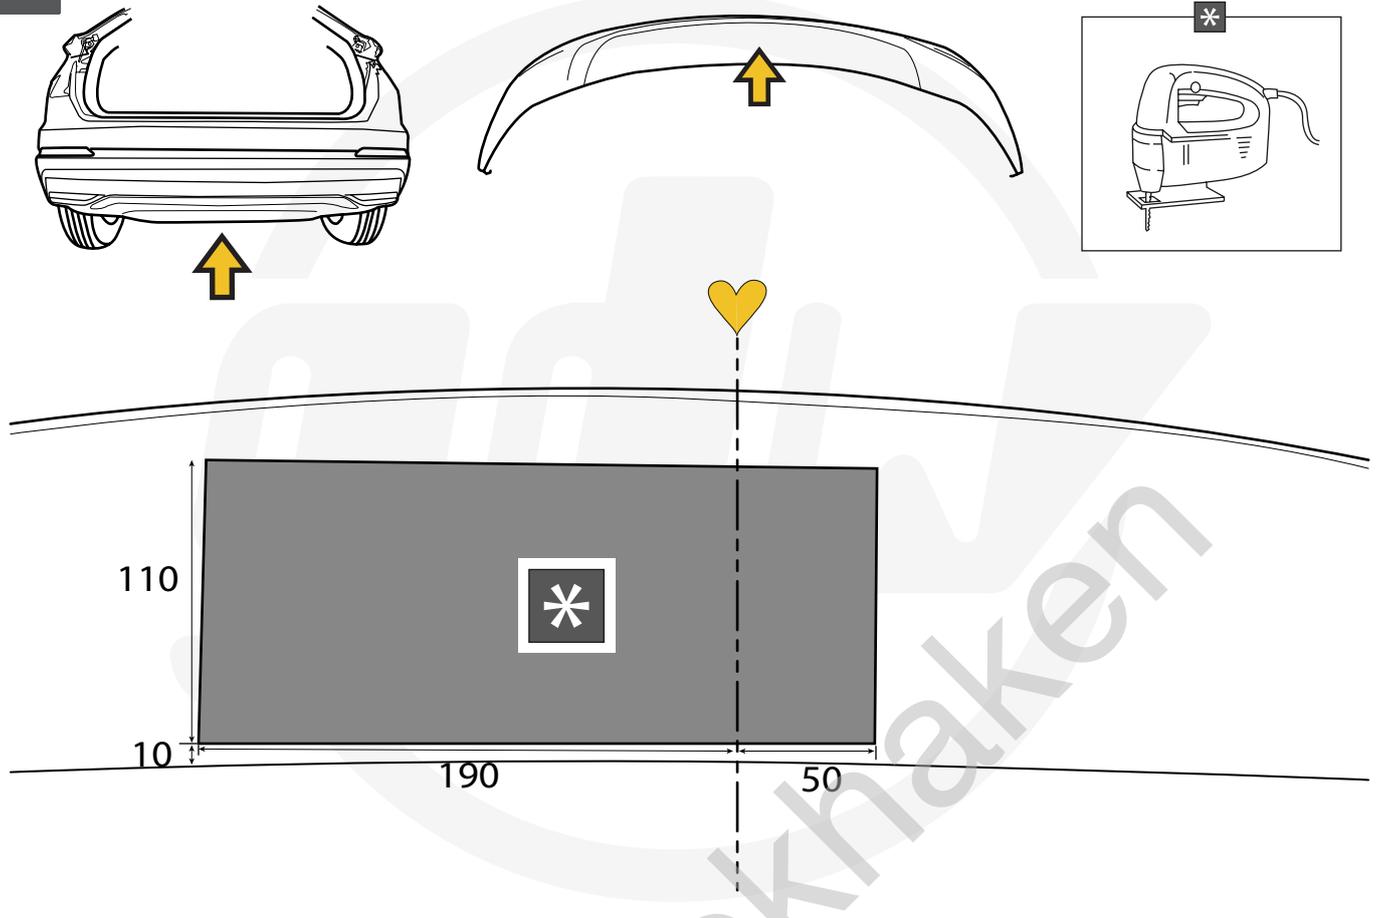

A		X1	GDW REF. 908.101
B		X1	DIN985-M6
C		X2	6,2 X 15,4 X 1,6 (NYLON)
D		X1	GDW REF. 718.16.002
E		X1	GDW REF. 718.16.003
F		X1	GDW REF. 908.094
G		X1	DIN933-M6 X 30

A		X1	GDW REF. 912.003
B		X3	DIN931-M12X110-8.8
C		X3	DIN128A-M12
D		X6	DIN125A-M12
E		X3	DIN934-M12

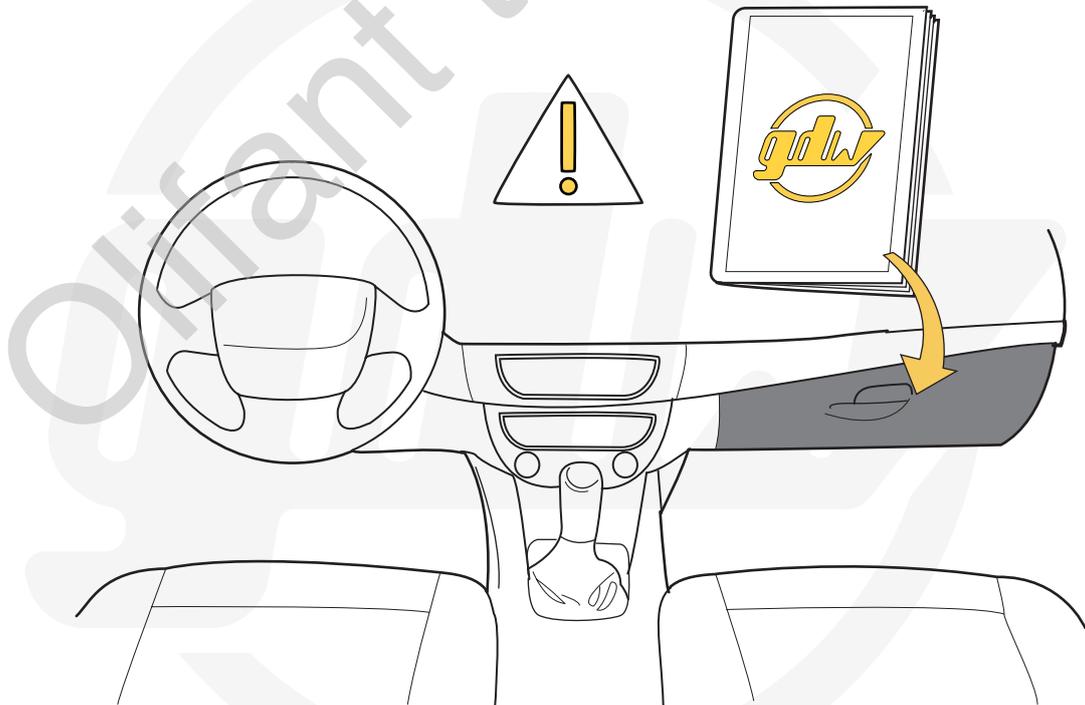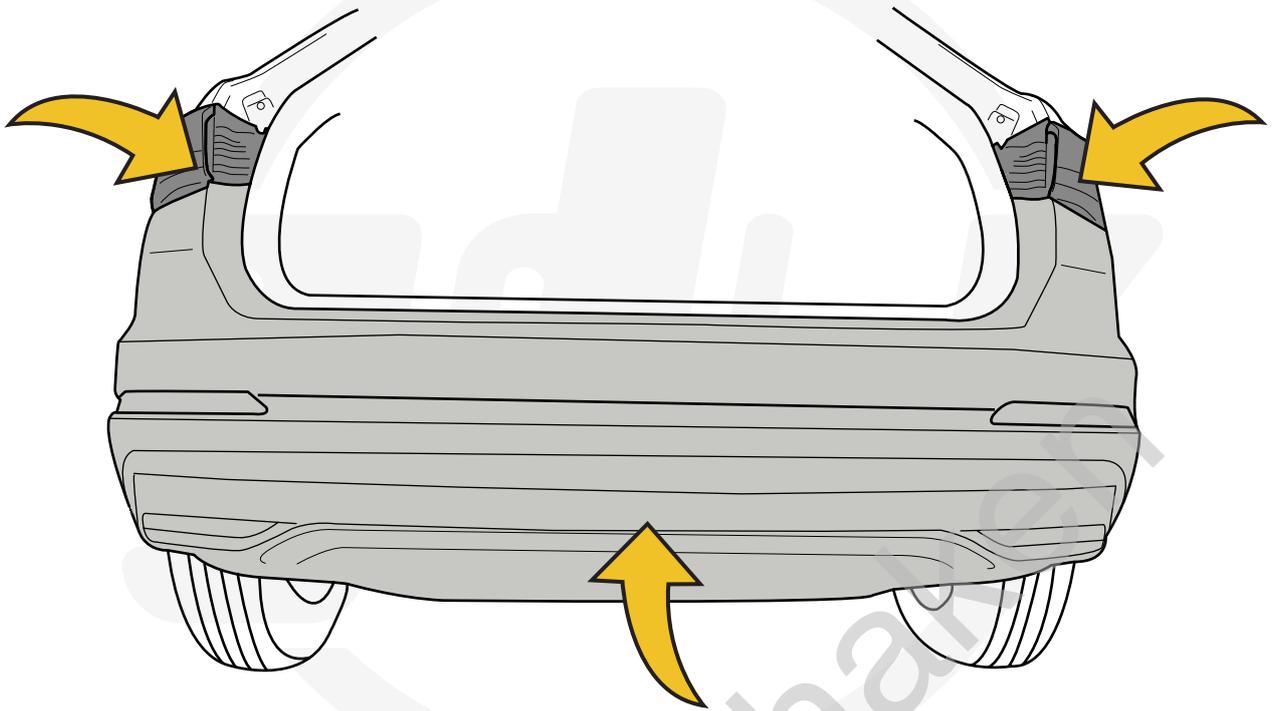

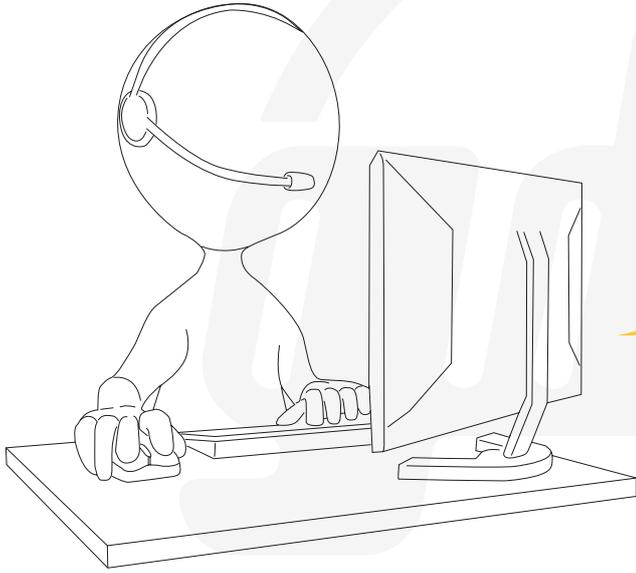

**helpdesk@gdwtowbars.com**  
**+32 56 62 77 79**

Monday	08:00 - 12:00	12:30 - 16:30
Tuesday	08:00 - 12:00	12:30 - 16:30
Wednesday	08:00 - 12:00	12:30 - 16:30
Thursday	08:00 - 12:00	12:30 - 16:30
Friday	08:00 - 12:00	12:30 - 15:30

Olifant trekhaken