




TREKHAKEN • ATTELAGES • ANHÄNGERVORRICHTUNGEN • TOWBARS • ENHANCES • ANHÆNGERTRÆK


Montagehandleiding | instructions de montage | Einbauanleitung | Mounting instruction
Instrucciones de montaje | monteringsvejledning





Hyundai i10 III (type LA) 09/'19 -

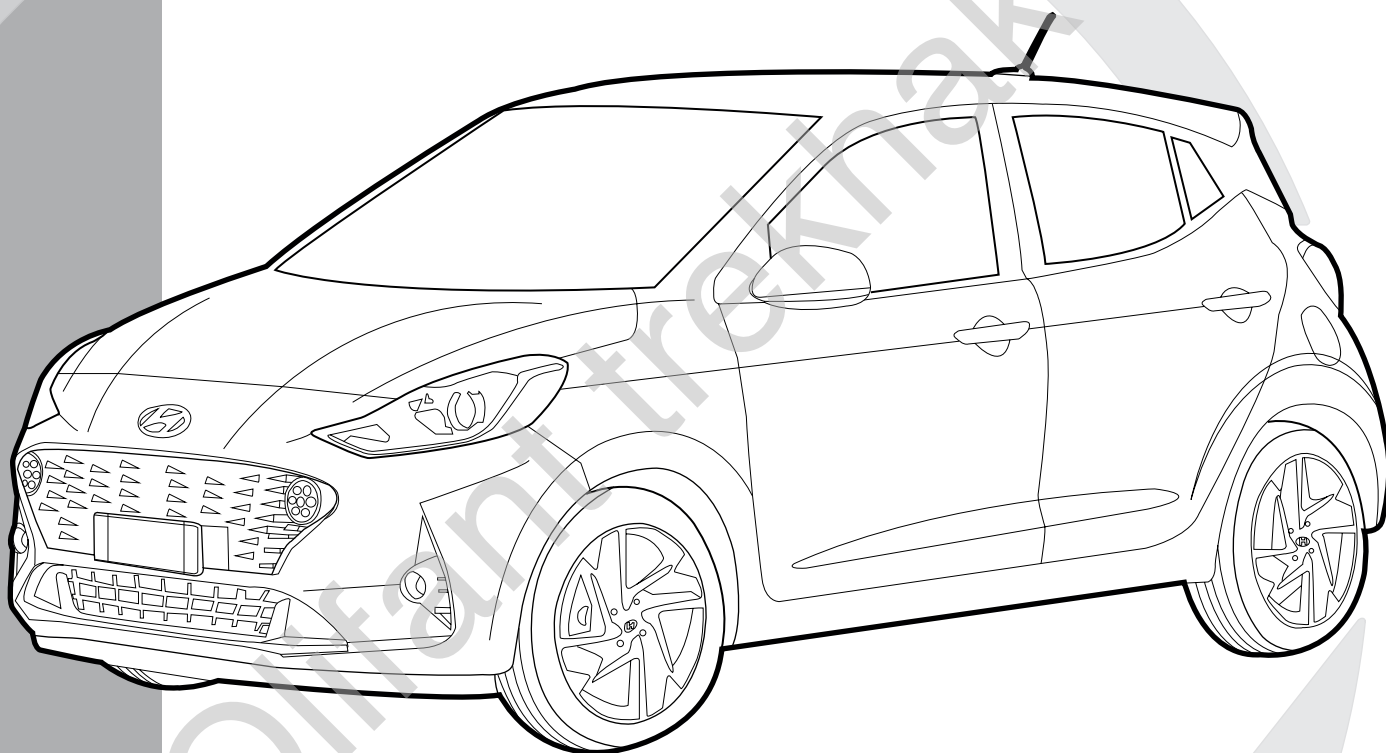

NO TOWING

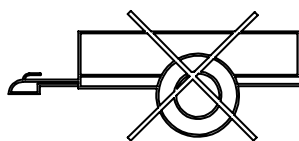



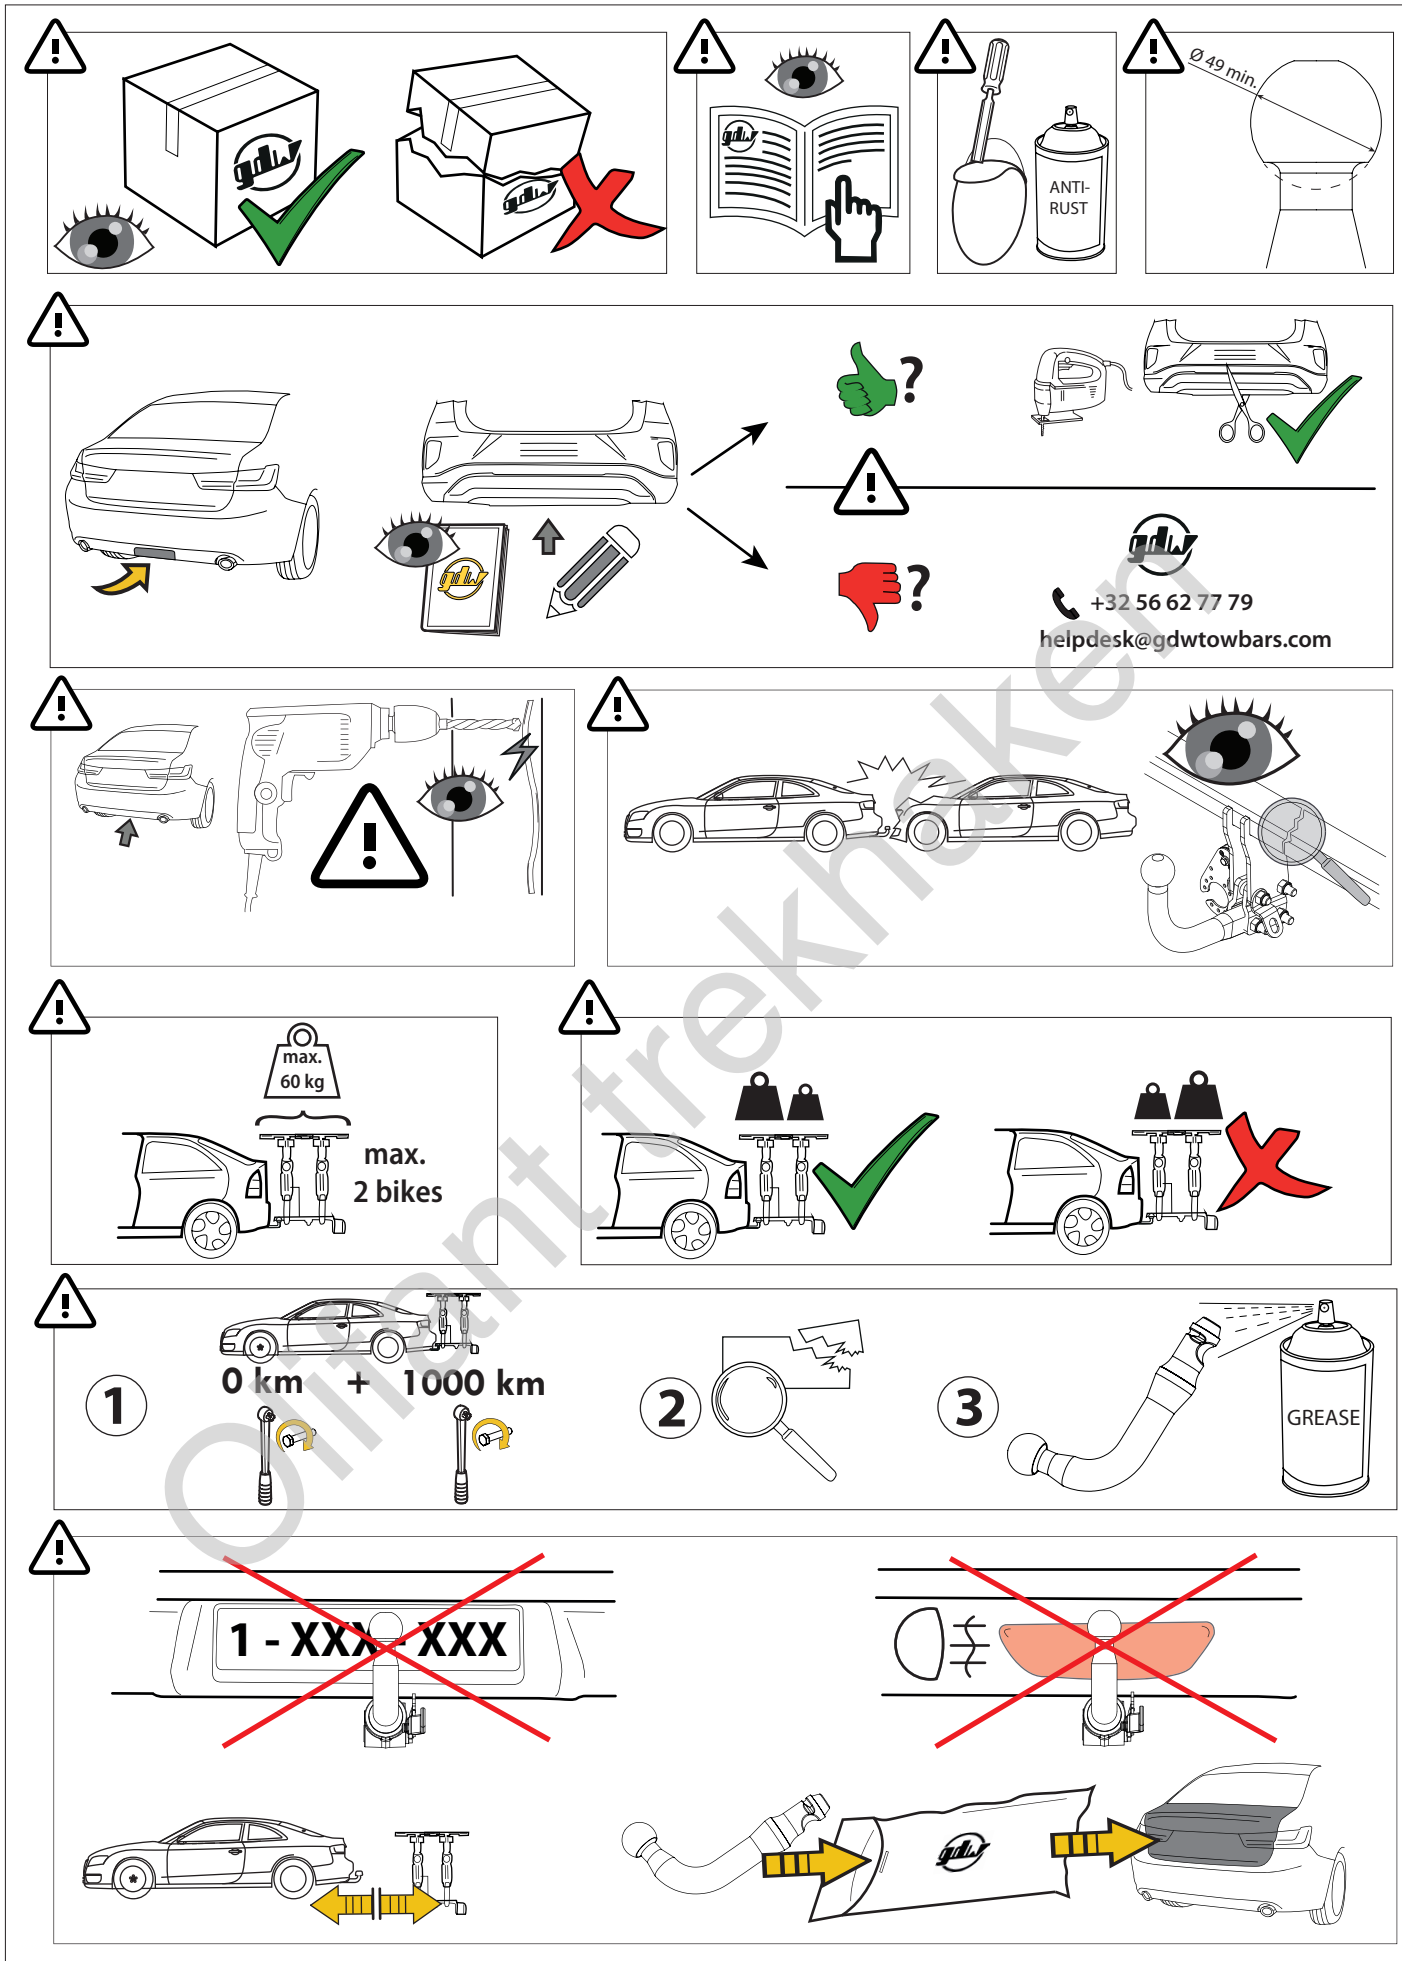



MADE BY **NO TOWING**  E6

EC APPROVAL N°
BELGIUM **26R-03 0325**

REF N° **2423T60** SERIAL N° **xxx** D 0,00 S 75

DISCRIPTION
Hyundai i10 III (type LA) 09/'19-

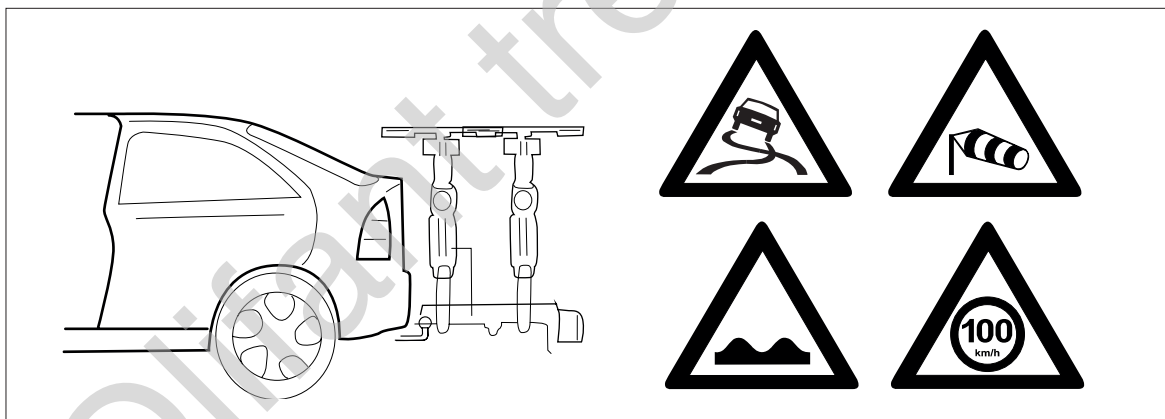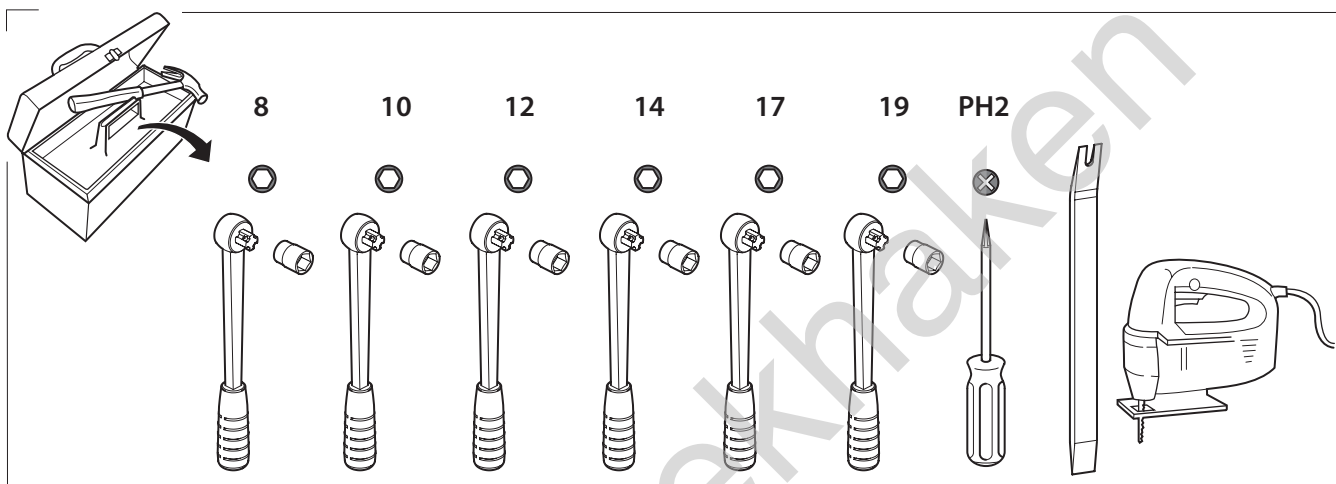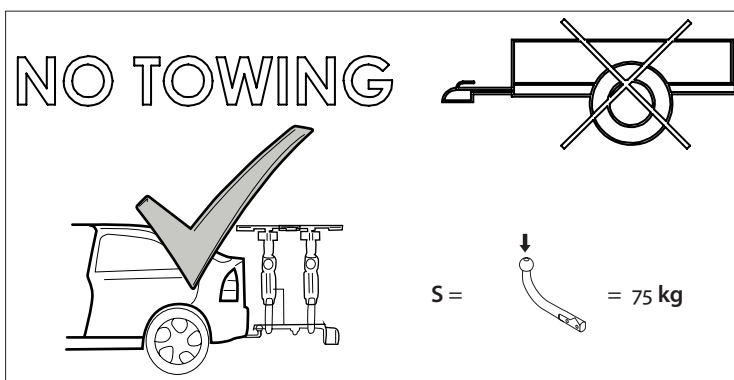


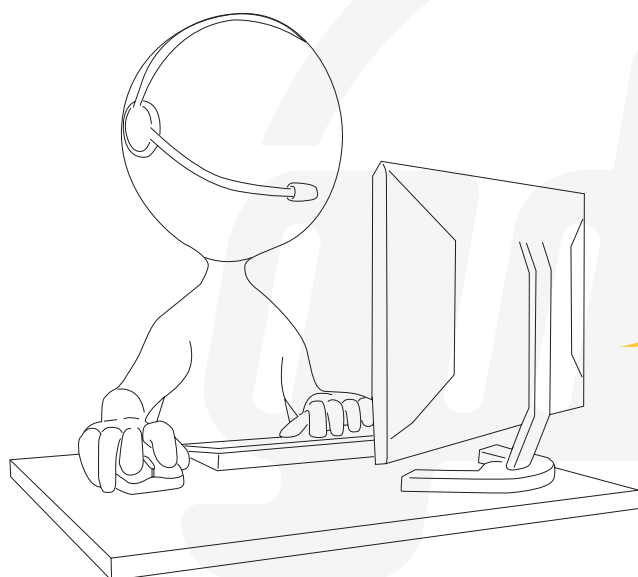


helpdesk@gdwtowbars.com


+32 56 62 77 79




Monday	08:00 - 12:00	12:30 - 16:30
Tuesday	08:00 - 12:00	12:30 - 16:30
Wednesday	08:00 - 12:00	12:30 - 16:30
Thursday	08:00 - 12:00	12:30 - 16:30
Friday	08:00 - 12:00	12:30 - 15:30


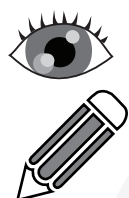





KEY NUMBER


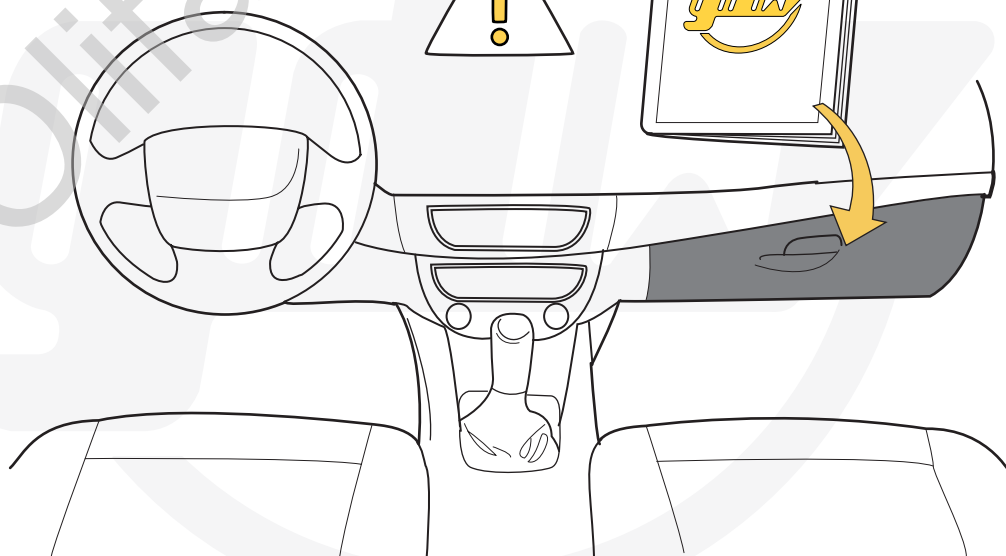



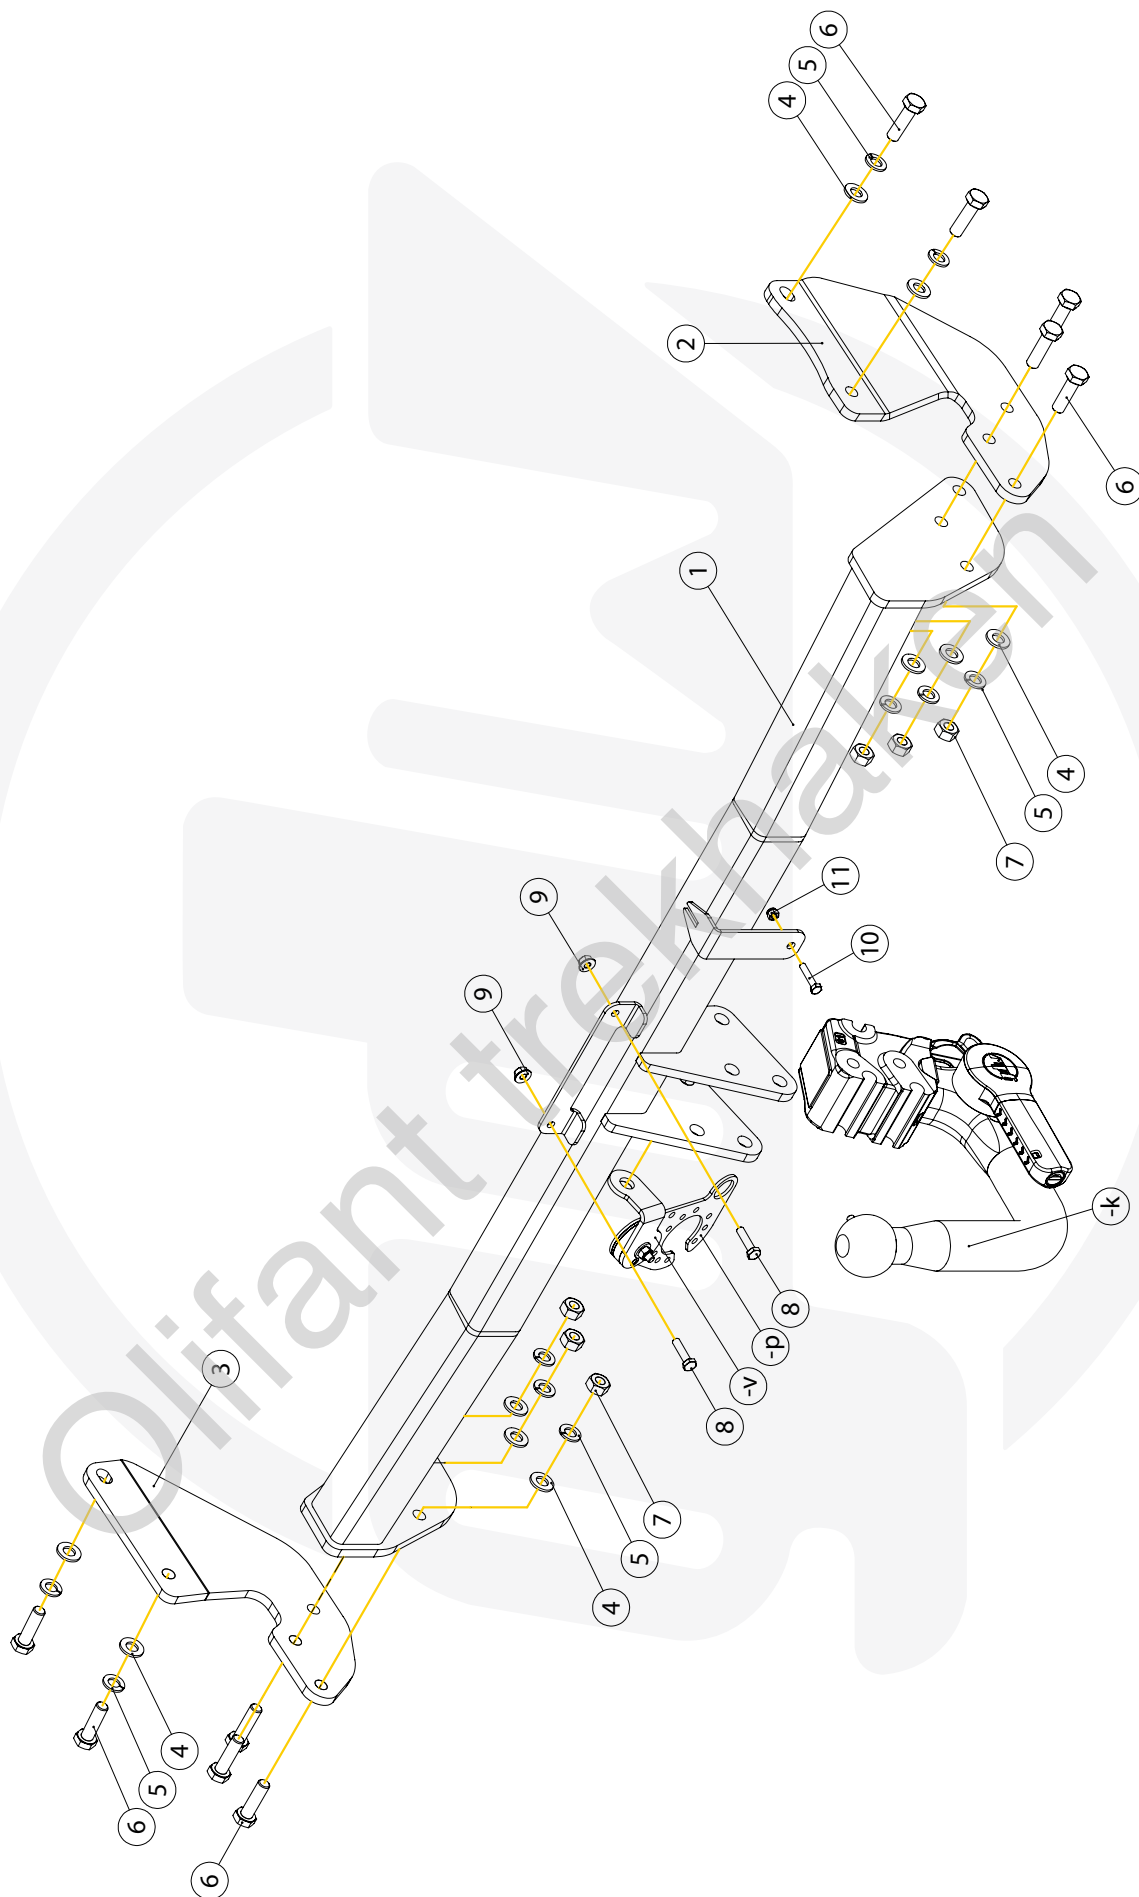




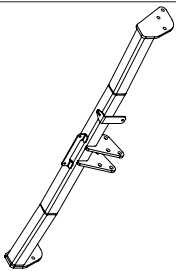
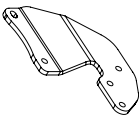
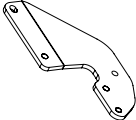
1		X1	GDW REF. 2423160
2		X1	GDW REF. 2
3		X1	GDW REF. 3
4		X10	DIN125-A10-140HV-ELVZ
5		X10	DIN128A-M10
6		X10	DIN961-M10 X 35 X 1.25
7		X6	DIN934-M10 X 1.25
8		X2	DIN933-M6 X 25
9		X2	DIN6923-M6
10		X1	DIN933-M5 X 25
11		X1	DIN985-M5
-V		X1	GDW REF. 908.095

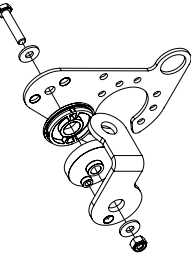

-P		X1	GDW REF. P39
└		X1	DIN985-M6
└		X2	6,2 X 15,4 X 1,6 (NYLON)
└		X1	GDW REF. 718.16.002
└		X1	GDW REF. 718.16.003
└		X1	GDW REF. 908.094
└		X1	DIN933-M6 X 30

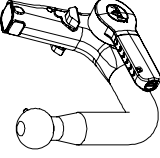

Geleverd met - Livré avec - Delivered with Geliefert mit - Elementos adjuntos-Leveres med		X1	GDW REF. 960.V0410S
└		X1	GDW REF. 740.200
└		X1	GDW REF. 912.003
└		X1	GDW REF. 740.112
└		X1	GDW REF. 740.111
└		X1	GDW REF. 740.114
└		X1	GDW REF. 718.15.001
└		X1	GDW REF. SYST60-10
└		X3	DIN931-M12X110-8.8
└		X3	DIN128A-M12
└		X6	DIN125A-M12
└		X3	DIN934-M12

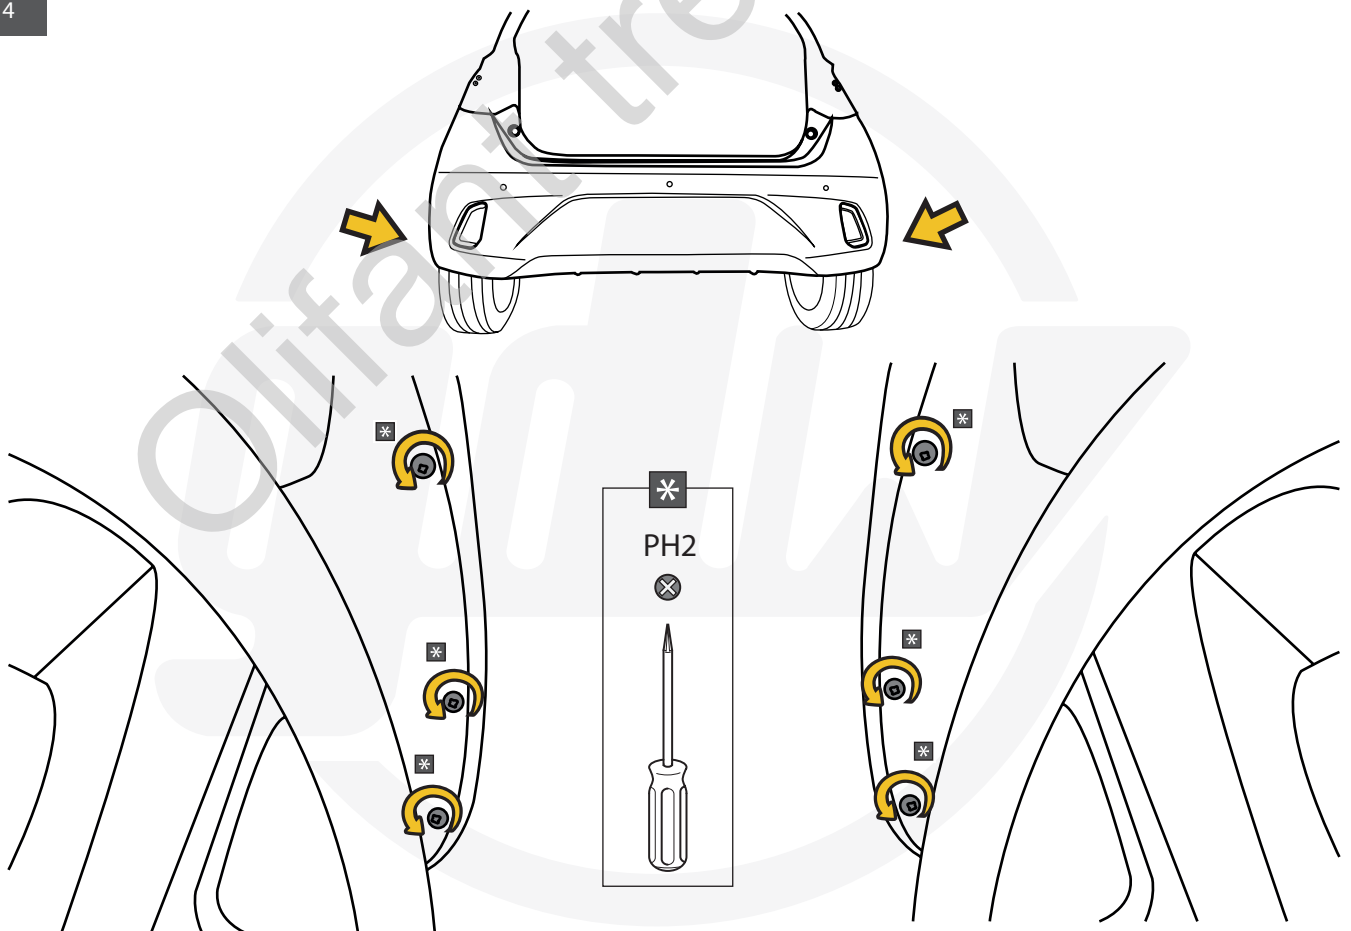
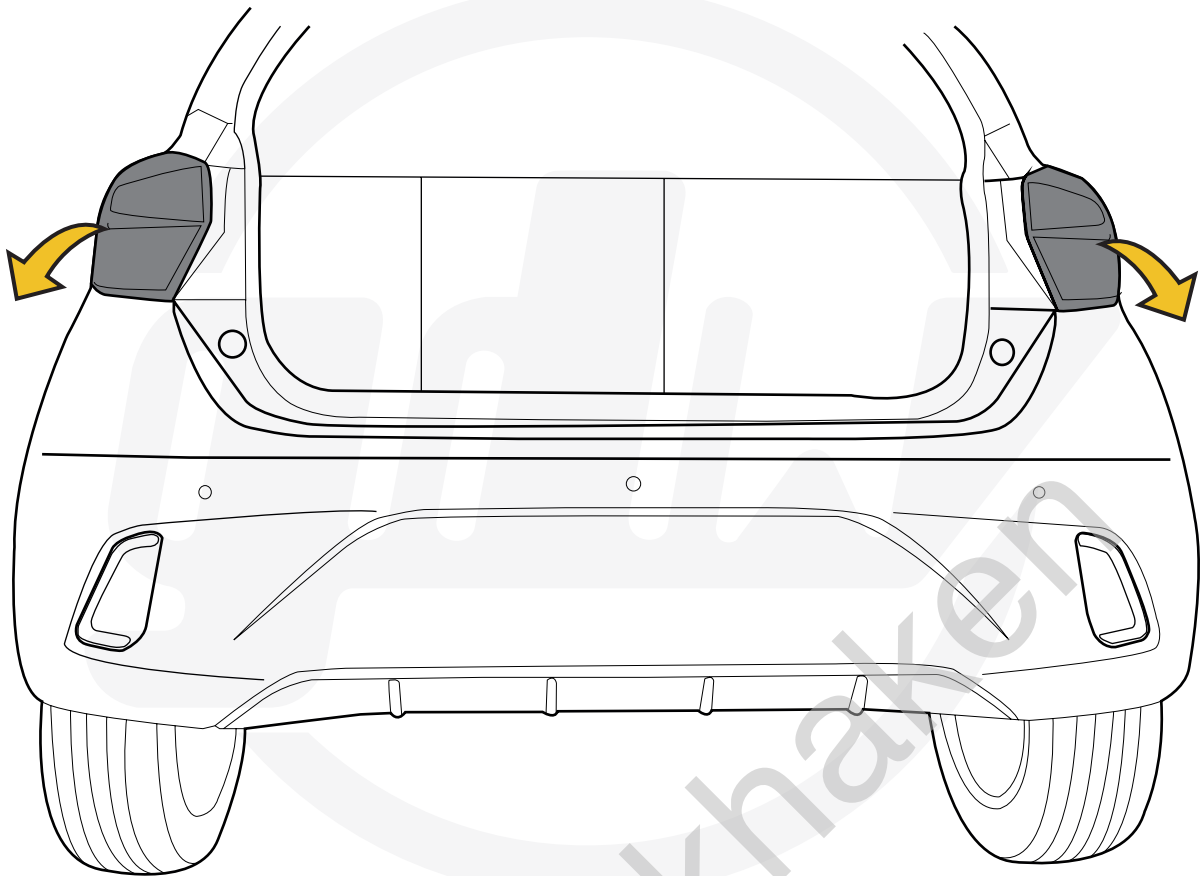







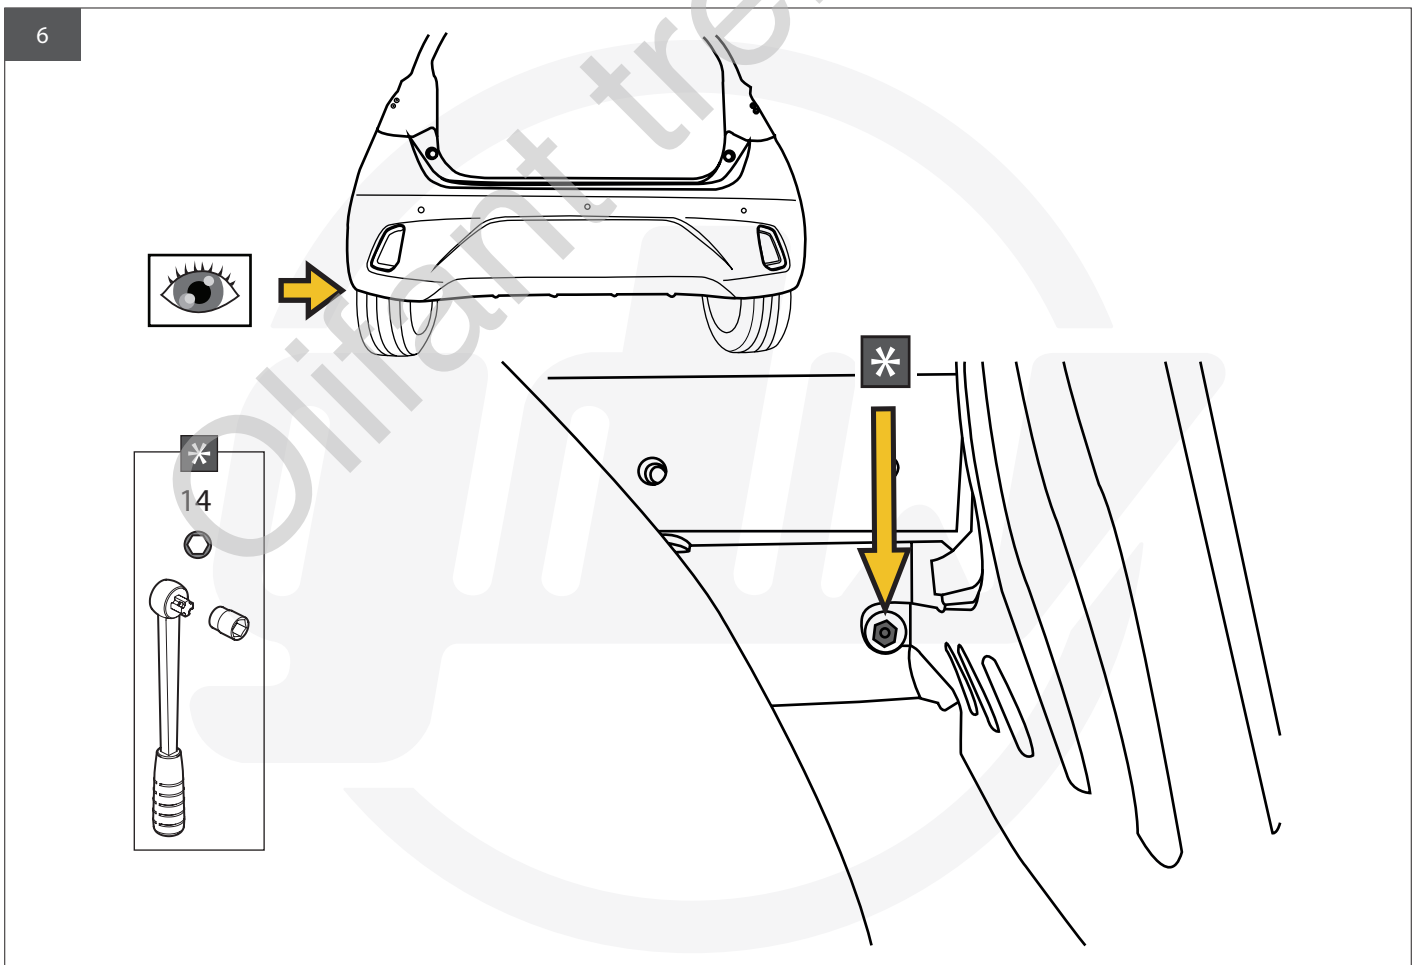
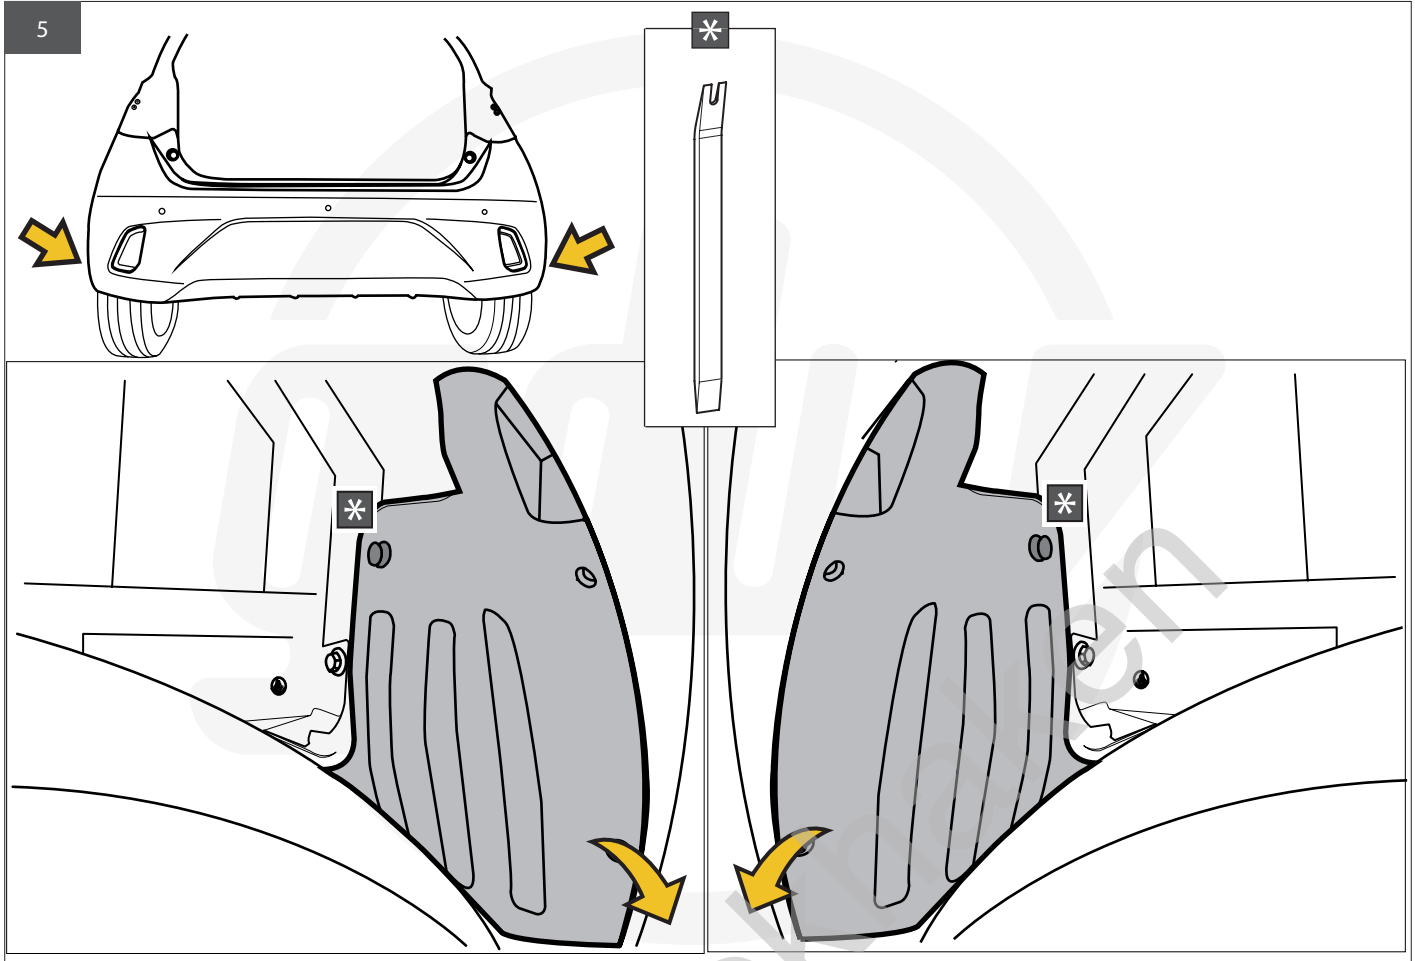


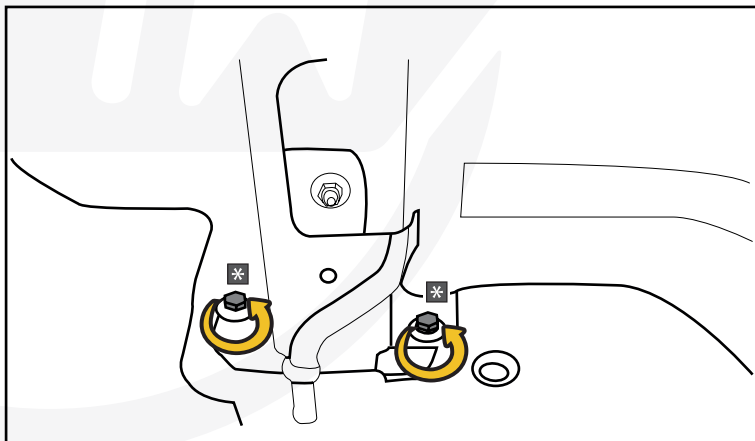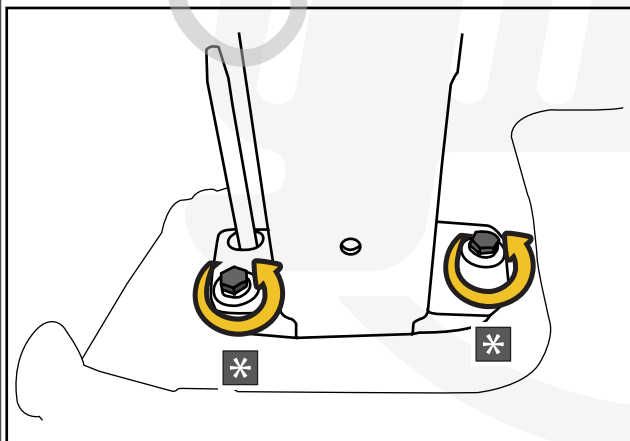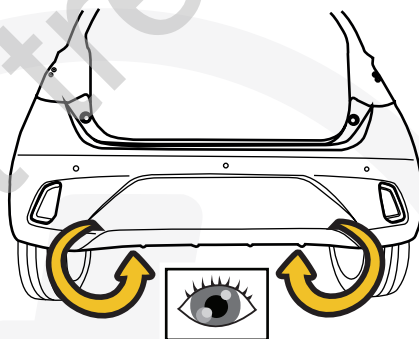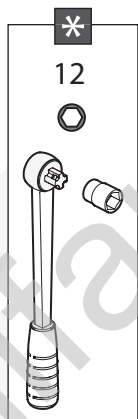
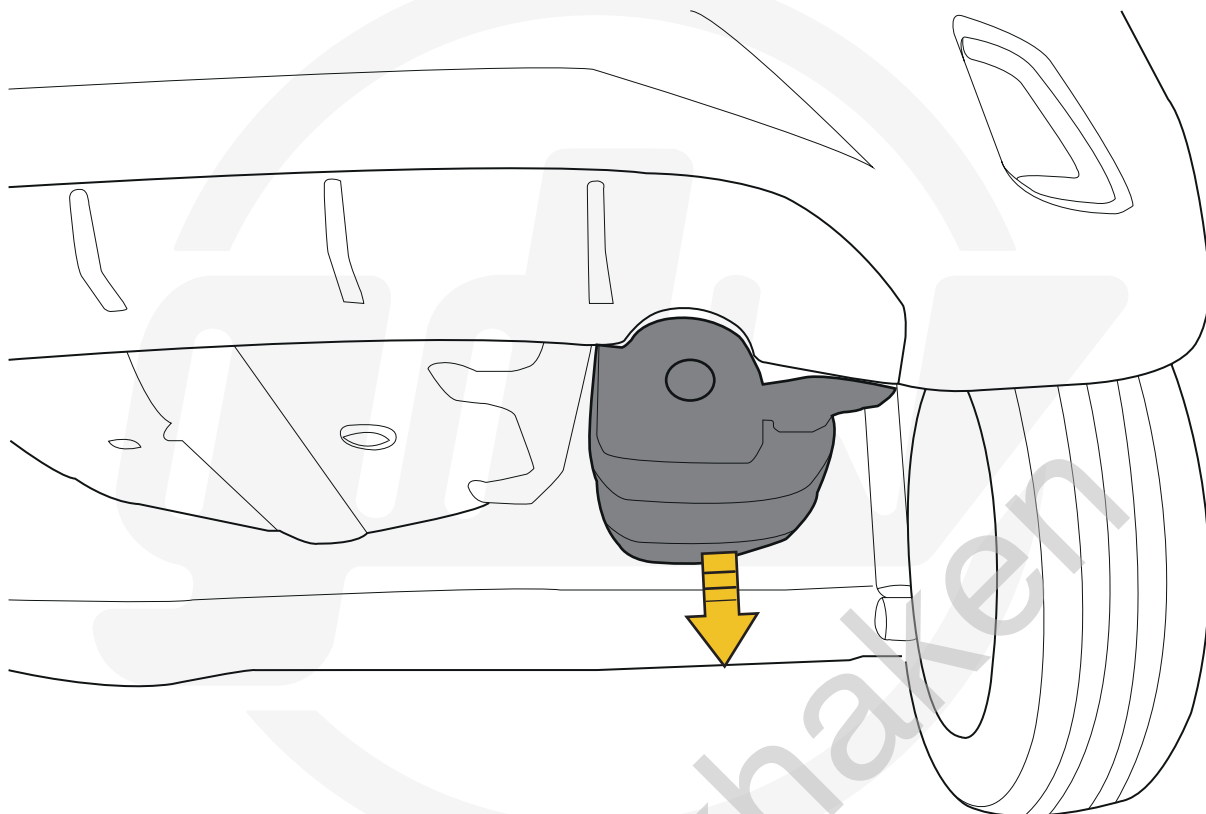




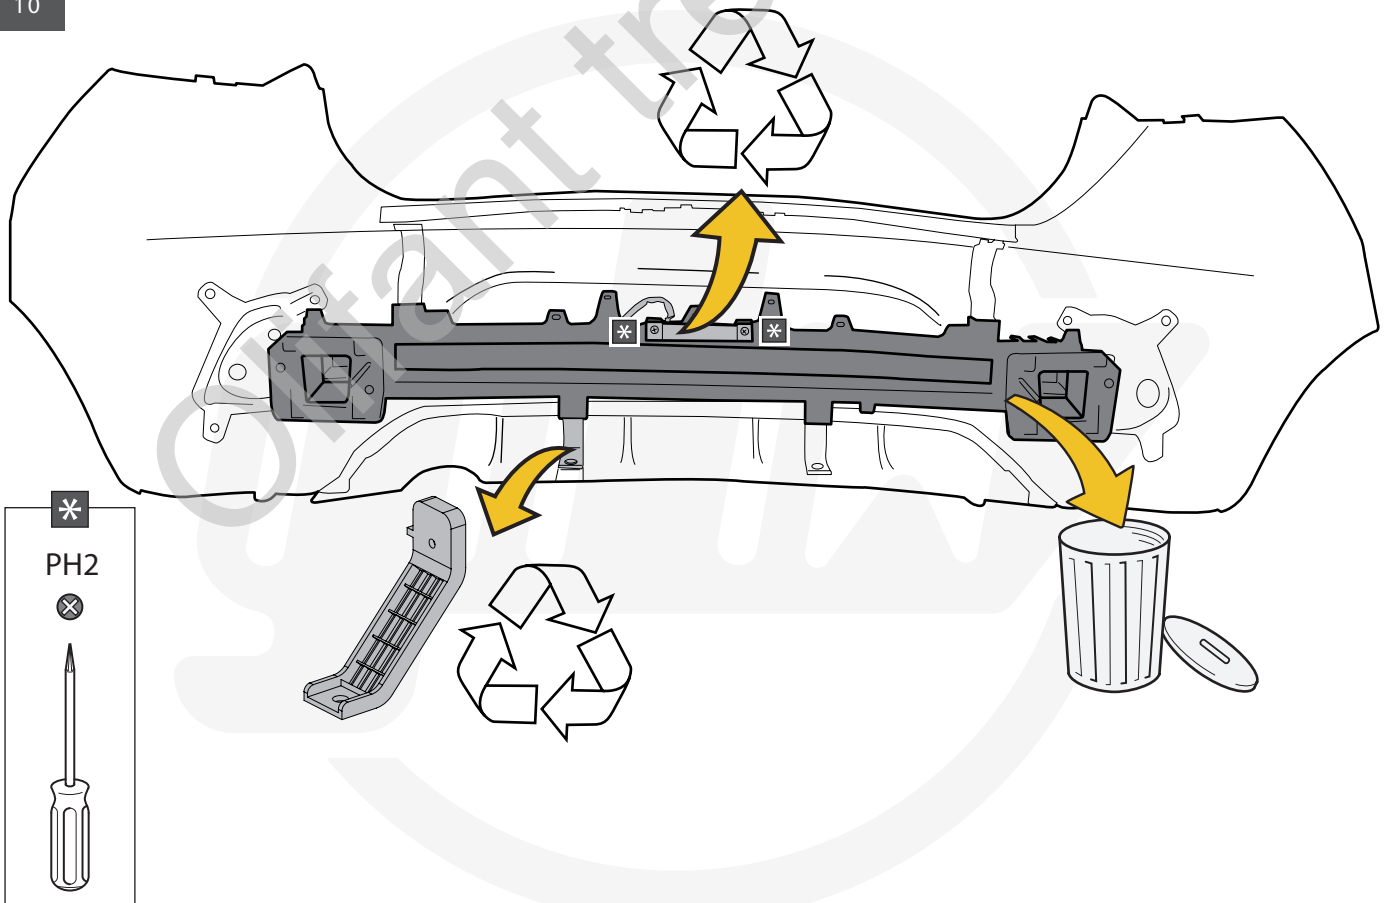
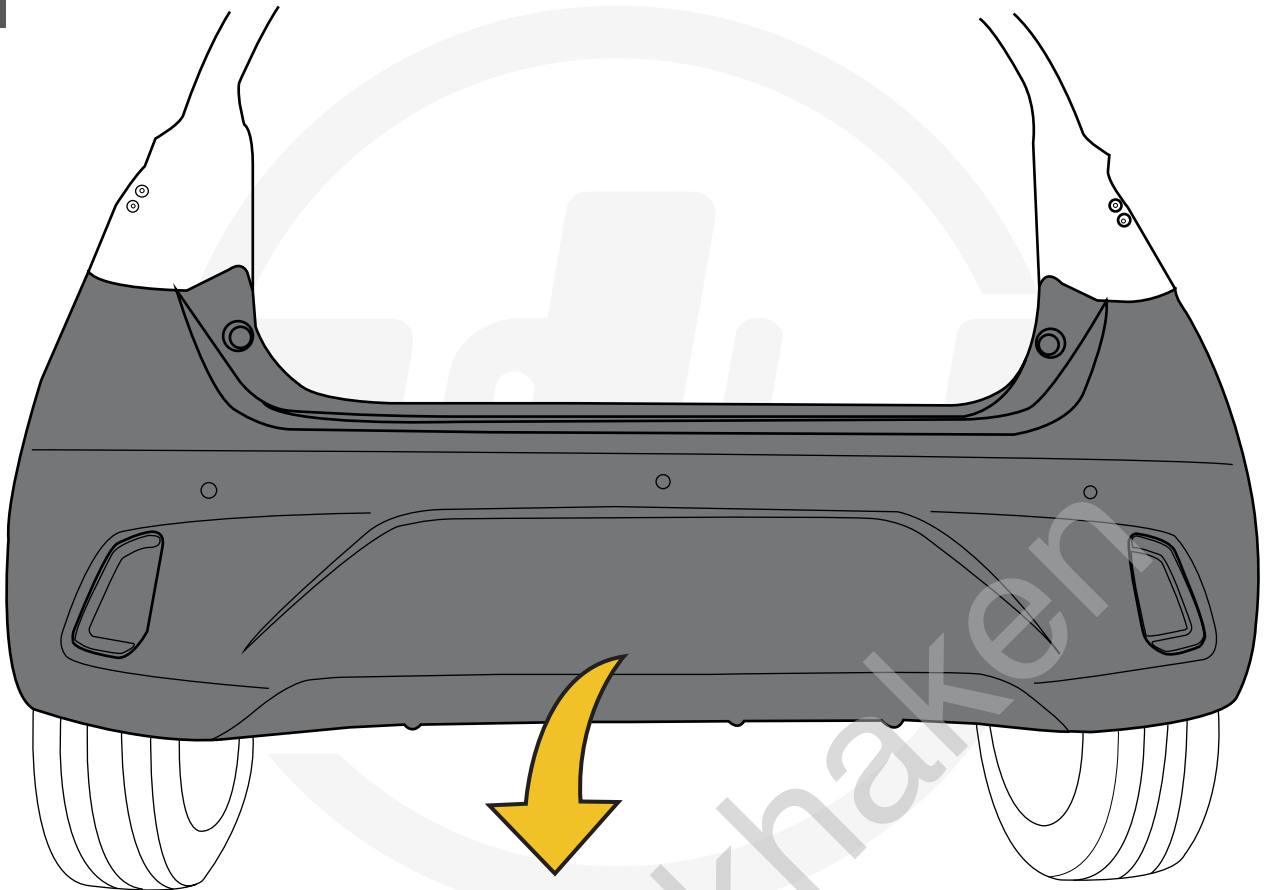


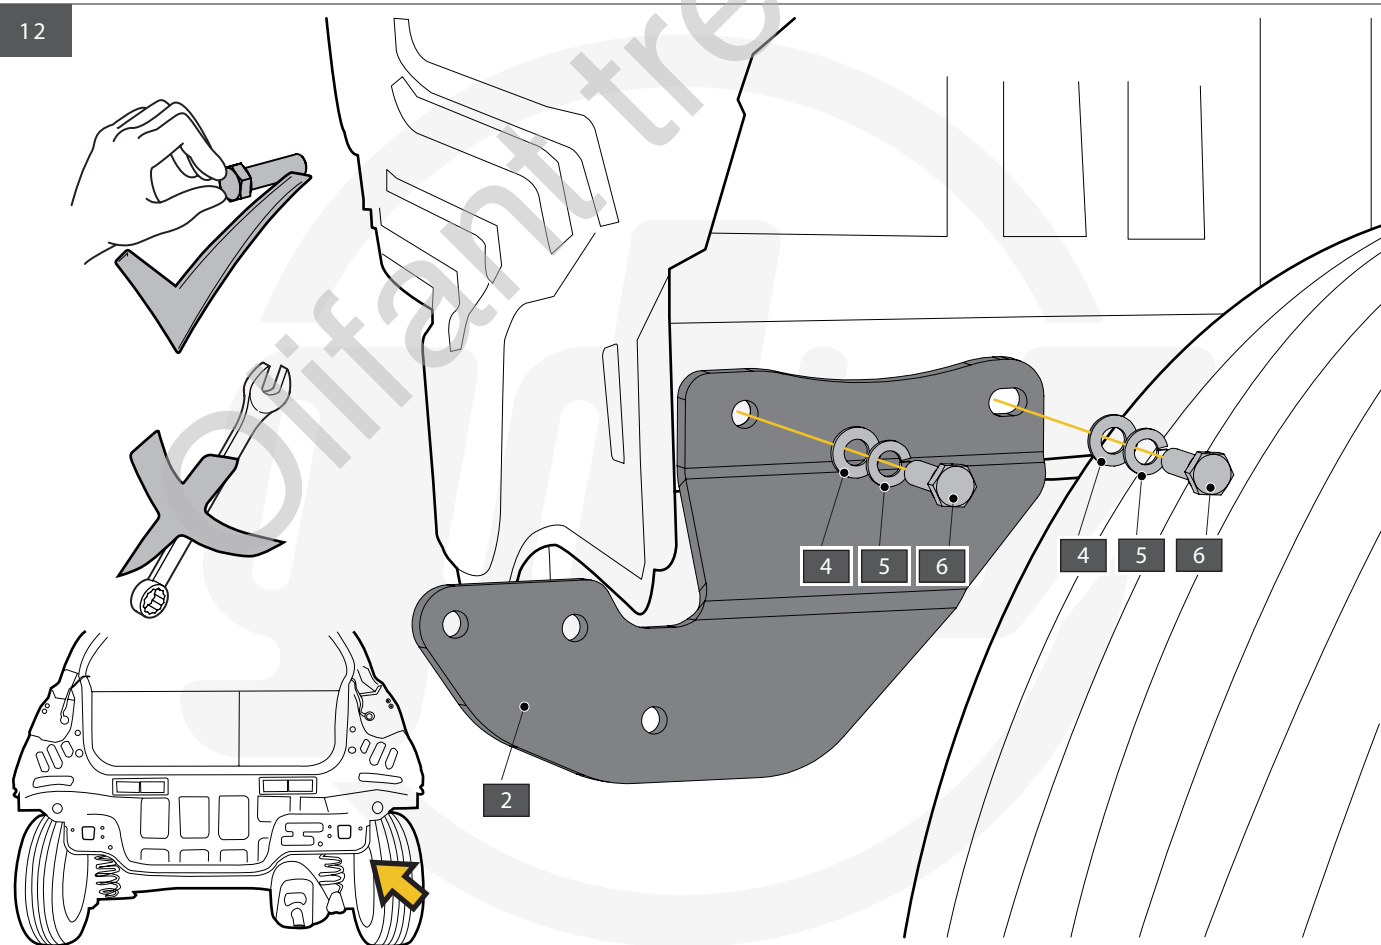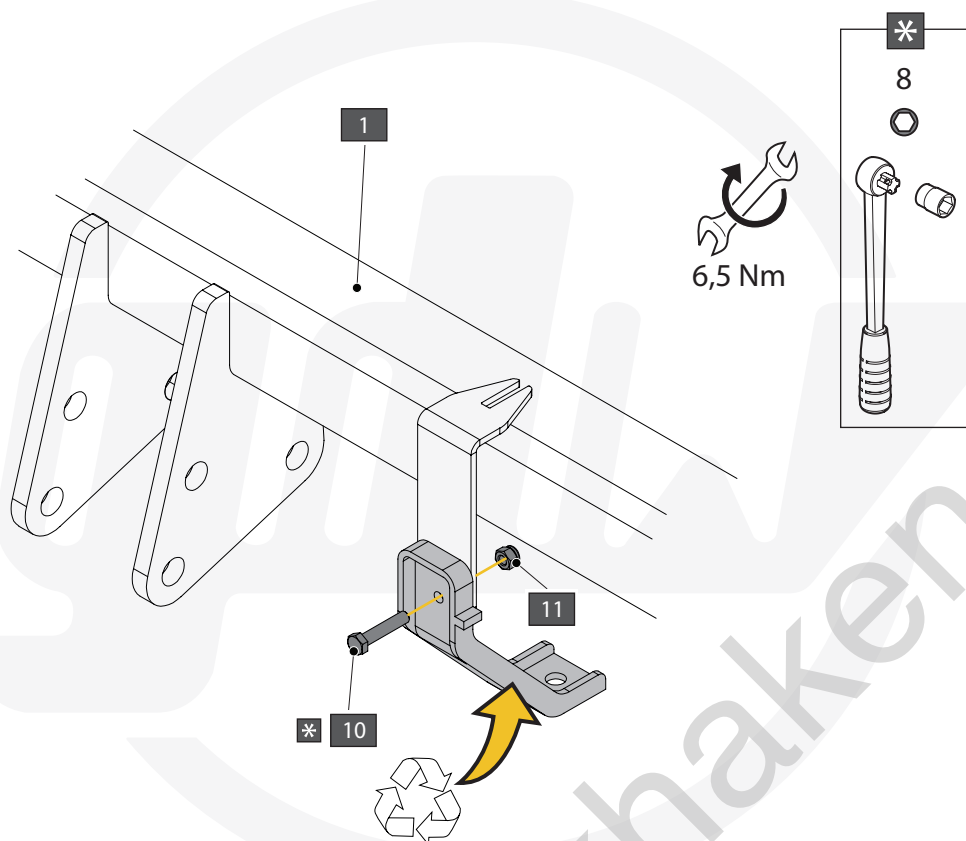

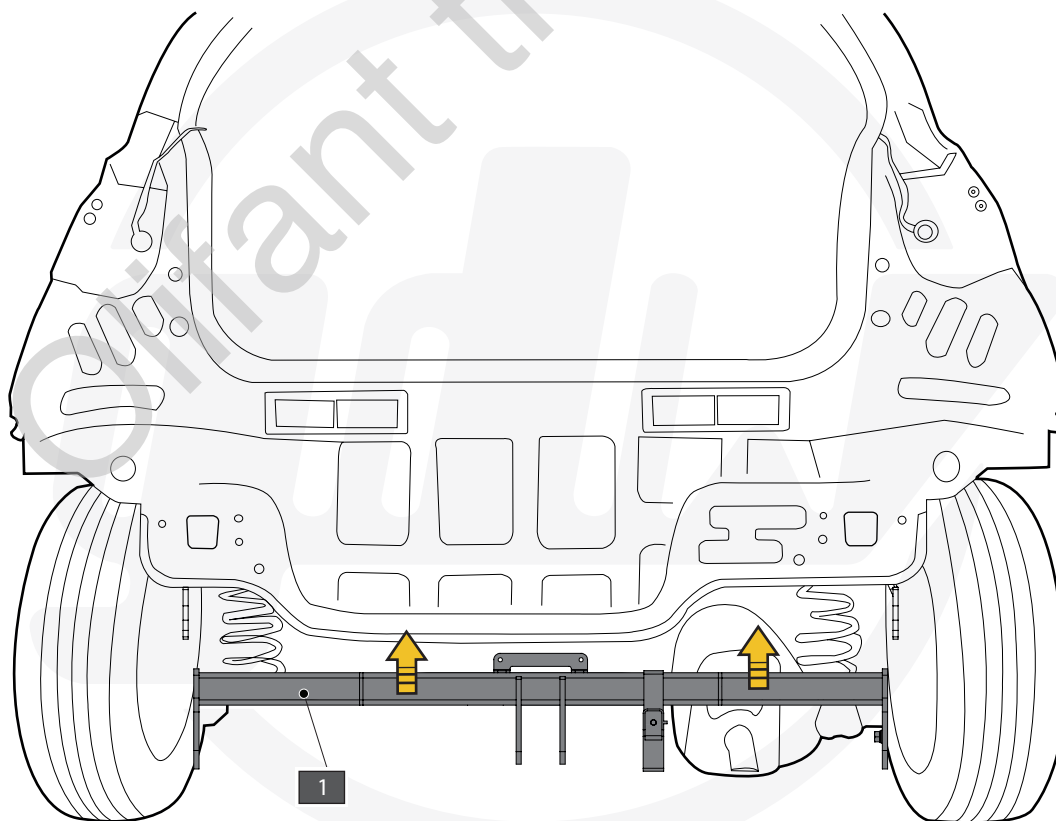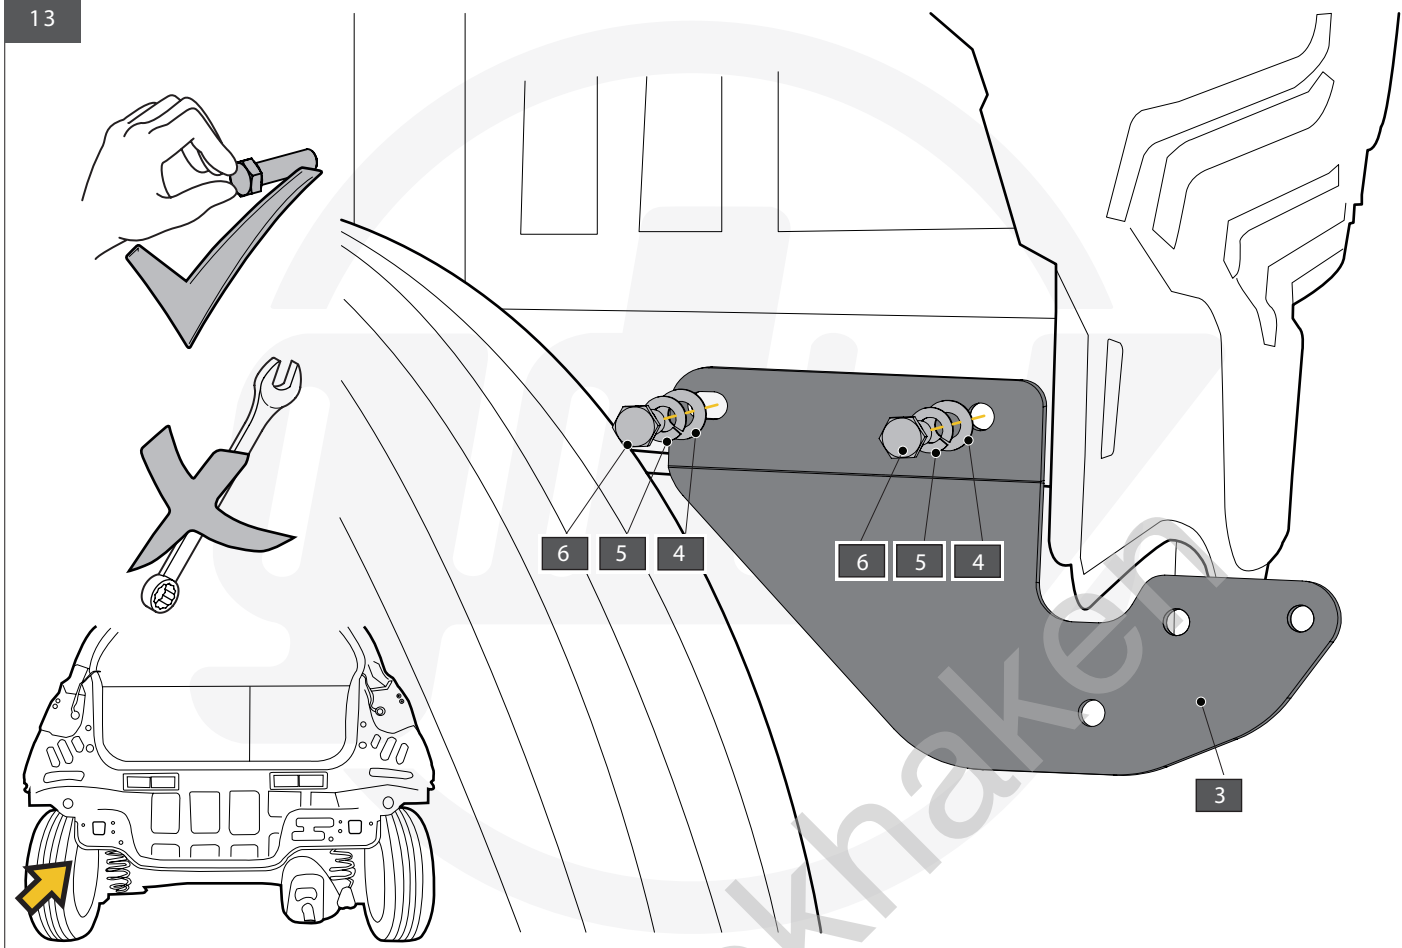

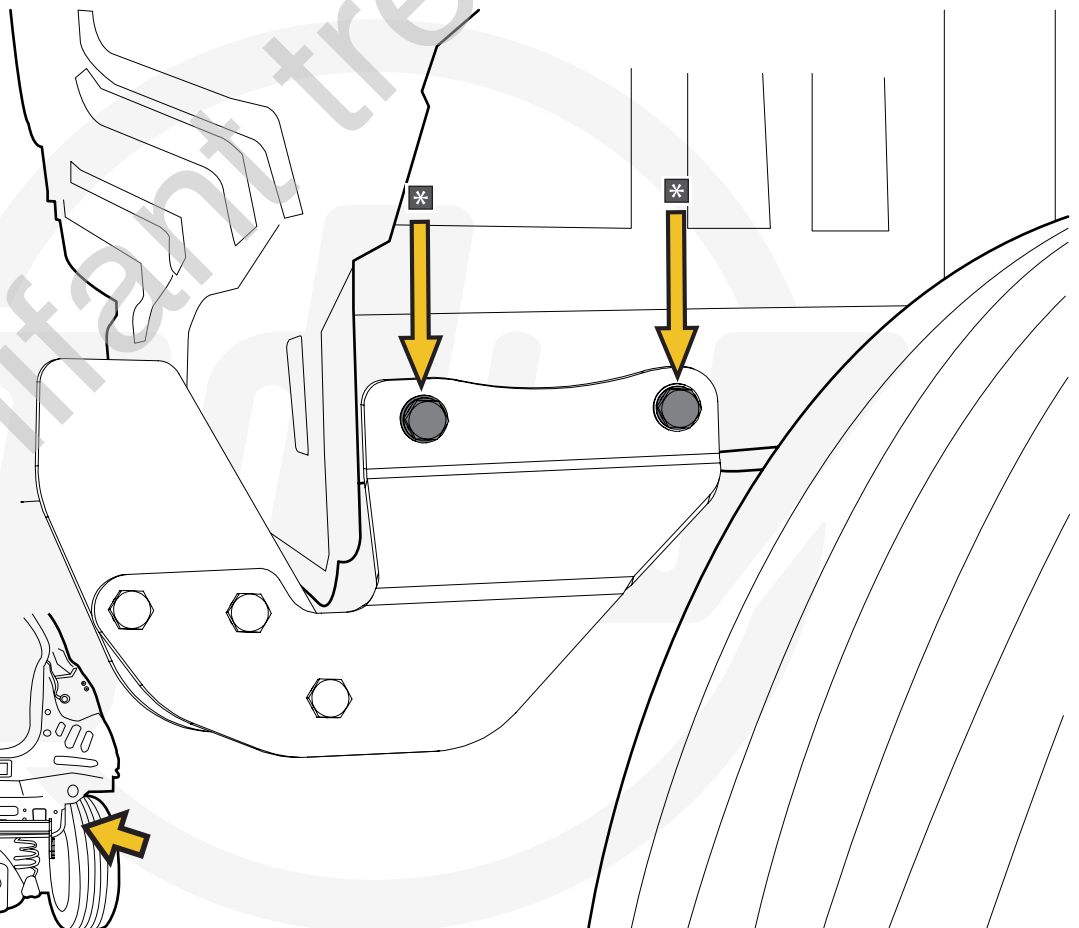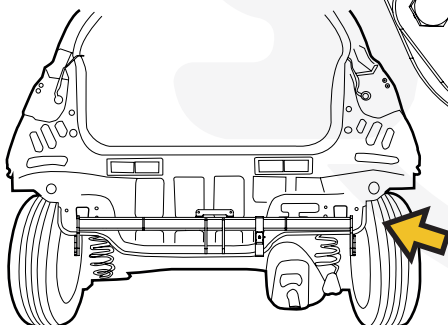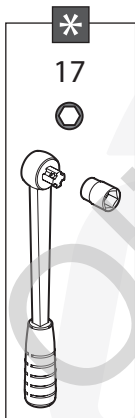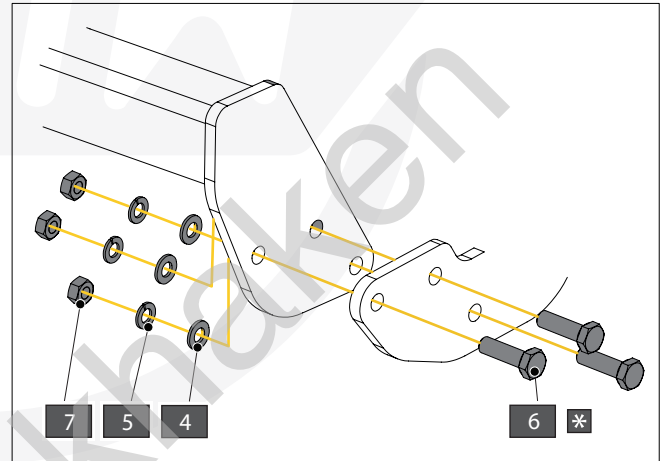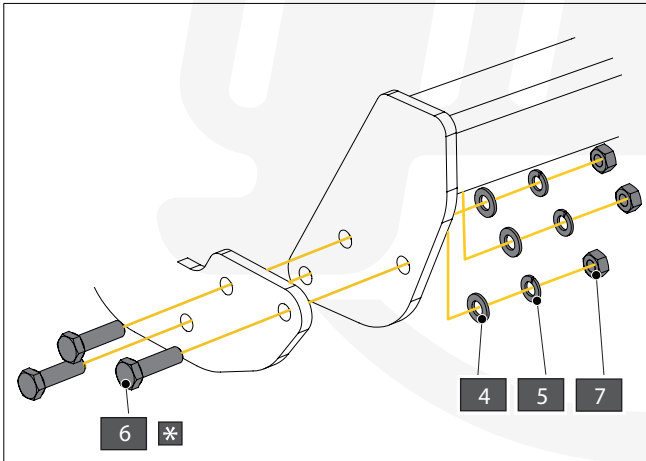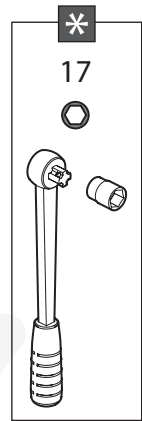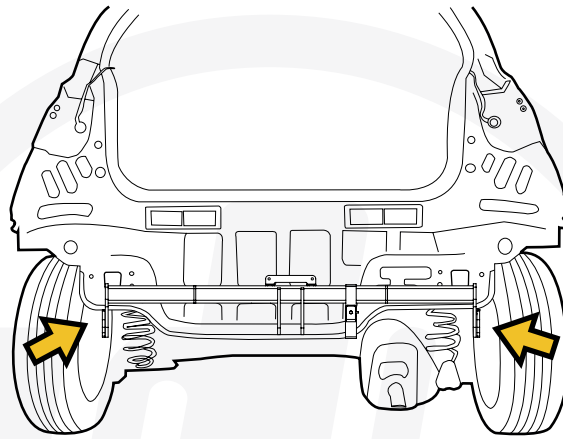

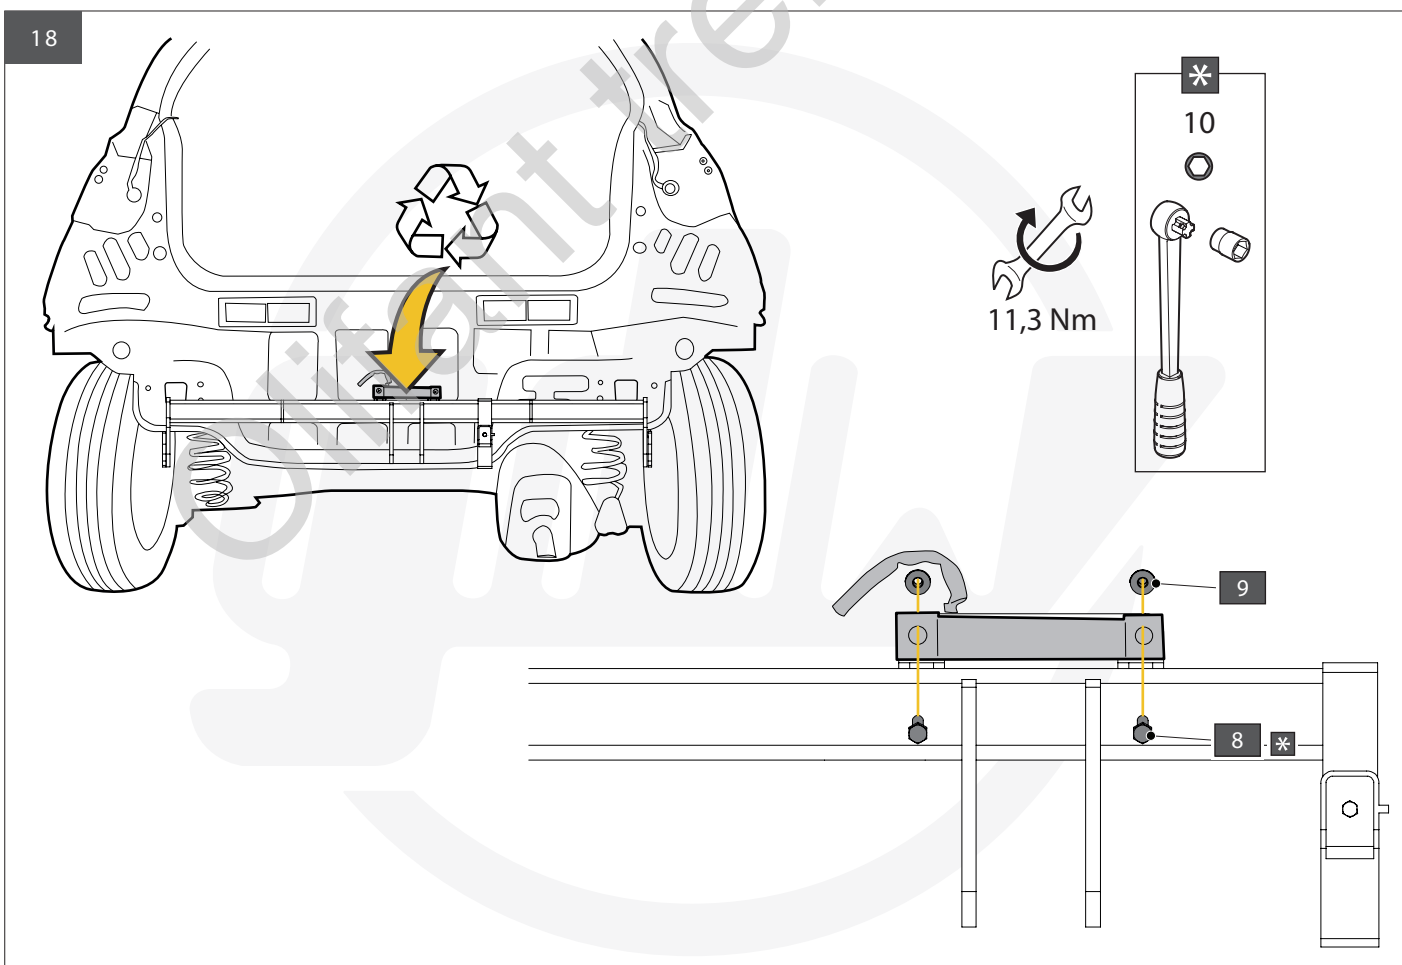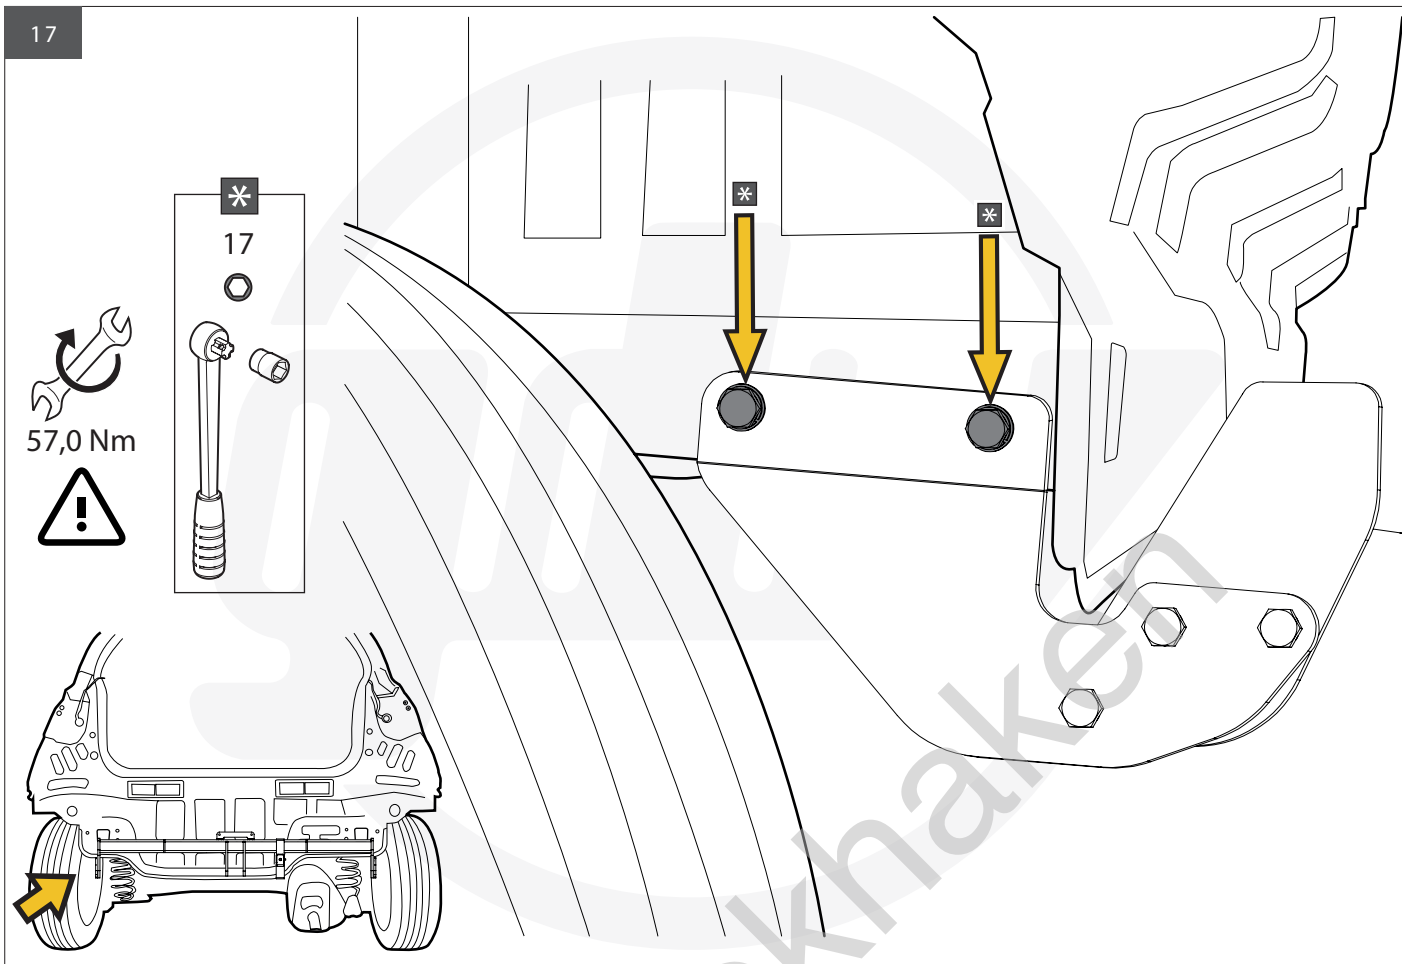

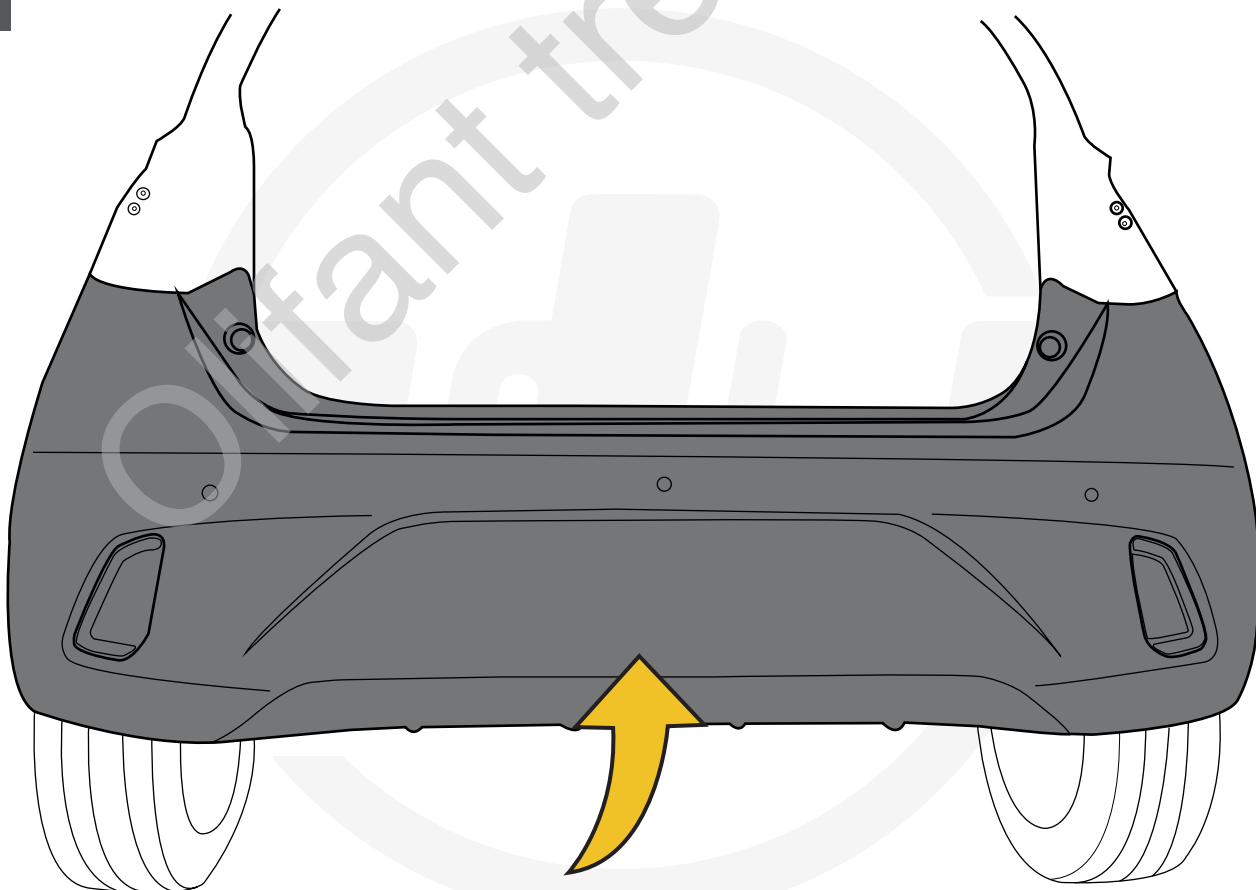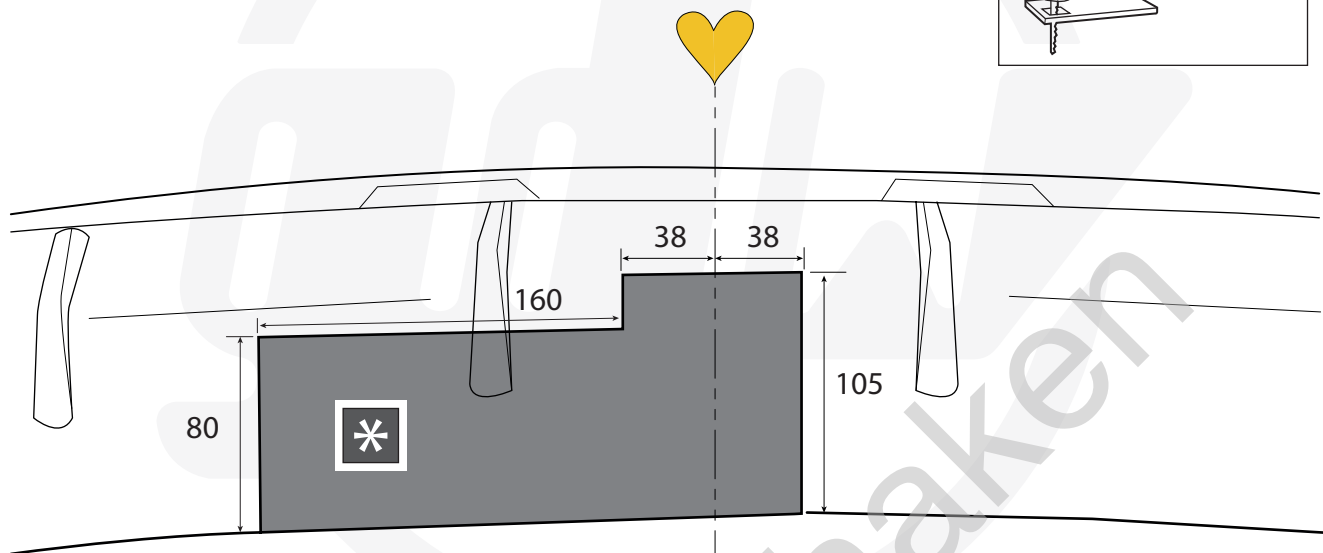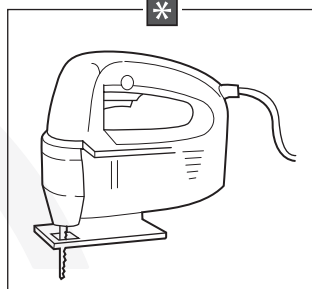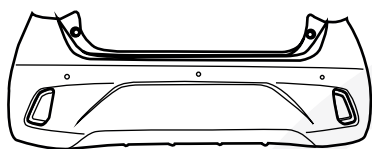

21

The diagram illustrates the installation of the rear bumper. It includes a top-down view of the car's rear, a side view of the bumper being attached to the car body, and a detailed view of the bumper's internal structure. A yellow arrow points to the attachment point on the car body. An inset shows a power drill being used to secure the bumper. Dimensions 15 and 55 are indicated for the bumper's width and height.

22

125 70 25

