


Chevrolet Cruze (5D)

(2011- →)

C-262


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

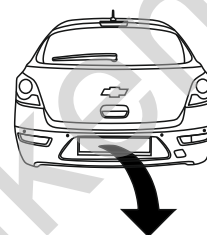



YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>








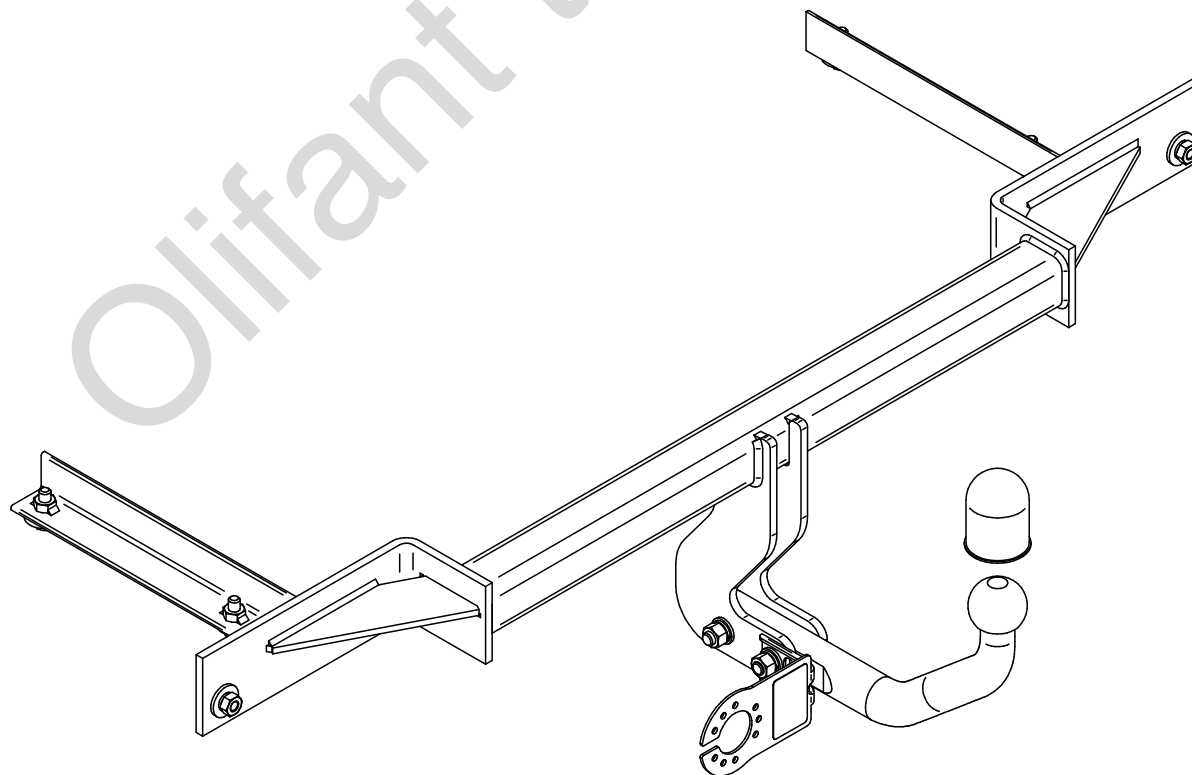

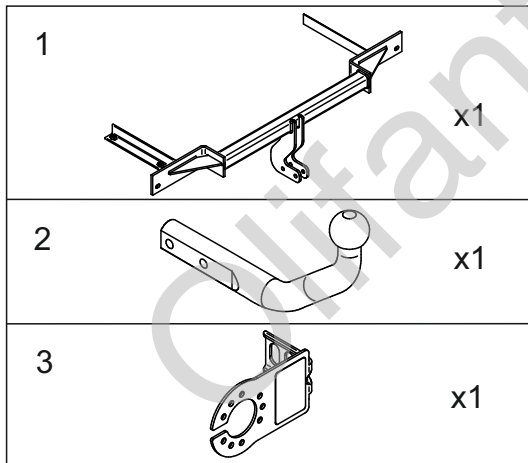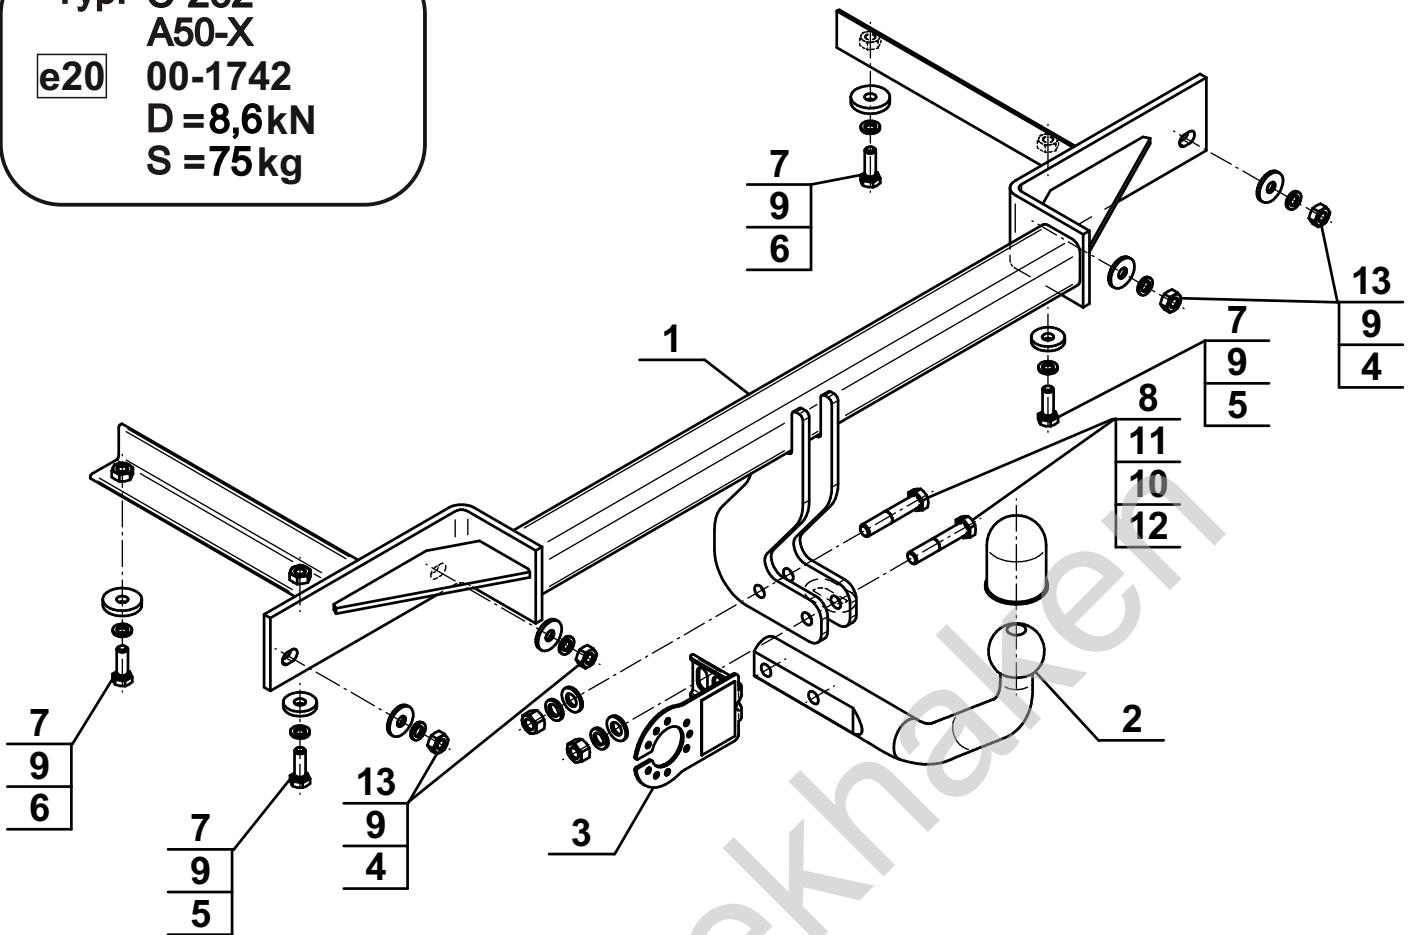


YES	NO
<input type="checkbox"/>	<input checked="" type="checkbox"/>



Typ: C-262
 A50-X
 e20 00-1742
 D = 8,6kN
 S = 75kg




4		Ø30/Ø10,5x3	x4
5		Ø30/Ø10,5x5	x2
6		Ø35/Ø10,5x6	x2
7		M10x30 (PN/M-82105) (8.8)	x4
8		M12x65 (PN/M-82101) (8.8)	x2
9		Ø10,2	x8
10		Ø12,2	x2
11		Ø13,0	x2
12		M10	x4
13		M12	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

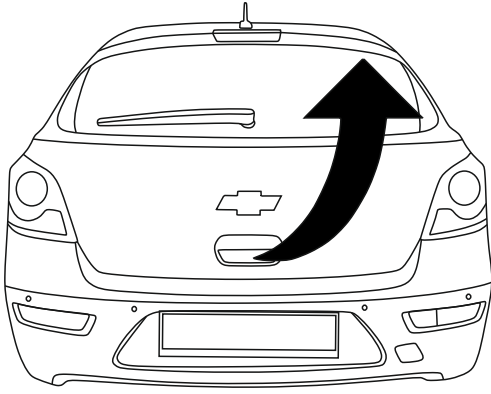


2

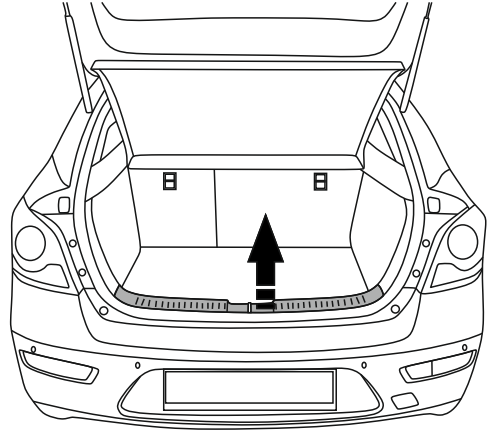


3

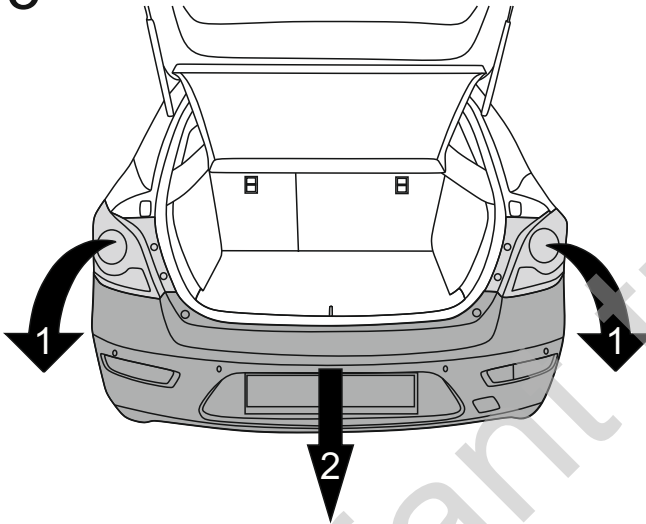


4




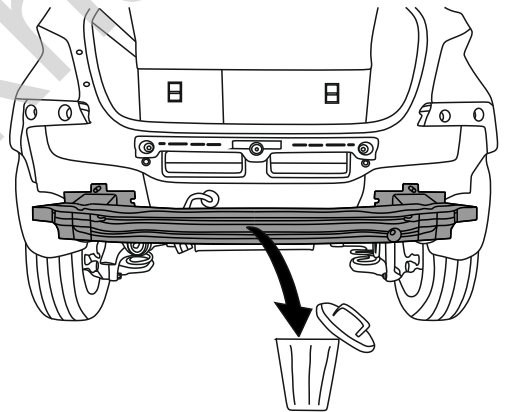


5

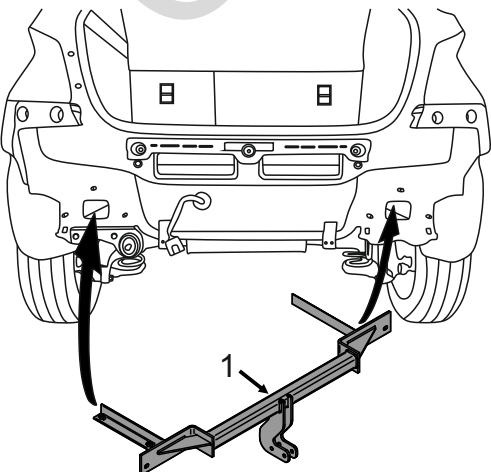

6

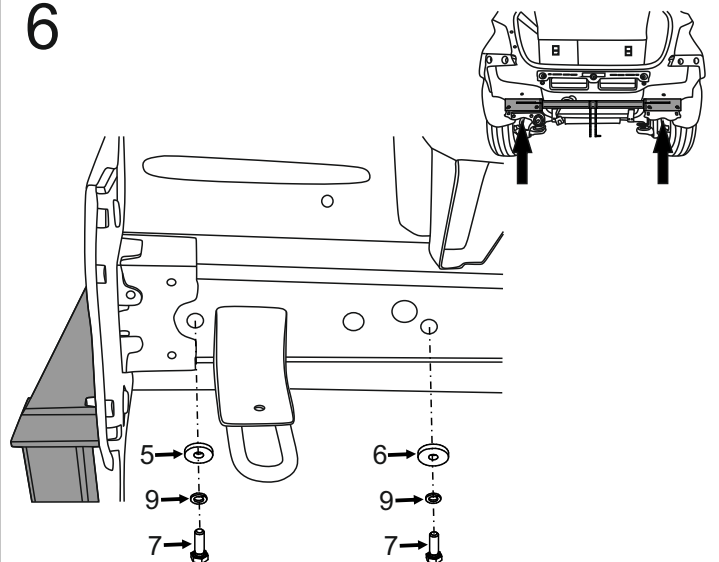

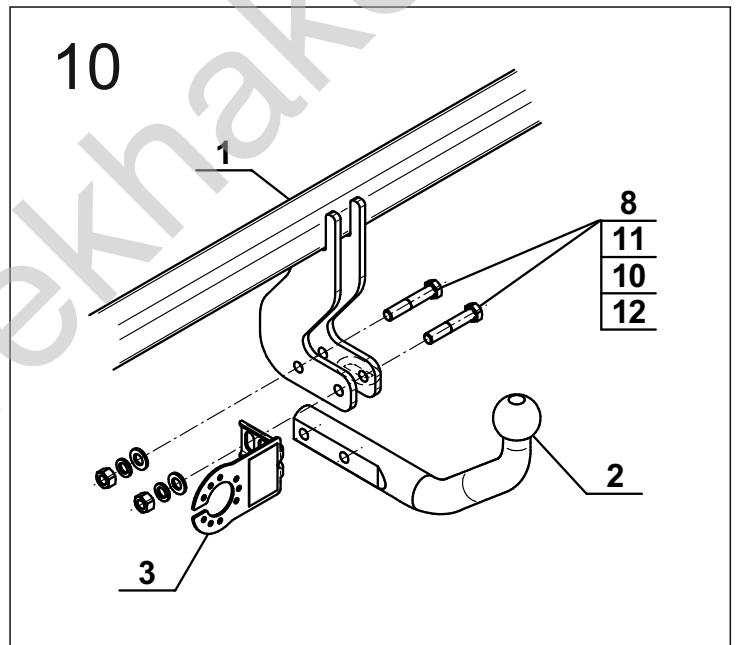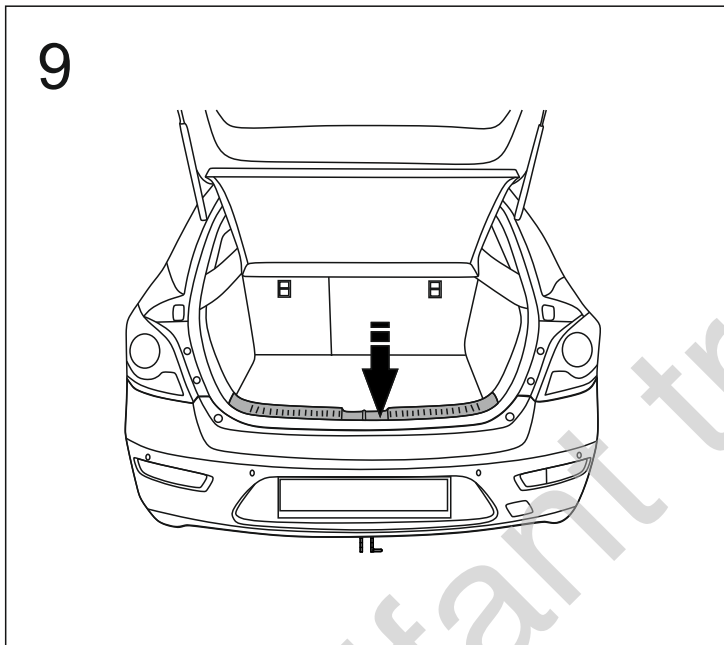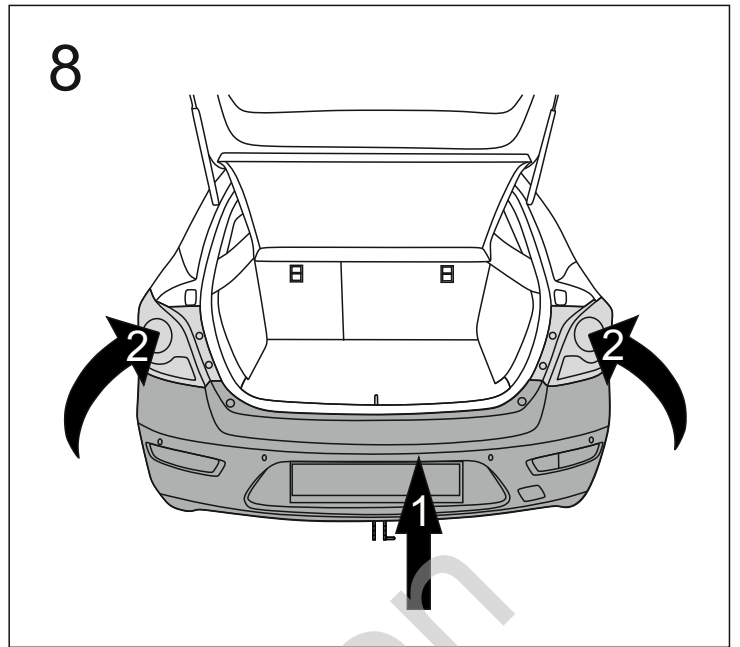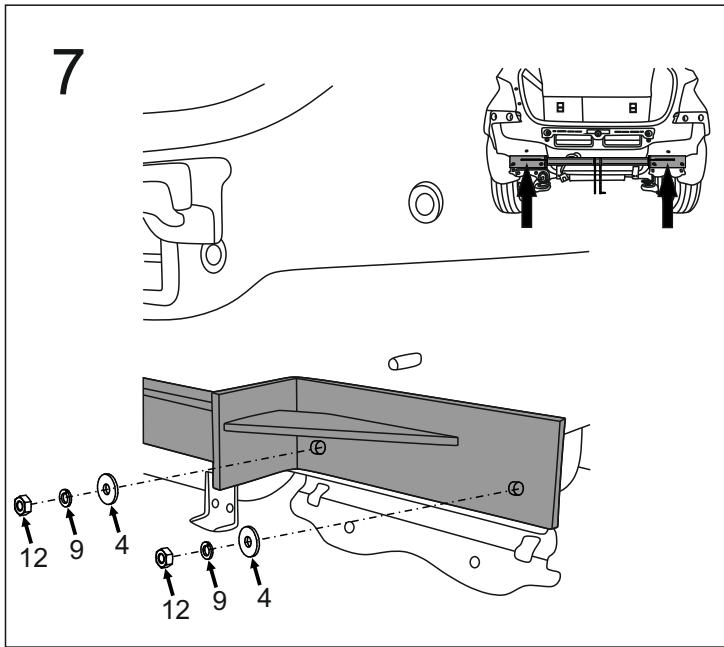

Olifant trekhaken