

**Fiat 500L Trekking**  
**Fiat 500L Cross**

**(2012 - 2017)**  
**(2018 - →)**

**F-060**


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.




YES  NO



YES  NO

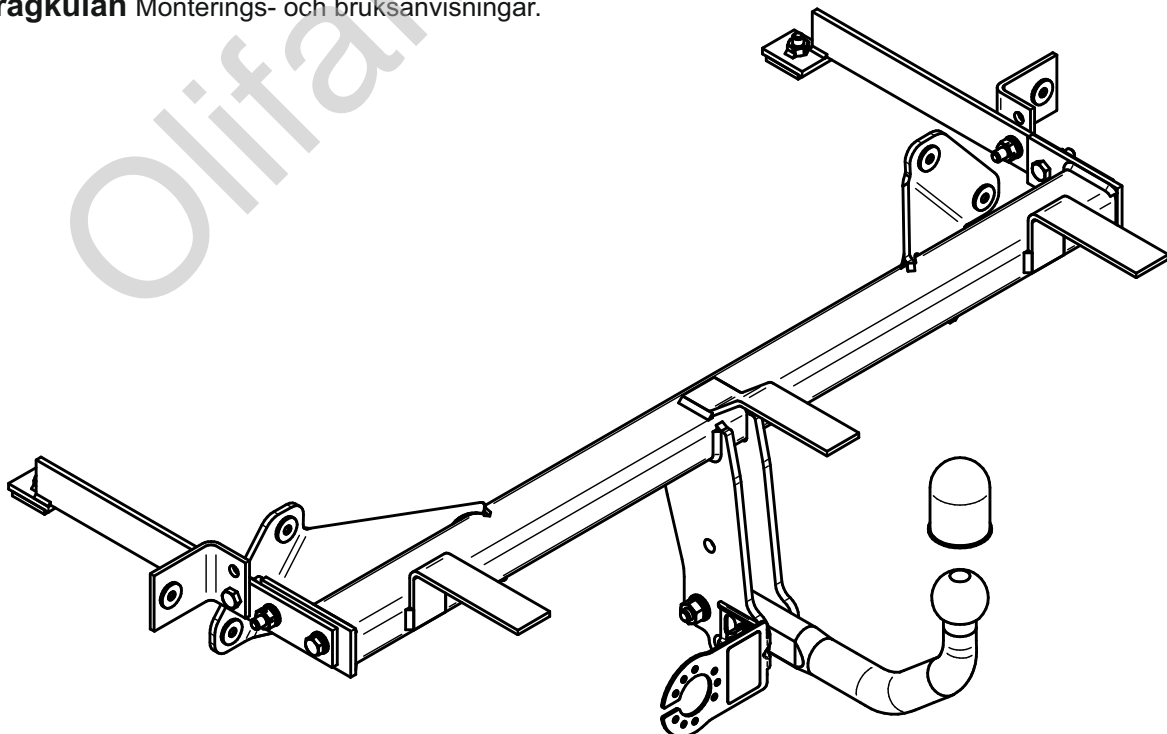

Typ: F-060  
 A50-X  
 E20 55R-01 4999  
 D = 7,22 kN  
 S = 90 kg

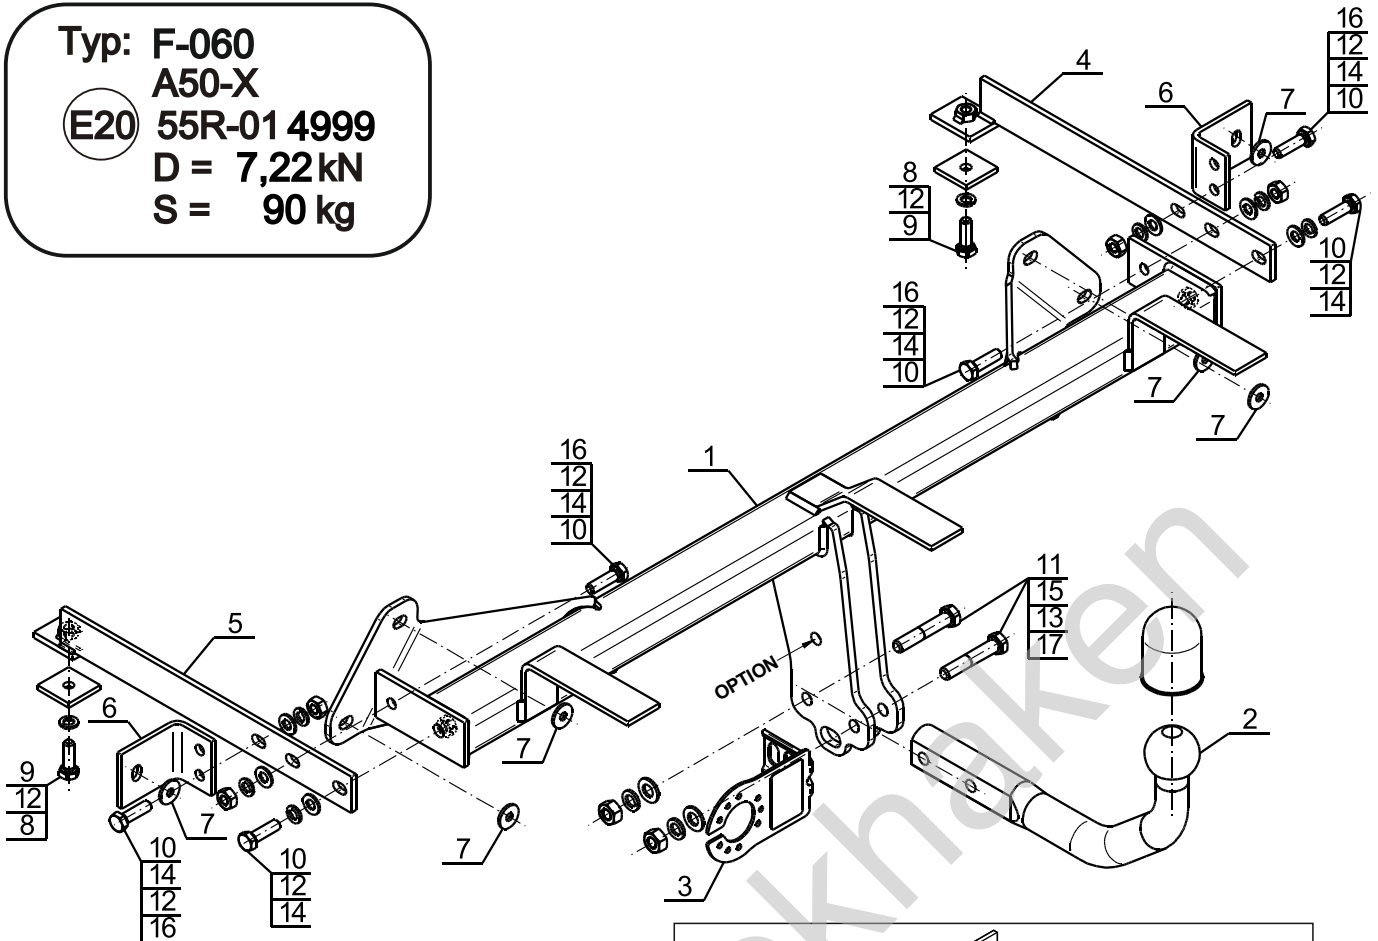

1		x1
2		x1
3		x1
4		x1
5		x1

6		x2
7		Ø24/Ø8,5x2,5 x6
8		40x40x5/Ø10,5 x2
9		M10x30 (PN/M-82105) (8.8) x2
10		M10x35 (PN/M-82105) (8.8) x6
11		M12x65 (PN/M-82101) (8.8) x2
12		Ø10,2 x8
13		Ø12,2 x2
14		Ø10,5 x6
15		Ø13,0 x2
16		M10 (8) x4
17		M12 (8) x2






**OPTION**







	1x	M12x35	1x	Ø12,2
	1x	Ø13,0	1x	M12




(CZ-050.00)





8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

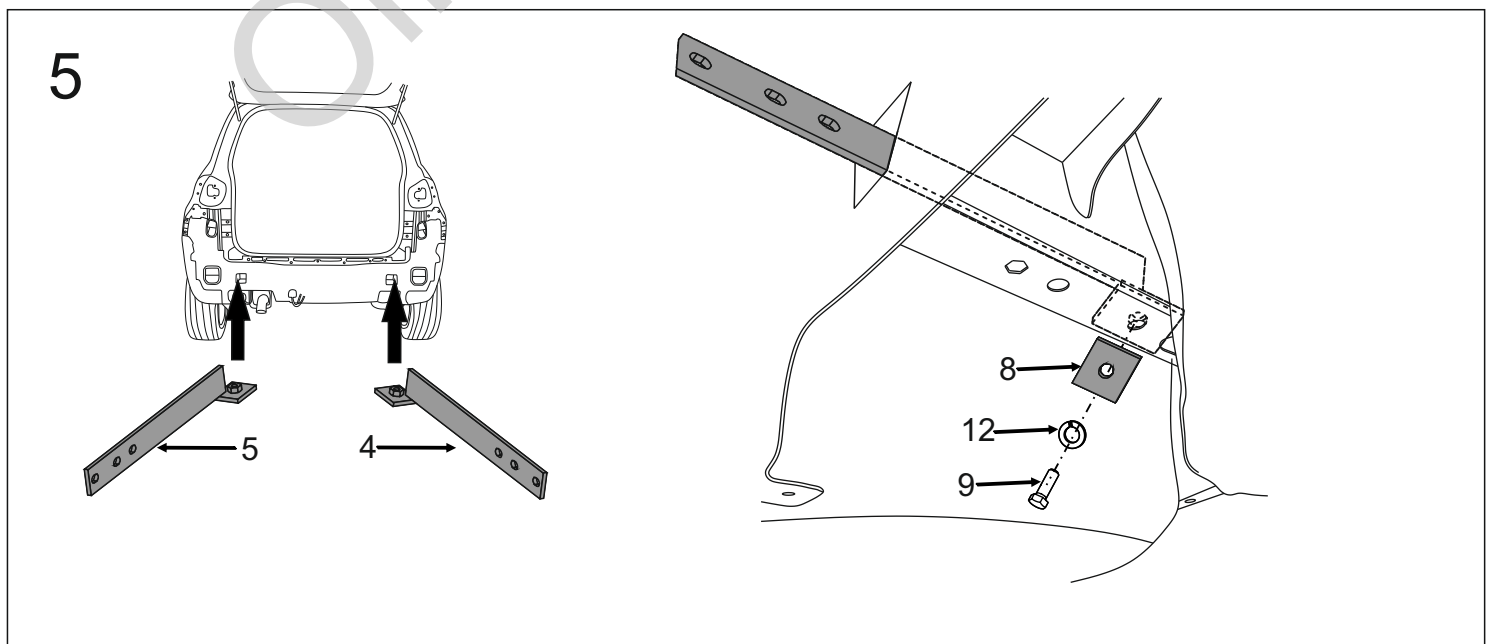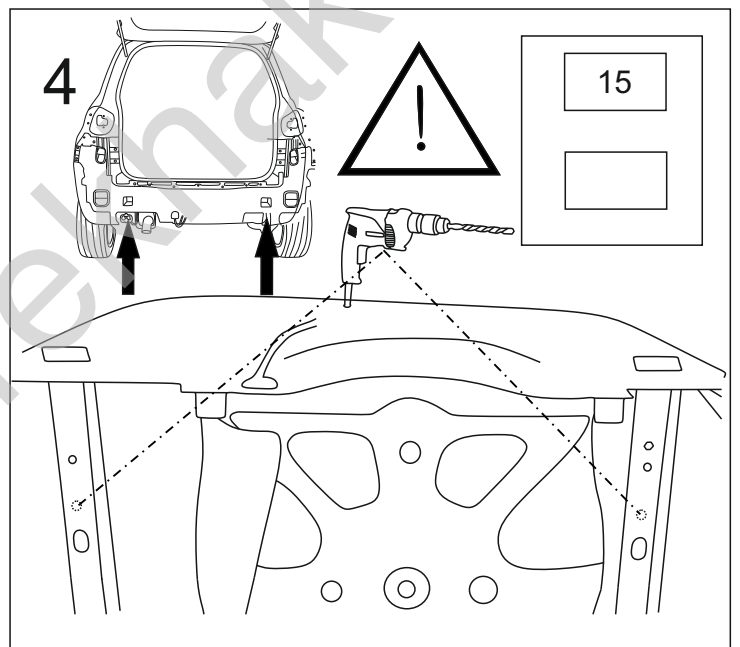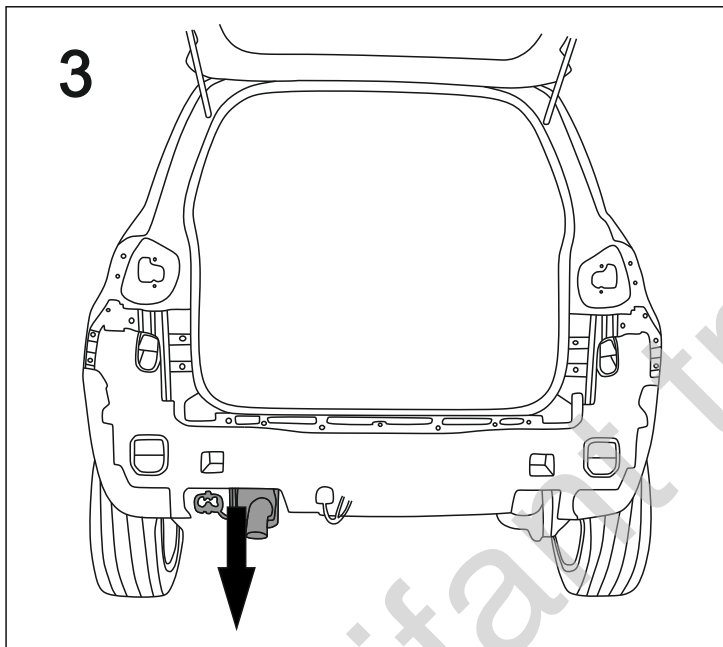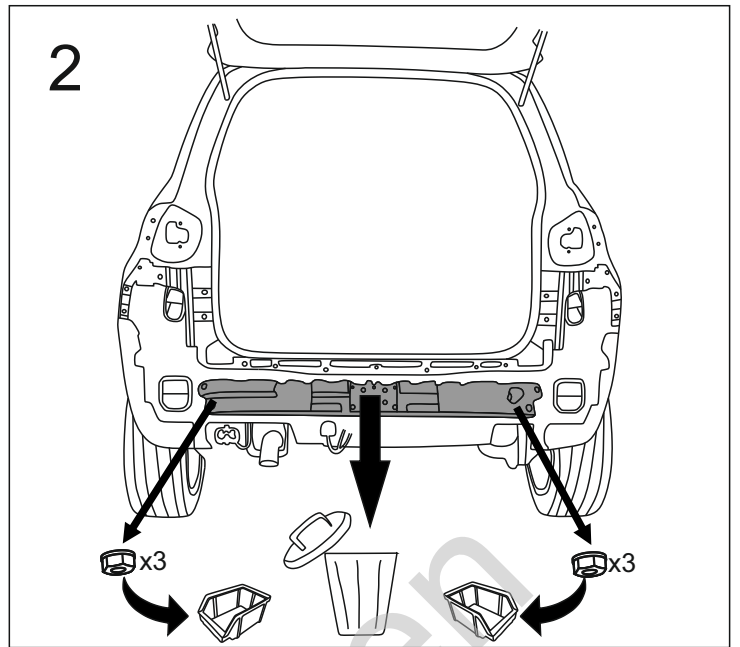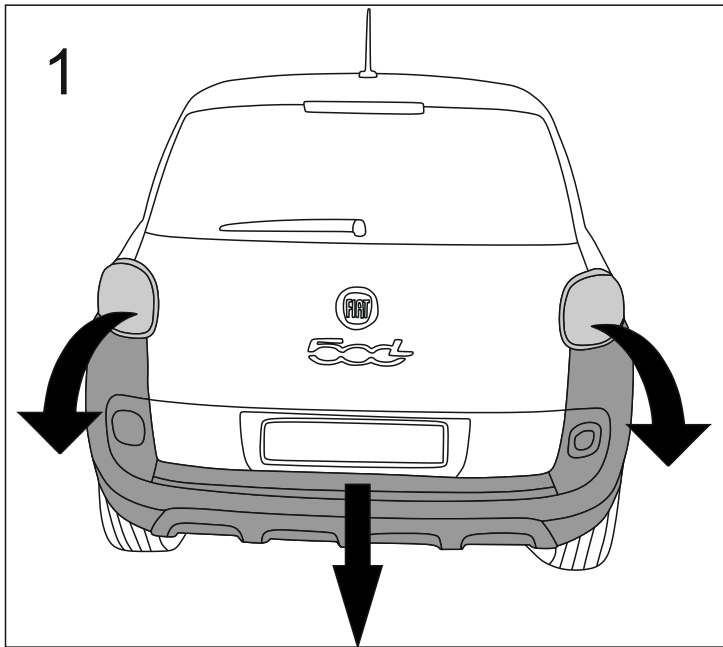

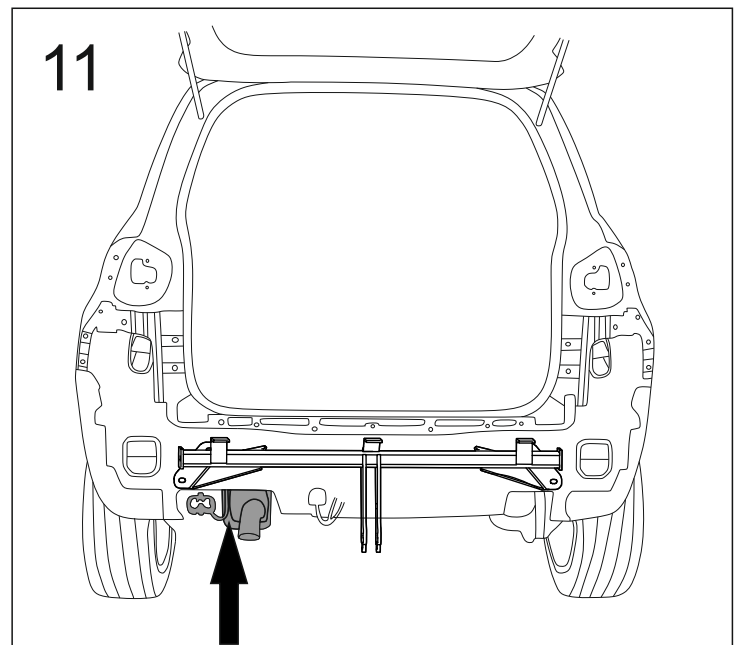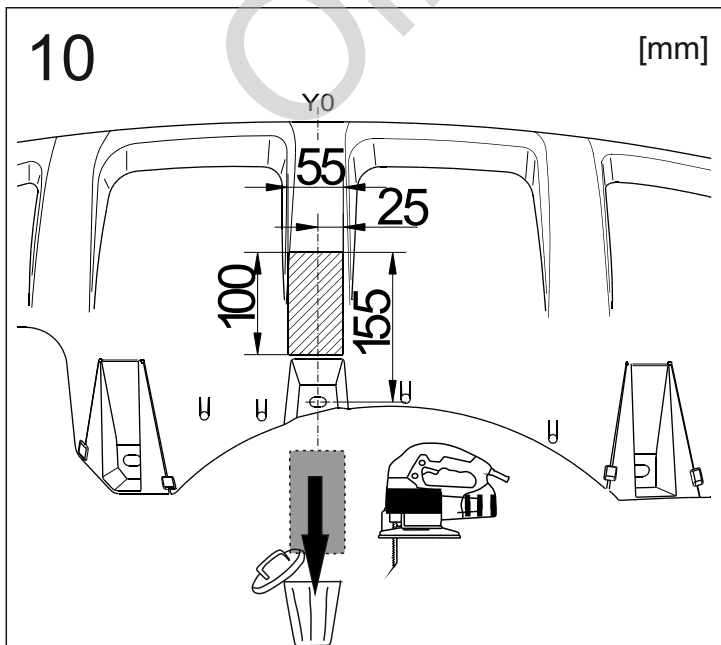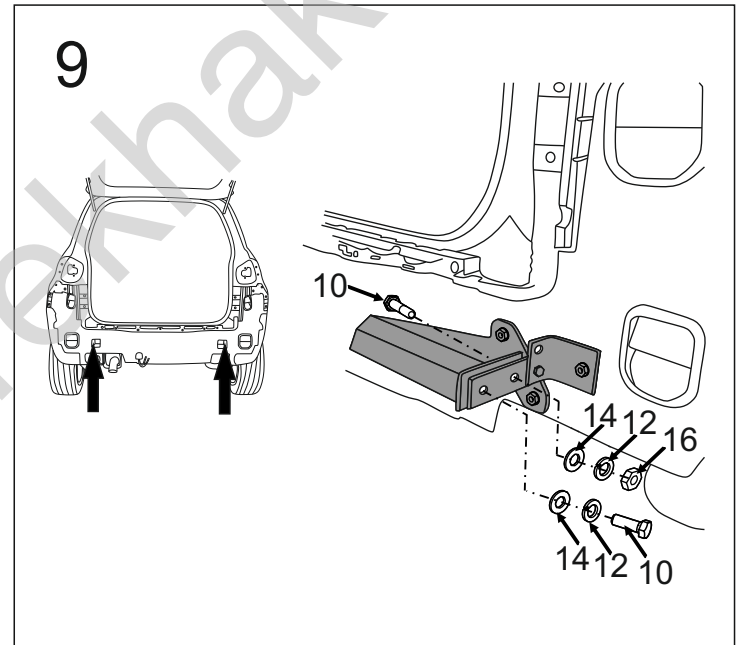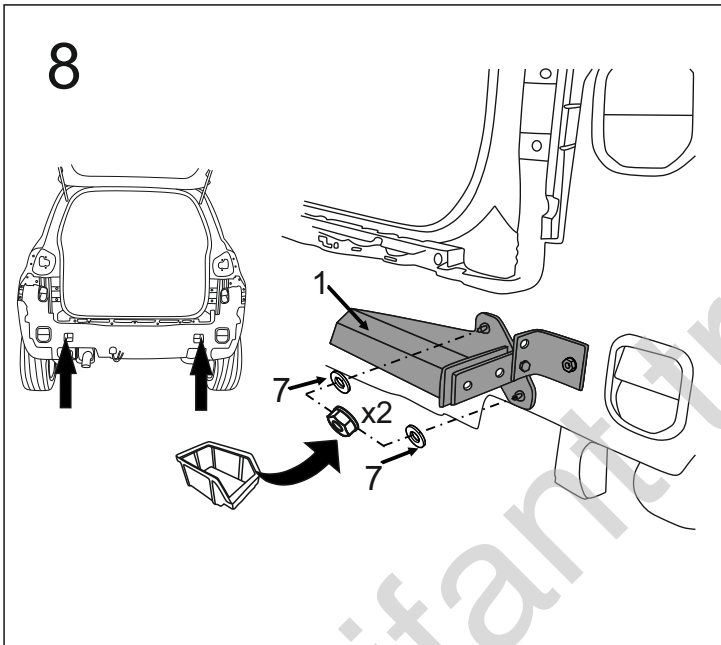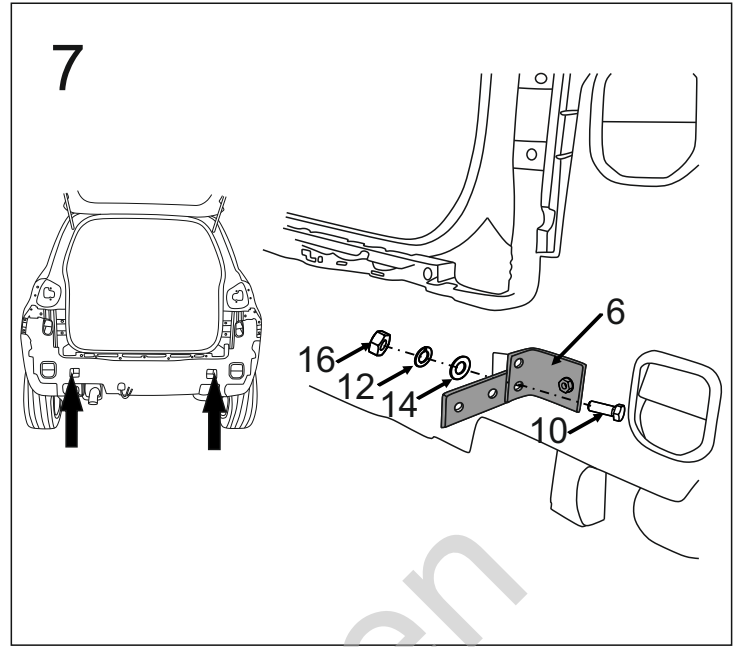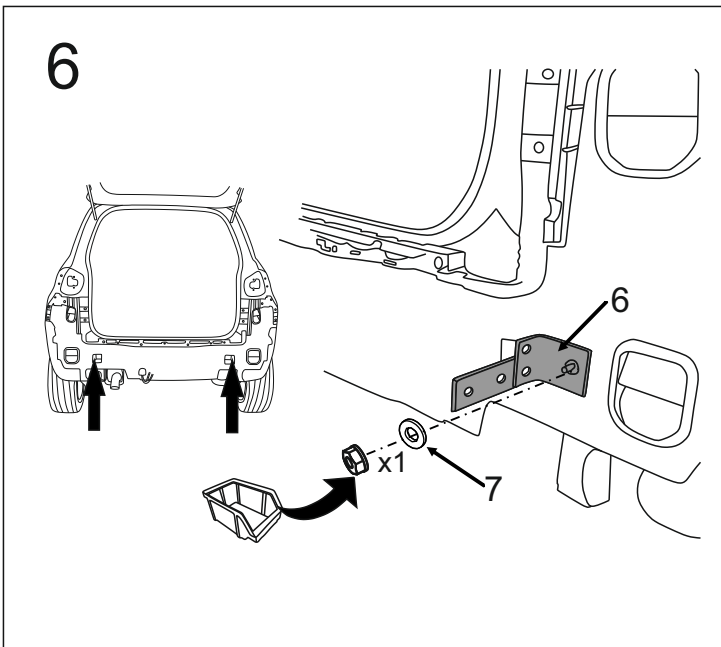

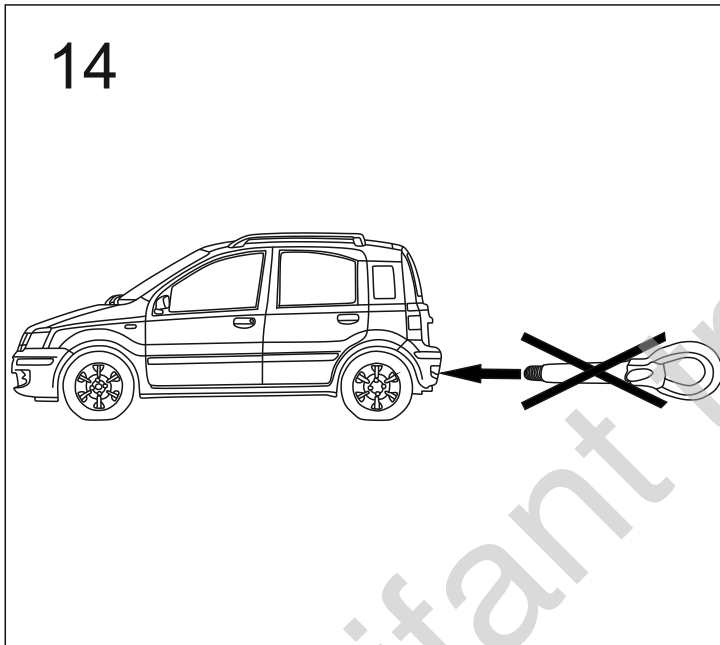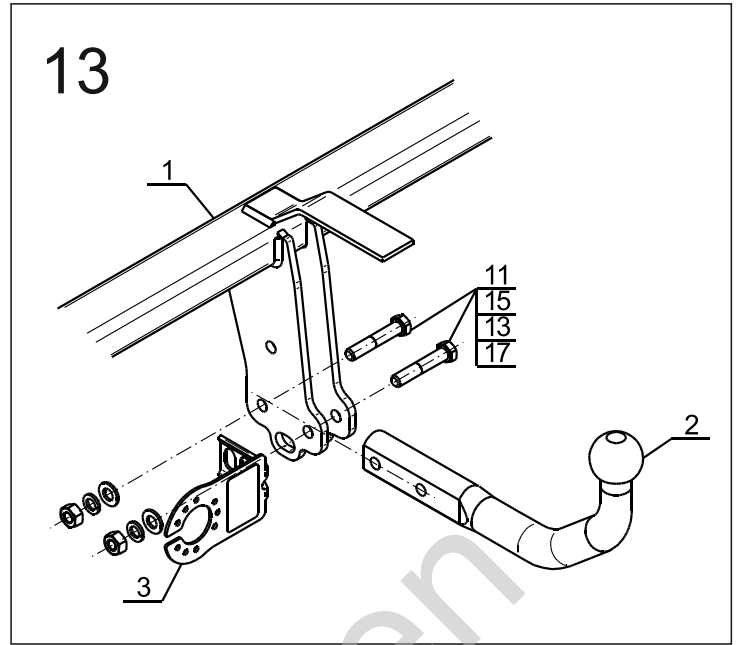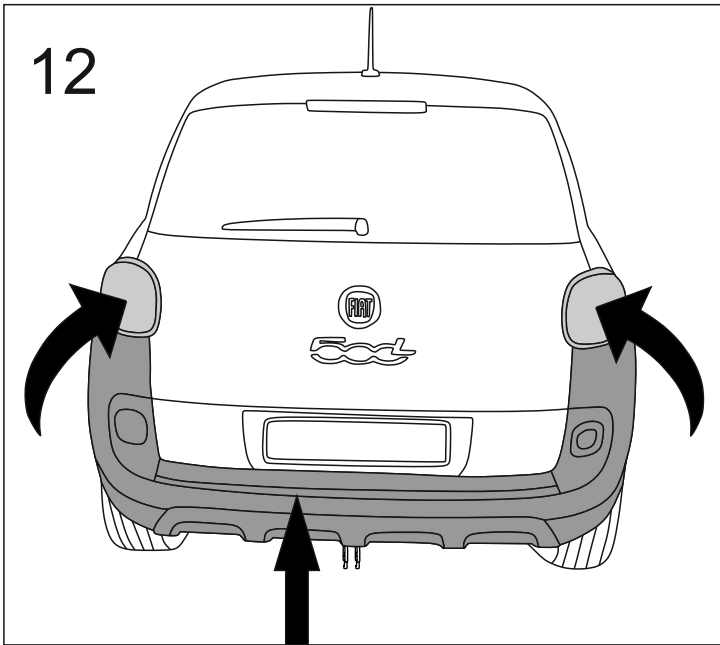

## OPTION

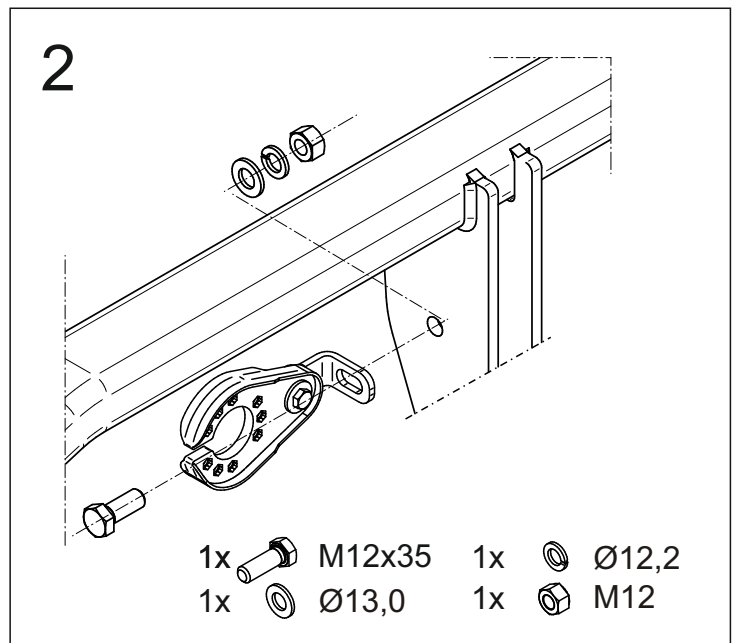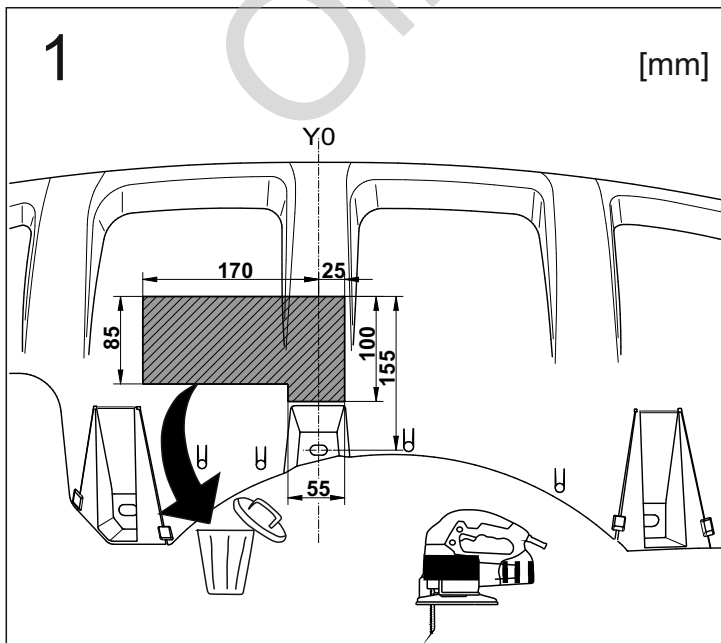

F-060/F-061/F-061 W7  
Fiat 500L Trekking  
(2012 - 2017)

Szablon/ Template

Fiat 500L Cross  
(2018 - →)

