

Fiat Freemont
Dodge Journey

(2011 - 2016)
(2008 - 2020)

F-074

PL **Zaczep Kulowy** Instrukcja montażu i eksploatacji

GB **Tow bar** Installation and operating instructions

D **Die Anhängerkupplung** Montage- und Gebrauchsanleitung

ES **Gancho de remolque** Las instrucciones de instalación y de operación

RU **Фаркоп** Инструкция по установке и эксплуатации ТСУ

FR **Attelage** Notice de montage et d'utilisation

IT **Gancio traino** Istruzioni di montaggio

CZ **Tažné zařízení** Návod na montáž a použití

RO **Cârlig de remorcare** Instrucția de montaj și exploatare


SE **Dragkulan** Monterings- och bruksanvisningar.




YES NO



YES NO

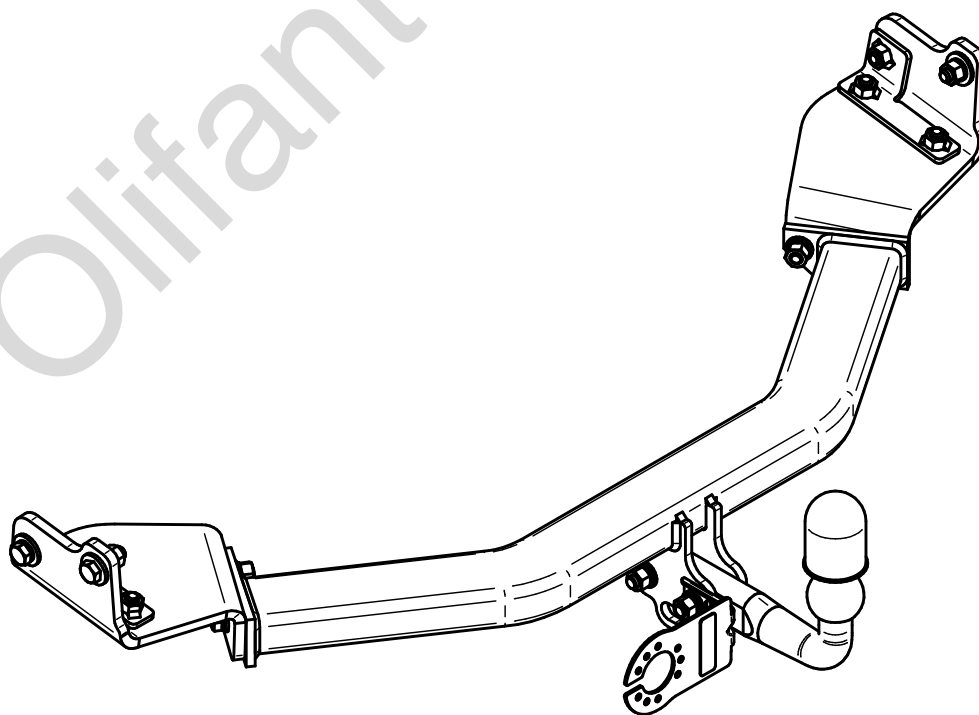

Typ: F-074
 A50-X
 E20 55R-02 6335
 D=9,6kN
 S=80kg

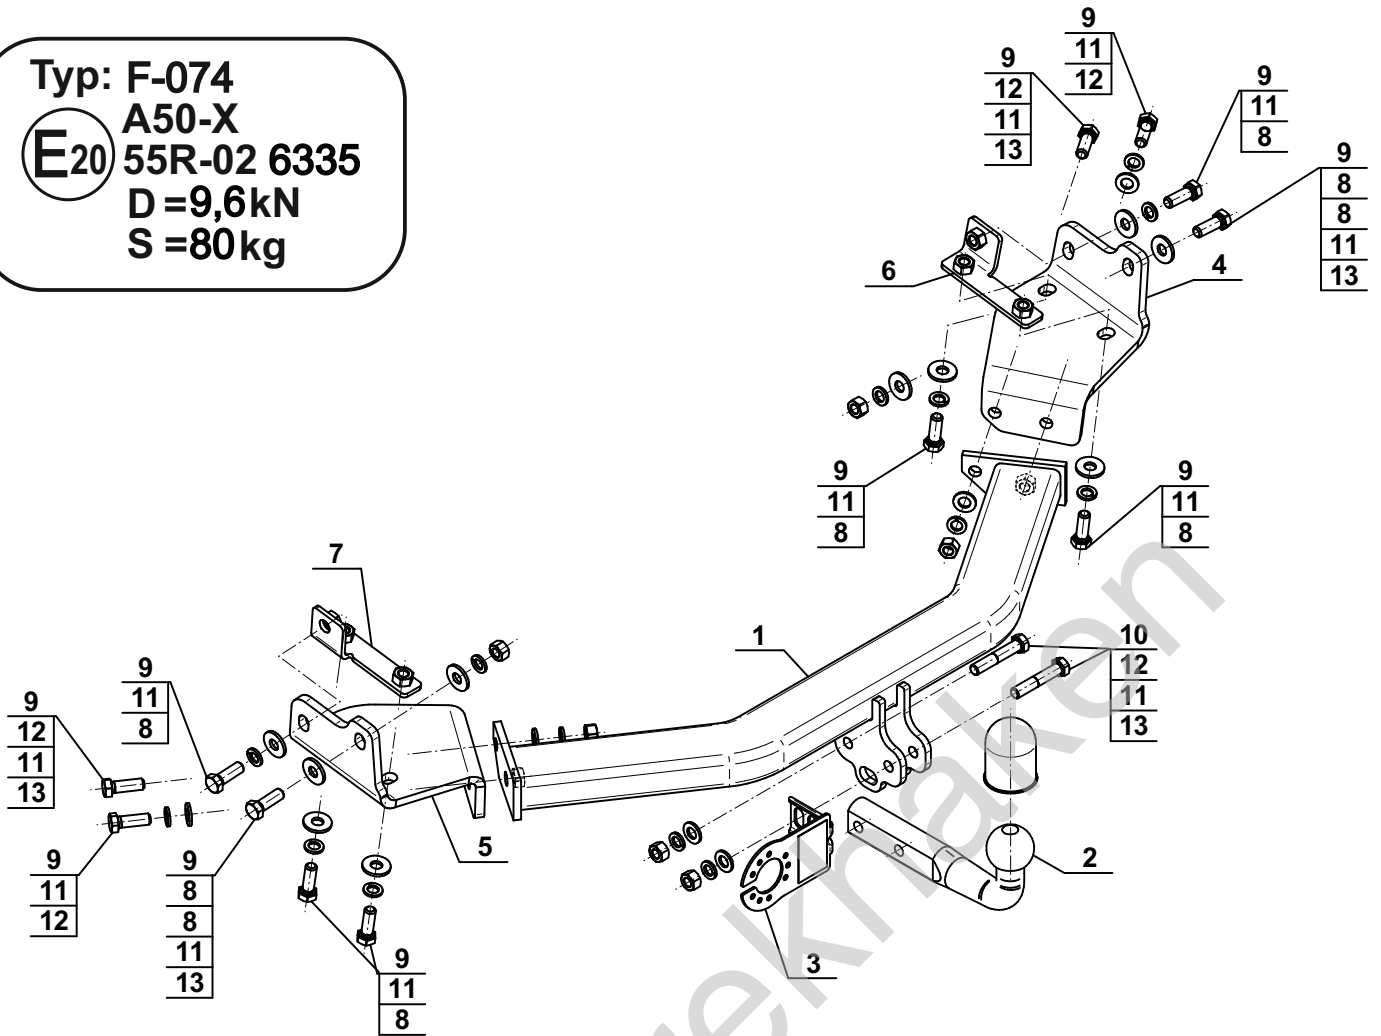


1		x1
2		x1
3		x1
4		x1
5		x1
6		x1
7		x1

8		Ø30/Ø12,5x3	x10
9		M12x35 (PN/M-82105) (8.8)	x12
10		M12x65 (PN/M-82101) (8.8)	x2
11		Ø12,2	x14
12		Ø13,0	x6
13		M12 (8)	x6




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

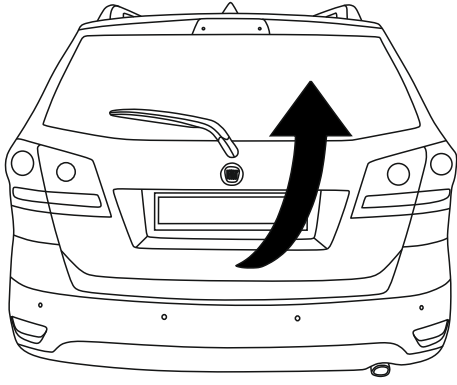


2

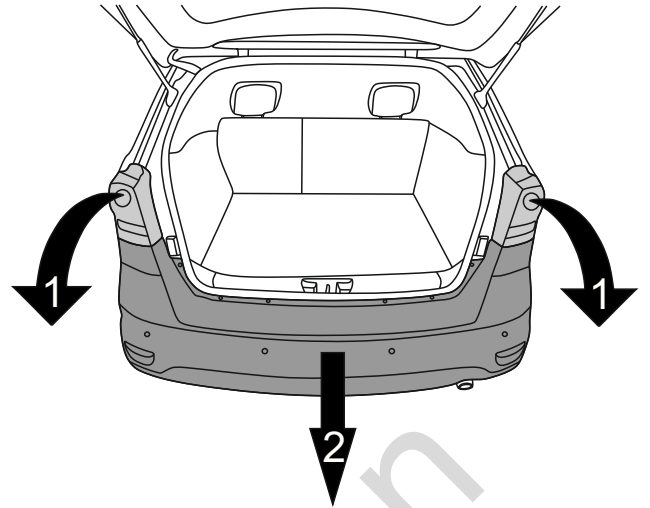


3

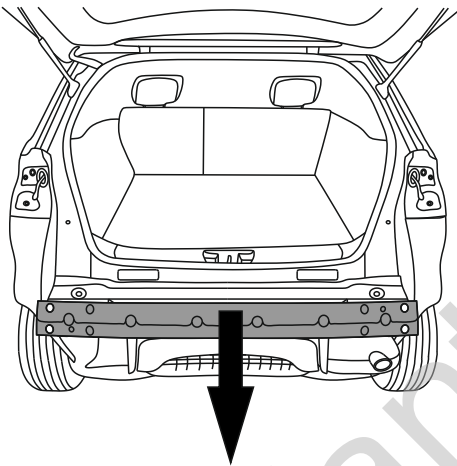


4






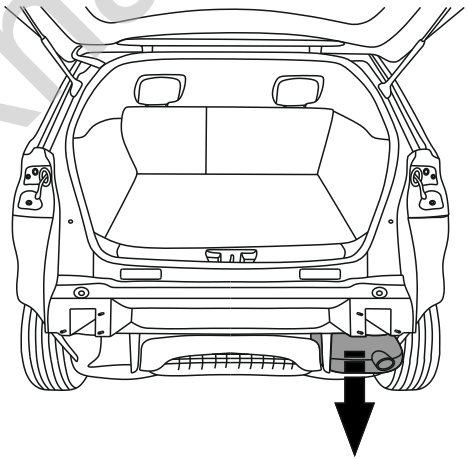


5

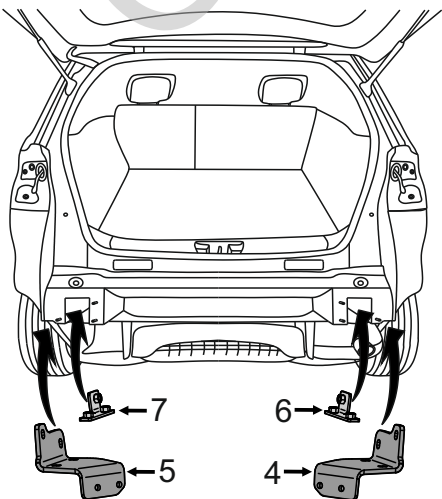



6

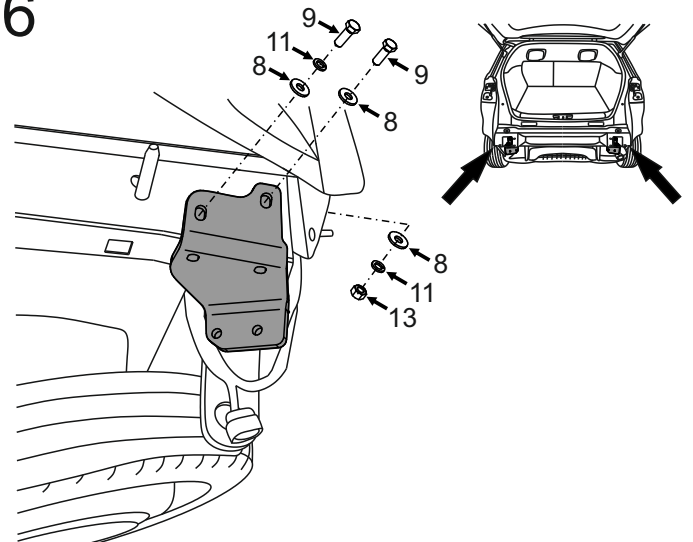

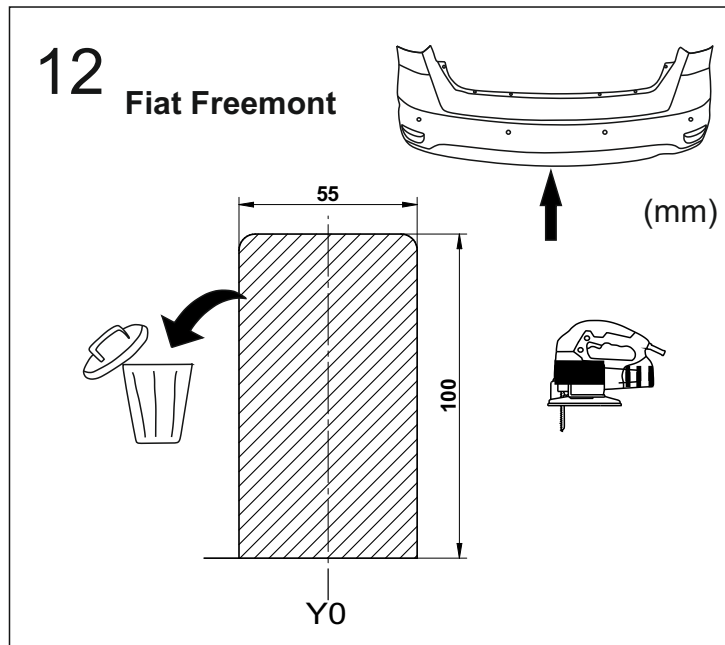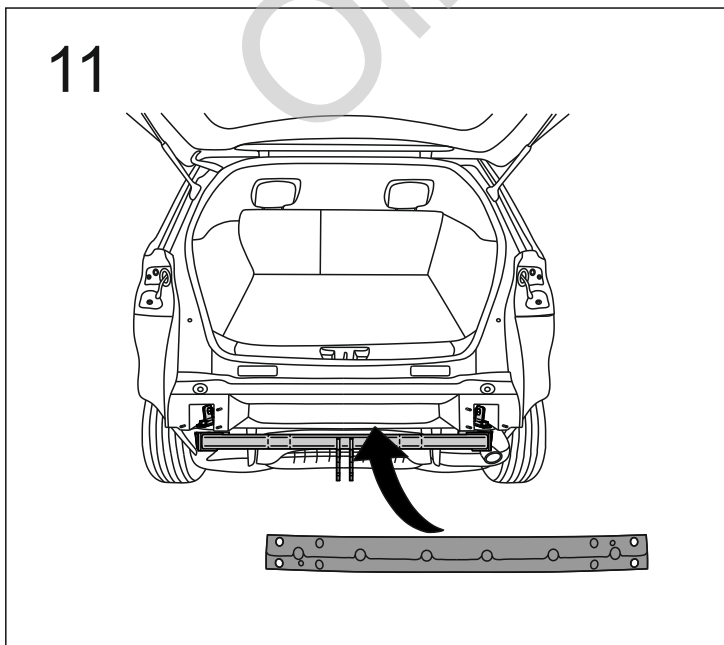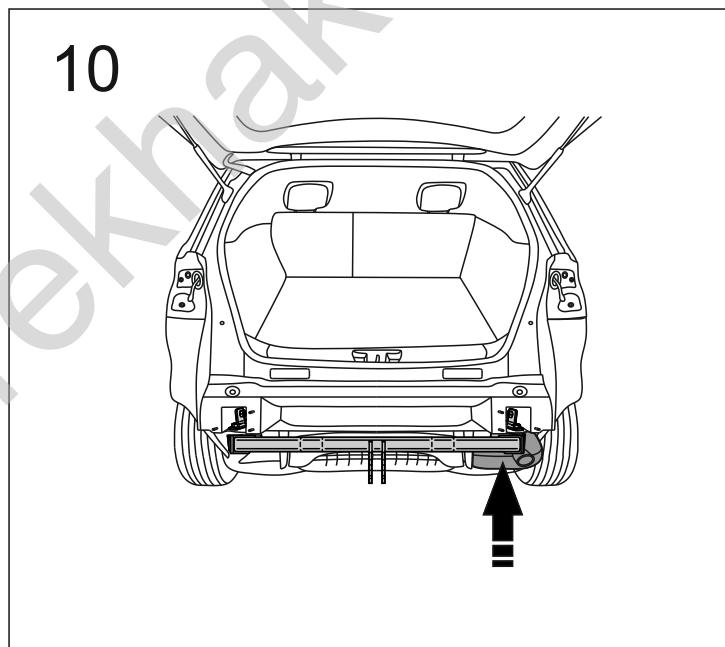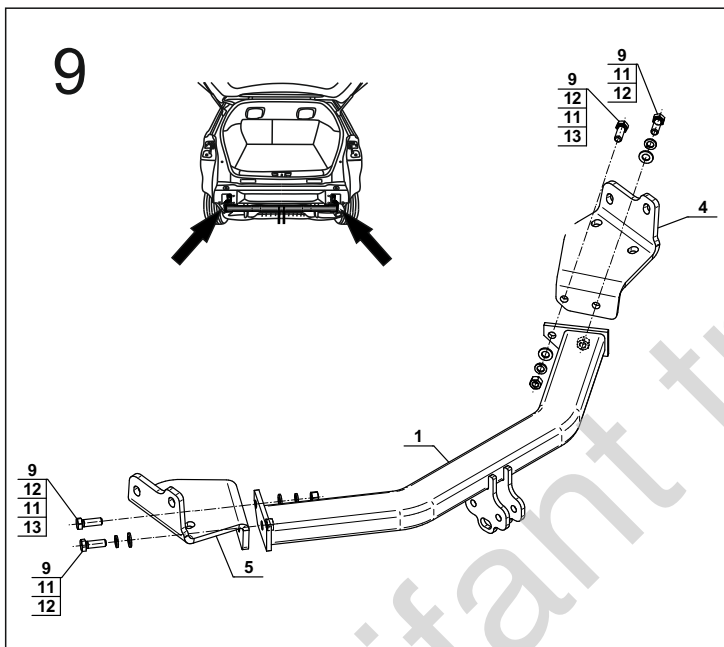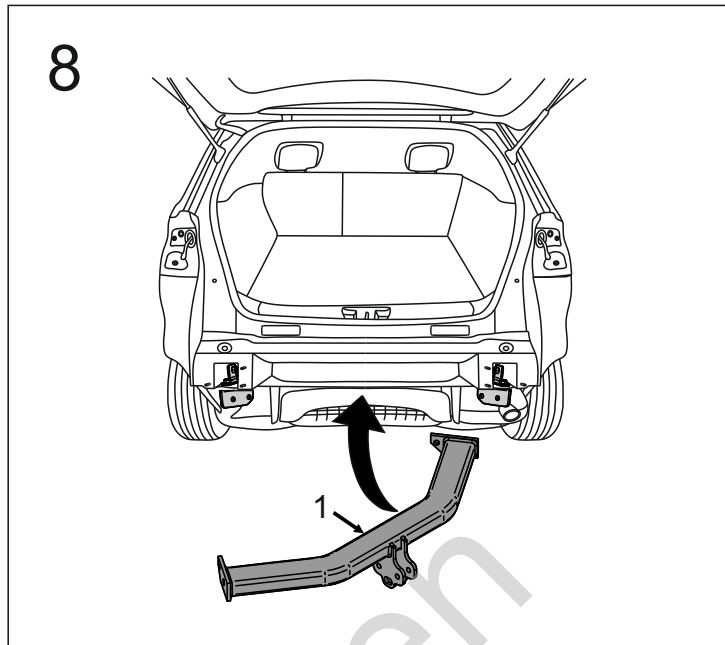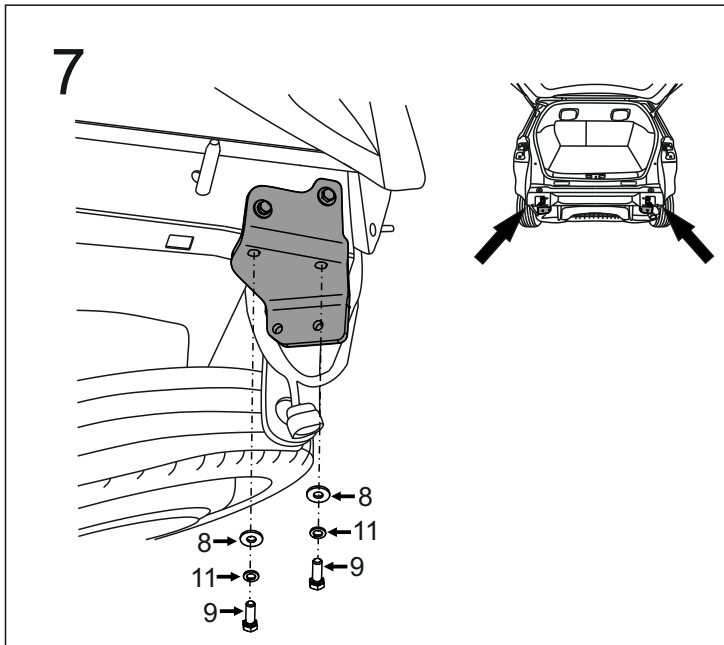


13

Dodge Journey

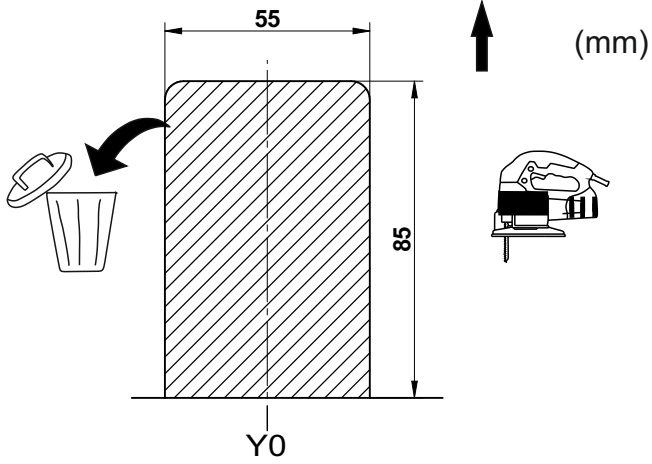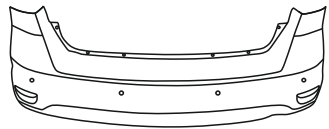

14

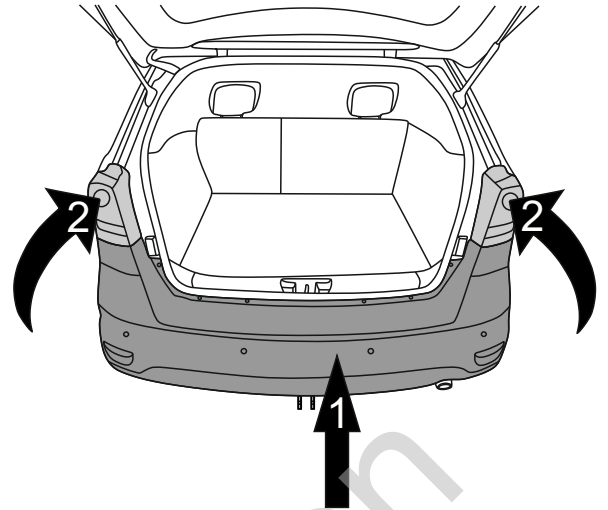

15

