


Ford Mondeo (4/5D), (Kombi) (Vignale)

(09/2014 - →)

F-274


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

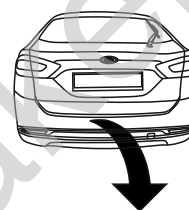


YES NO



YES NO

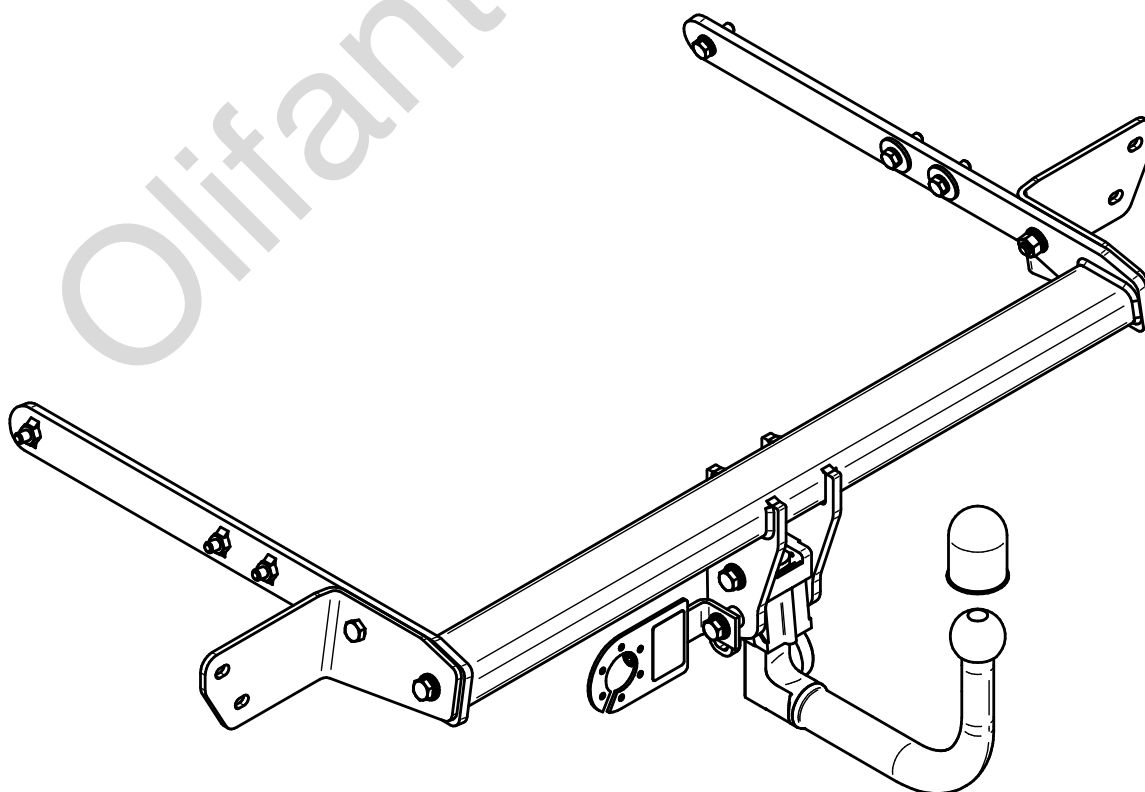

Typ: F-274
 A50-X
 (E20) 55R-01 4664
 D = 11,6kN
 S = 100kg






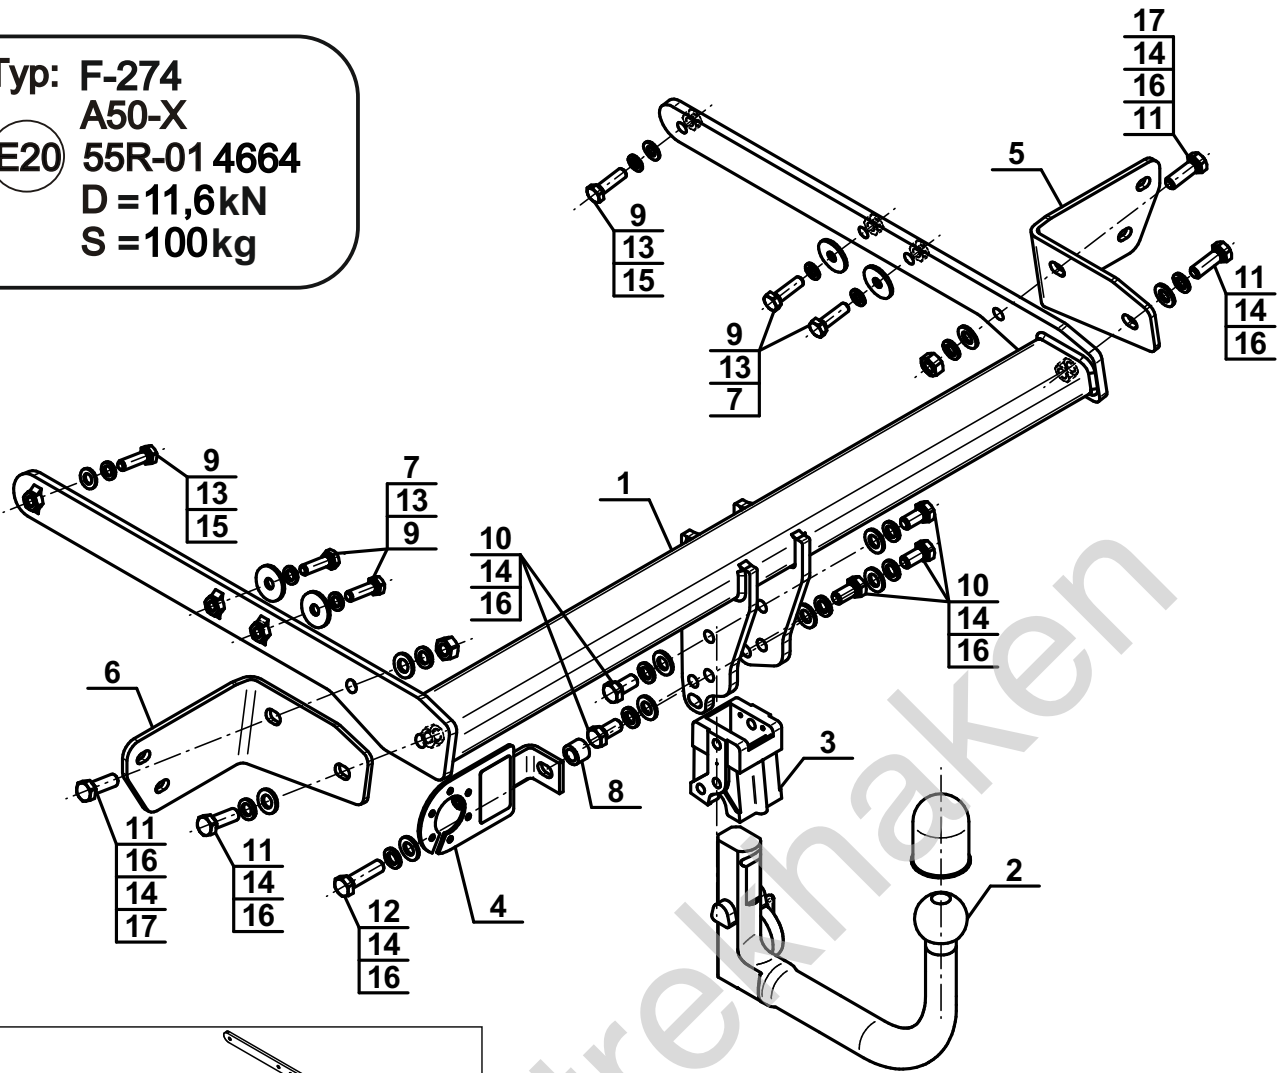


1		x1
2		x1
	(ACS-6008)	
3		x1
4		x1
	(CZ-050.00)	
5		x1
6		x1


7		Ø35/Ø10,5x3	x4
8		Ø20/Ø12,5x15	x1
9		M10x35 (PN/M-82105) (8.8)	x6
10		M12x25 (PN/M-82105) (8.8)	x5
11		M12x35 (PN/M-82105) (8.8)	x4
12		M12x45 (PN/M-82105) (8.8)	x1
13		Ø10,2	x6
14		Ø12,2	x10
15		Ø10,5	x2
16		Ø13,0	x10
17		M12 (8)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

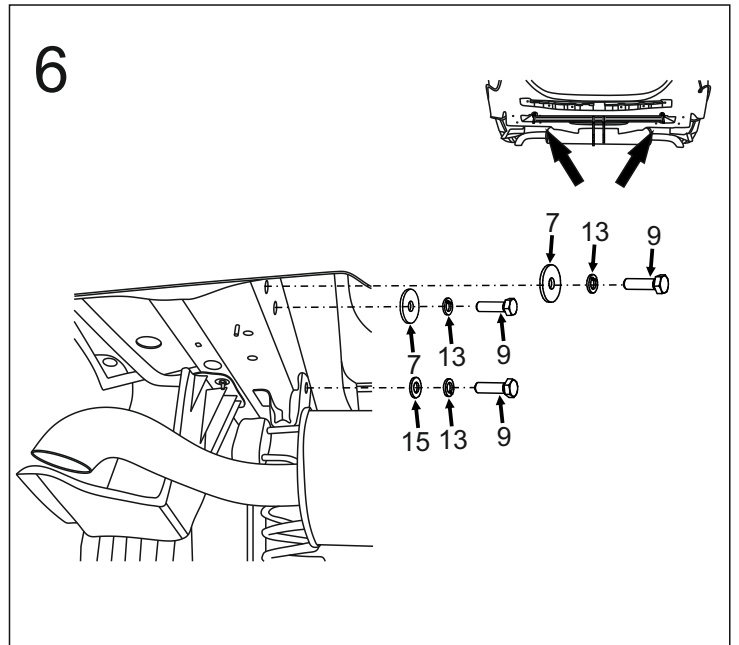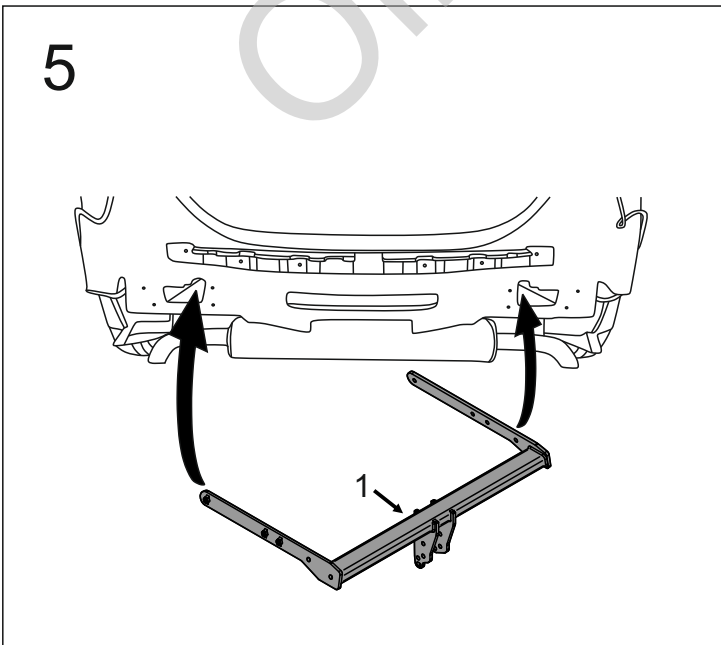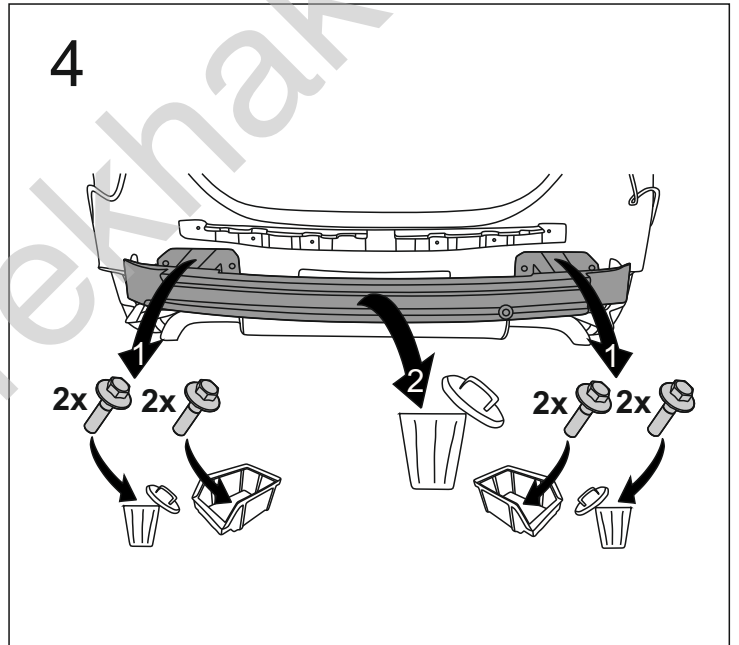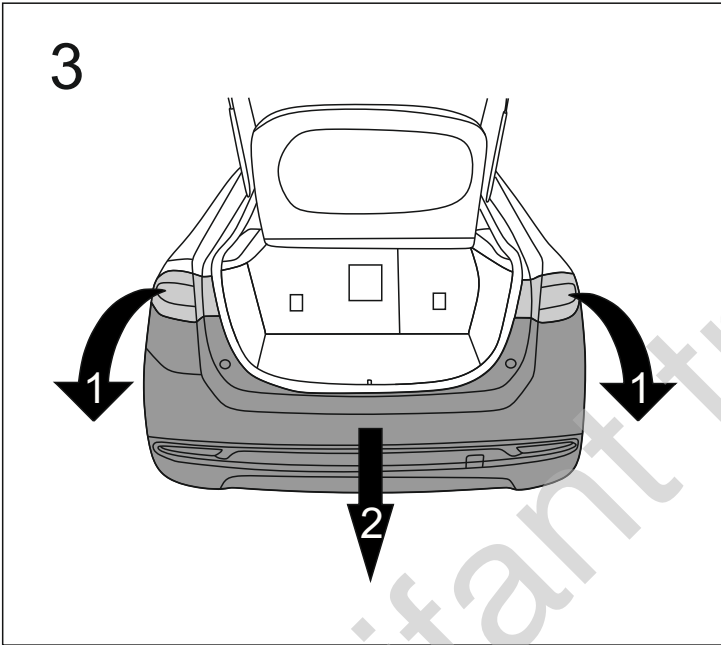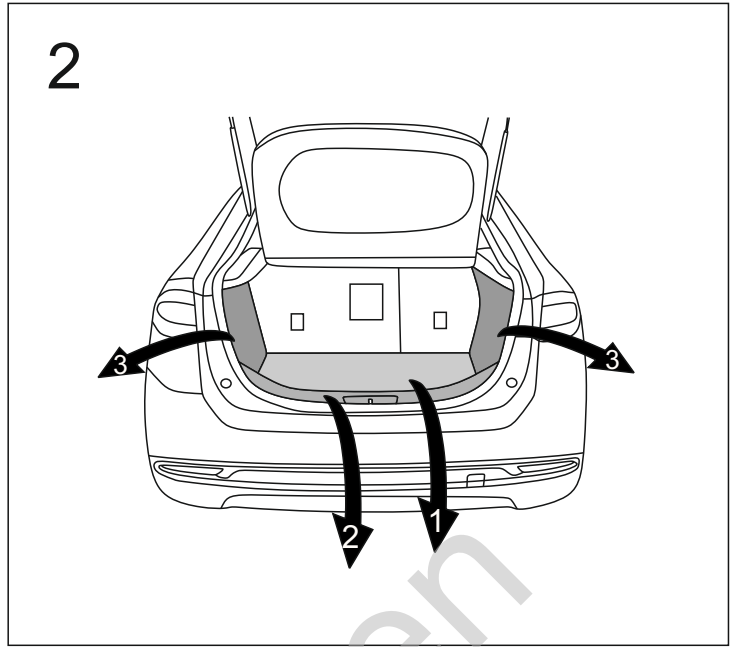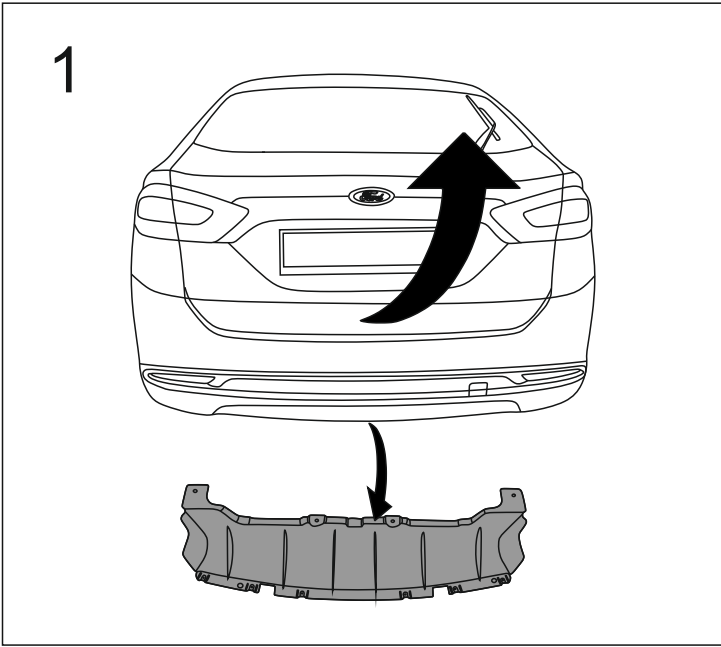


7

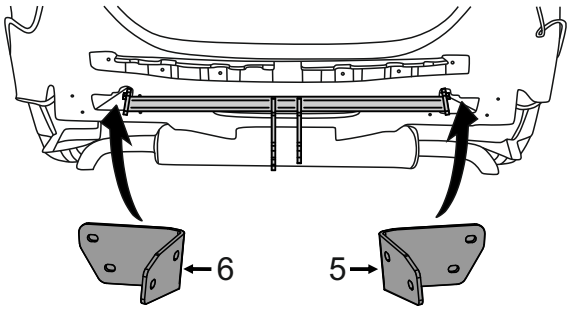


8

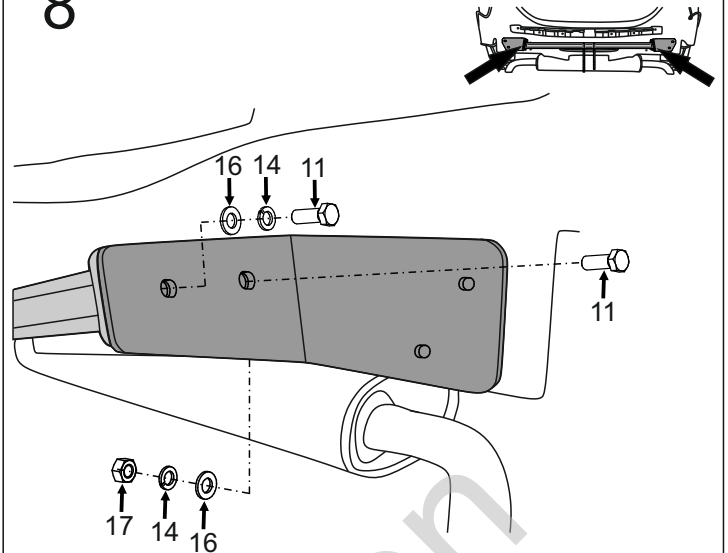


9

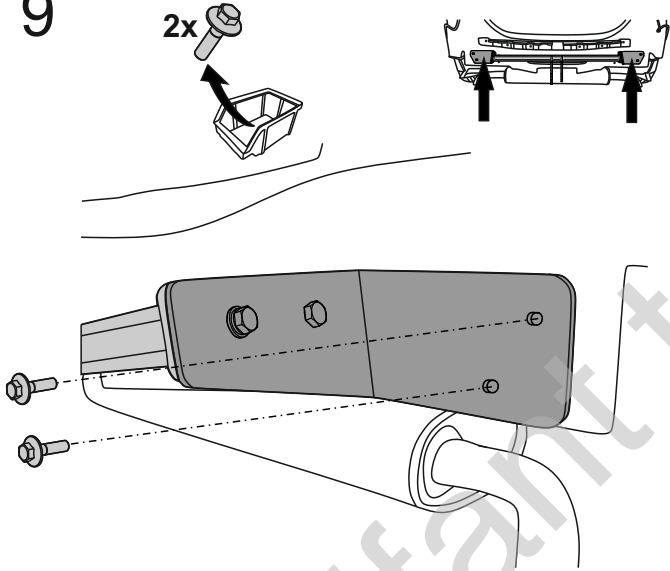


10

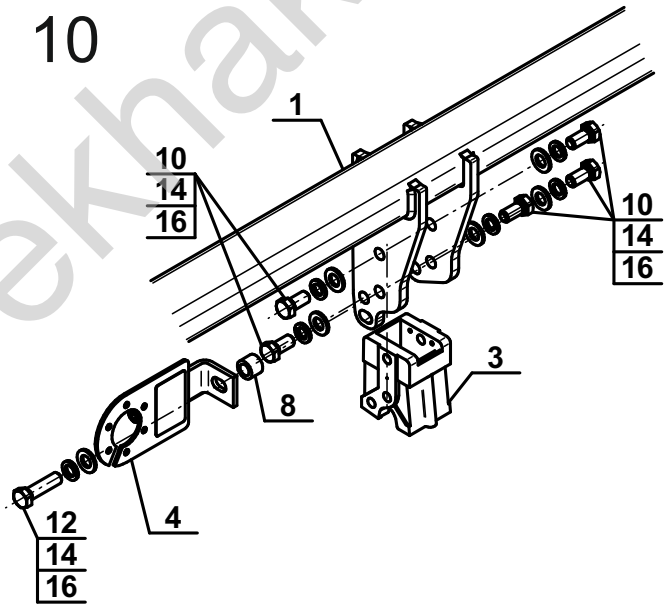


11

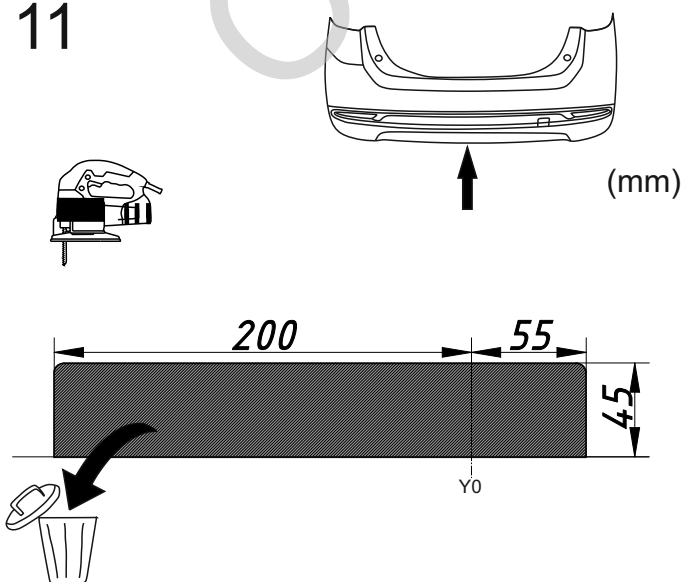


12

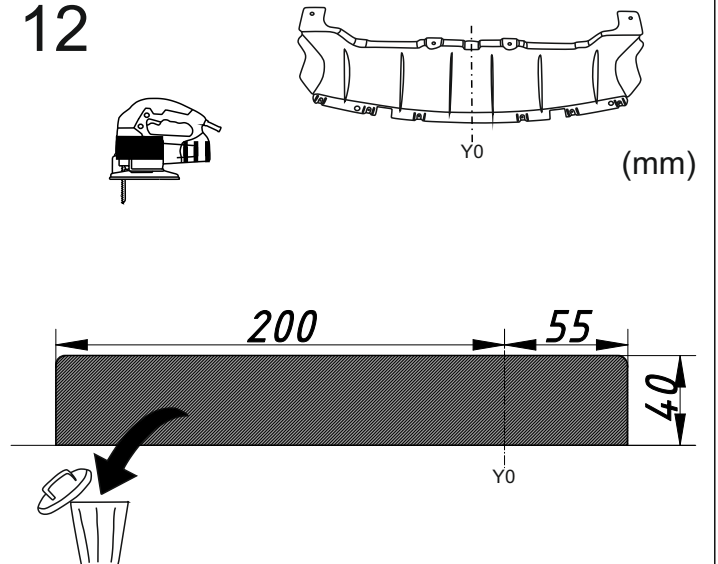


13

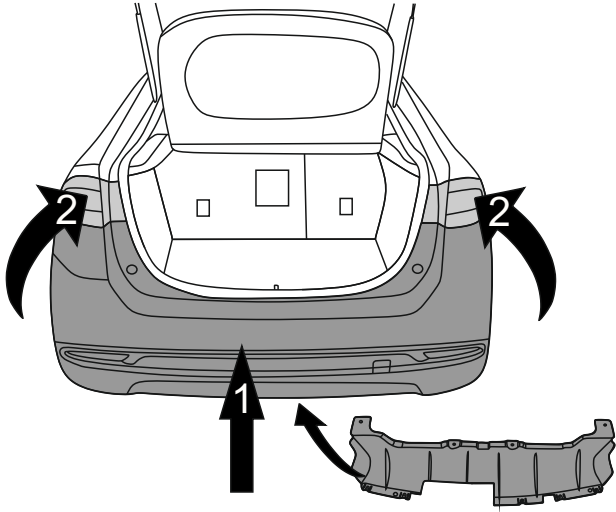

14

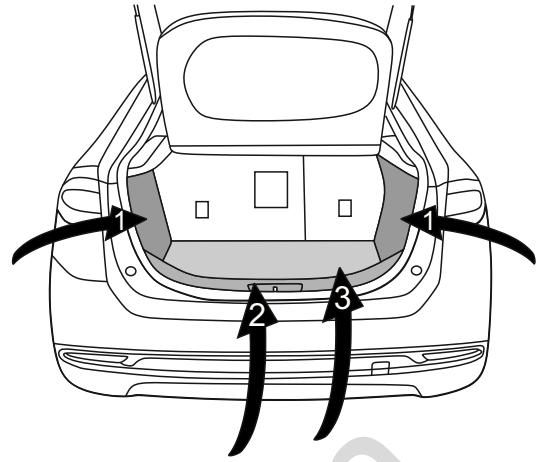

15

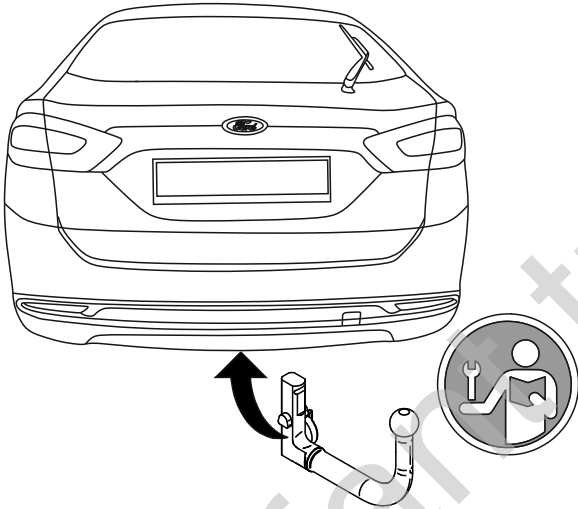

Olifant trekhaken