


Ford Tourneo Courier (~~AdBlue~~)
Ford Transit Courier (~~AdBlue~~)

(2014 - →)
(2014 - →)

F-305


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

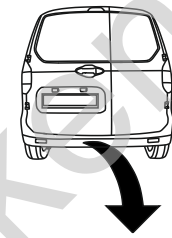


YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>








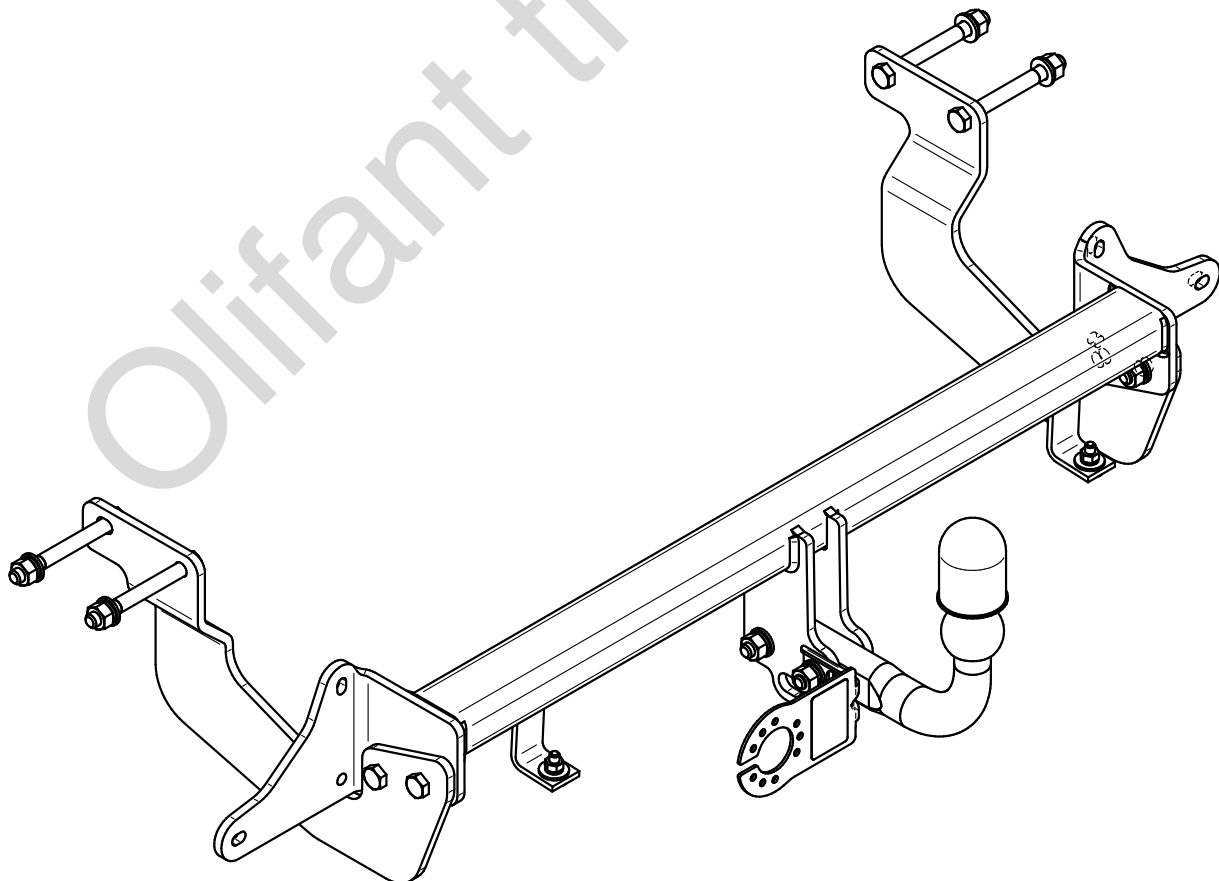



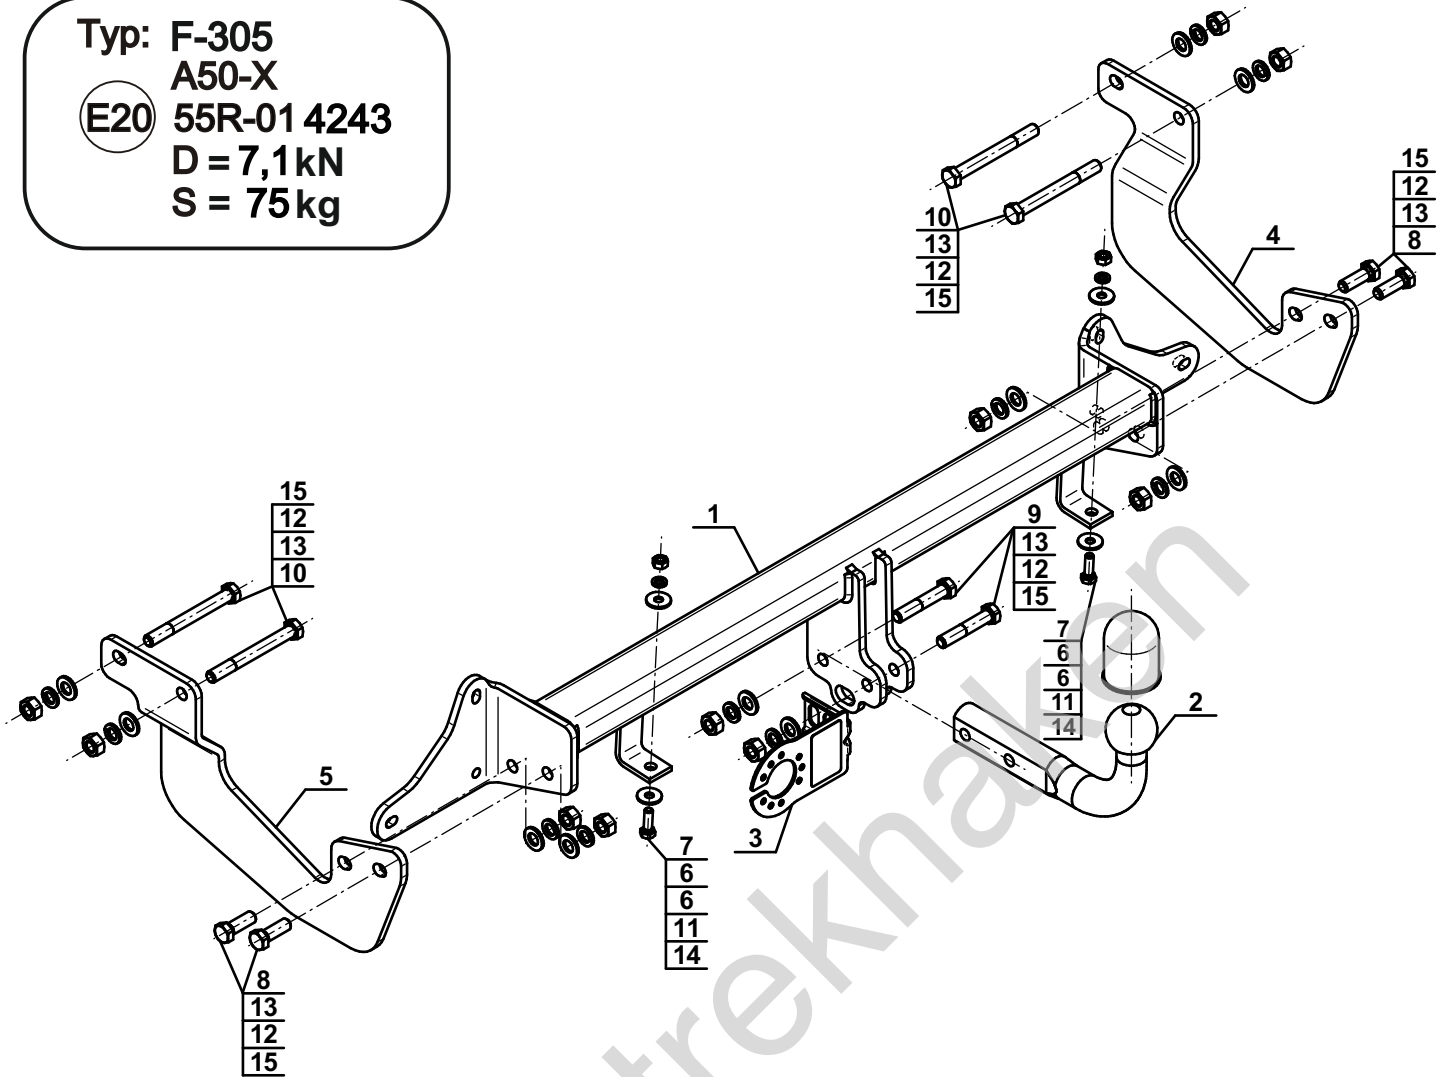





YES	NO
<input type="checkbox"/>	<input checked="" type="checkbox"/>

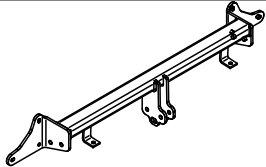

Typ: F-305
 A50-X
 (E20) 55R-01 4243
 D = 7,1kN
 S = 75kg




1		x1
2		x1
3		x1
4		x1
5		x1

6		Ø24/Ø8,5x2	x4
7		M8x25 (PN/M-82105) (8.8)	x2
8		M12x35 (PN/M-82105) (8.8)	x4
9		M12x65 (PN/M-82101) (8.8)	x2
10		M12x110 (PN/M-82101) (8.8)	x4
11		Ø8,2	x2
12		Ø12,2	x10
13		Ø13,0	x10
14		M8 (8)	x2
15		M12 (8)	x10




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

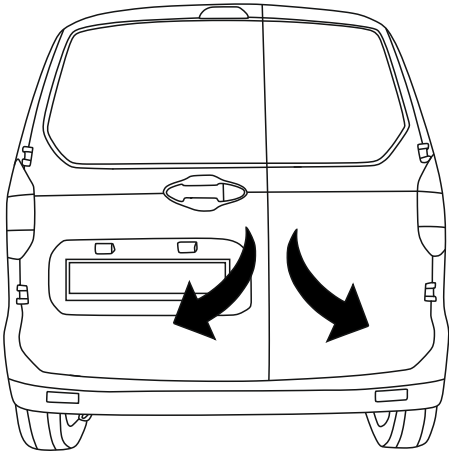


2

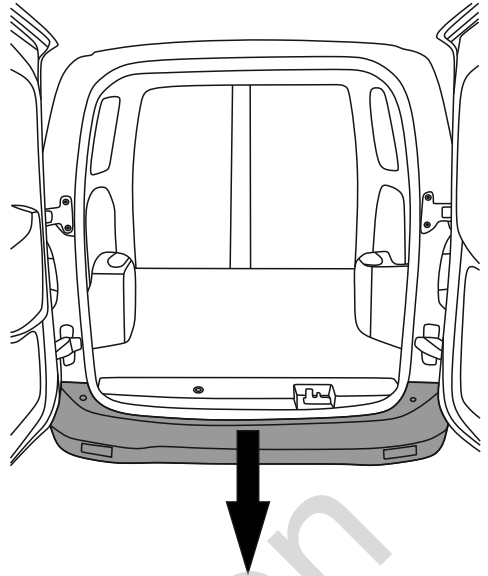


3

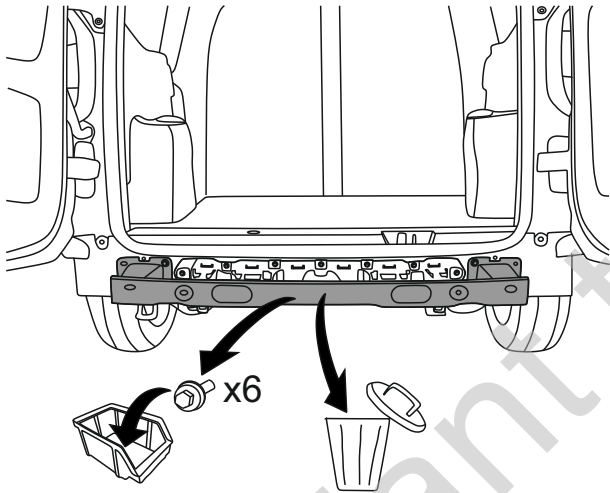


4

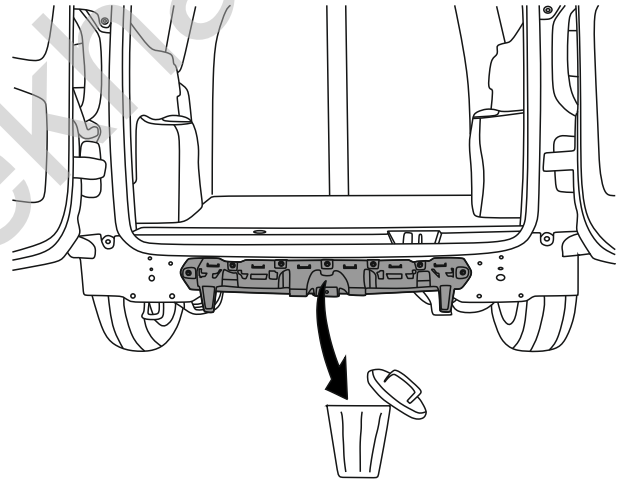


5

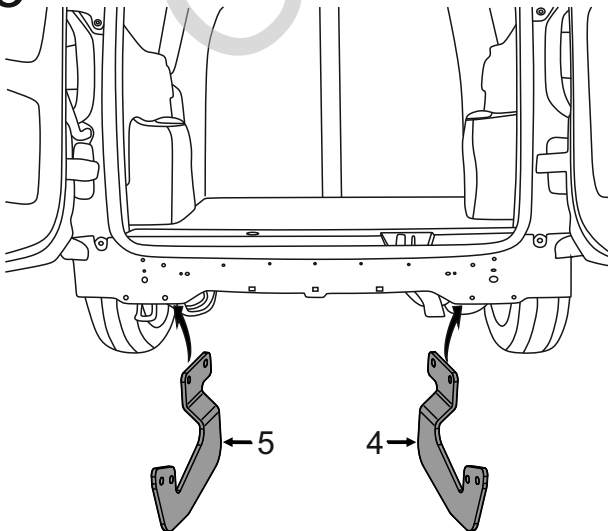


6

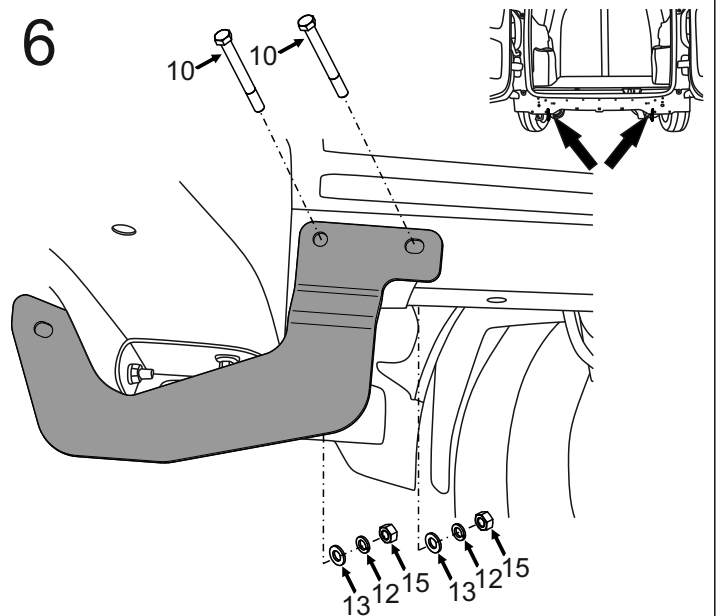


7

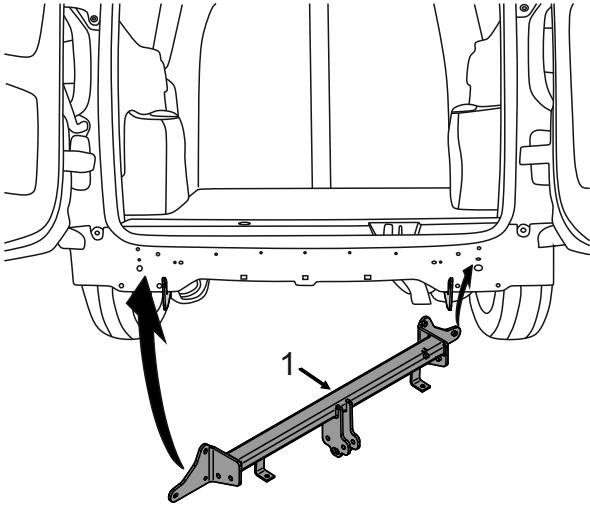


8

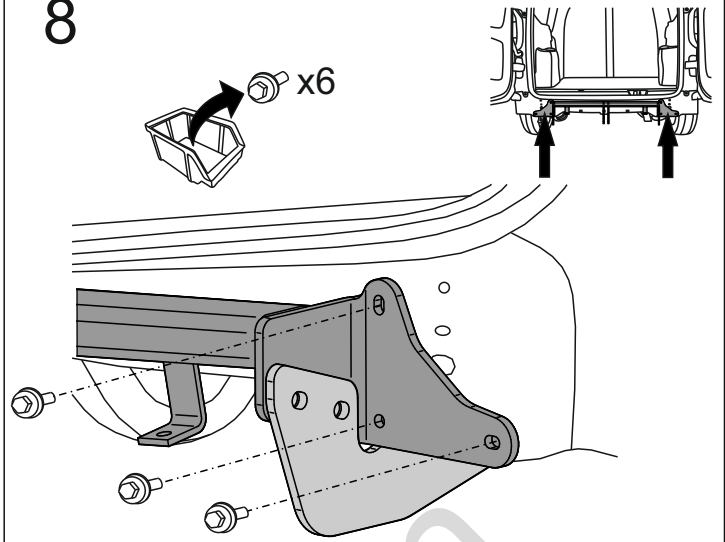


9

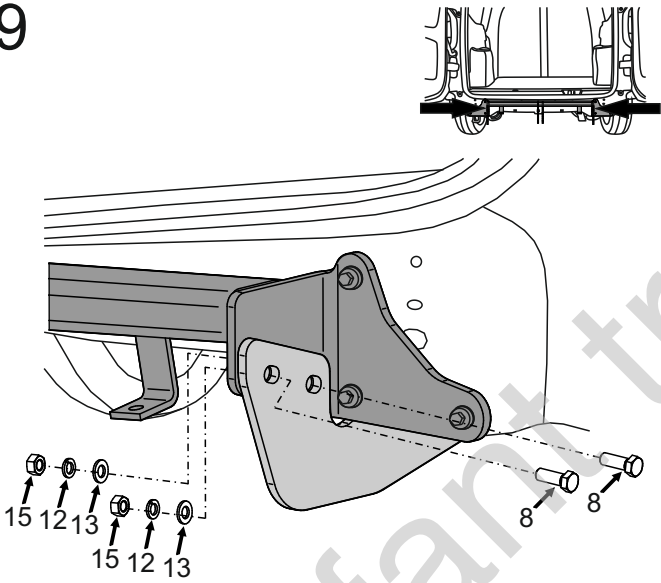

10

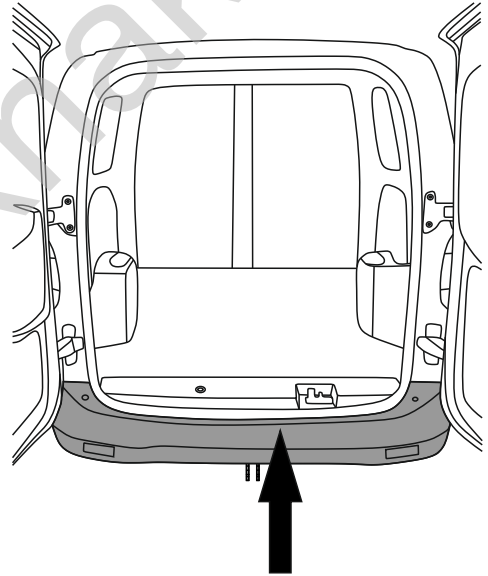

11

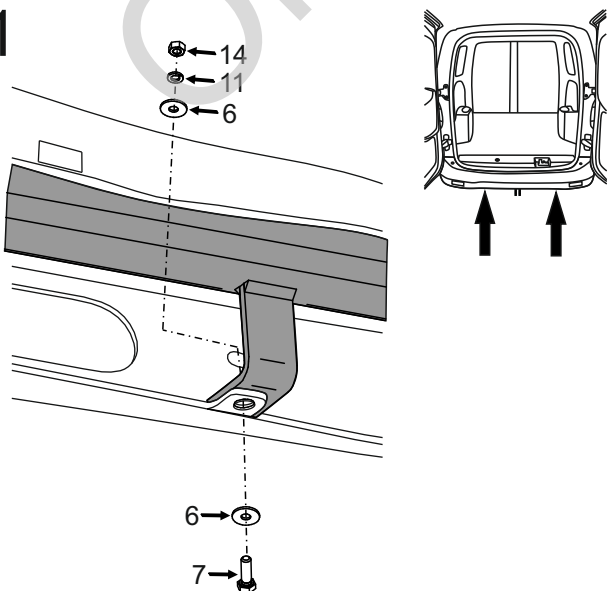

12

