


Honda Civic (5D)


(2012 -12/2014)

H-042

- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

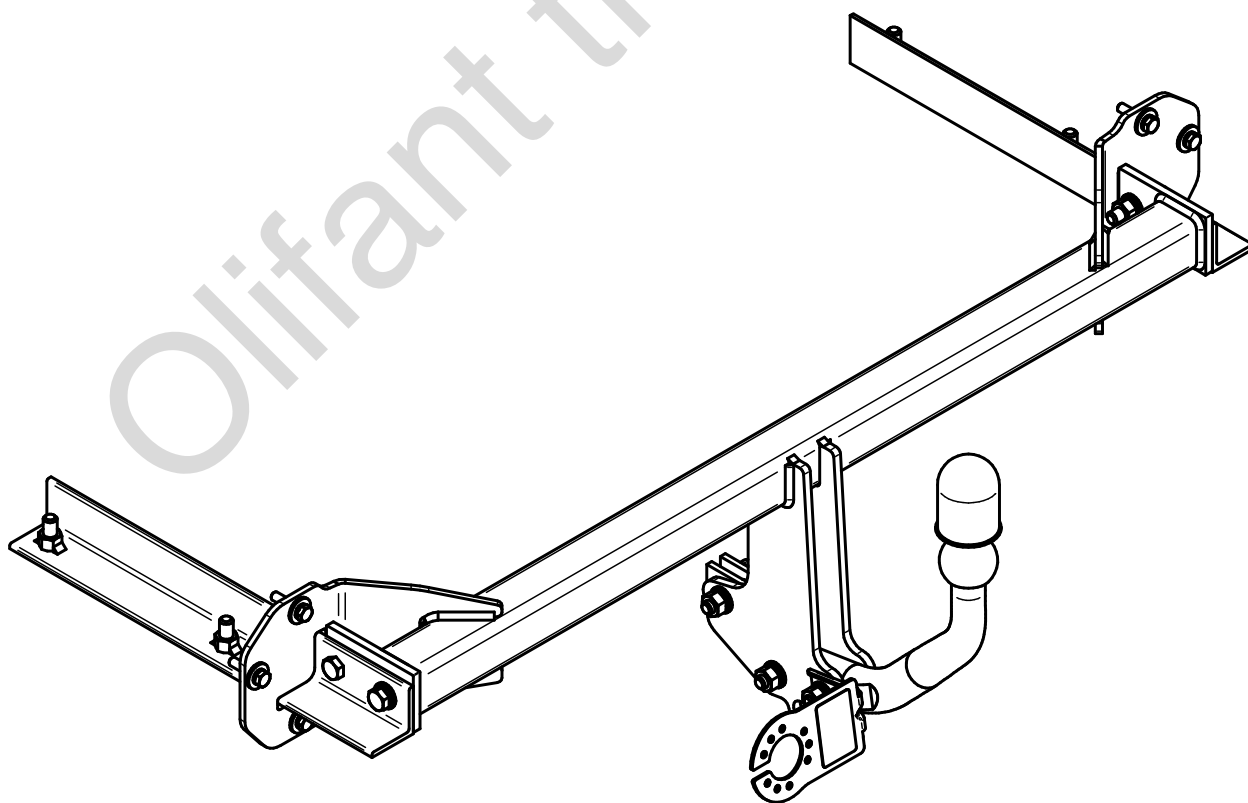

Typ: H-042
 A50-X
 E20 55R-01 3327-01
 D=8,4kN
 S=75kg

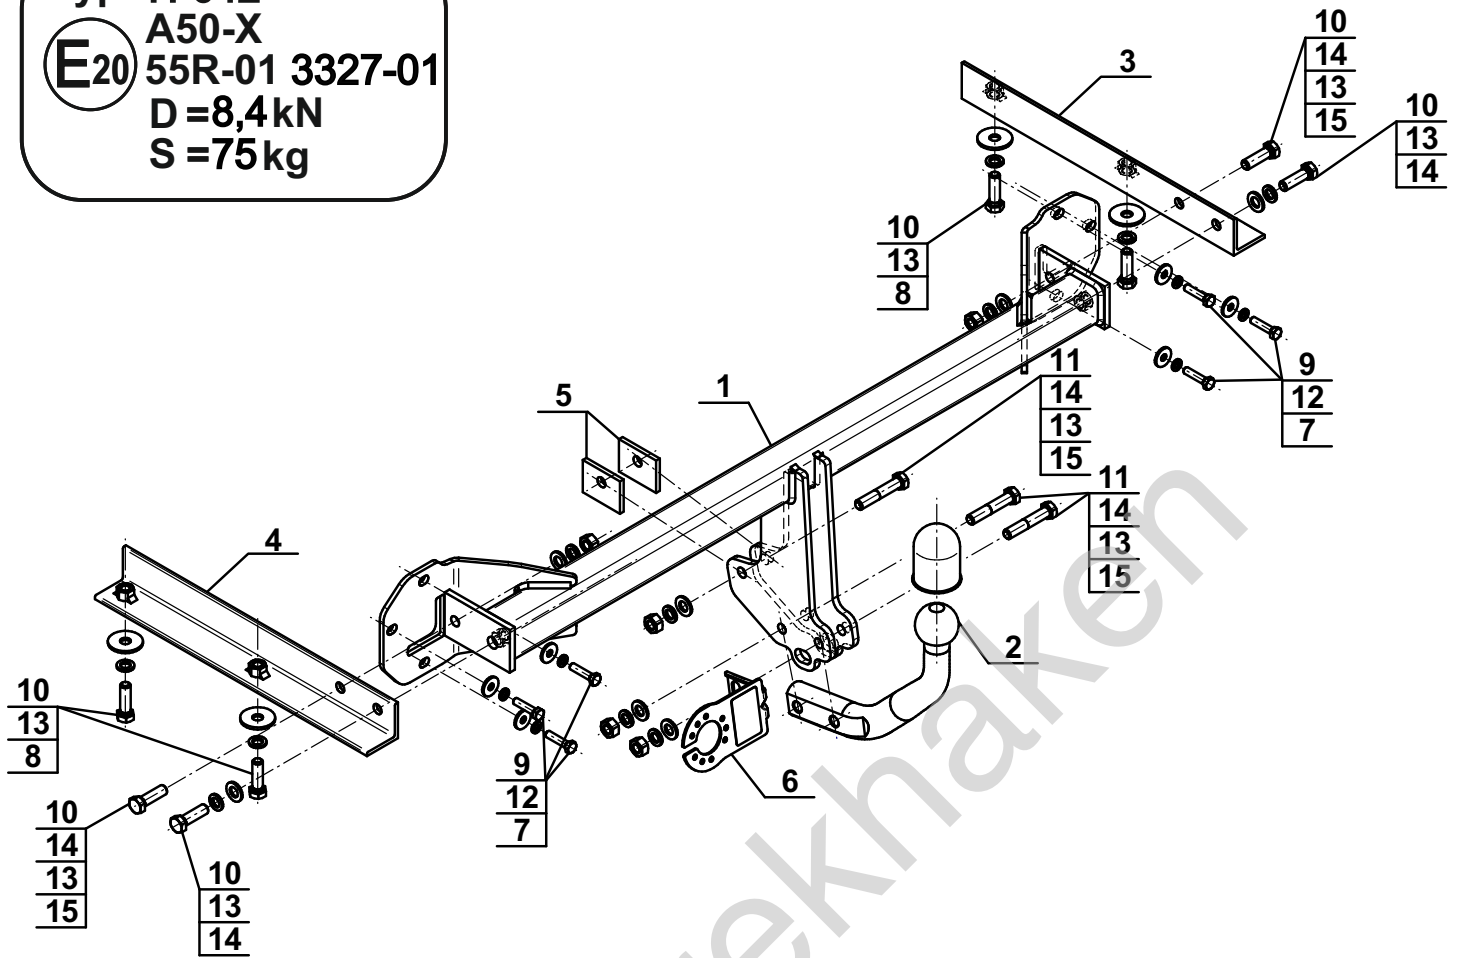


1		x1
2		x1
3		x1
4		x1
5	45x60x6/Ø13	x2
6		x1

7		Ø24/Ø8,5x2,5	x6
8		Ø40/Ø12,5x3	x4
9		M8x35 (PN/M-82105) (8.8)	x6
10		M12x40 (PN/M-82105) (8.8)	x8
11		M12x65 (PN/M-82101) (8.8)	x3
12		Ø8,2	x6
13		Ø12,2	x11
14		Ø13,0	x7
15		M12 (8)	x5




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

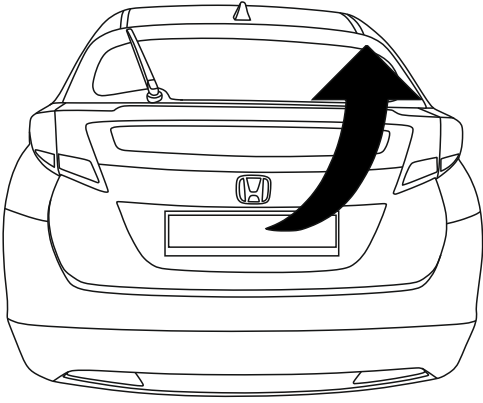


2

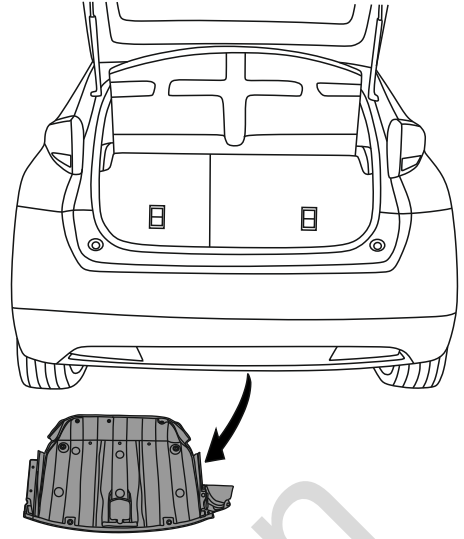


3

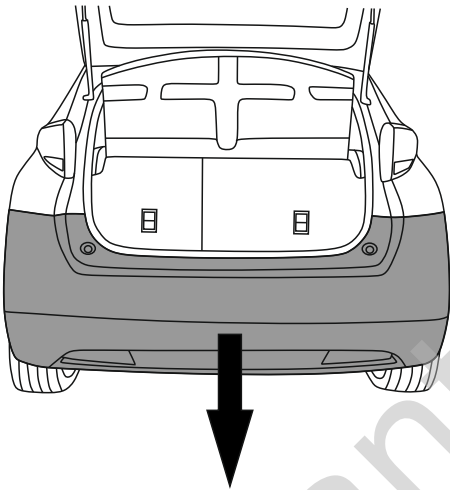


4

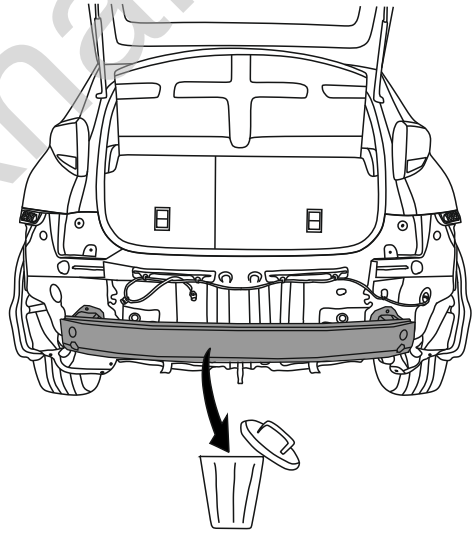


5

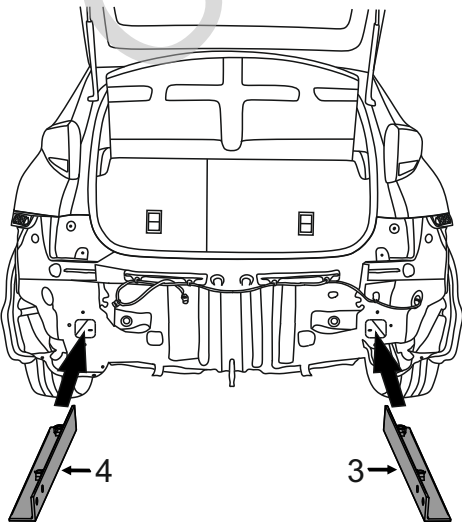


6

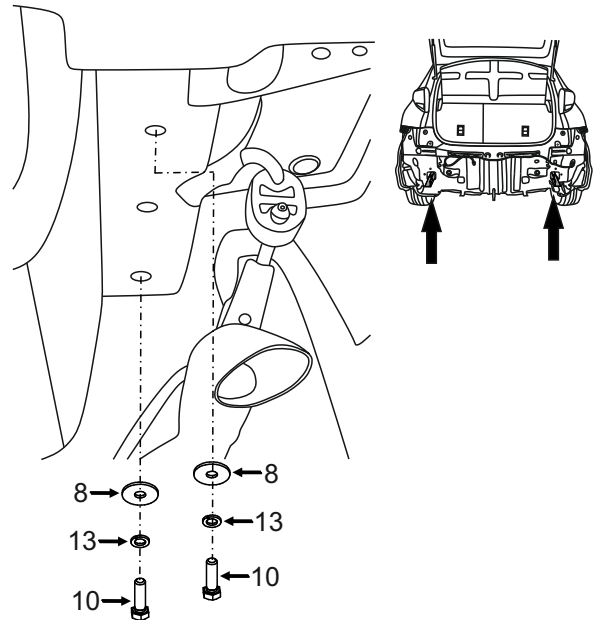


7

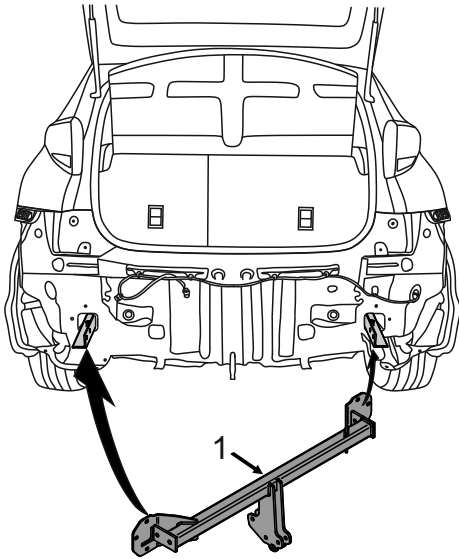


8

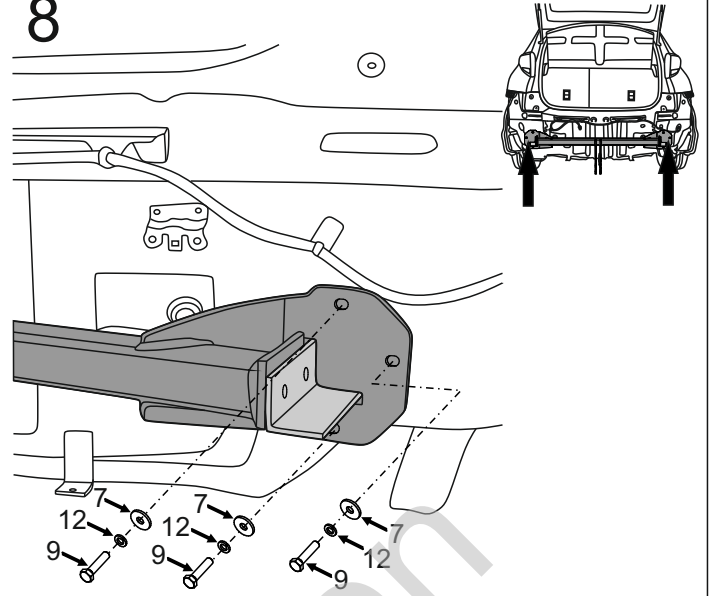

9

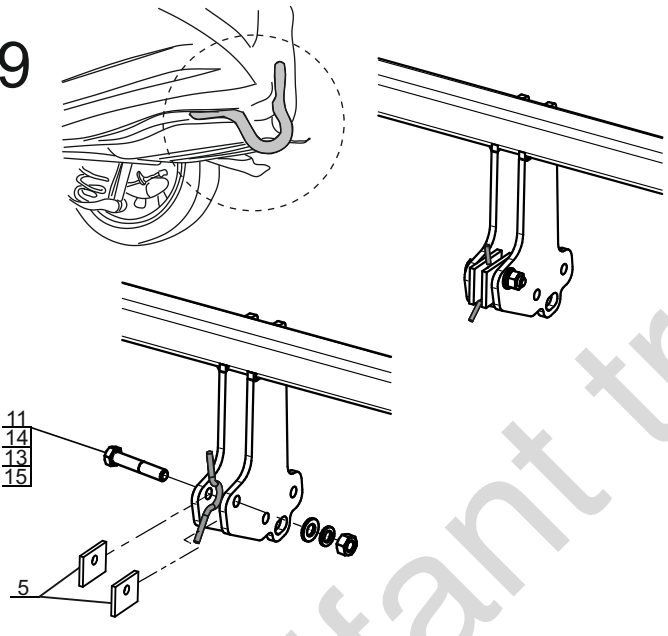


10

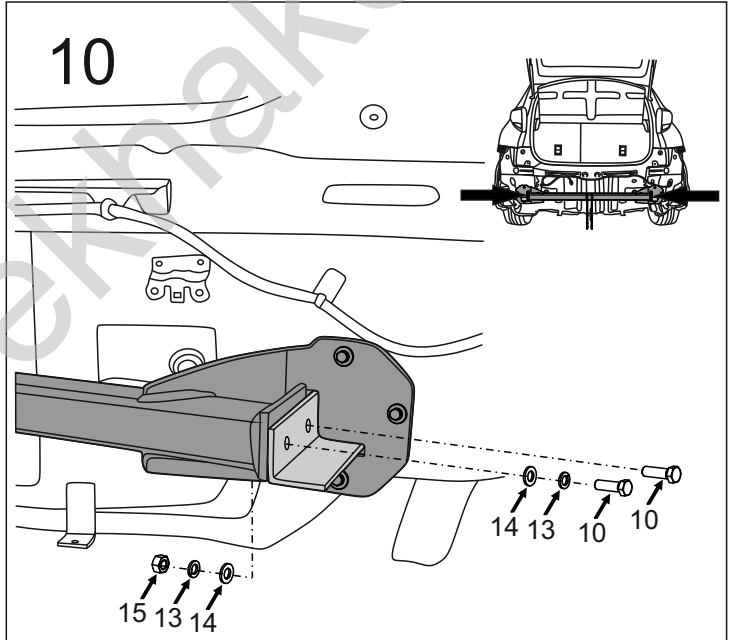


11

(mm)

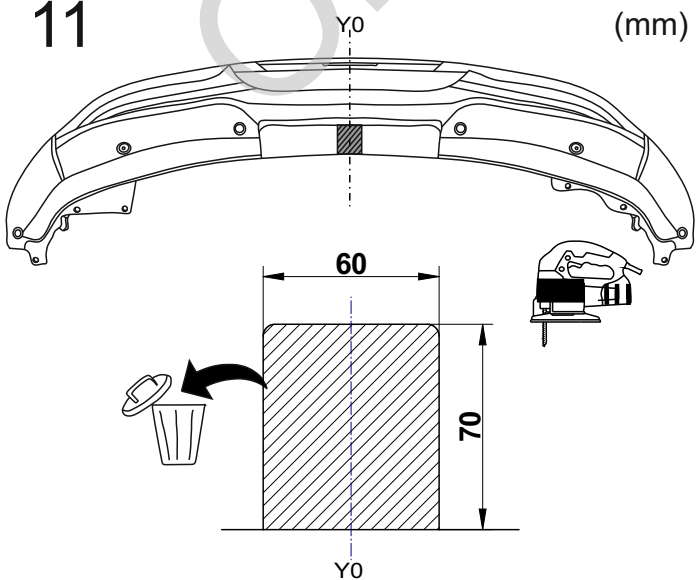


12


(mm)

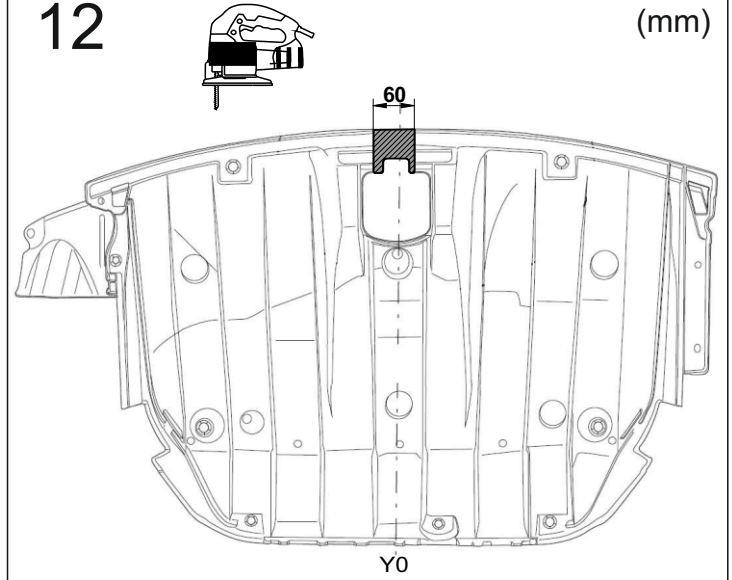

13

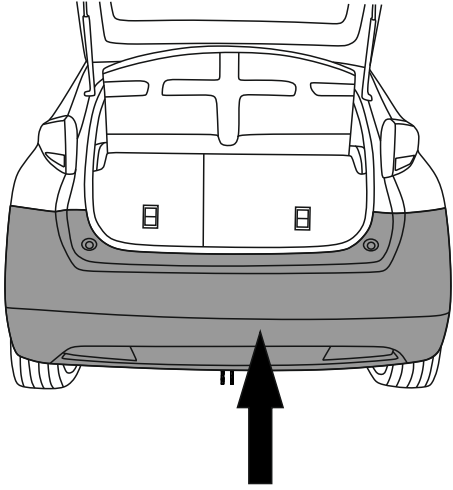

14

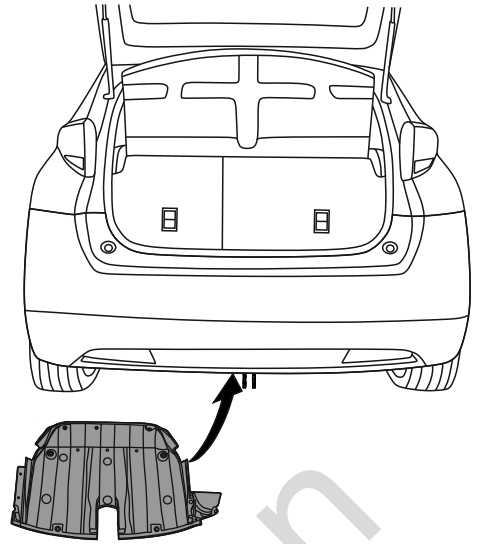

15

