

Honda CR-V IV (RM)

(2012 - 2018)

H-081


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.





YES NO



YES NO

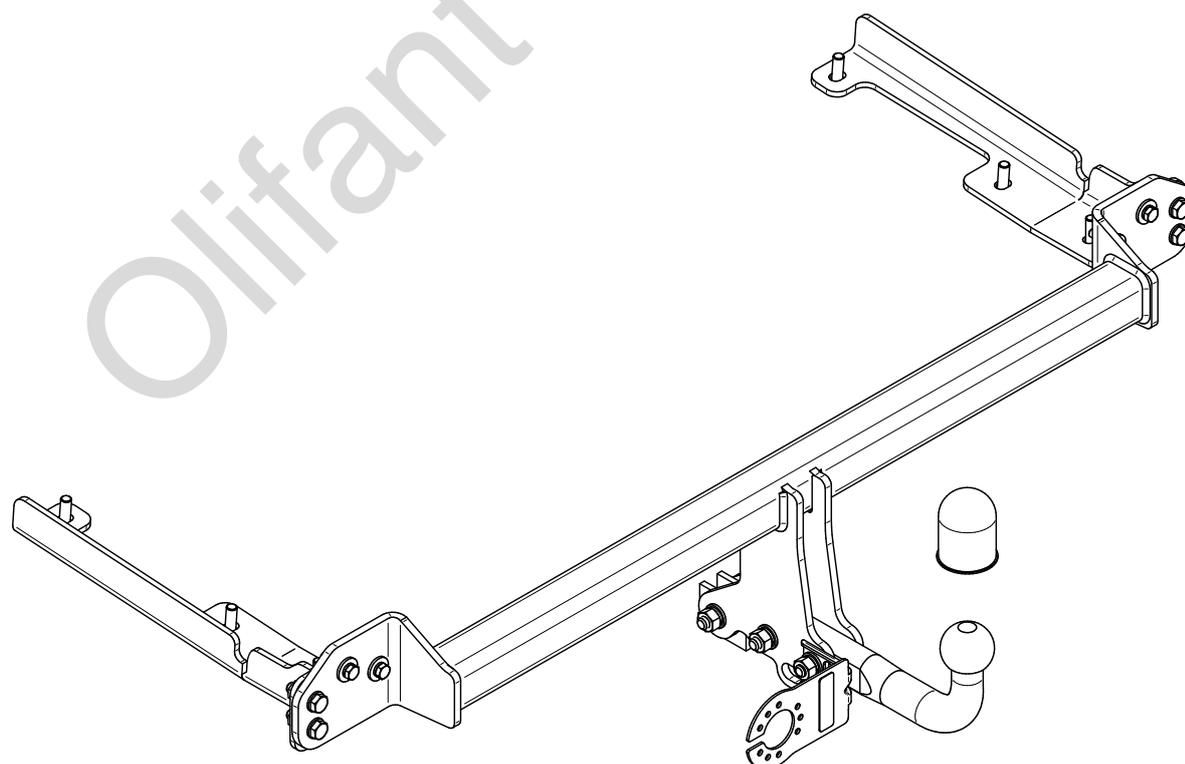







Typ: H-081
 A50-X
 E20 55R-01 5716
 D = 10,5kN
 S = 110kg





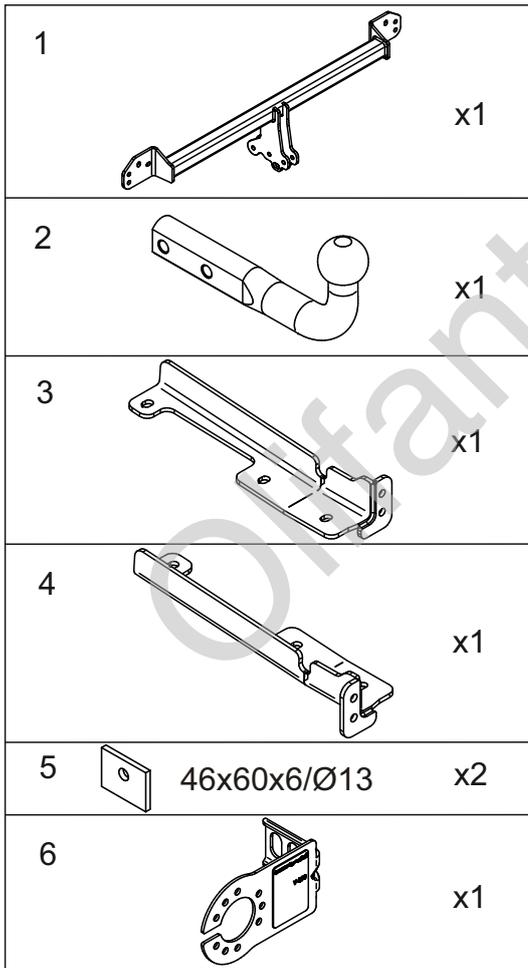
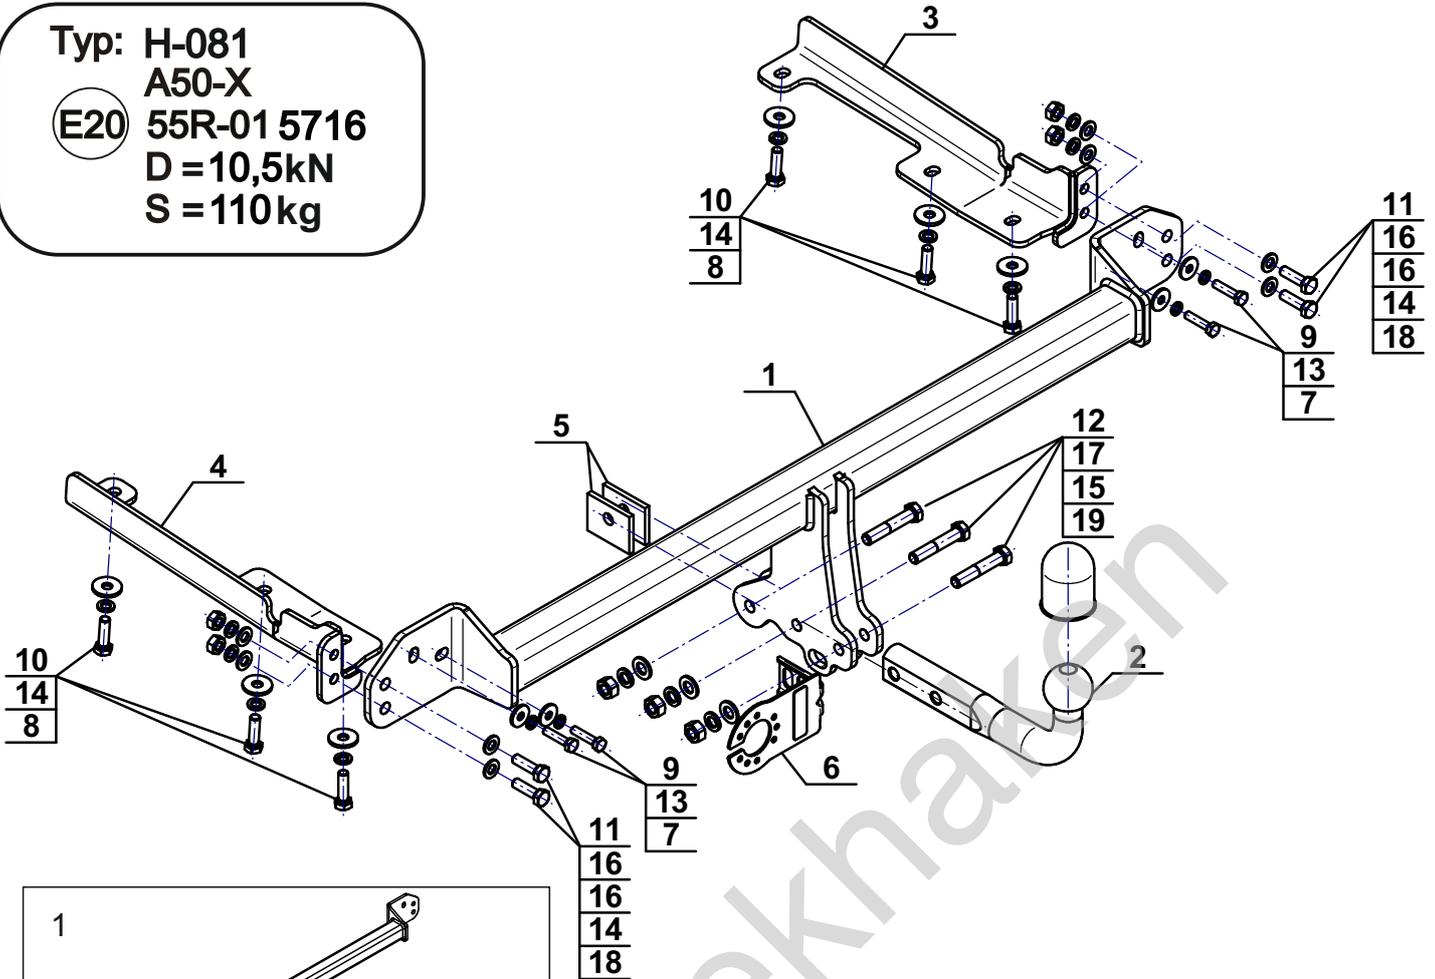








7		Ø24/Ø8,5x2,5	x4
8		Ø30/Ø10,5x3	x6
9		M8x35 (PN/M-82105) (8.8)	x4
10		M10x1,25x35 (PN/M-82105) (8.8)	x6
11		M10x35 (PN/M-82105) (8.8)	x4
12		M12x65 (PN/M-82101) (8.8)	x3
13		Ø8,2	x4
14		Ø10,2	x10
15		Ø12,2	x3
16		Ø10,5	x8
17		Ø13,0	x3
18		M10 (8)	x4
19		M12 (8)	x3




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

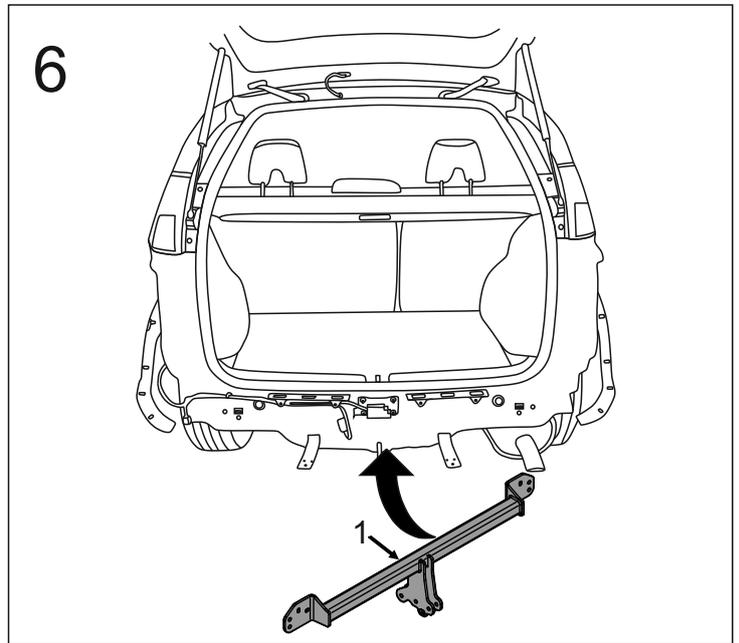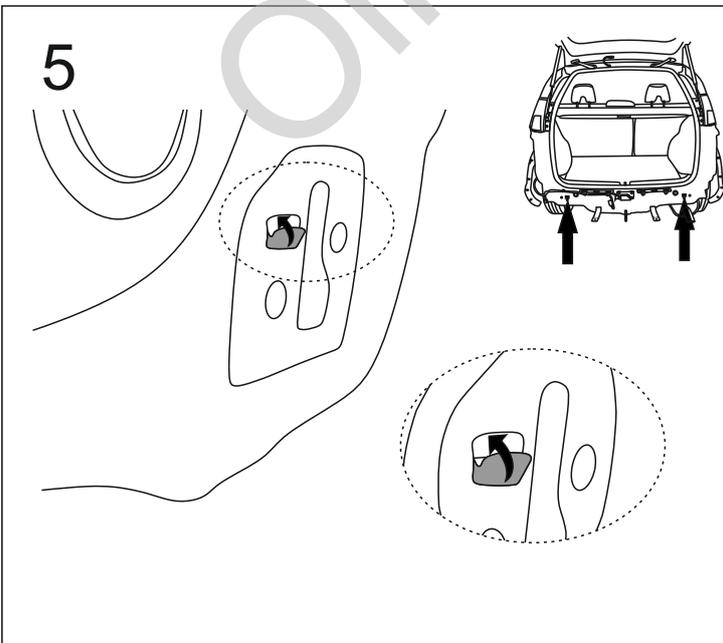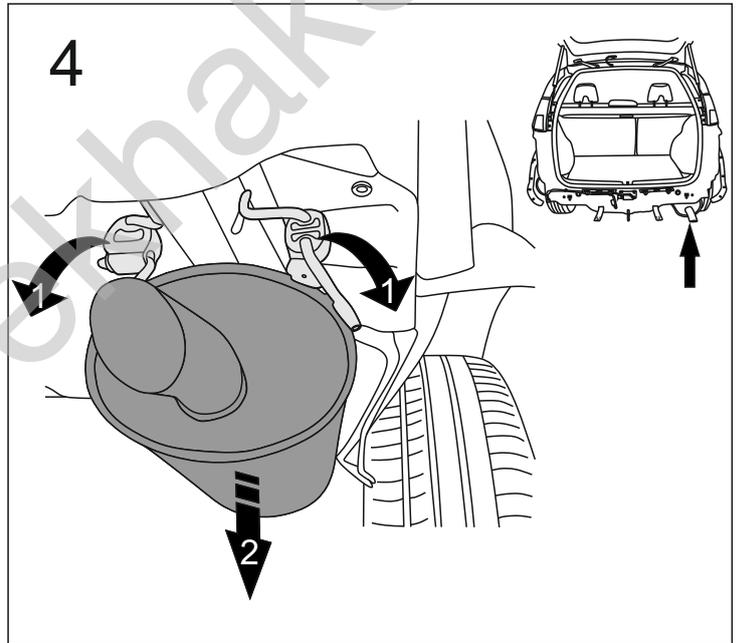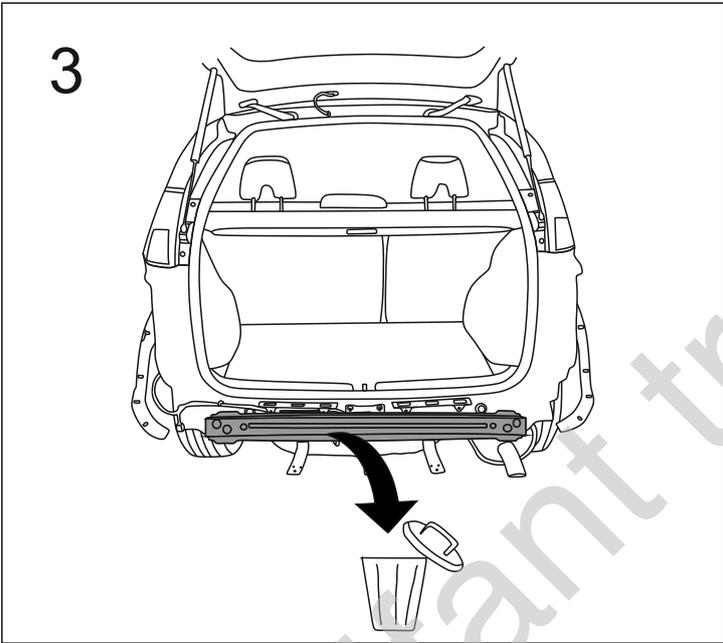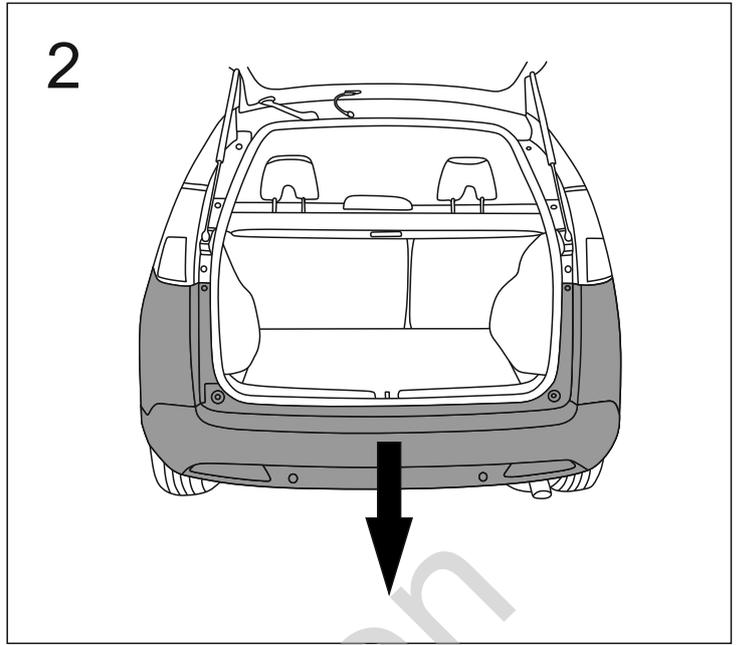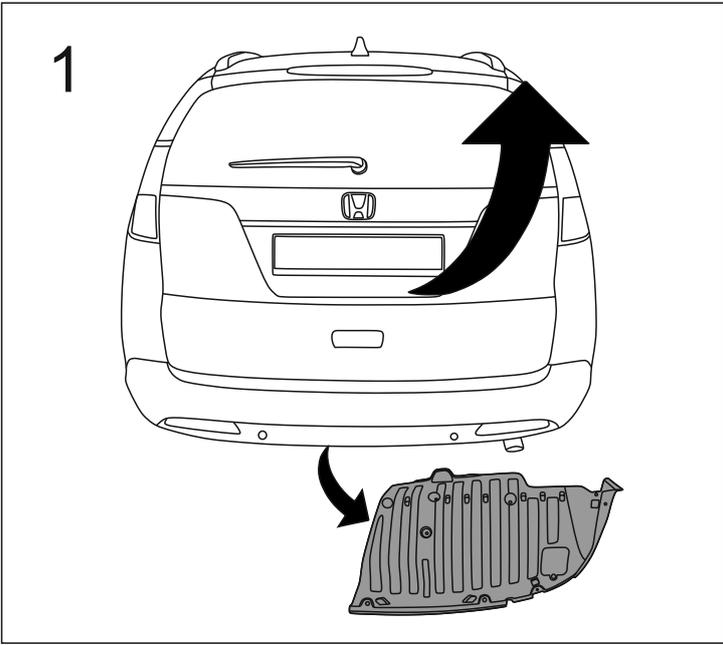

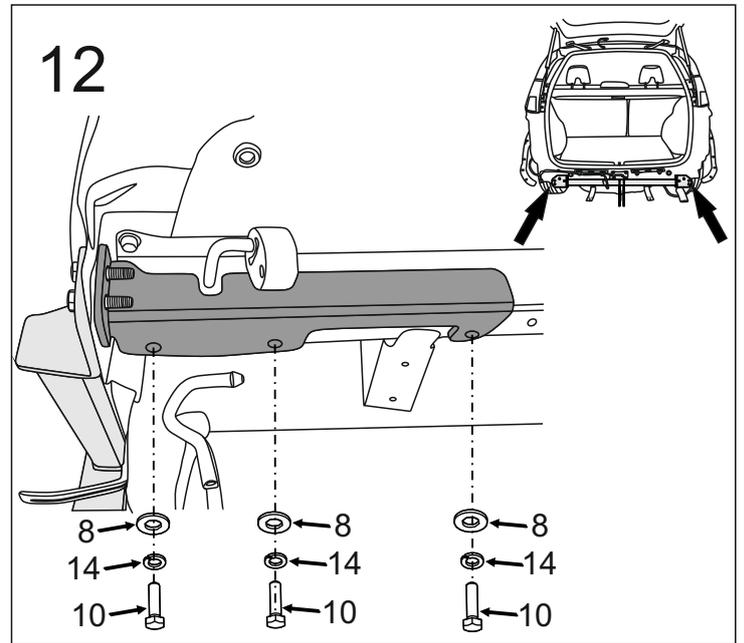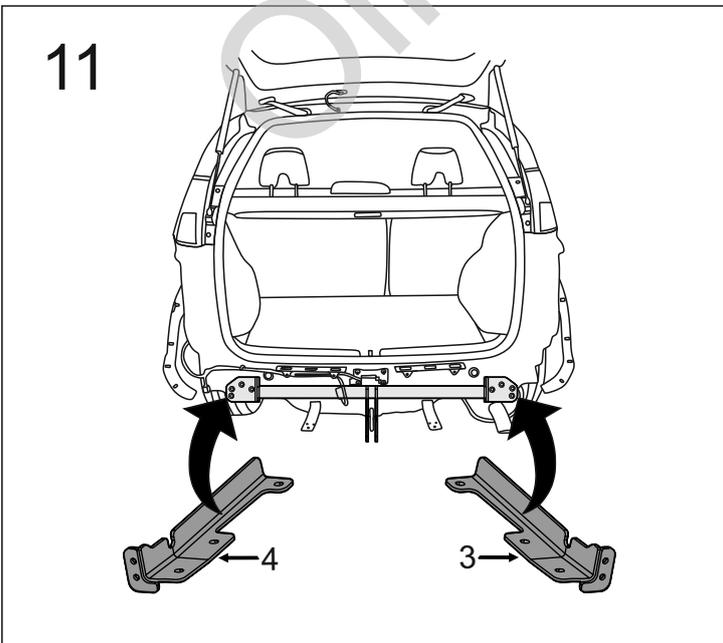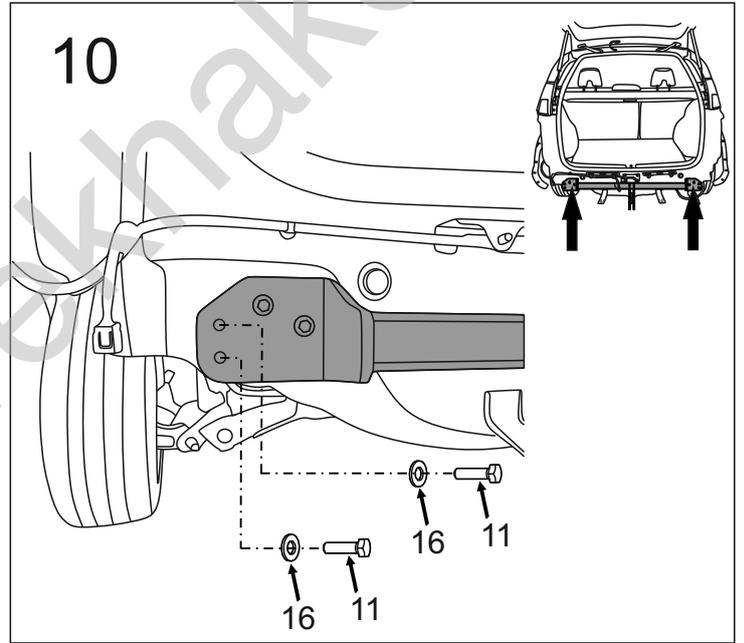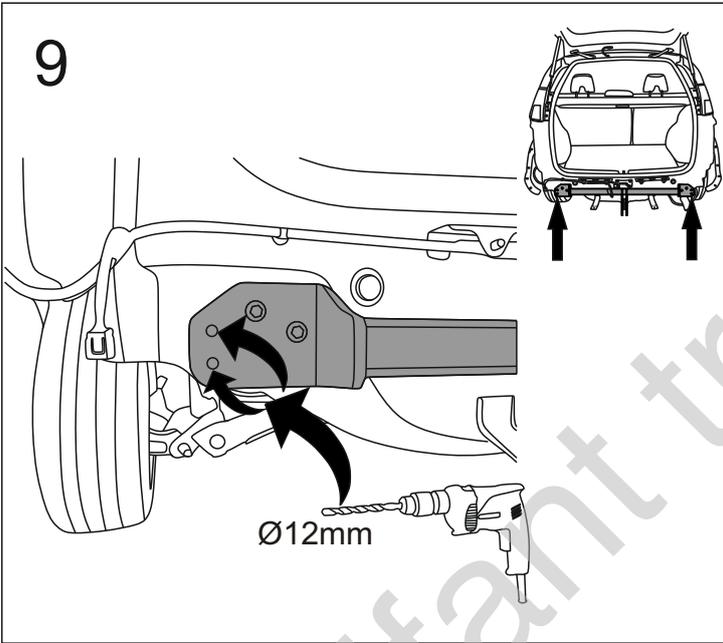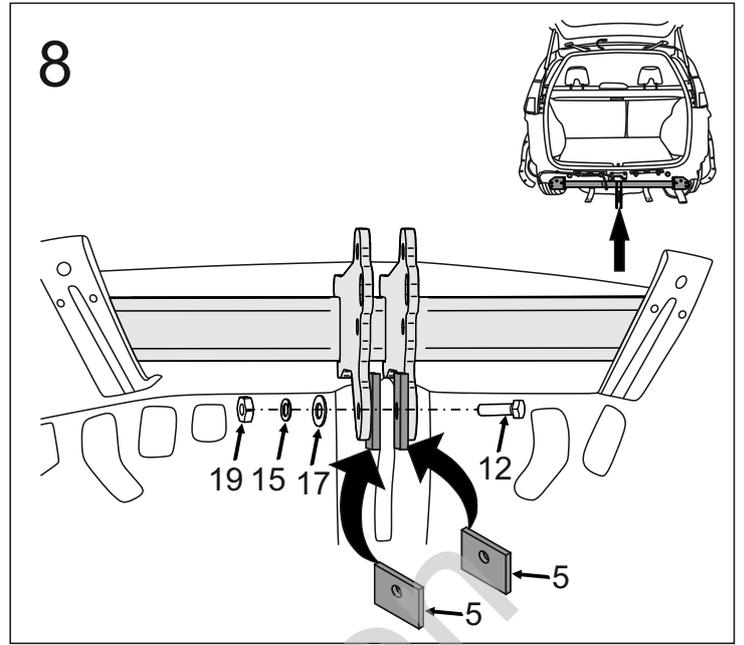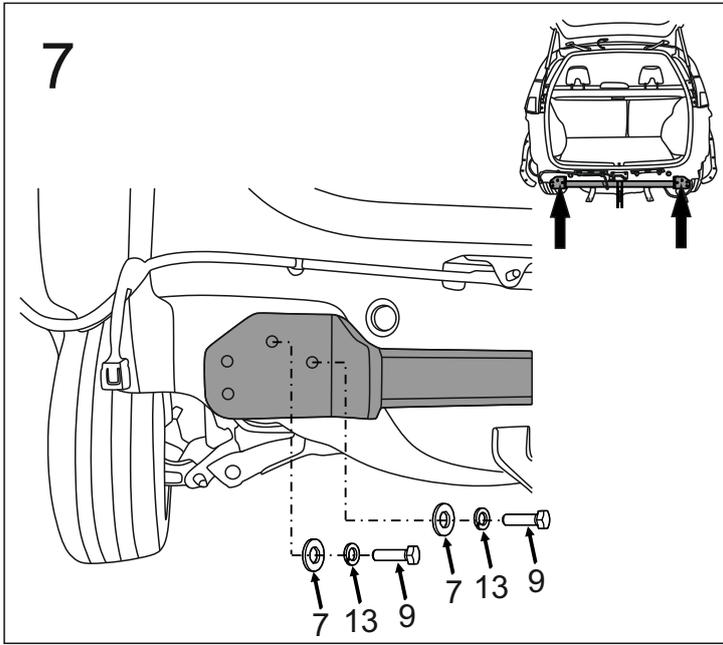

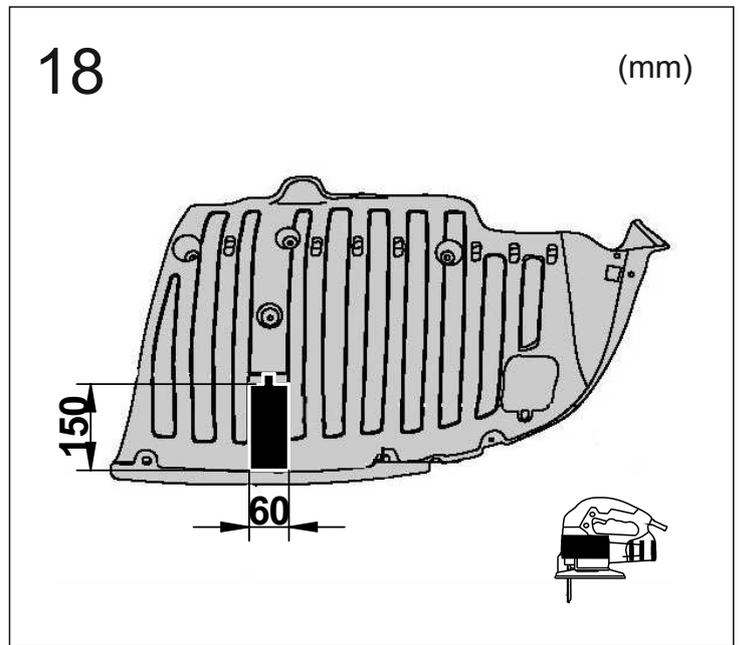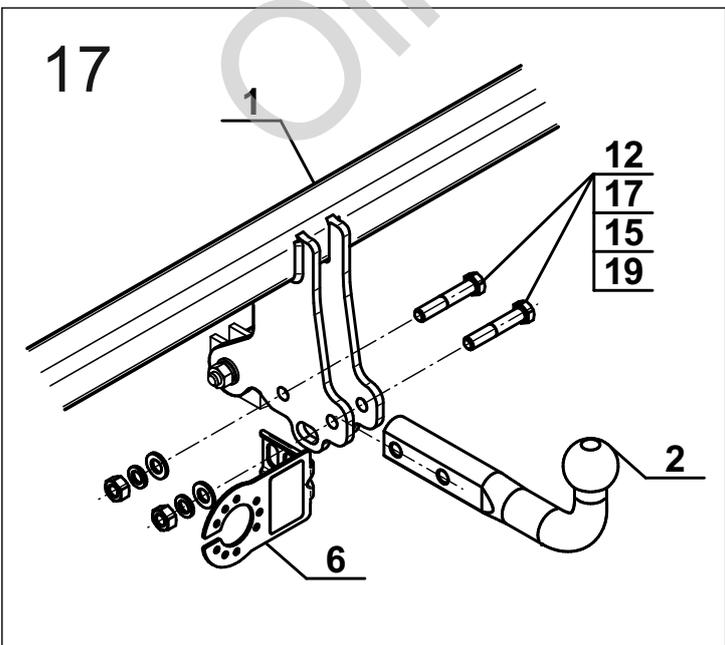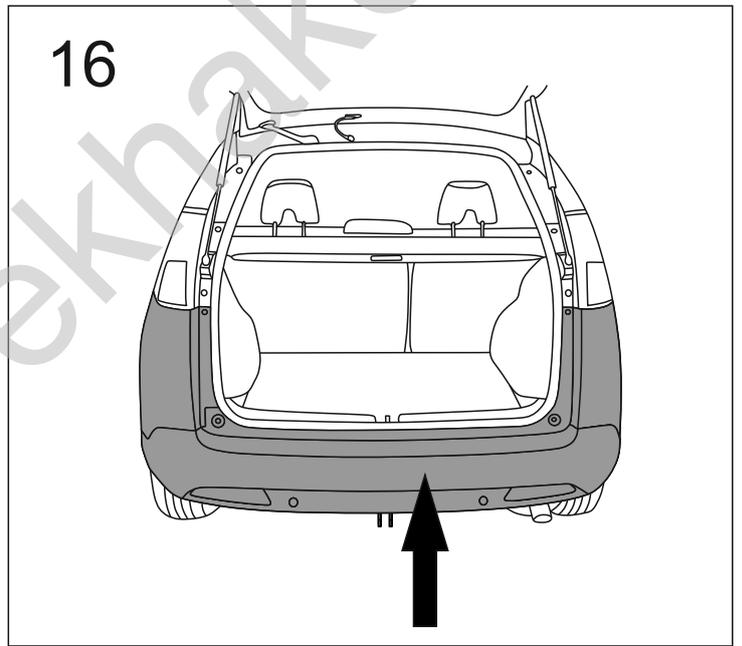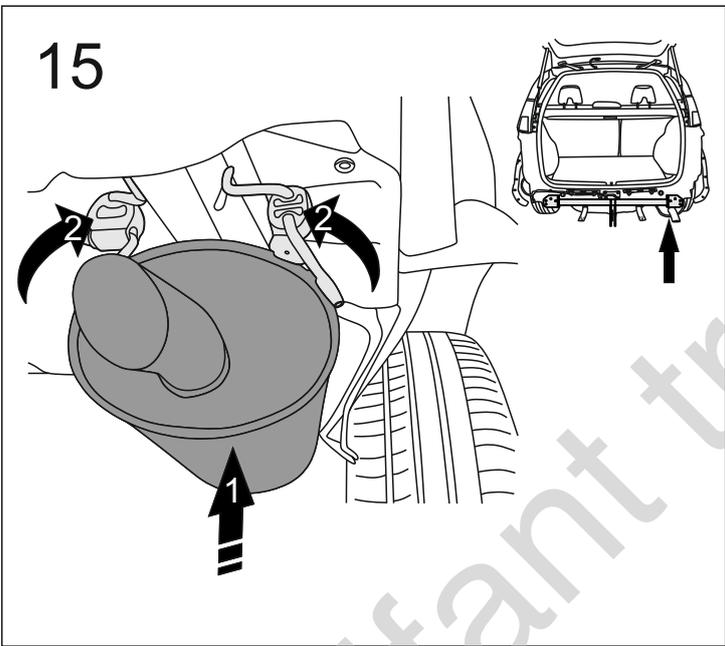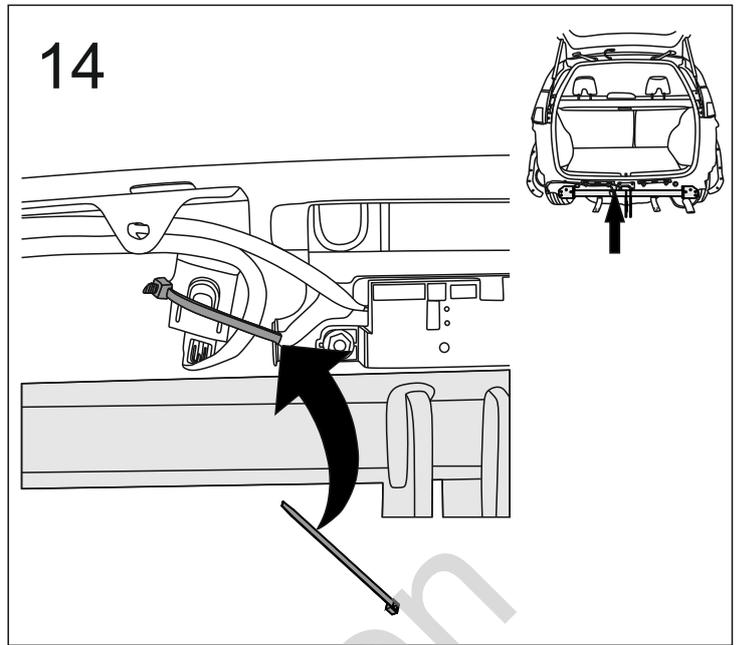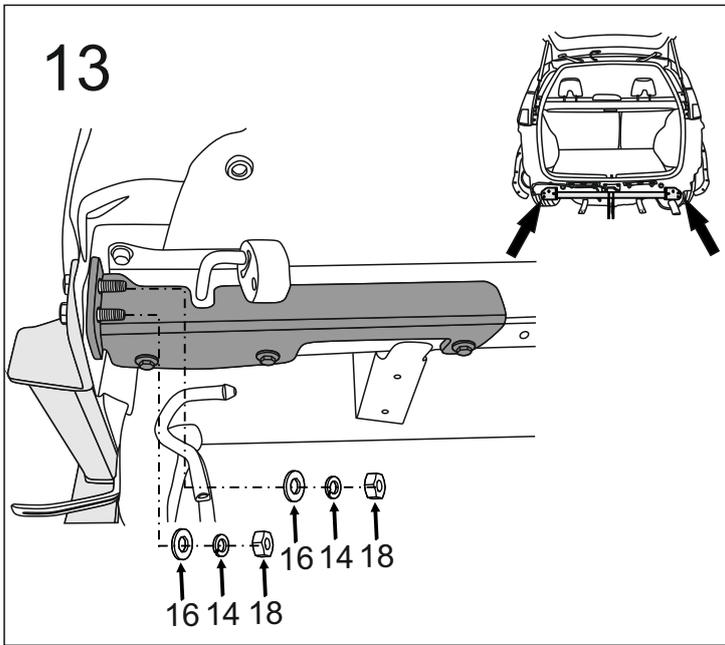

19

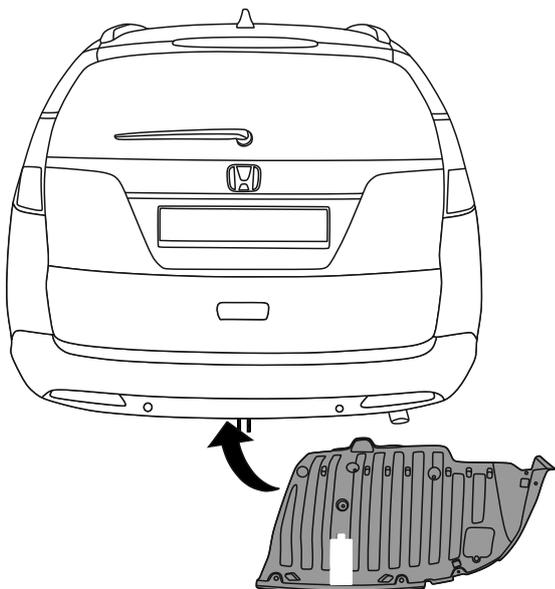

Olifant trekhaken