

Hyundai Matrix

(2001 - 2010)

H-268


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
GB **Tow bar** Installation and operating instructions
D **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
ES **Gancho de remolque** Las instrucciones de instalación y de operación
RU **Фаркоп** Инструкция по установке и эксплуатации ТСУ
FR **Attelage** Notice de montage et d'utilisation
IT **Gancio traino** Istruzioni di montaggio
CZ **Tažné zařízení** Návod na montáž a použití
RO **Cârlig de remorcare** Instrucția de montaj și exploatare
SE **Dragkulan** Monterings- och bruksanvisningar.





YES ☒ NO ☐



YES ☐ NO ☒

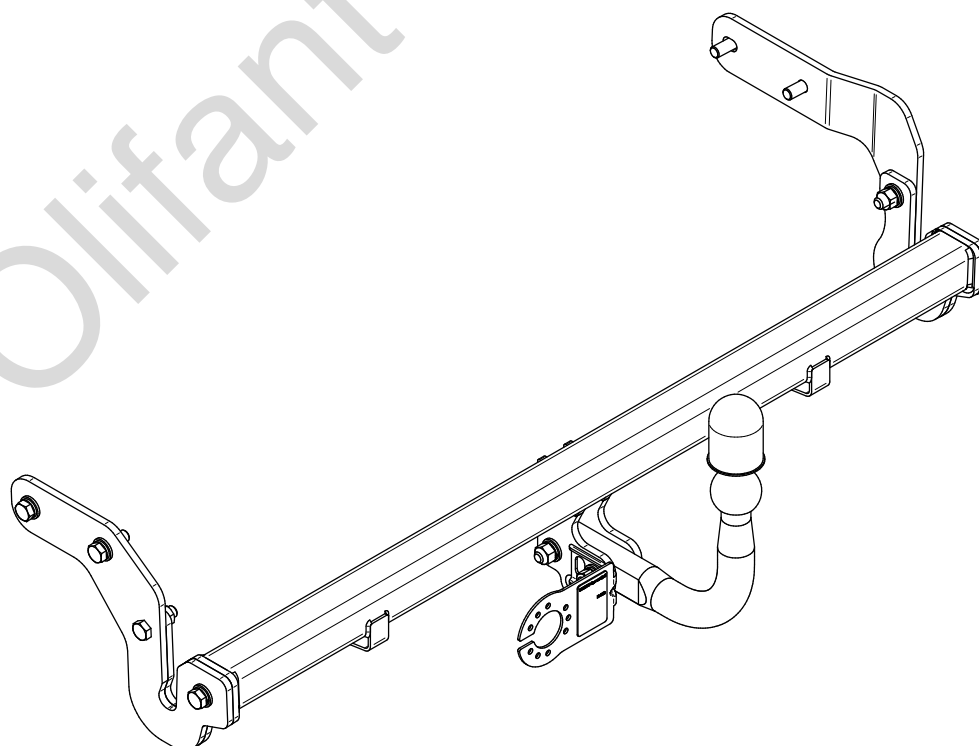

Typ: H-268
A50-X
E20 55R-01 5475
D = 7,61kN
S = 70kg

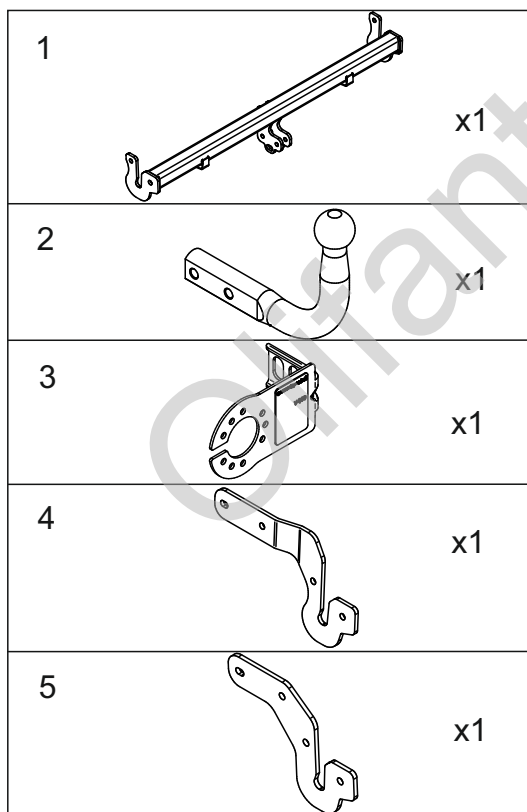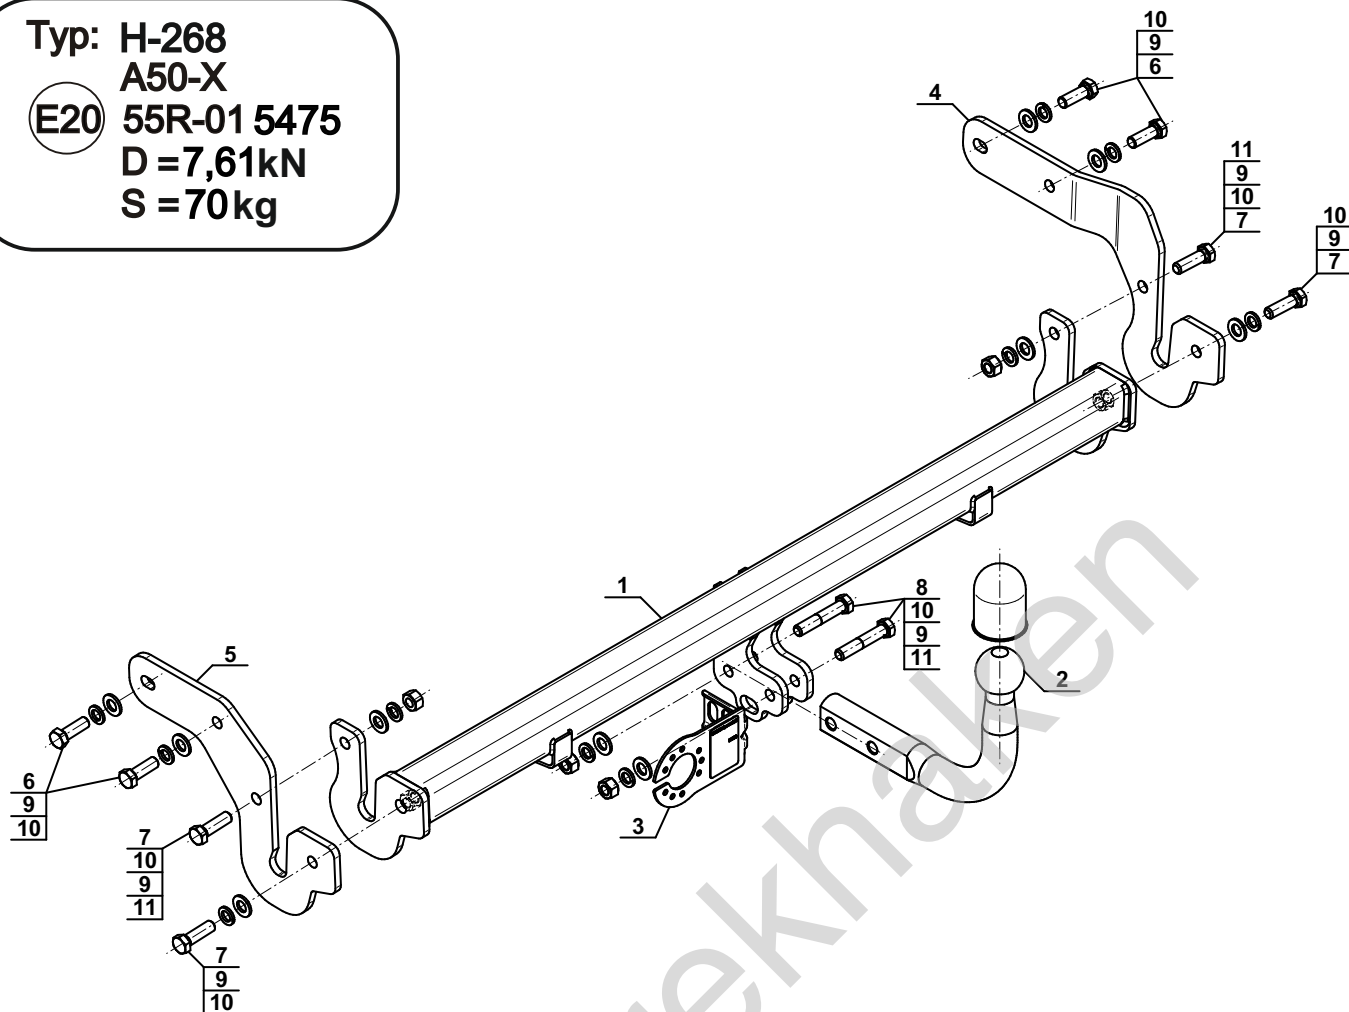


6		M12x1,25x35	(PN/M-82105) (8.8)	x4
7		M12x40	(PN/M-82105) (8.8)	x4
8		M12x65	(PN/M-82101) (8.8)	x2
9		Ø12,2		x10
10		Ø13,0		x10
11		M12 (8)		x4




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

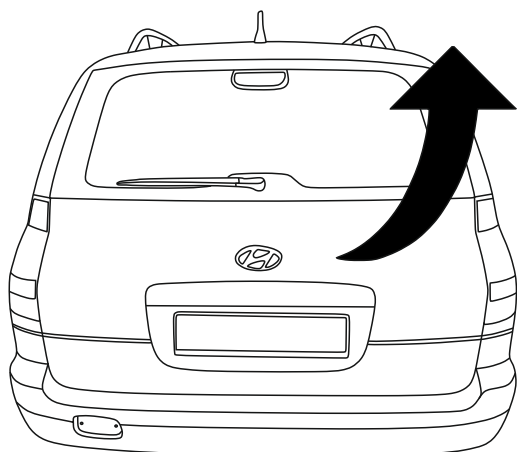


2

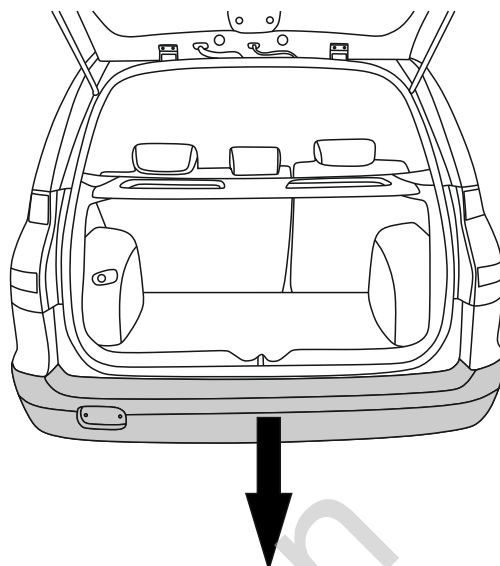


3

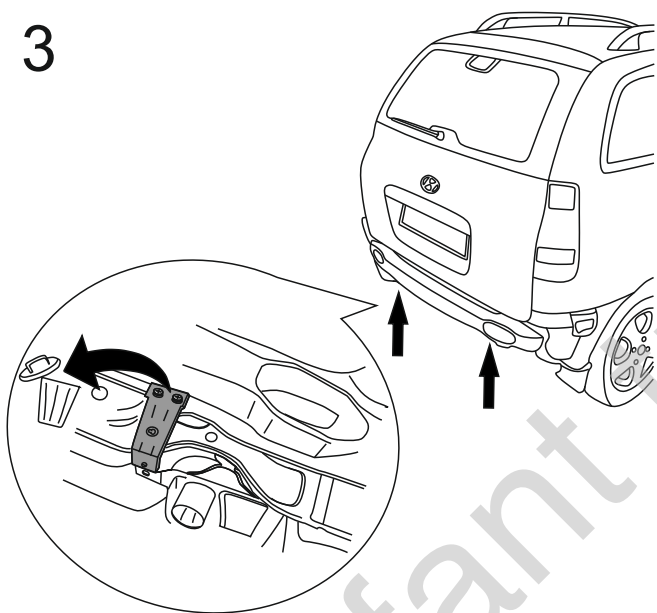

4

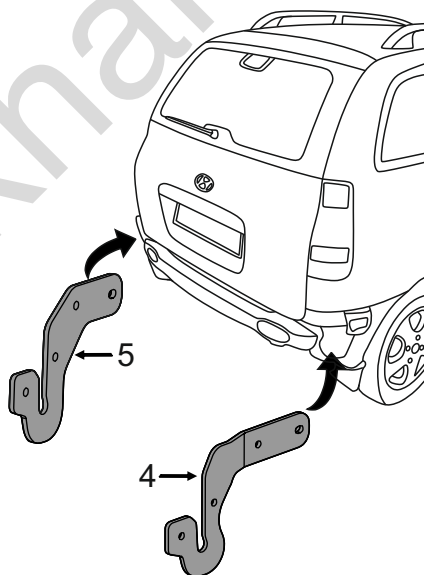

5

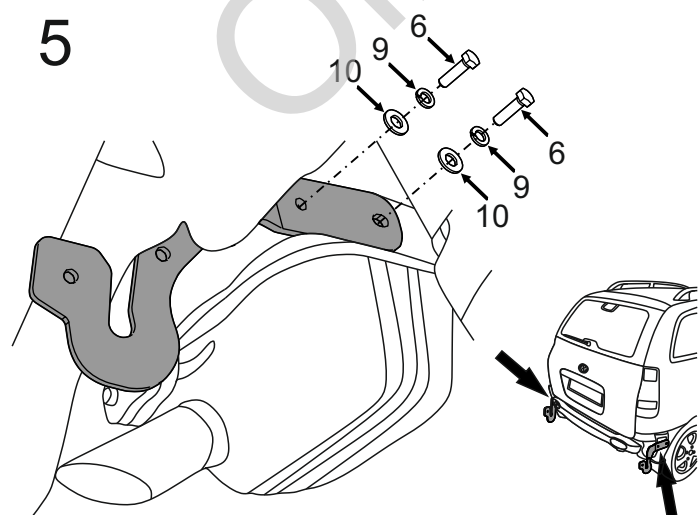

6

