

Kia Sorento
Hyundai Santa Fe (DM)
Hyundai Grand Santa Fe (NC)

(11/2012 - 2015)
(09/2012 - →)
(2013 - 2019)

K-035


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.




YES NO



YES NO

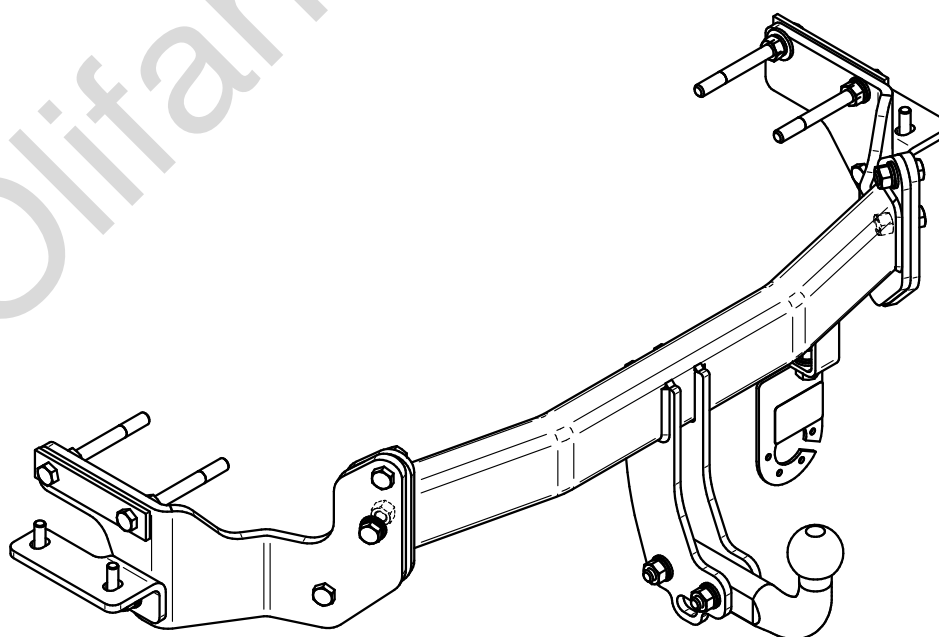

Typ: K-035
 A50-X
 (E20) 55R-01 3471
 D = 12,6kN
 S = 100kg

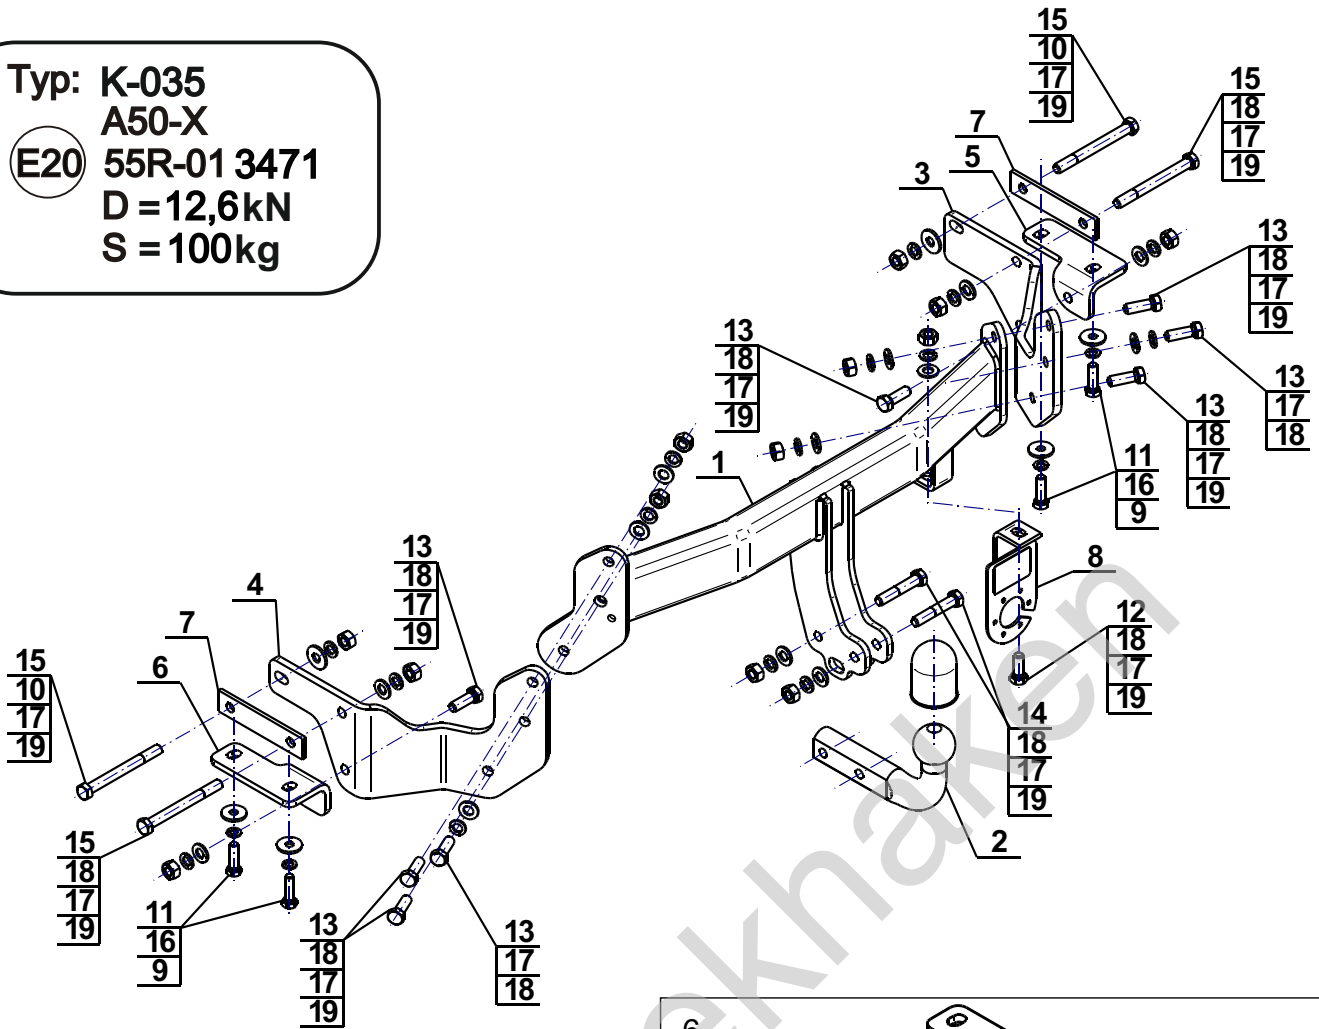


1		x1
2		x1
3		x1
4		x1
5		x1

6		x1
7		x2
8	 =	x1
9		Ø30/Ø10,5x3 x4
10		Ø30/Ø12,5x3 x2
11		M10x1,25x35 (PN/M-82105) (8.8) x4
12		M12x30 (PN/M-82105) (8.8) x1
13		M12x35 (PN/M-82105) (8.8) x8
14		M12x65 (PN/M-82101) (8.8) x2
15		M12x120 (PN/M-82101) (8.8) x4
16		Ø10,2 x4
17		Ø12,2 x15
18		Ø13,0 x13
19		M12 (8) x13




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

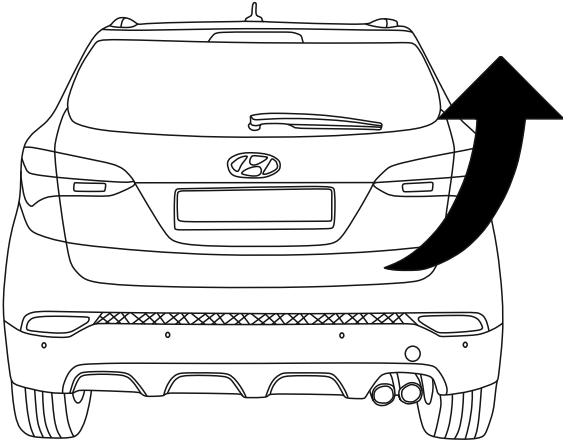


2

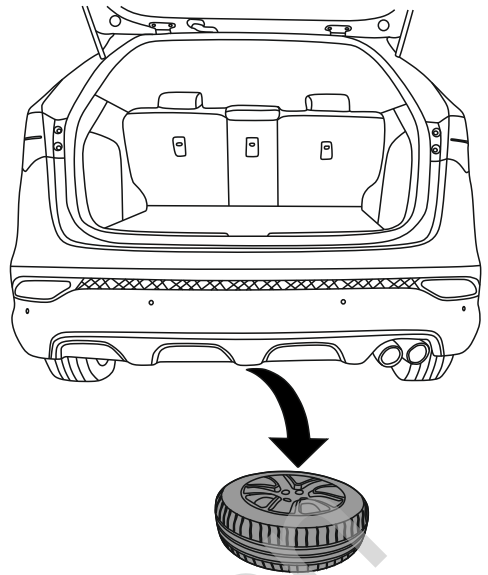


3

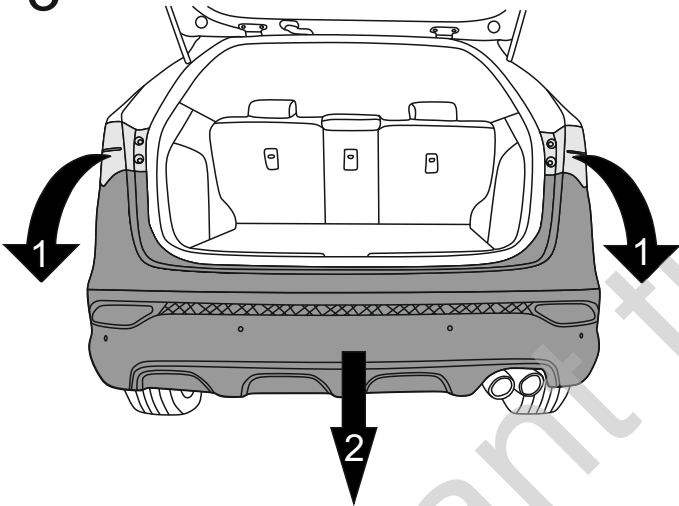


4






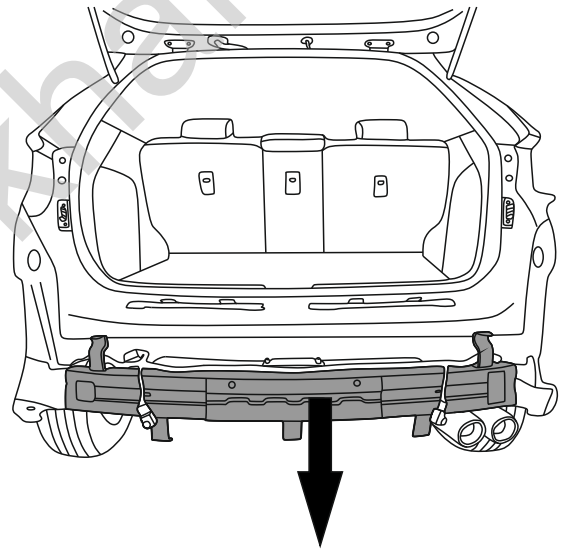


5


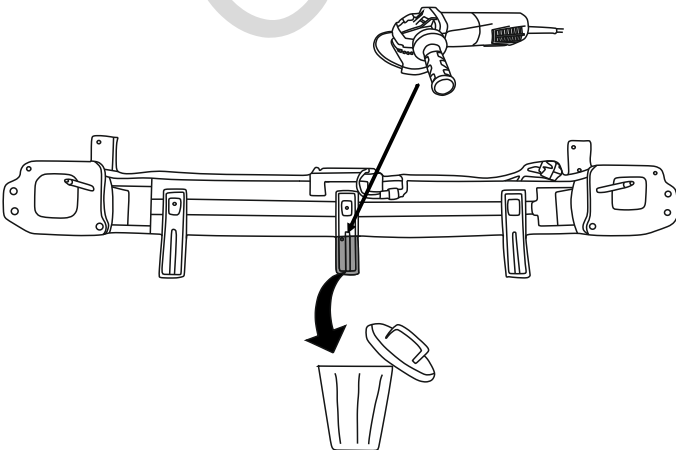


6

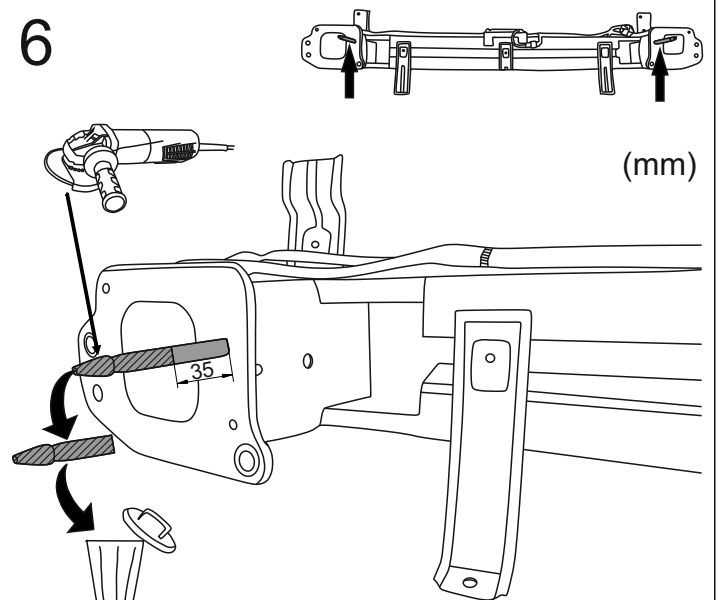


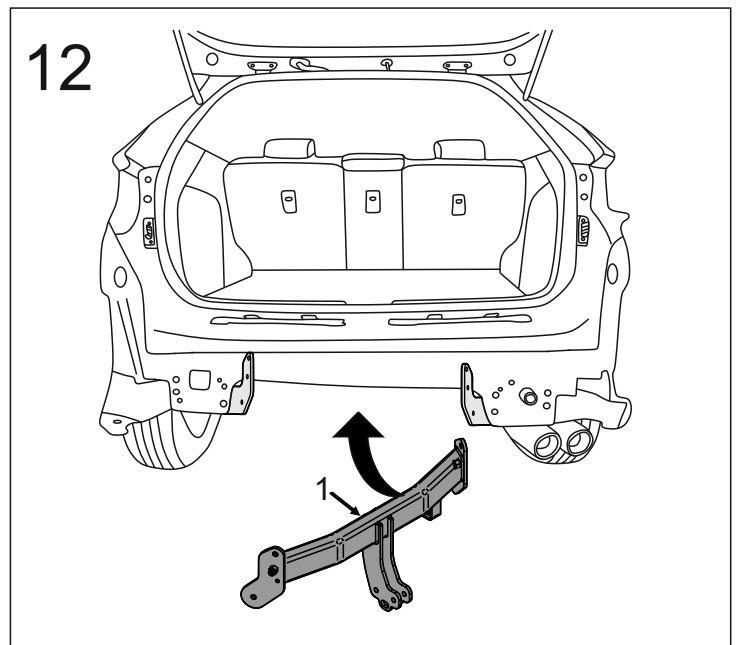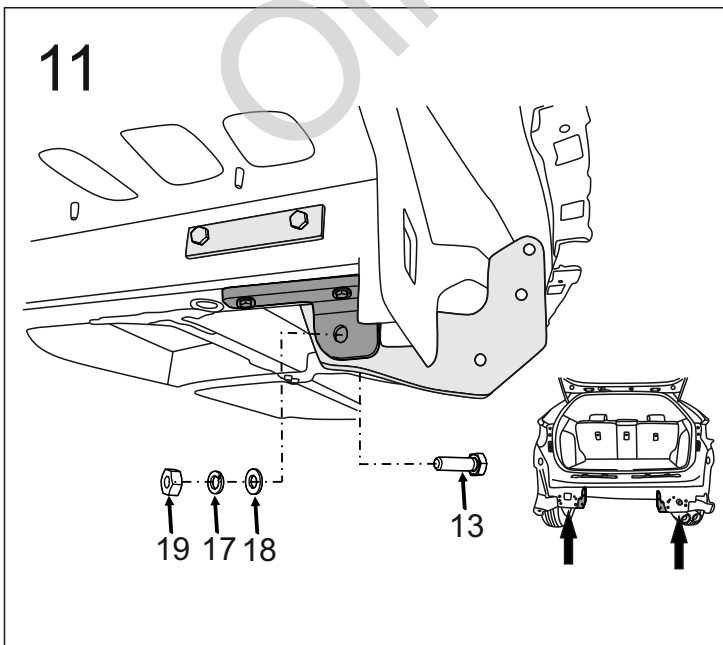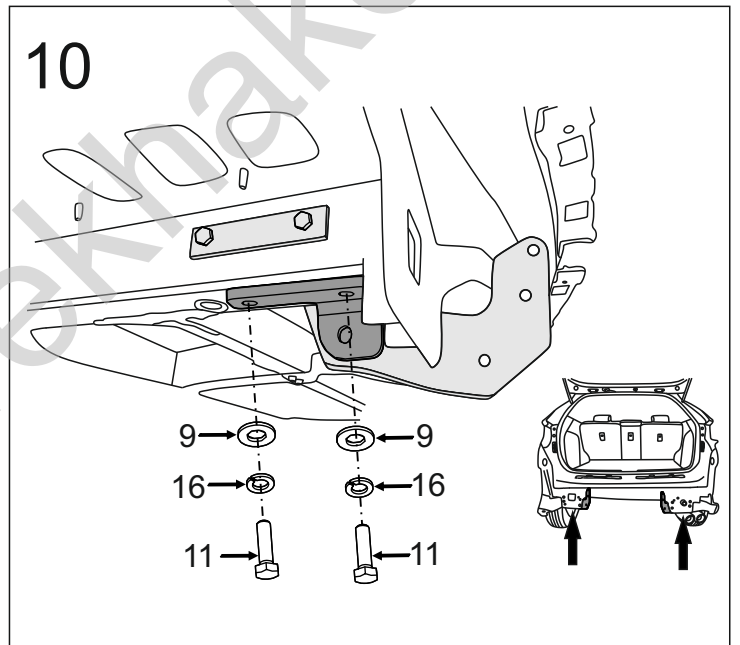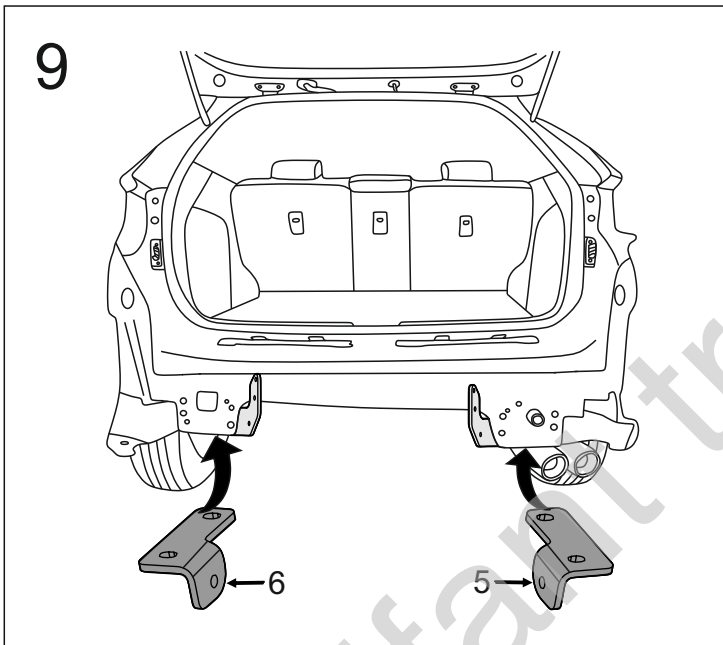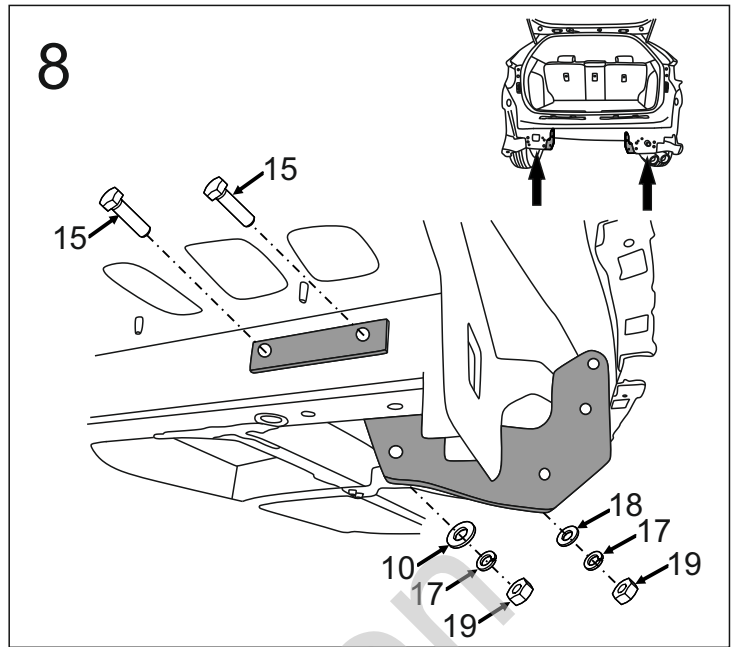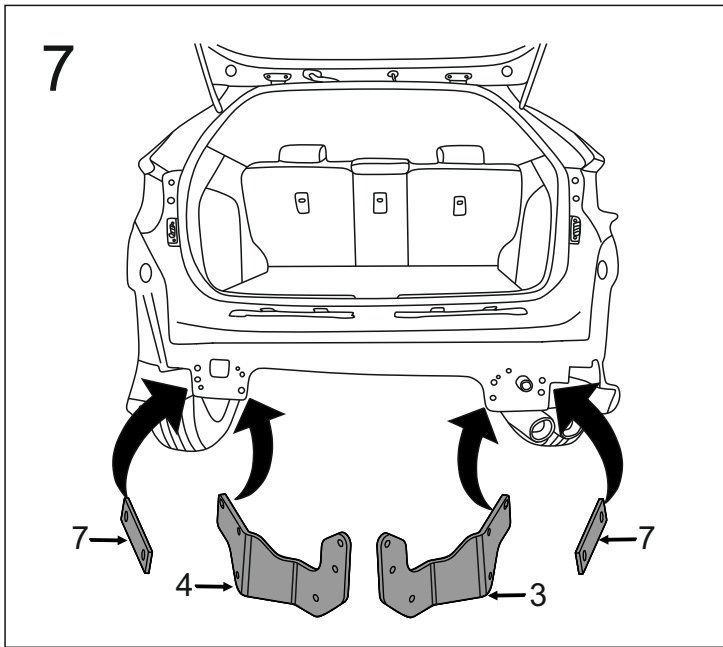

13

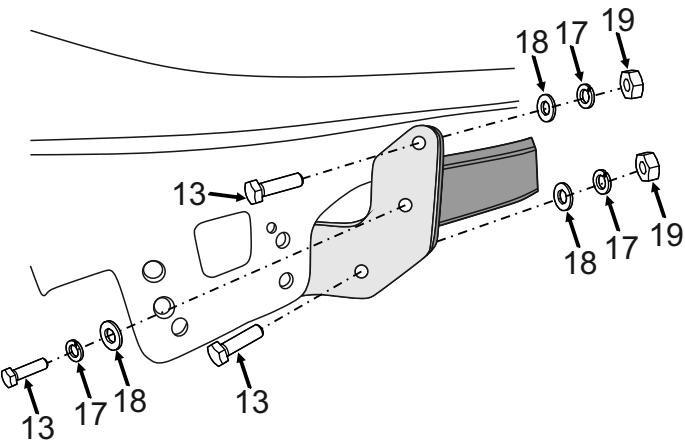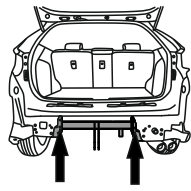


14

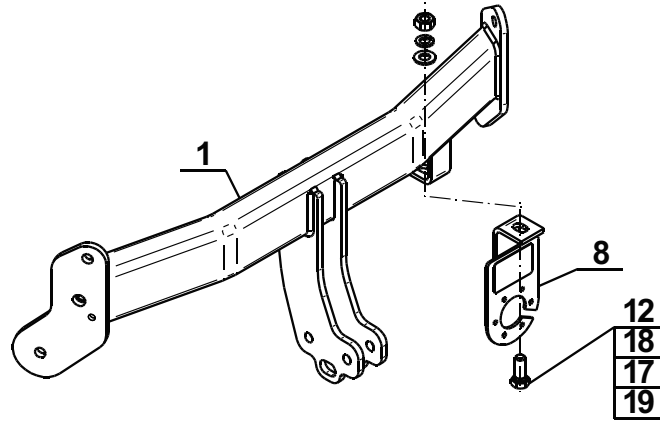


15

Hyundai Grand Santa Fe (NC)

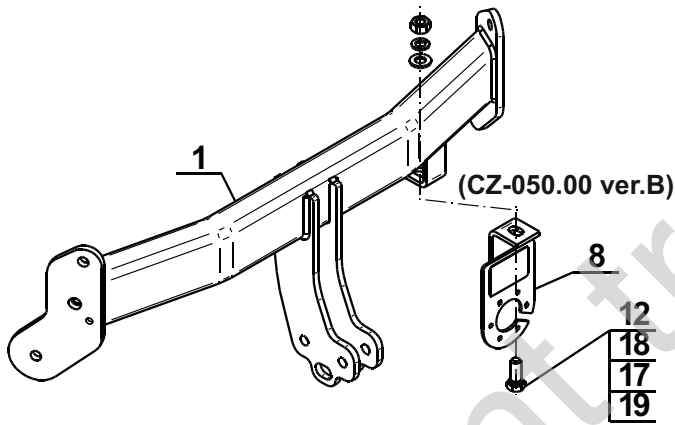

16


(mm)

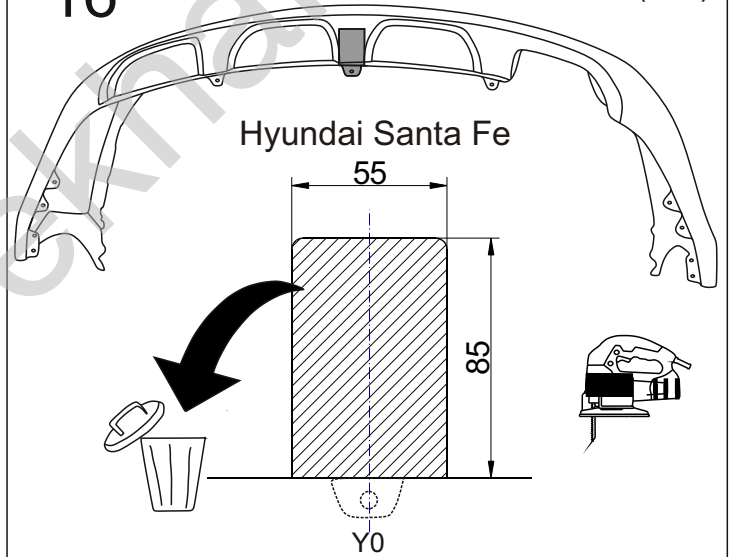

17


Kia Sorento

(mm)

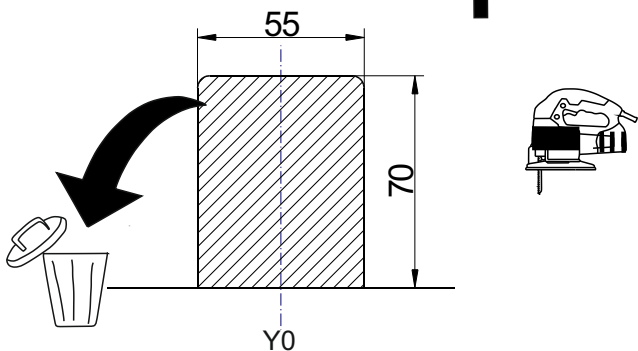


18


Hyundai Grand Santa Fe

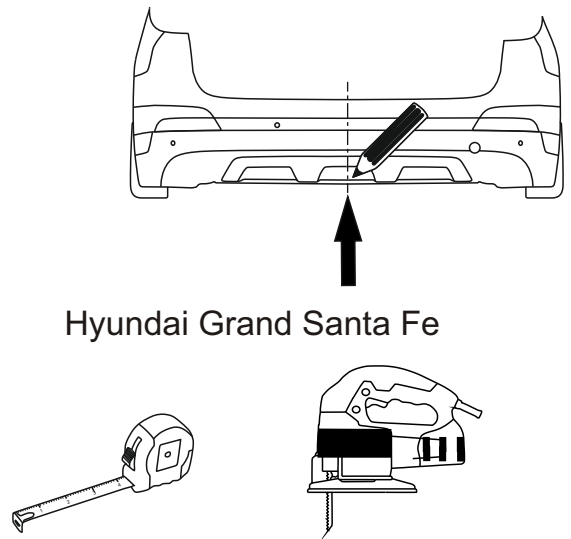


19

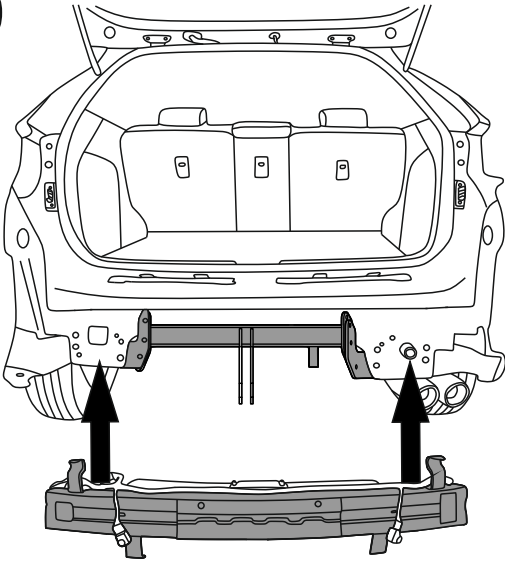

20

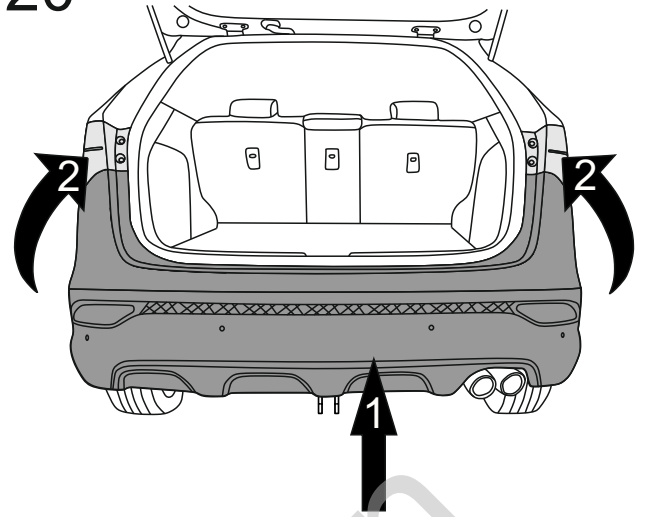

21

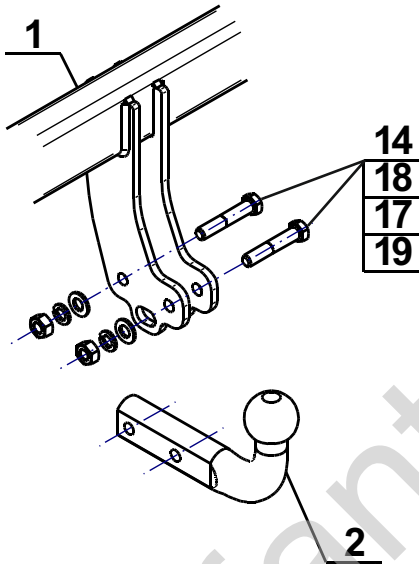

22

