

**Kia Stinger (Liftback),(+GT),  
(+GT Line), (2WD/4WD)**

**(2017 - →)**

**K-077**

**PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji

**GB** **Tow bar** Installation and operating instructions

**D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung

**ES** **Gancho de remolque** Las instrucciones de instalación y de operación

**RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ


**FR** **Attelage** Notice de montage et d'utilisation

**IT** **Gancio traino** Istruzioni di montaggio


**CZ** **Tažné zařízení** Návod na montáž a použití

**RO** **Cârlig de remorcare** Instrucția de montaj și exploatare

**SE** **Dragkulan** Monterings- och bruksanvisningar.

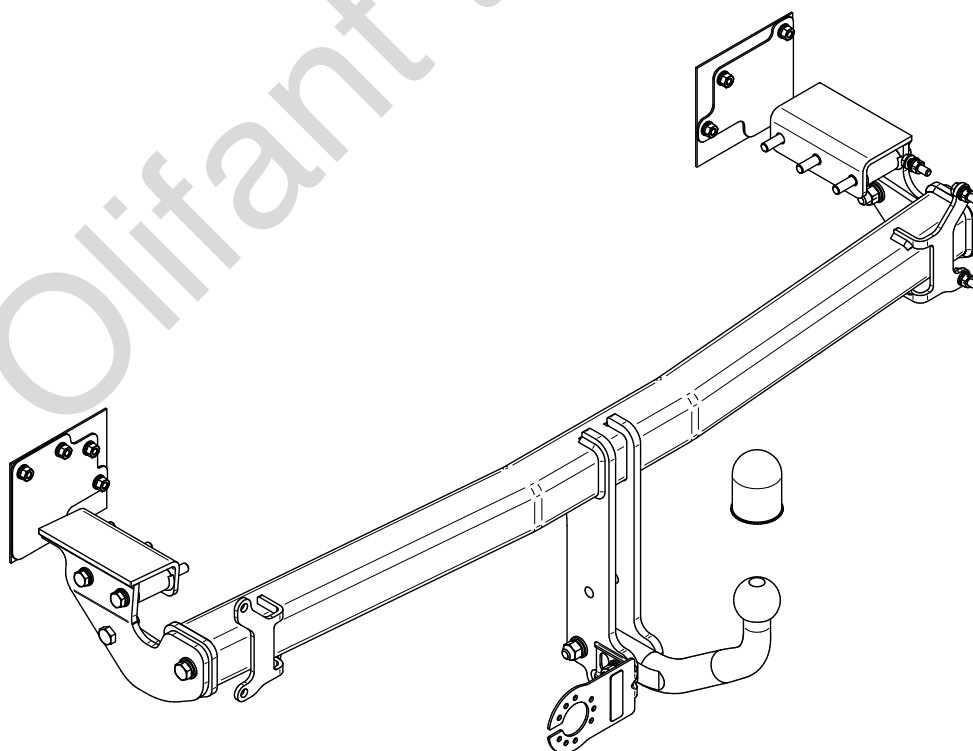

Typ: K-077  
 A50-X  
 (E20) 55R-01 5584  
 D = 9,1kN  
 S = 85kg

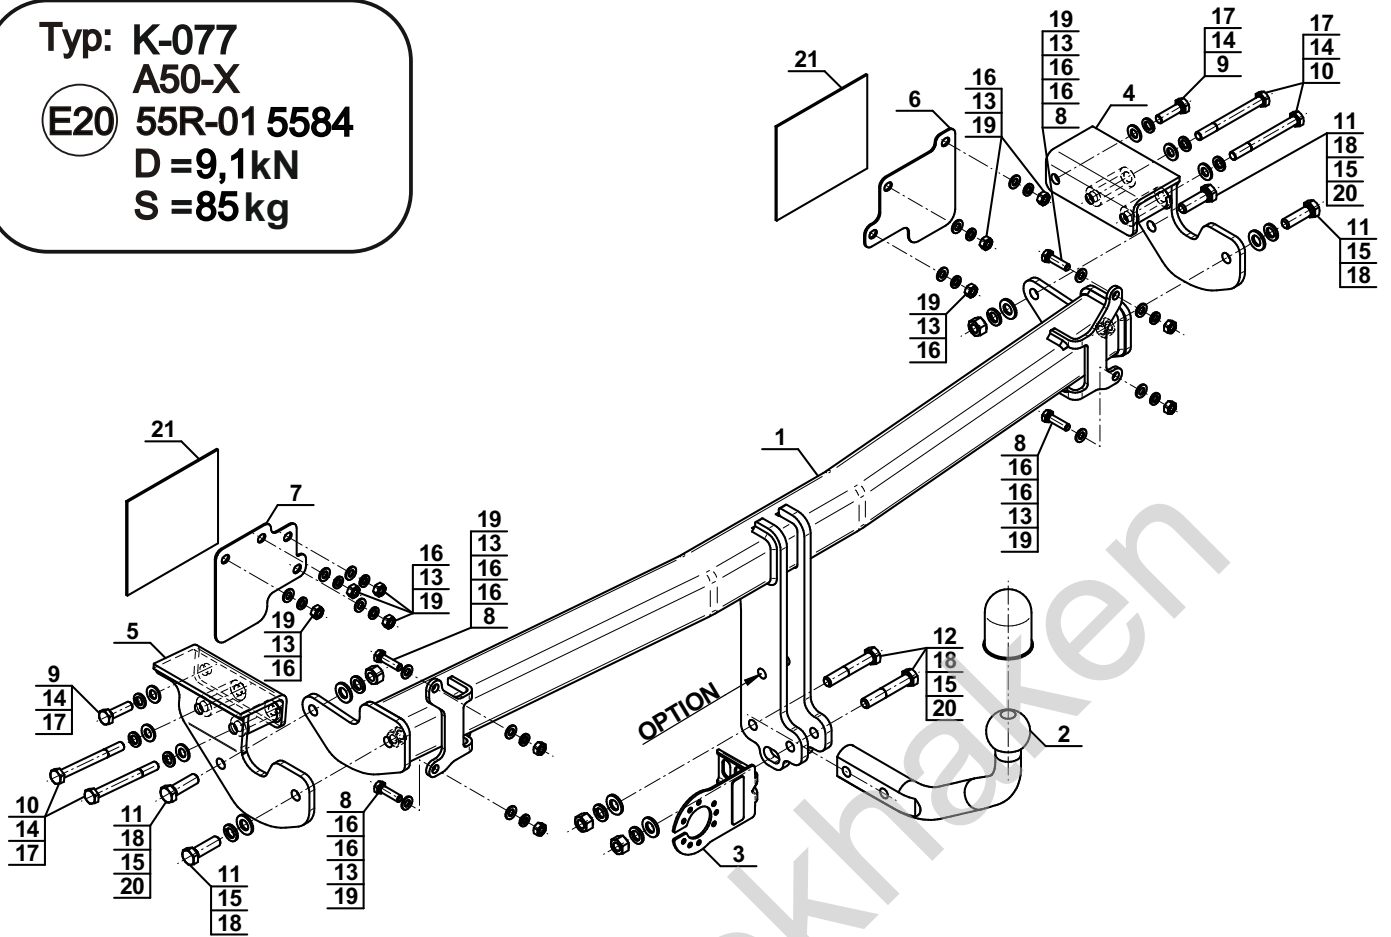

1		x1
2		x1
3		x1
4		x1
5		x1
6		x1

7		x1
8	M8x30 (PN/M-82105) (8.8)	x4
9	M10x1,25x35 (PN/M-82105) (8.8)	x2
10	M10x1,25x100 (PN/M-82101) (8.8)	x4
11	M12x40 (PN/M-82105) (8.8)	x4
12	M12x70 (PN/M-82101) (8.8)	x2
13	Ø8,2	x11
14	Ø10,2	x6
15	Ø12,2	x6
16	Ø8,4	x15
17	Ø10,5	x6
18	Ø13,0	x6
19	M8 (8)	x11
20	M12 (8)	x4
21	(CH-021.03)	x2







**OPTION**







	1x		M12x35	1x		Ø12,2
	1x		Ø13,0	1x		M12

(CZ-052.00)




8.8	
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)
M12 - 85 (Nm)	

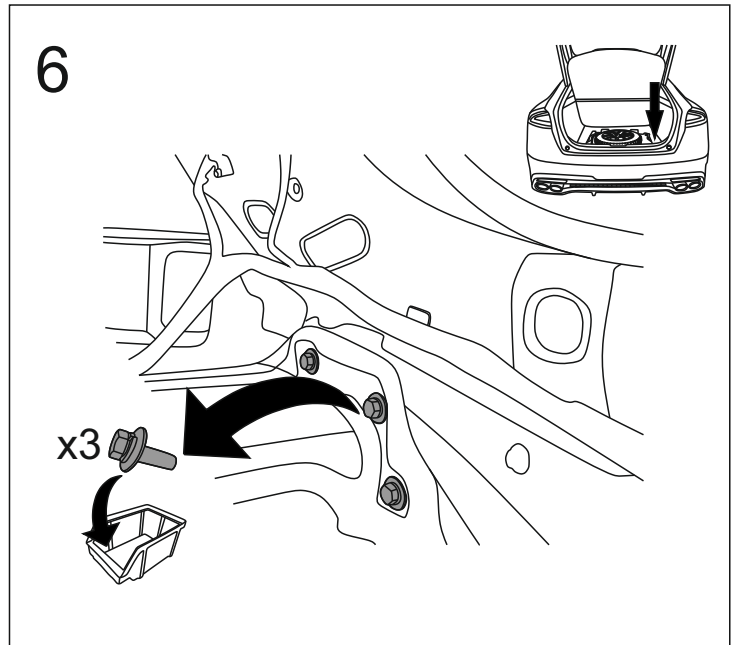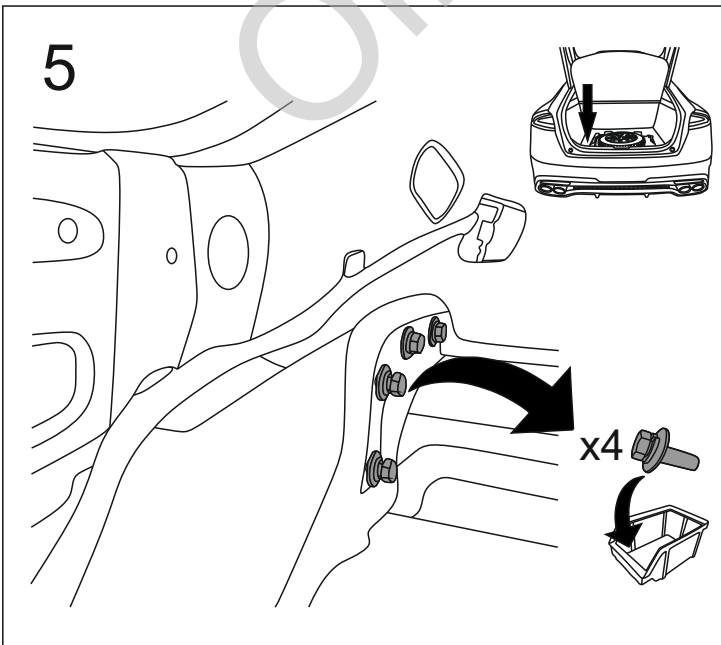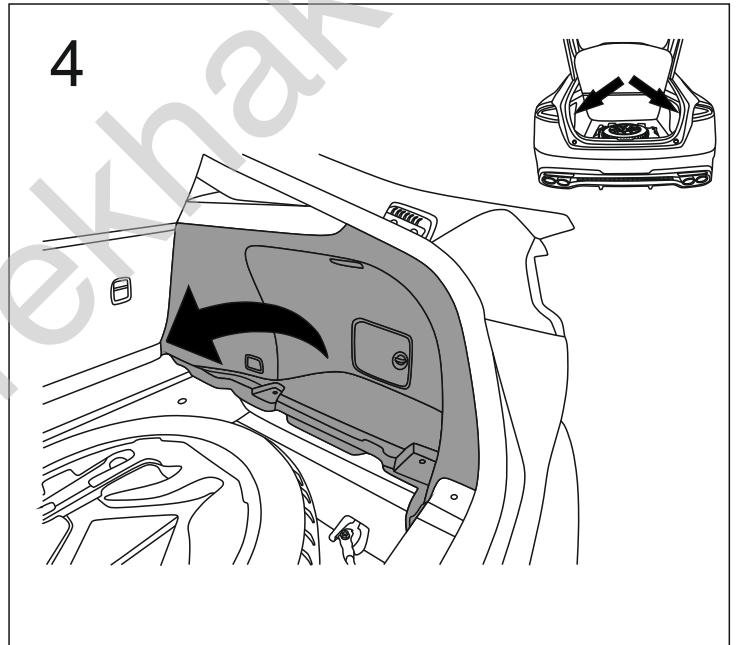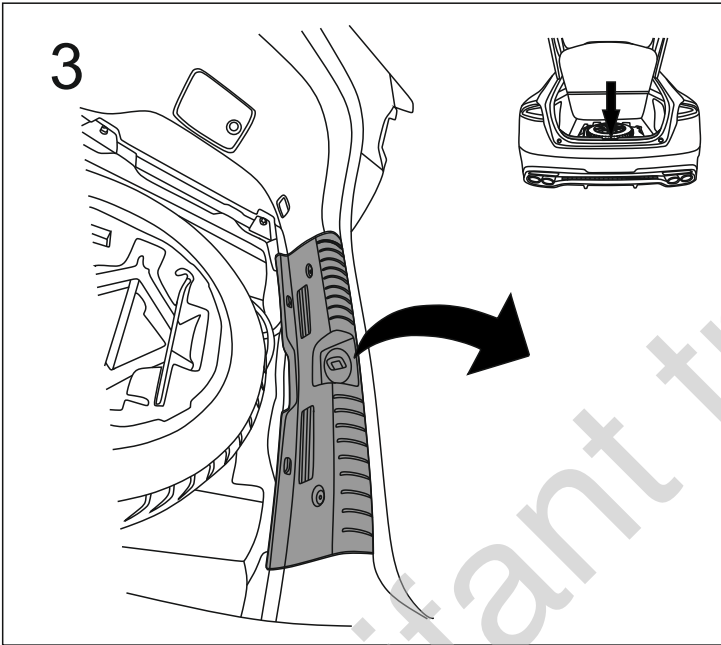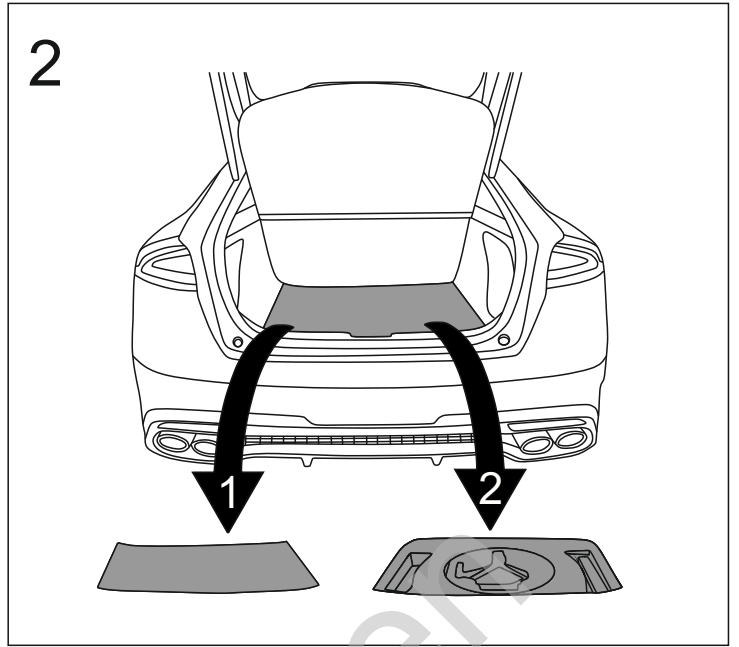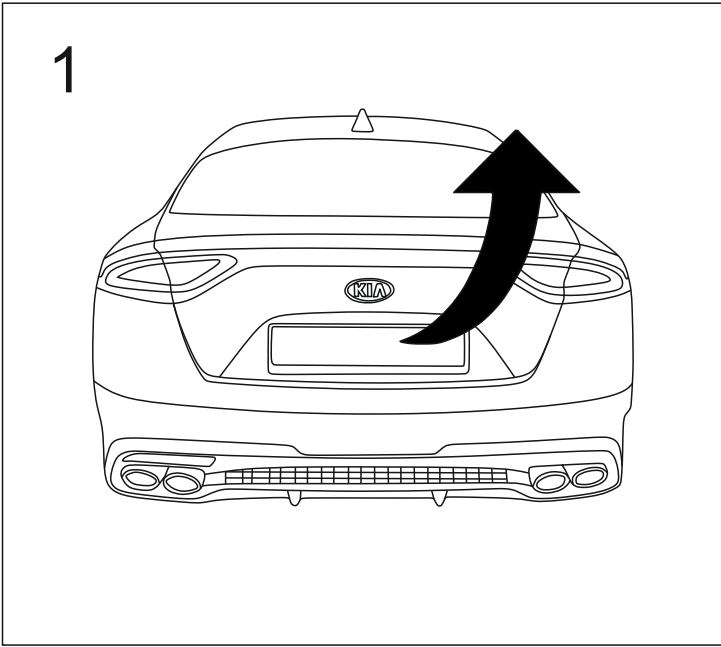


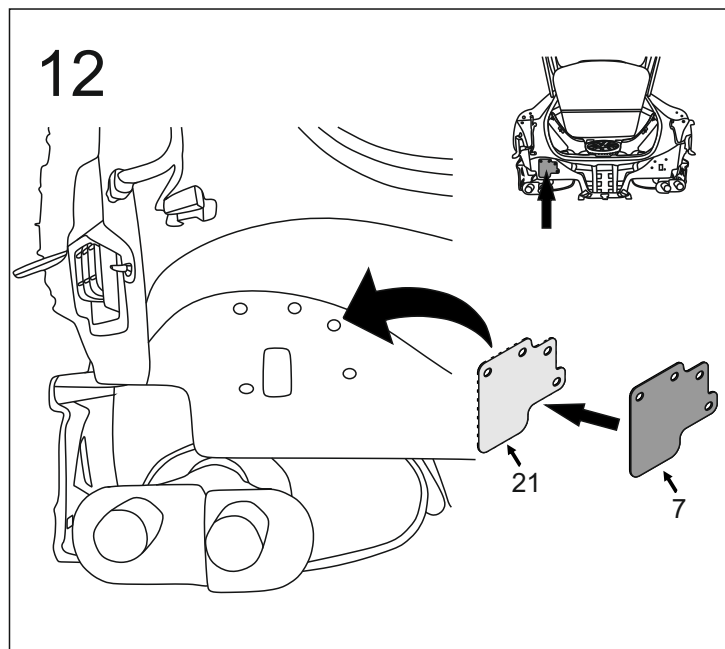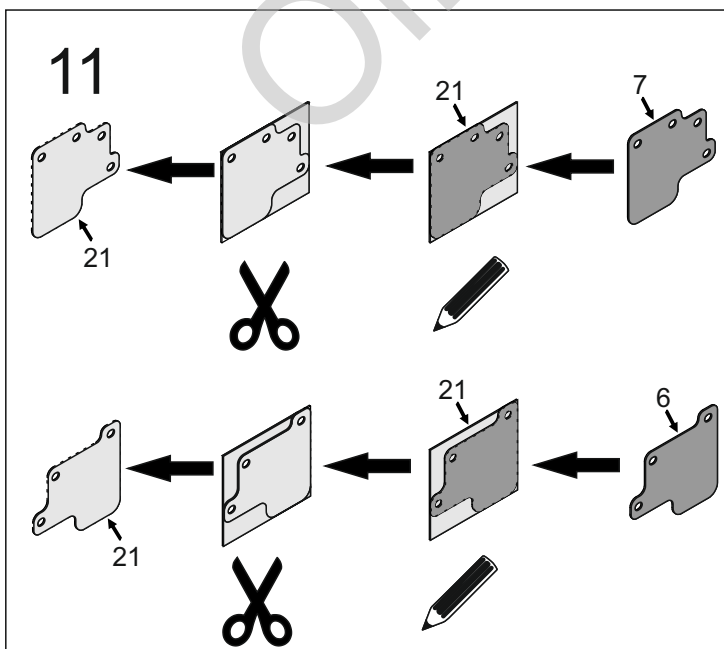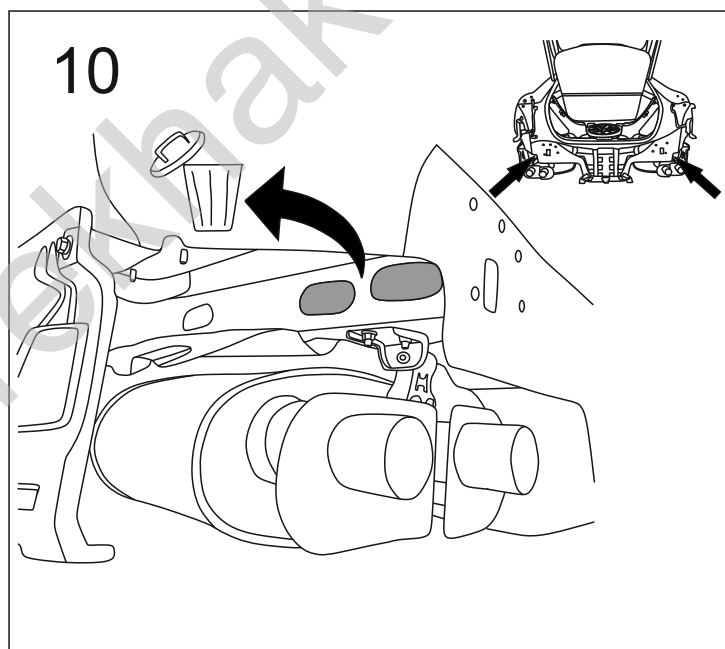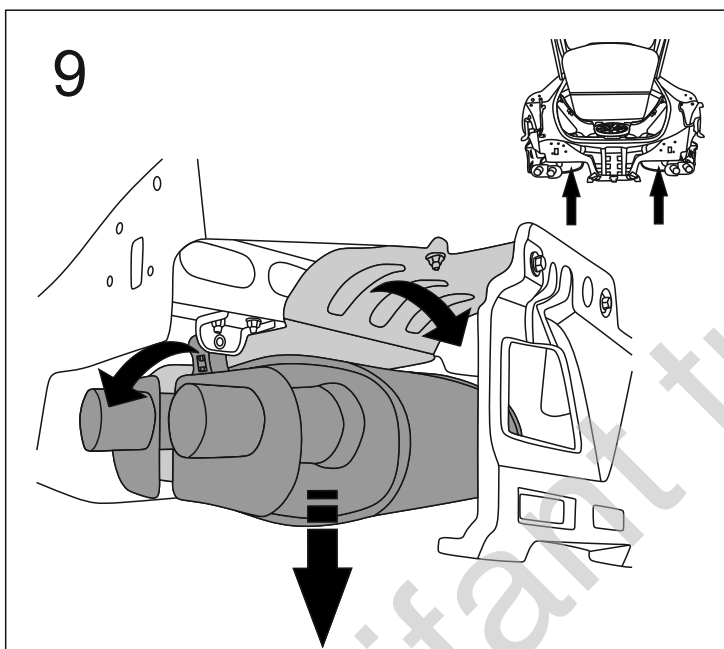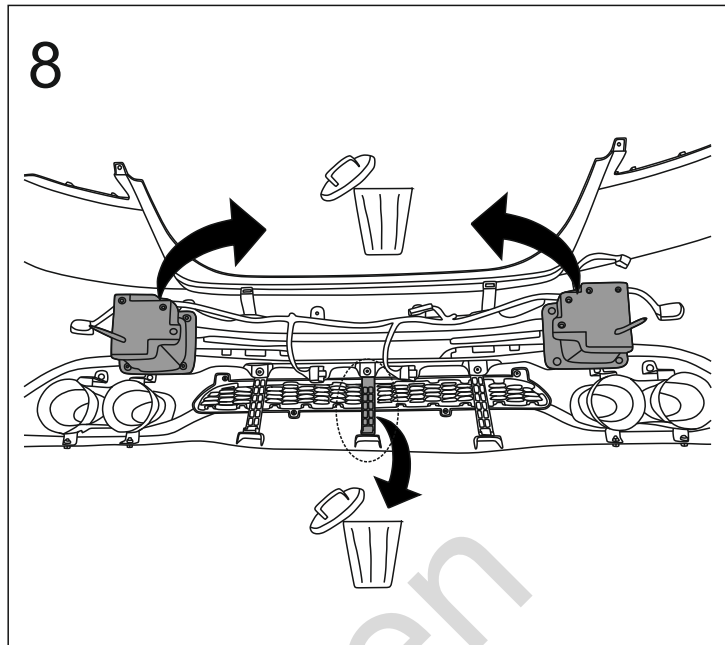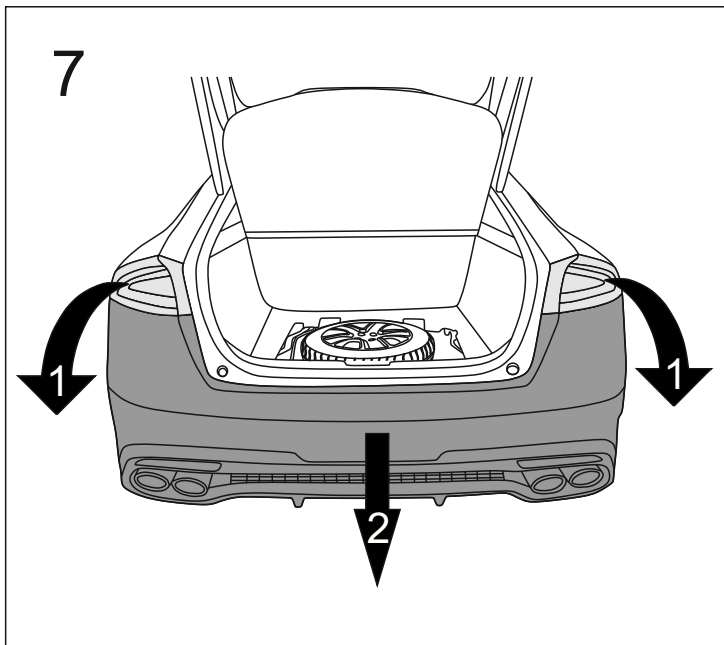


13

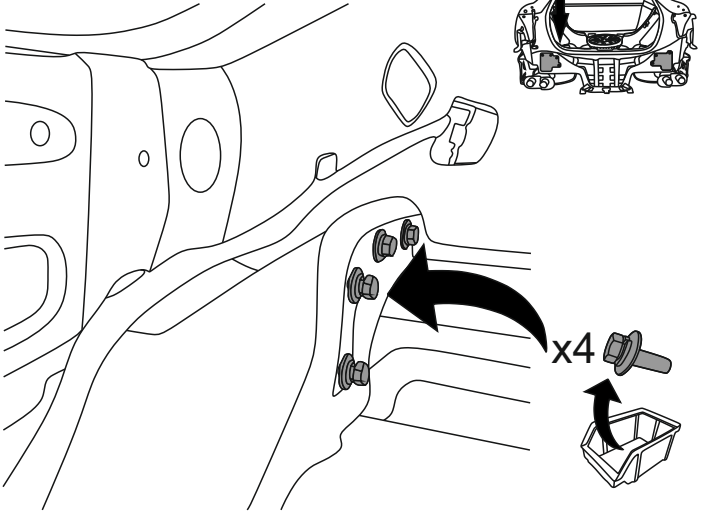


14

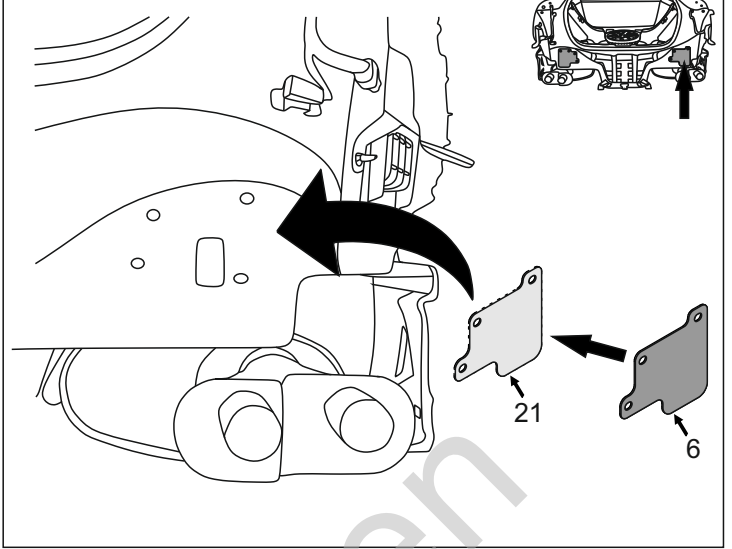


15

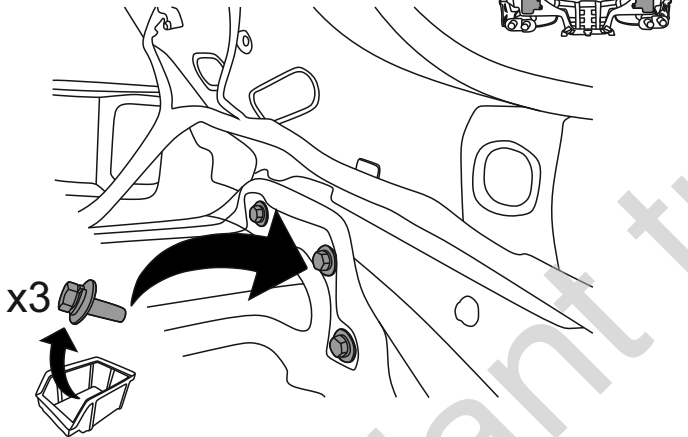


16






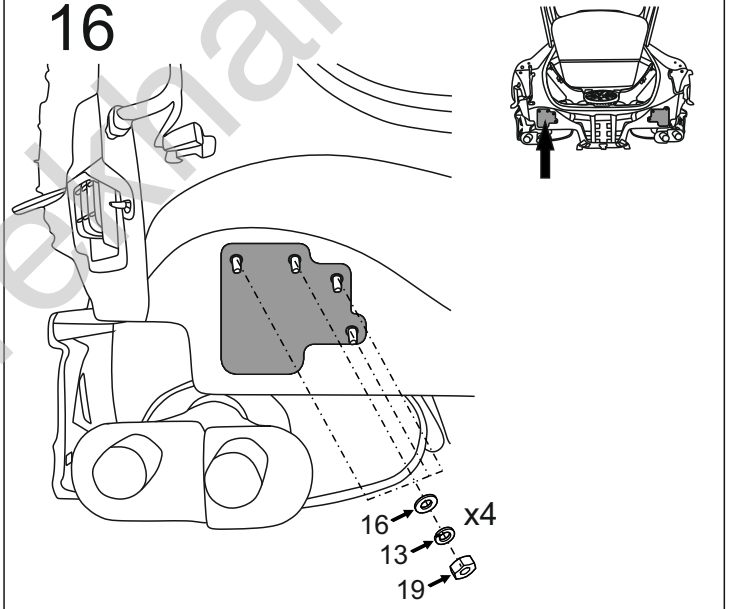







17

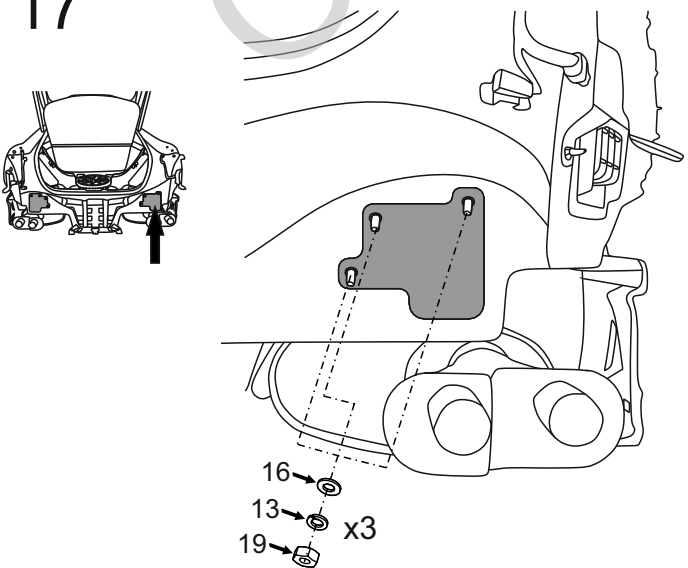



18

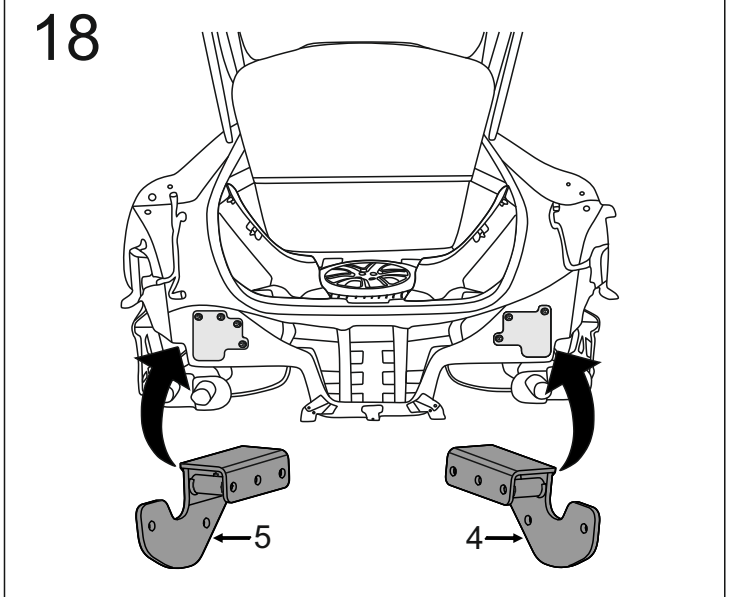

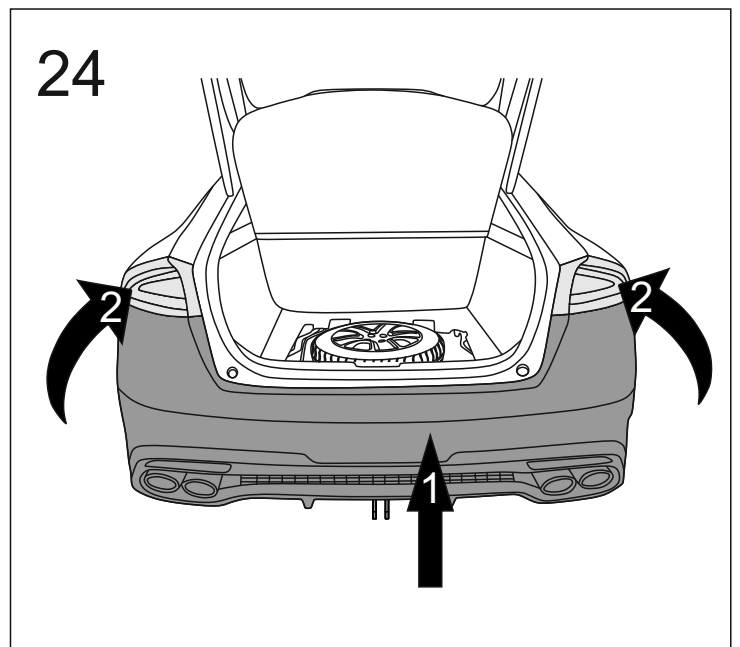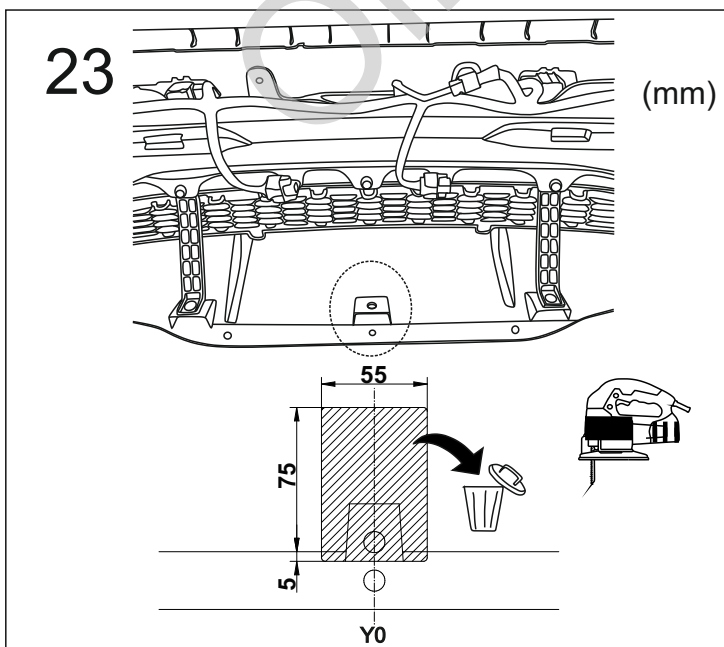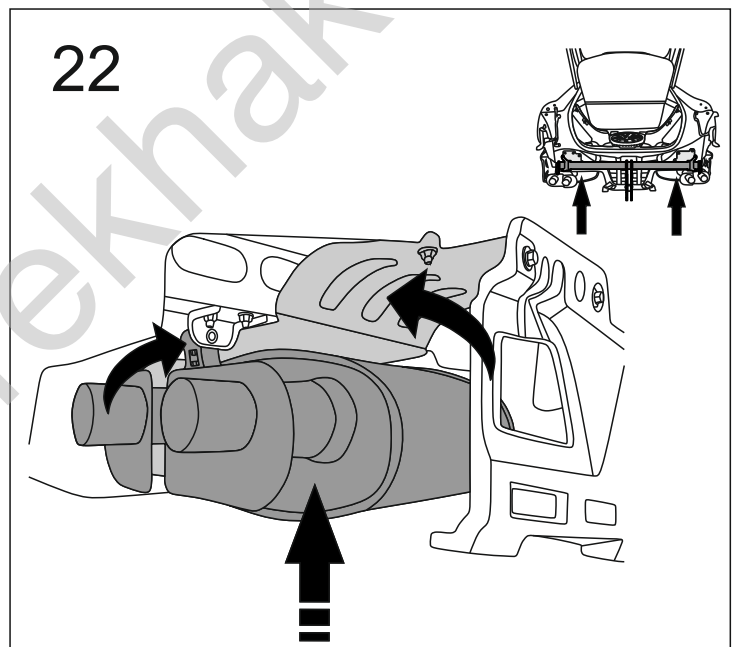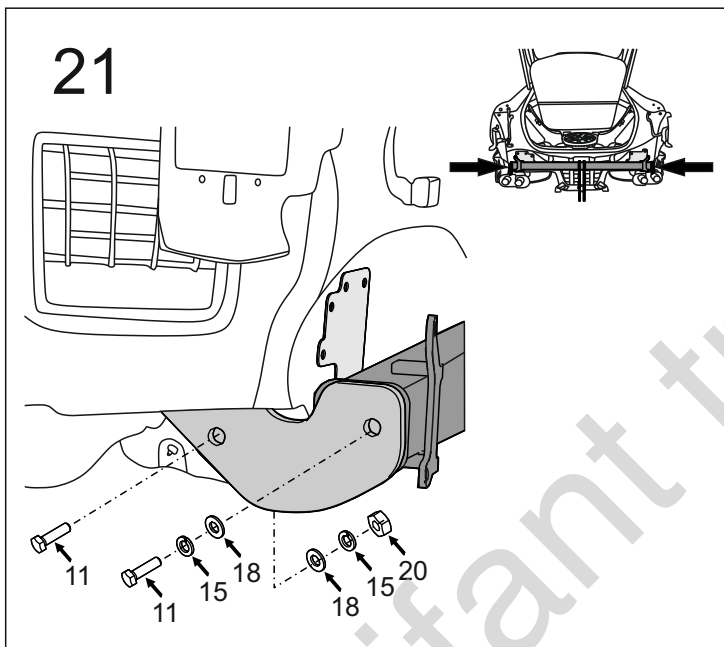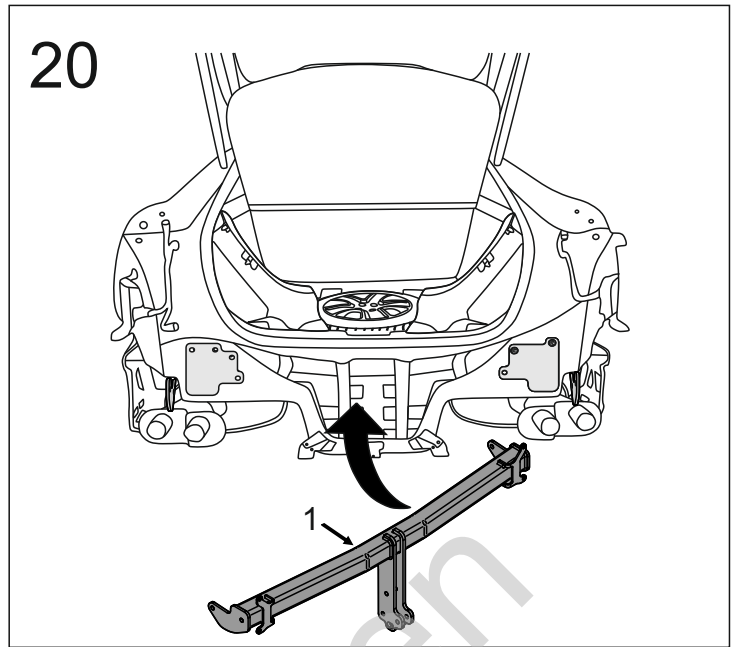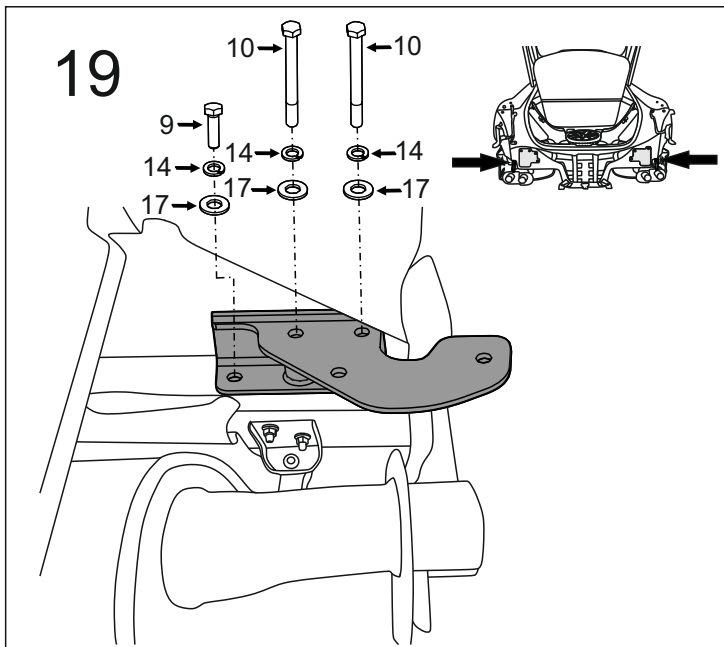

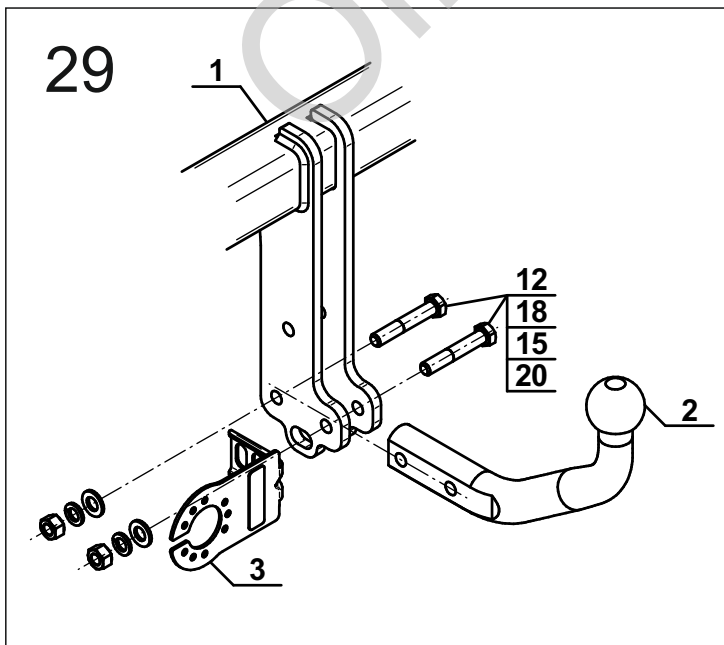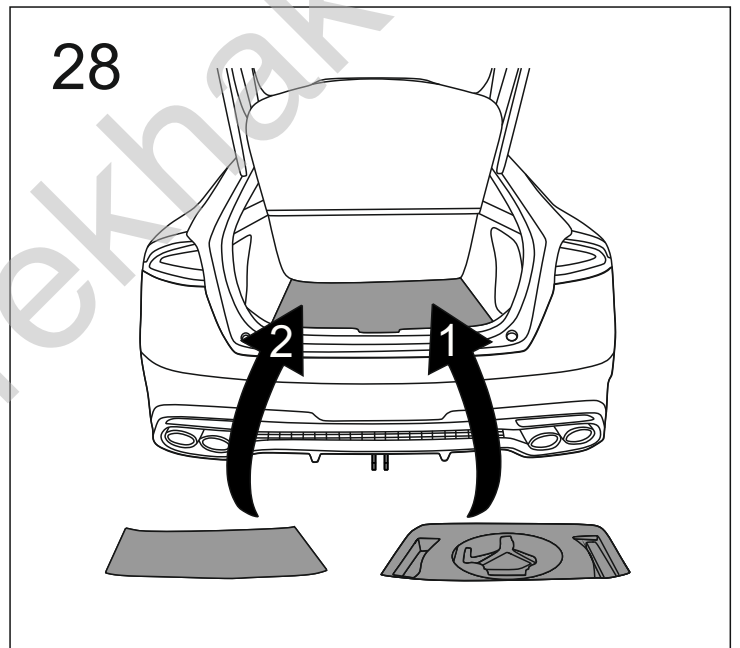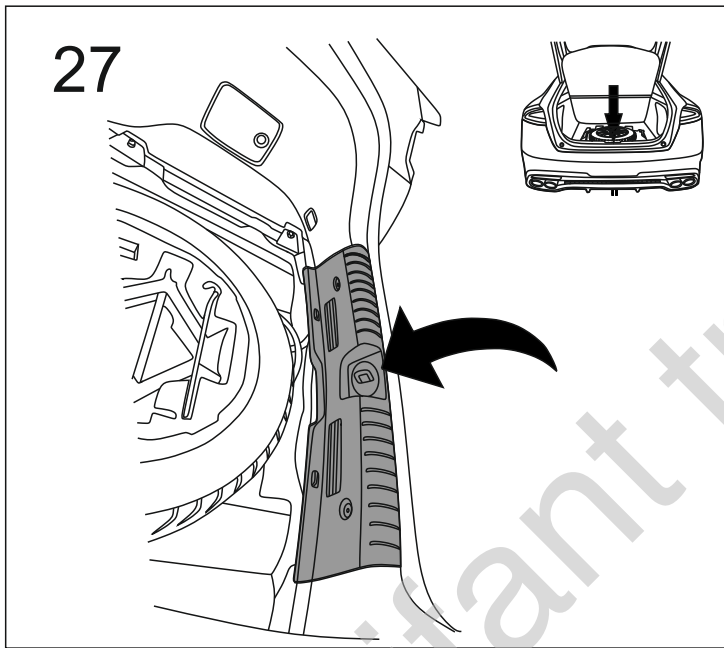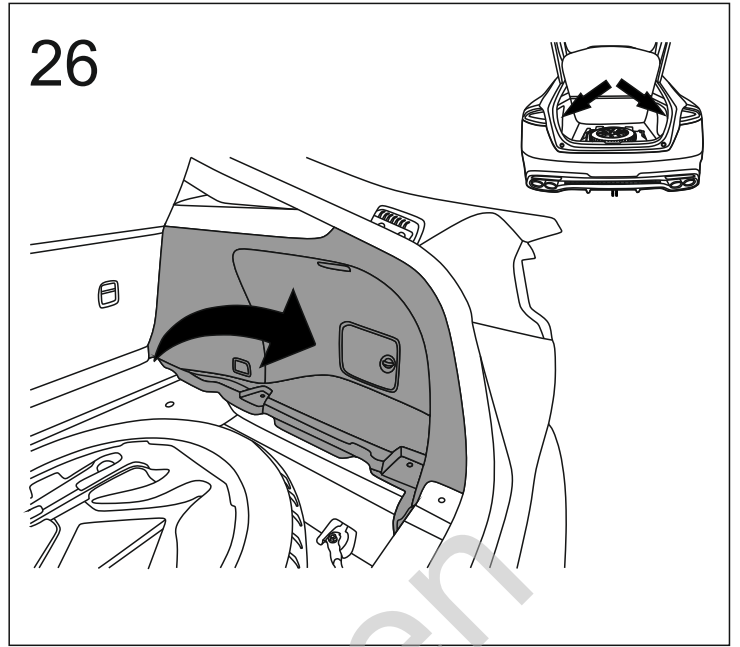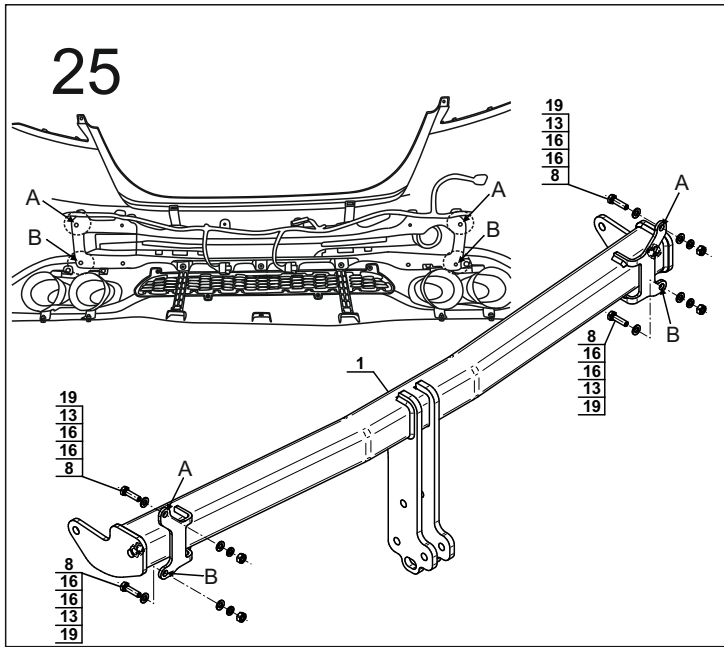

# OPTION

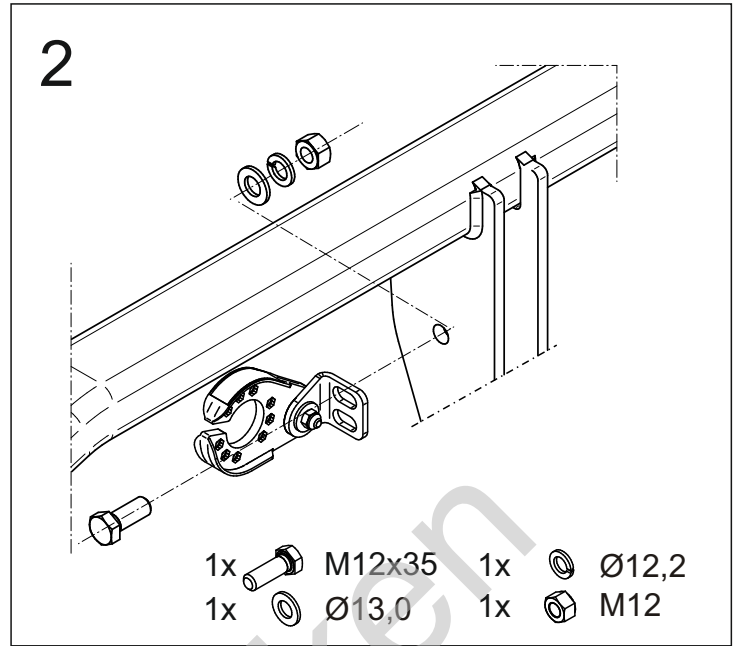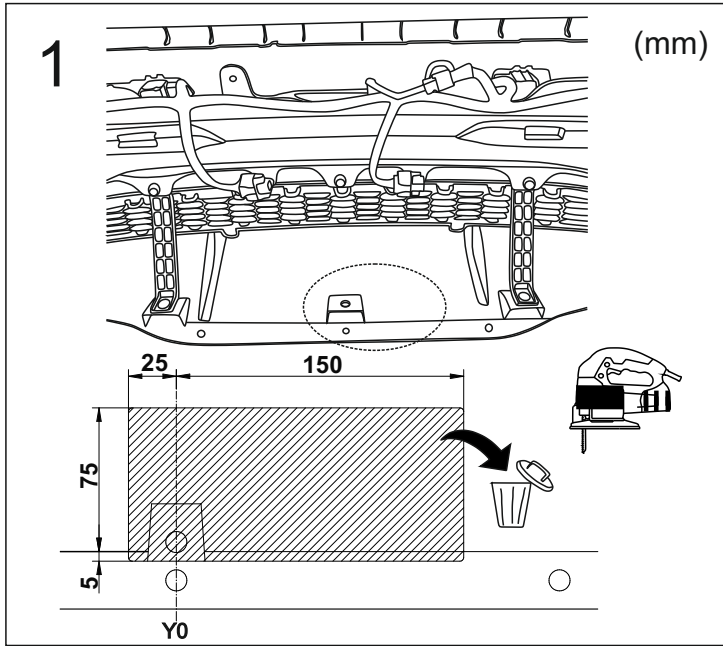

Olifant trekhaken