


**Kia Xceed (5D)**

**(2019 - →)**

**K-089**


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

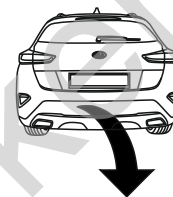



YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>



YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>

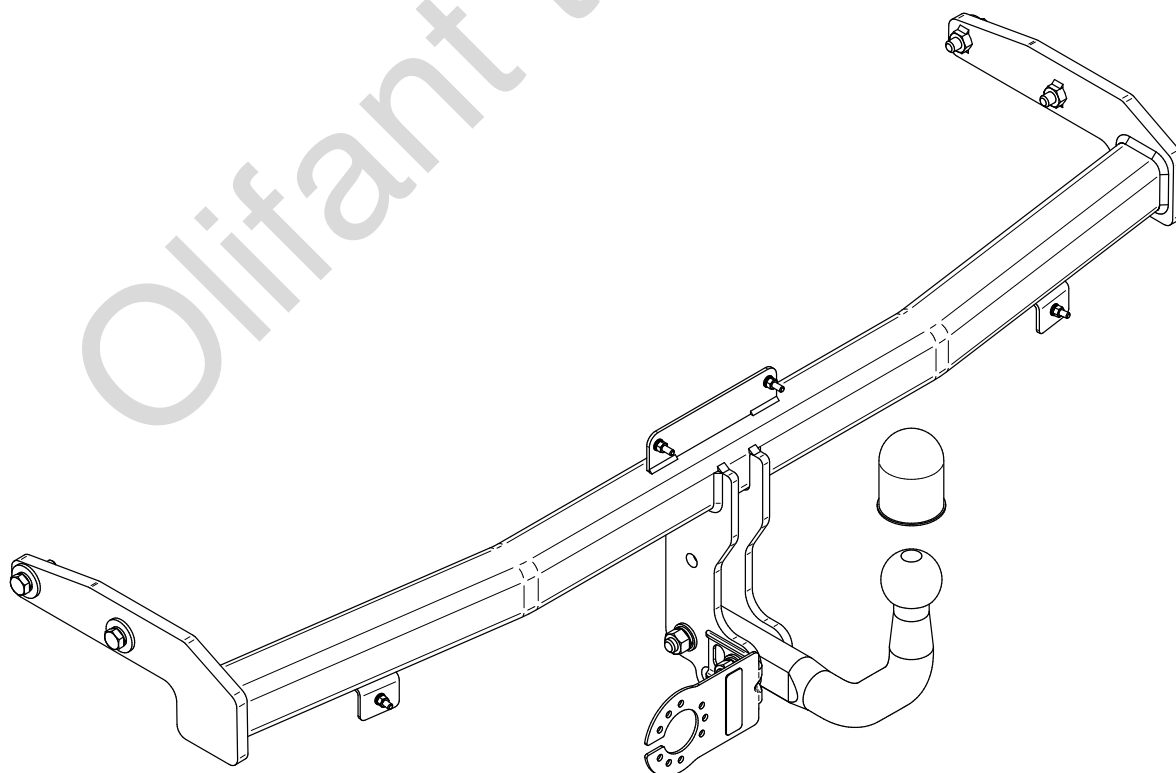

Typ: K-089  
 A50-X  
 E20 55R-01 5953  
 D = 8,7 kN  
 S = 90 kg

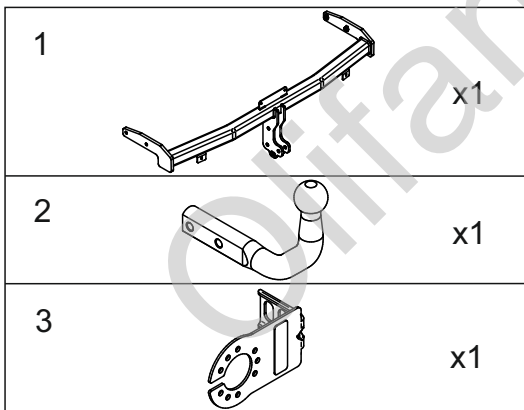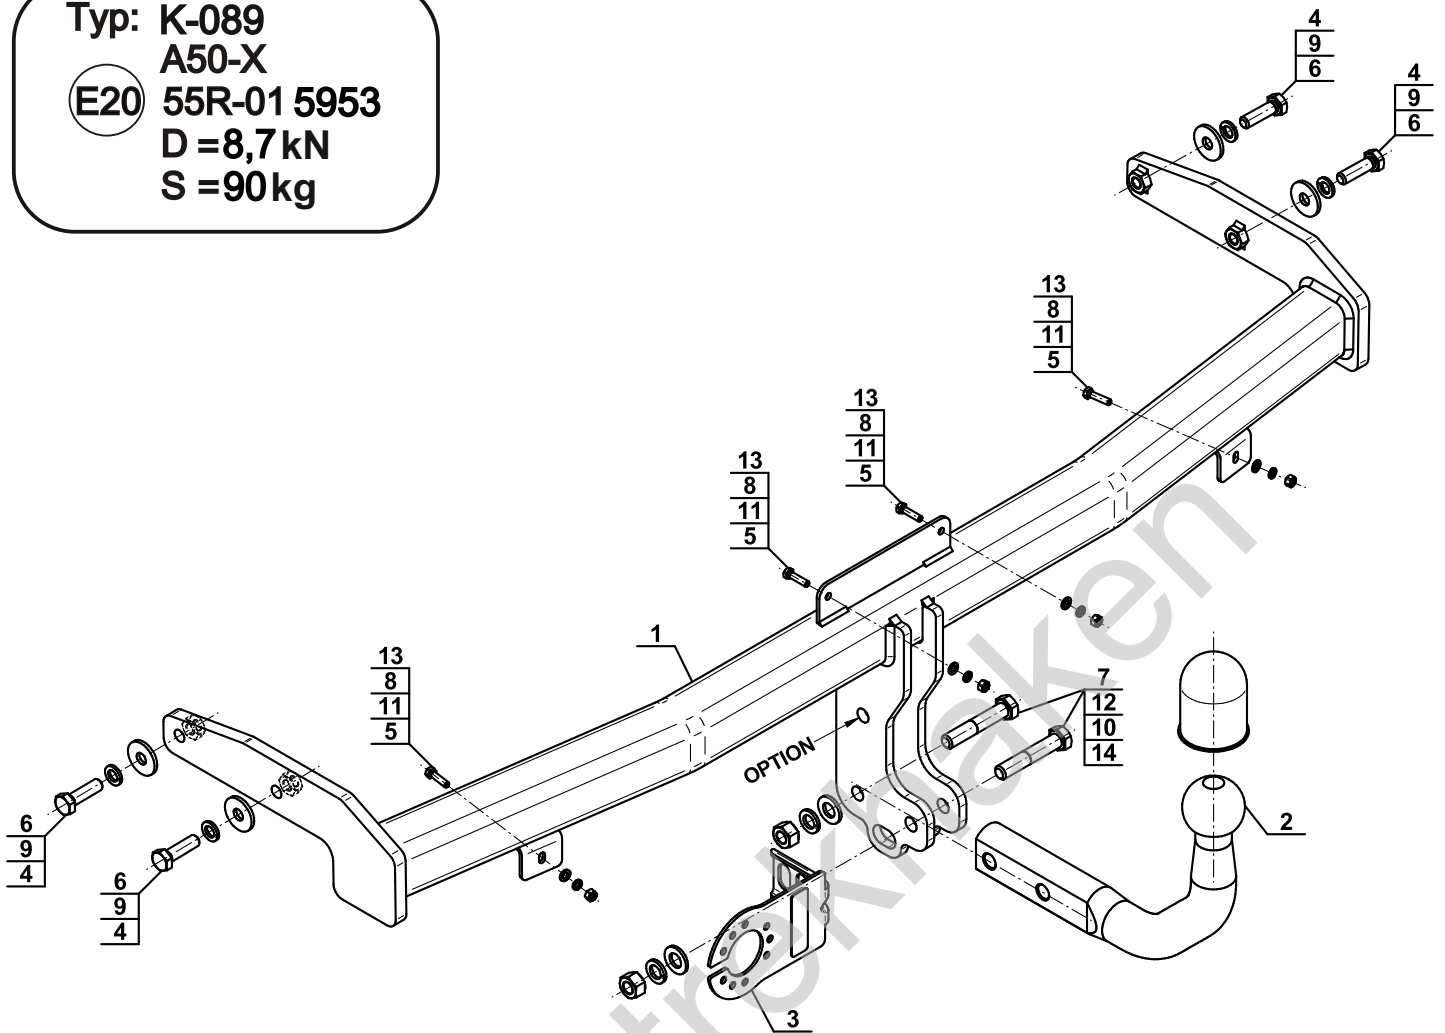







4		Ø30/Ø10,5x3	x4
5		M5x20 (PN/M-82105)	x4
6		M10x35 (PN/M-82105) (8.8)	x4
7		M12x65 (PN/M-82101) (8.8)	x2
8		Ø5,1	x4
9		Ø10,2	x4
10		Ø12,2	x2
11		Ø5,3	x4
12		Ø13,0	x2
13		M5	x4
14		M12 (8)	x2







### OPTION

	1x	M12x35	1x	Ø12,2
	1x	Ø13,0	1x	M12
(CZ-050.00)				




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

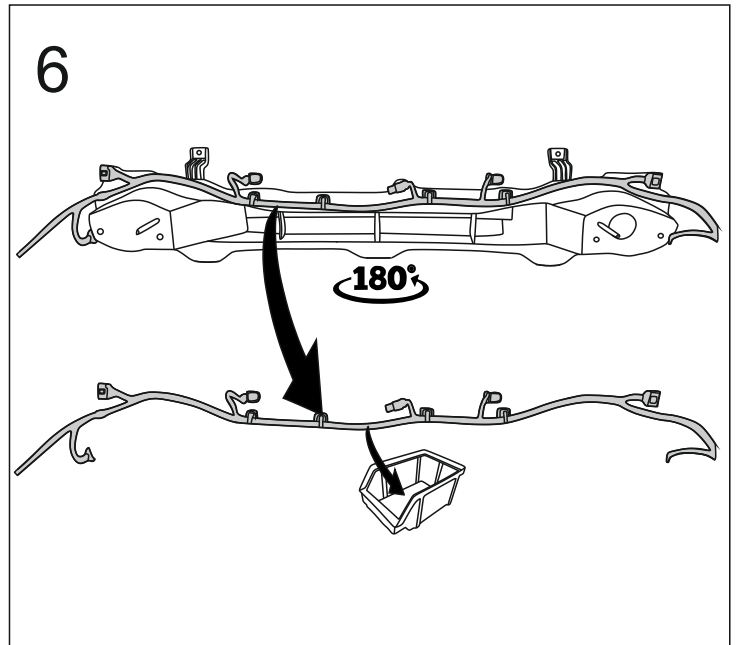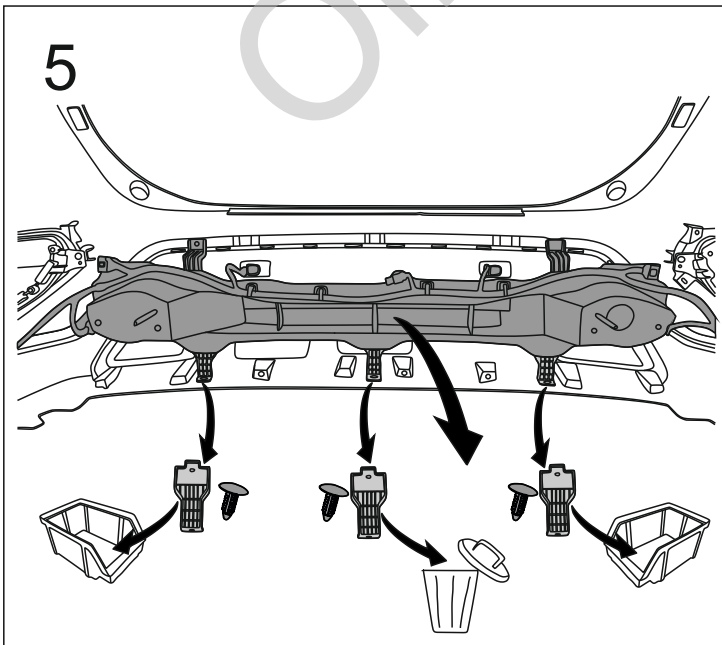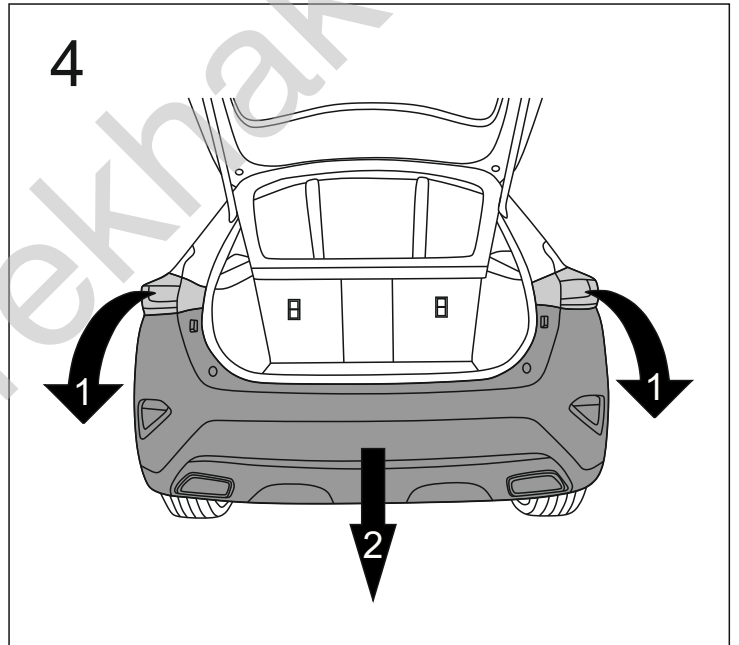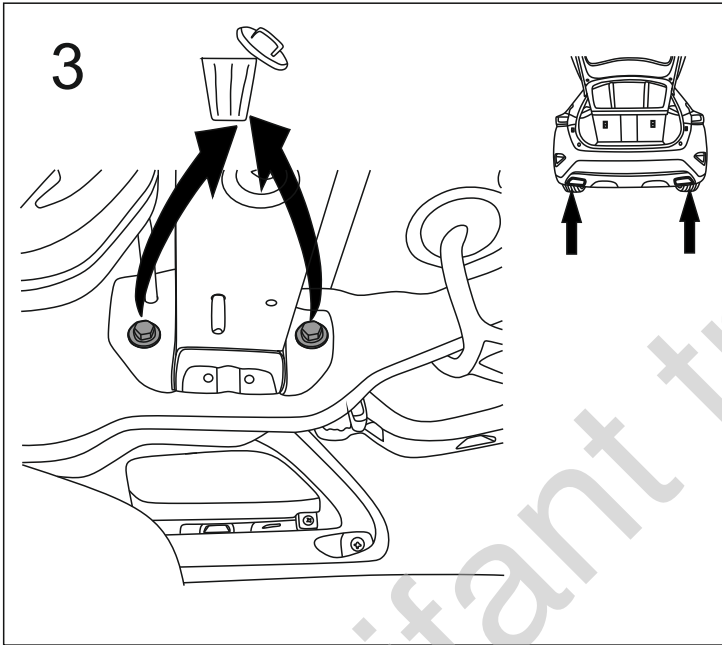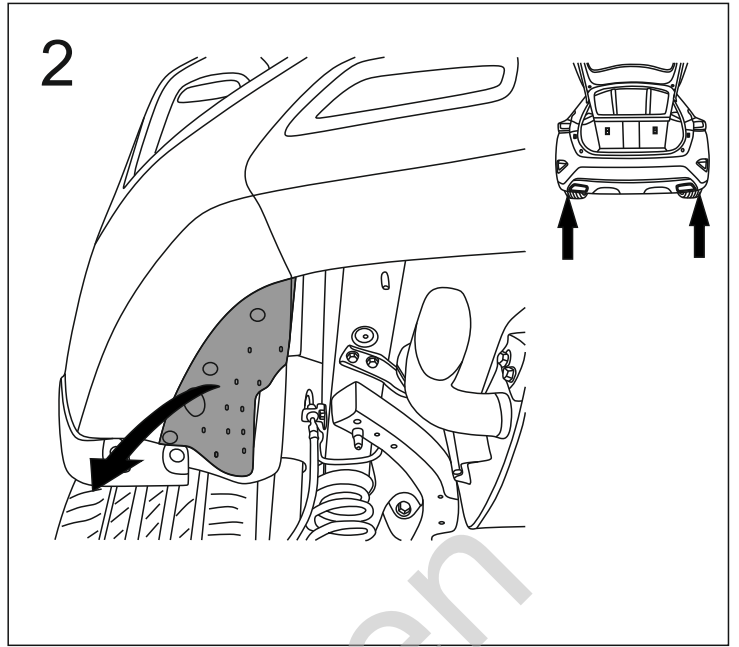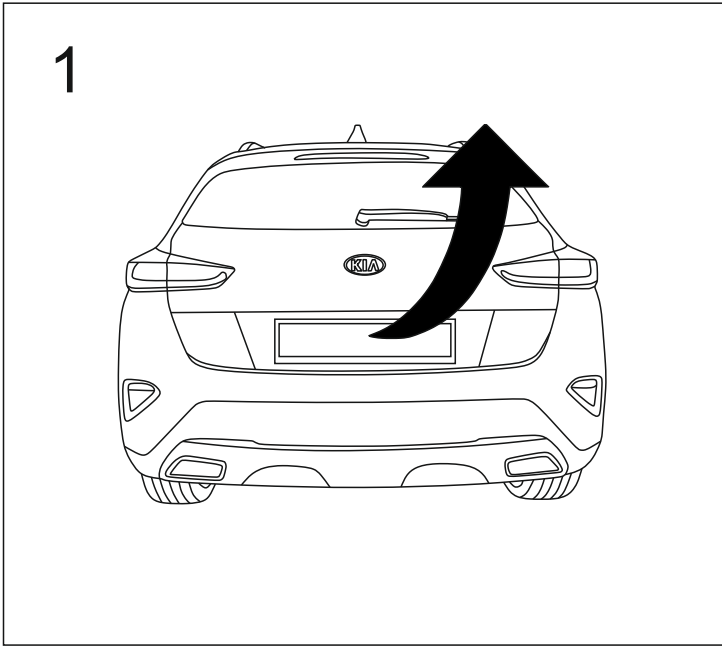

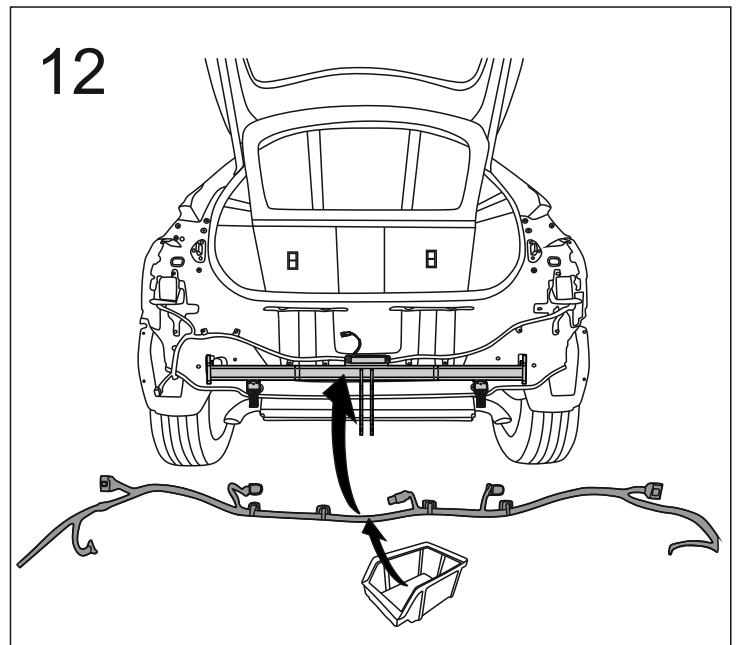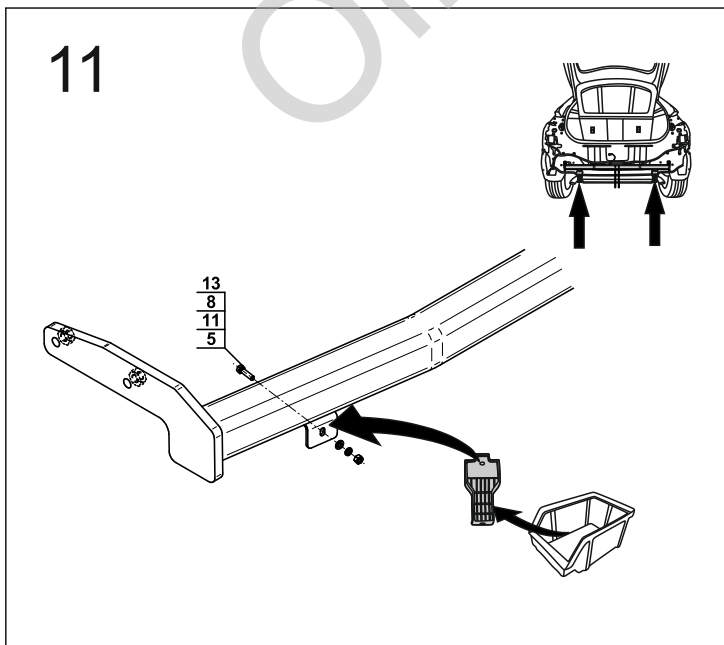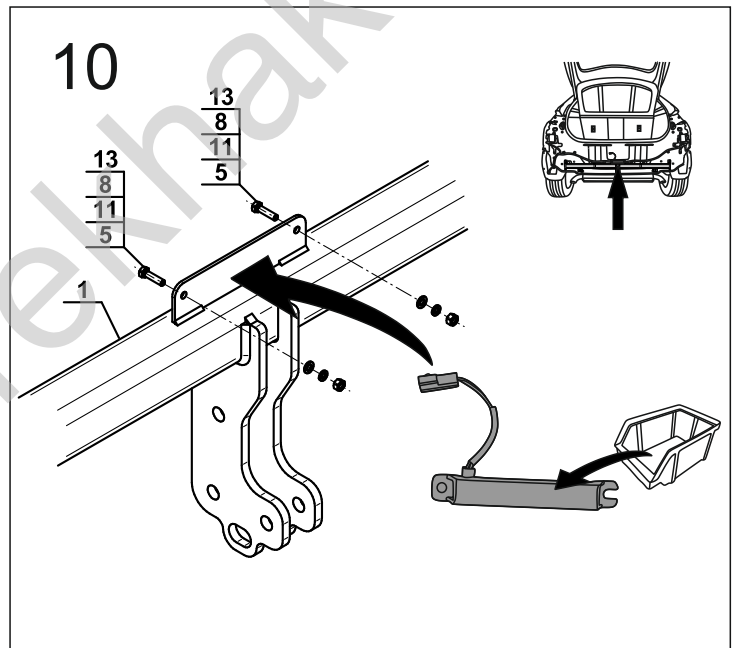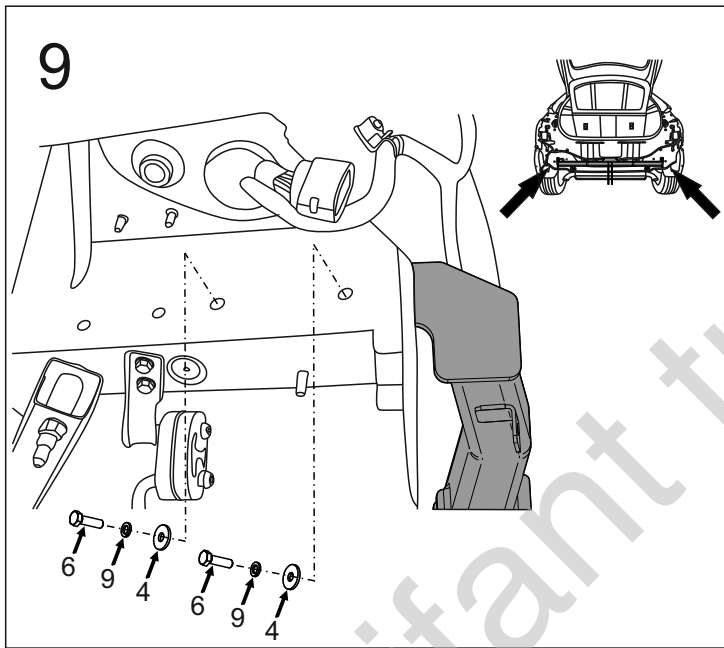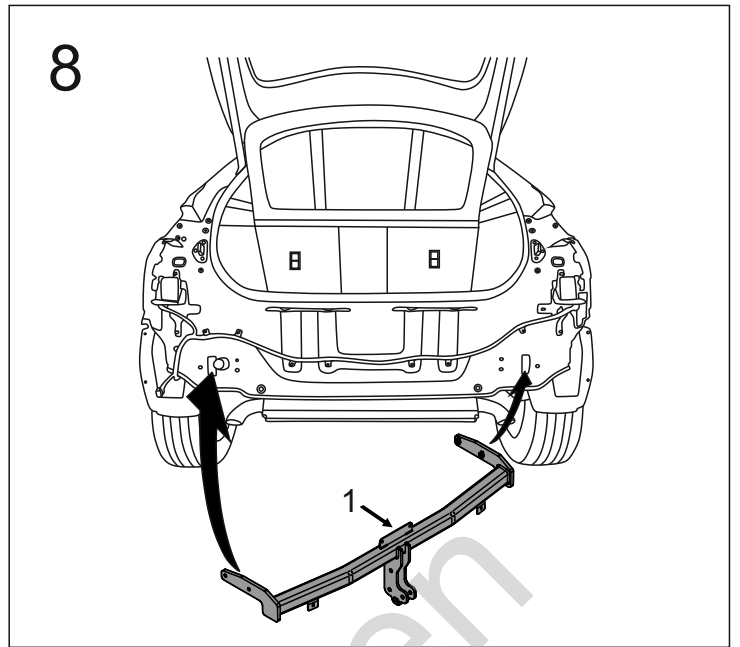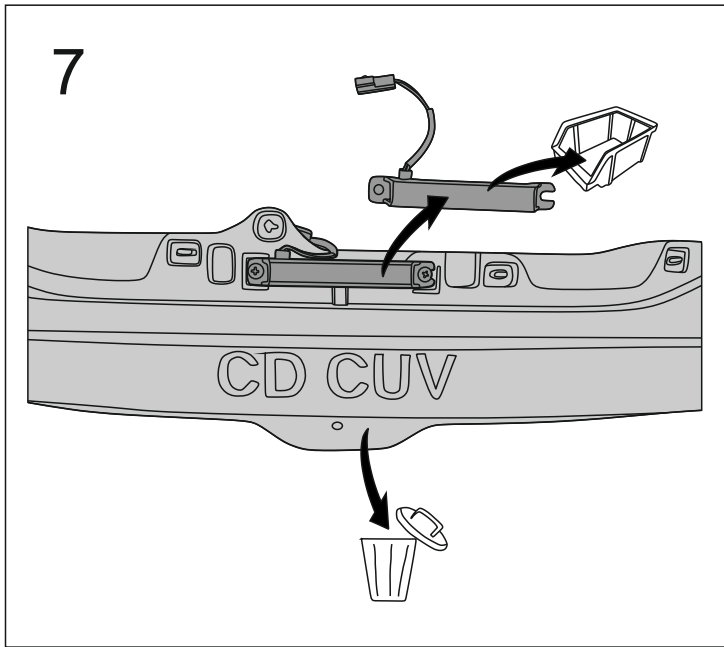


13


(mm)

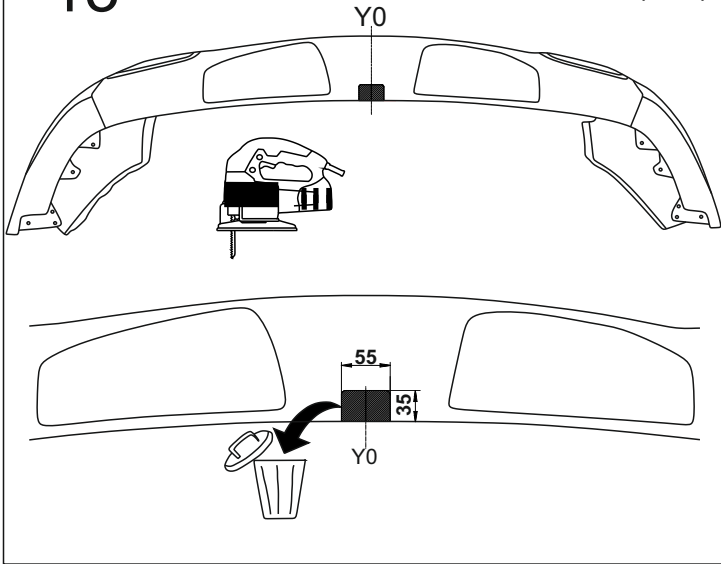


14

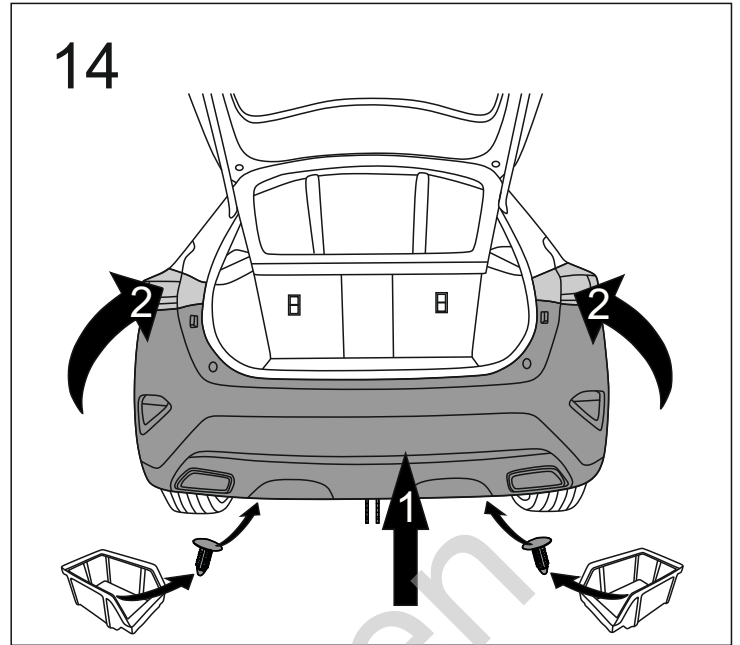

15

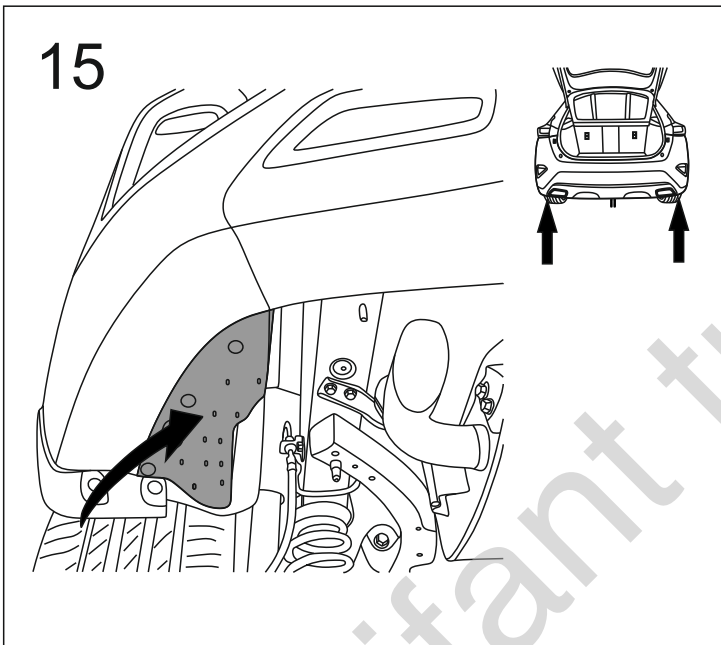


16

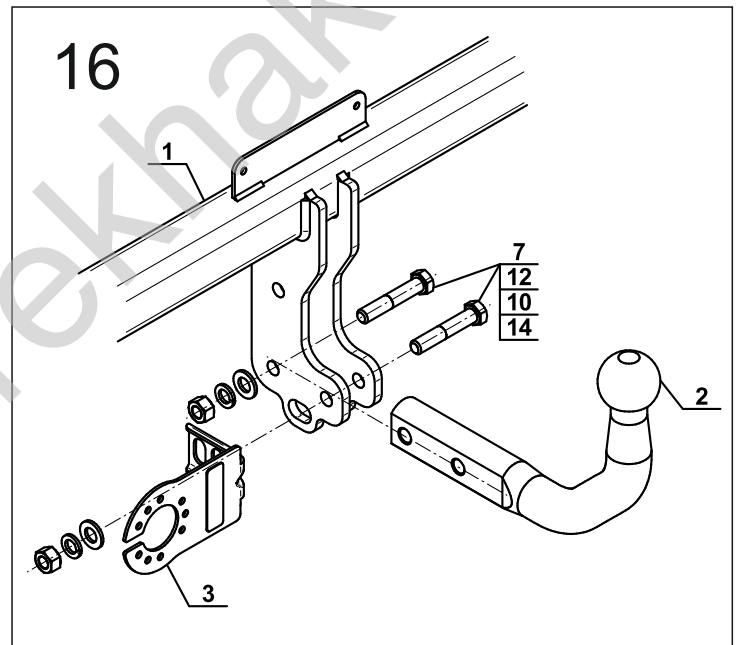


**OPTION**

1

(mm)

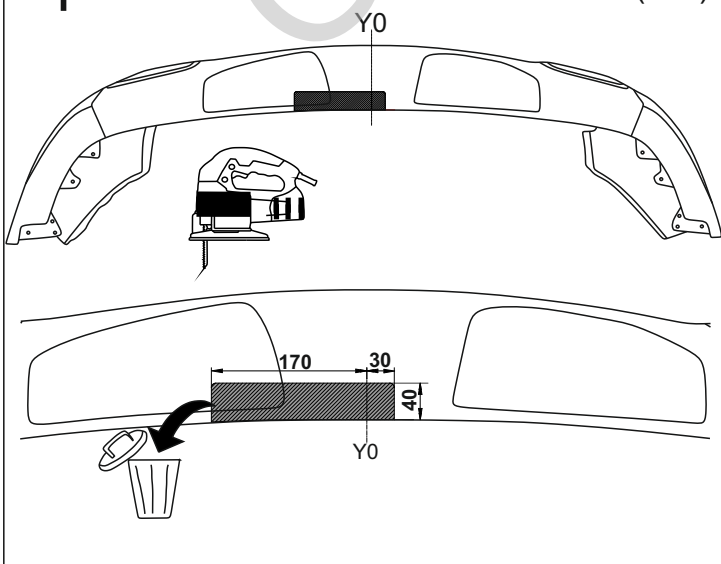

2

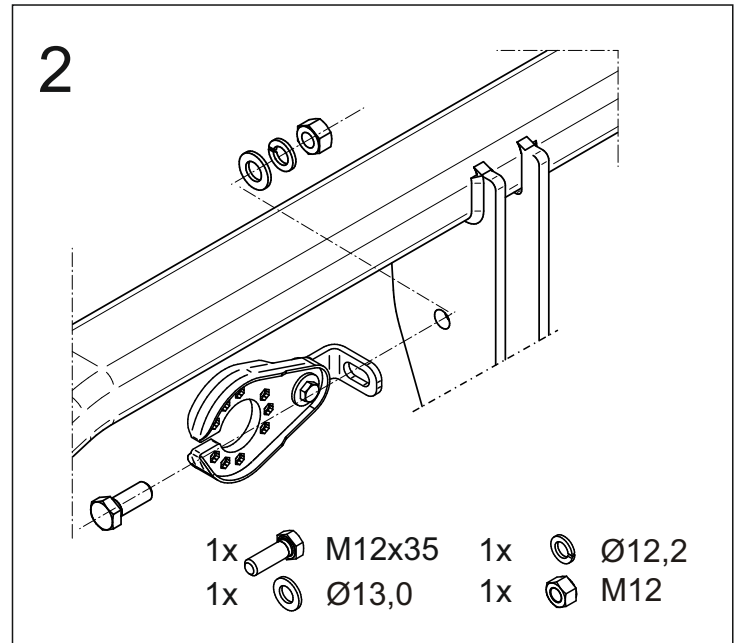

- 1x M12x35
- 1x Ø12,2
- 1x Ø13,0
- 1x M12