


Mercedes A-Klasa (W176)
~~(AMG Pakiet)~~
Mercedes B-Klasa (W246)
~~(AMG Pakiet)~~

(09/2012 - 2018)

(2011 - 12/2018)

M-101


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.

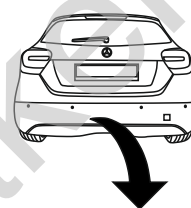



YES NO



YES NO

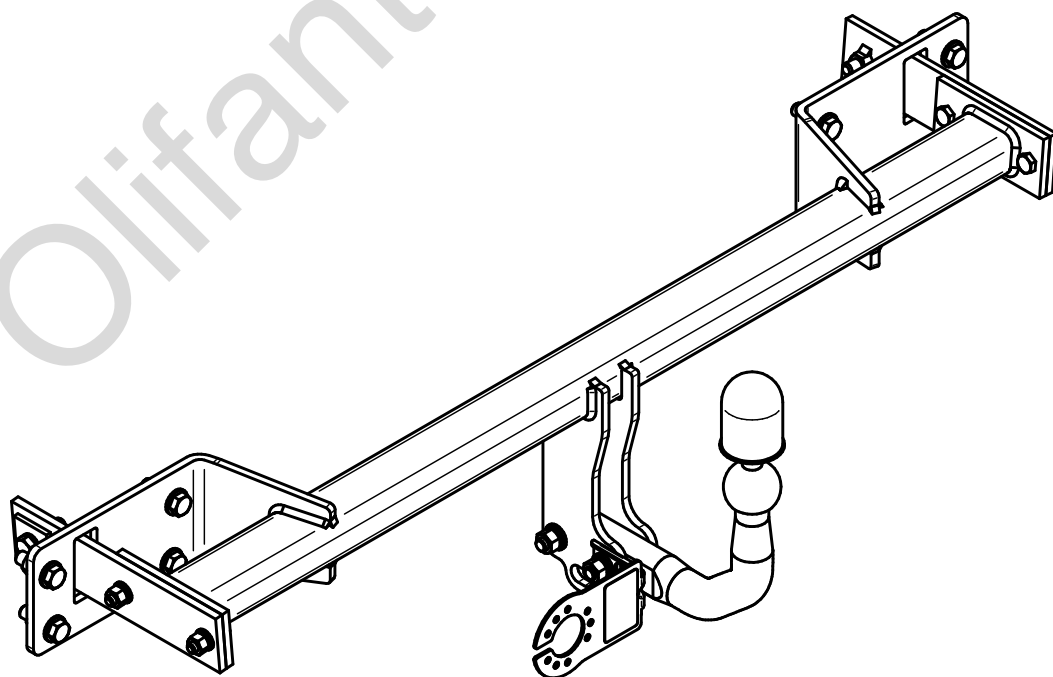

Typ: M-101
 A50-X
 (E20) 55R-01 3107
 D = 9,2 kN
 S = 80 kg

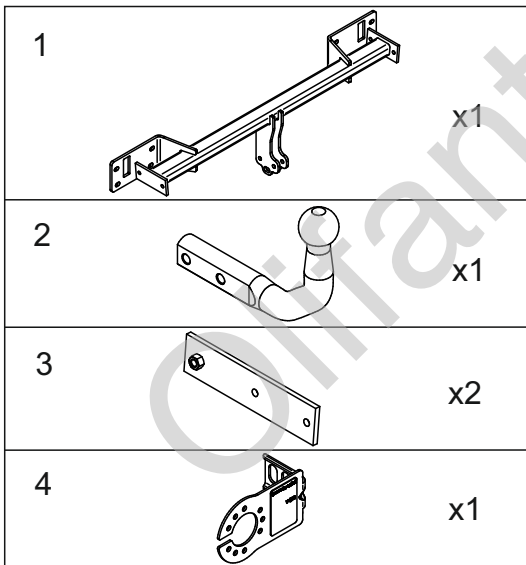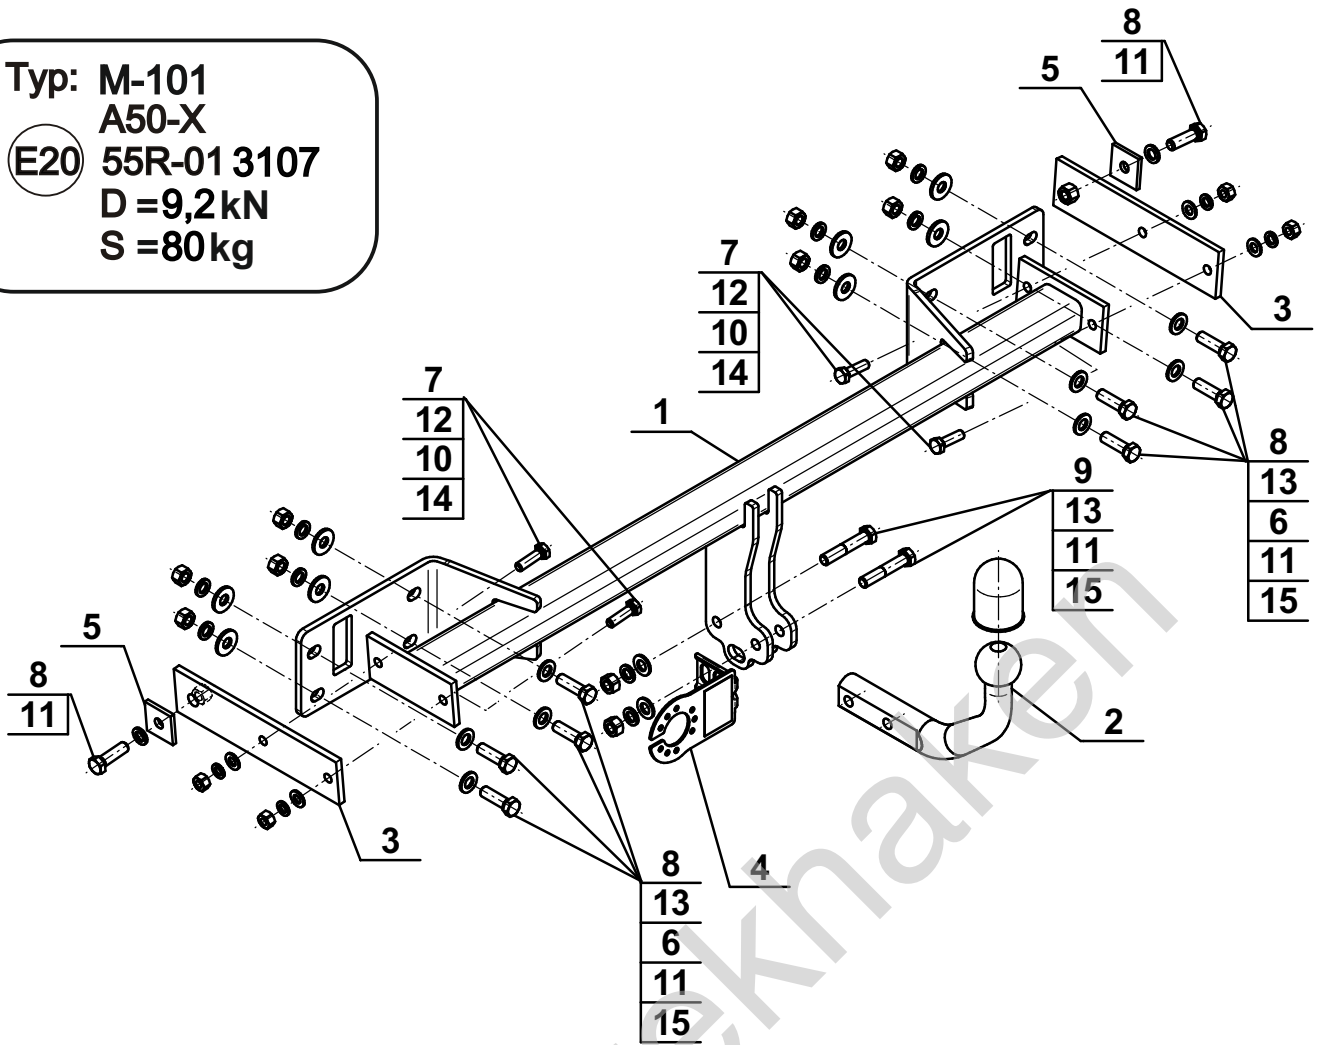


5		40x40x5/Ø12,5	x2
6		Ø30/Ø12,5x3	x8
7		M10x35 (PN/M-82105) (8.8)	x4
8		M12x40 (PN/M-82105) (8.8)	x10
9		M12x65 (PN/M-82101) (8.8)	x2
10		Ø10,2	x4
11		Ø12,2	x12
12		Ø10,5	x4
13		Ø13,0	x10
14		M10 (8)	x4
15		M12 (8)	x10




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

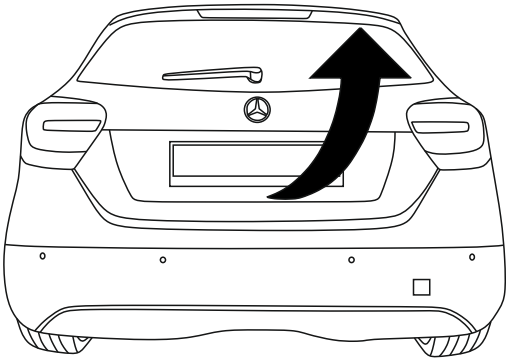


2

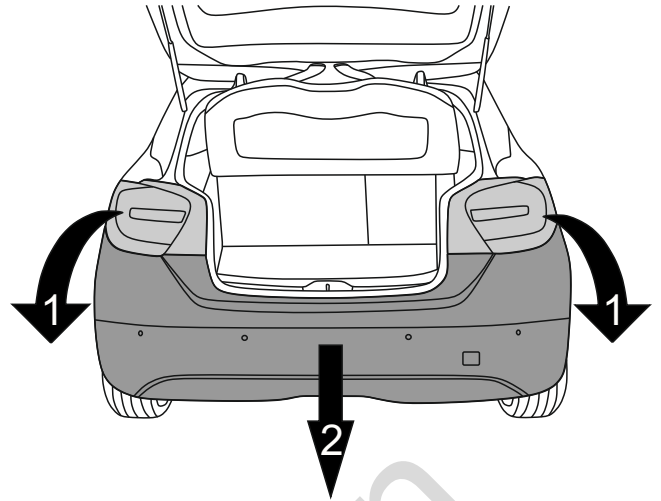


3

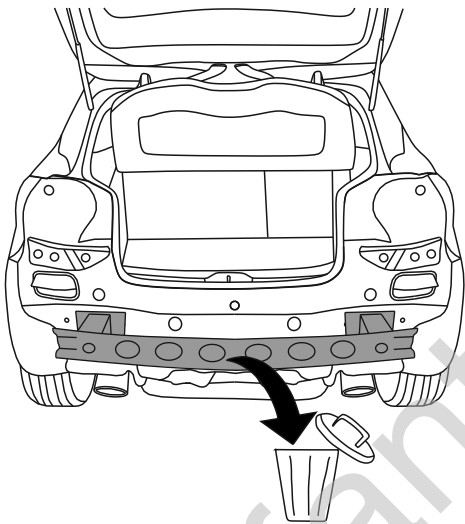


4






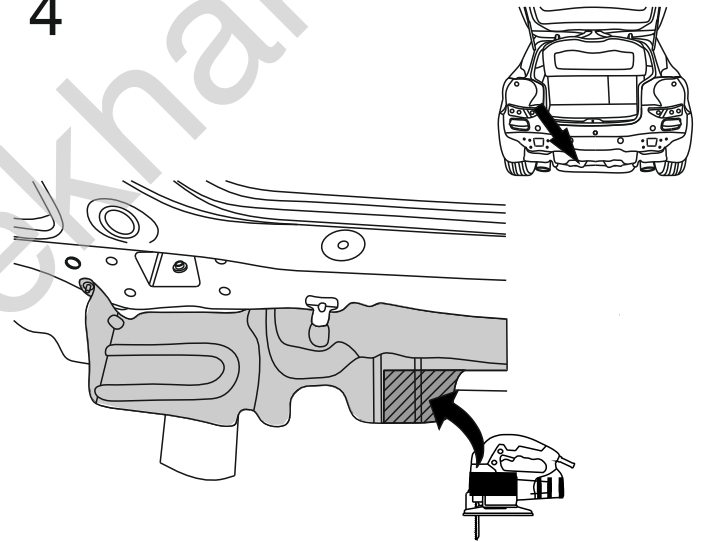


5

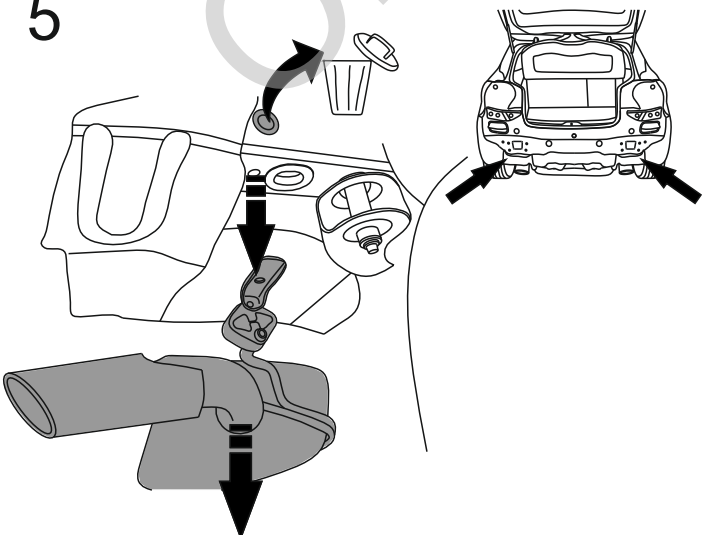


6

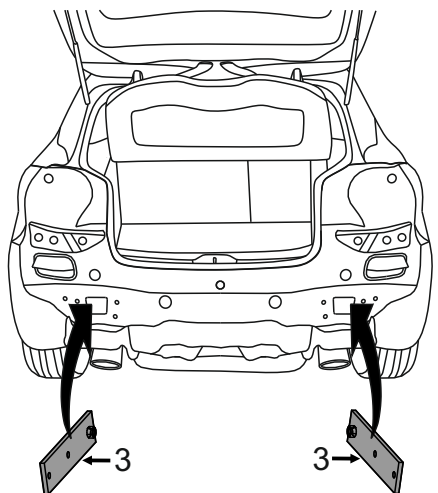


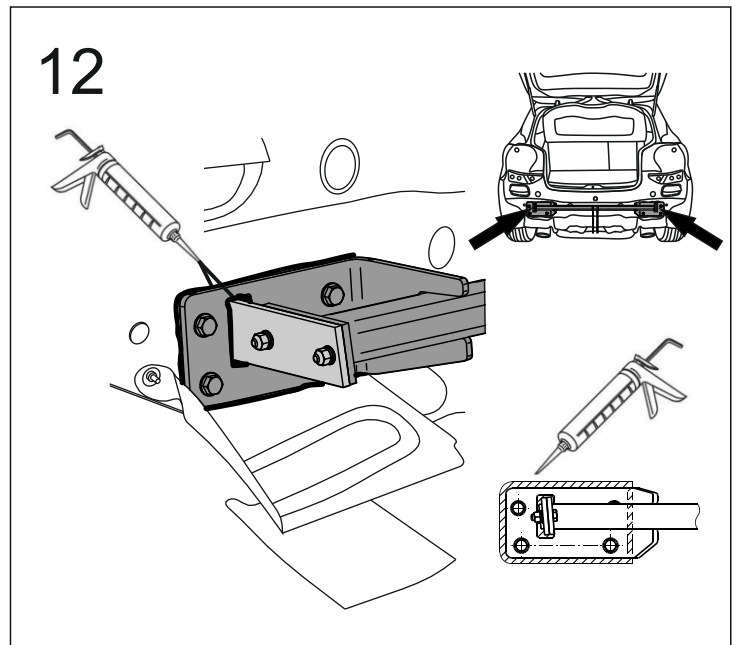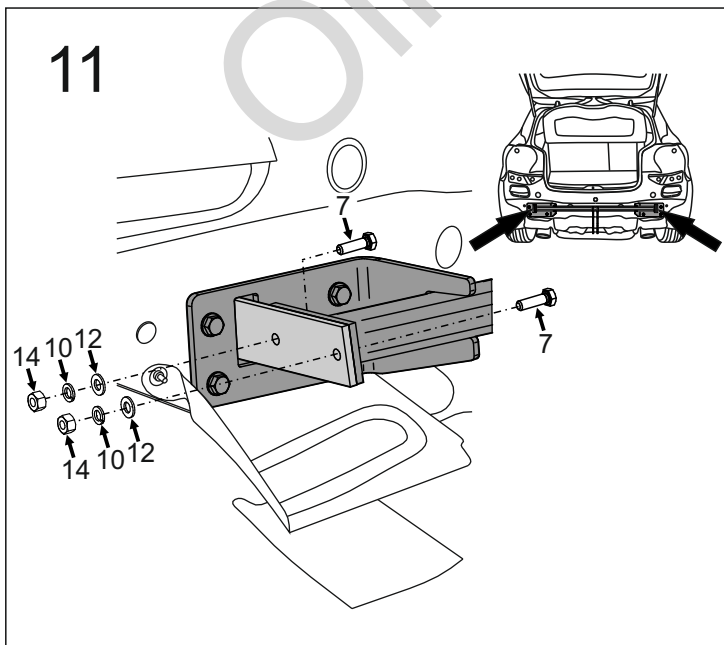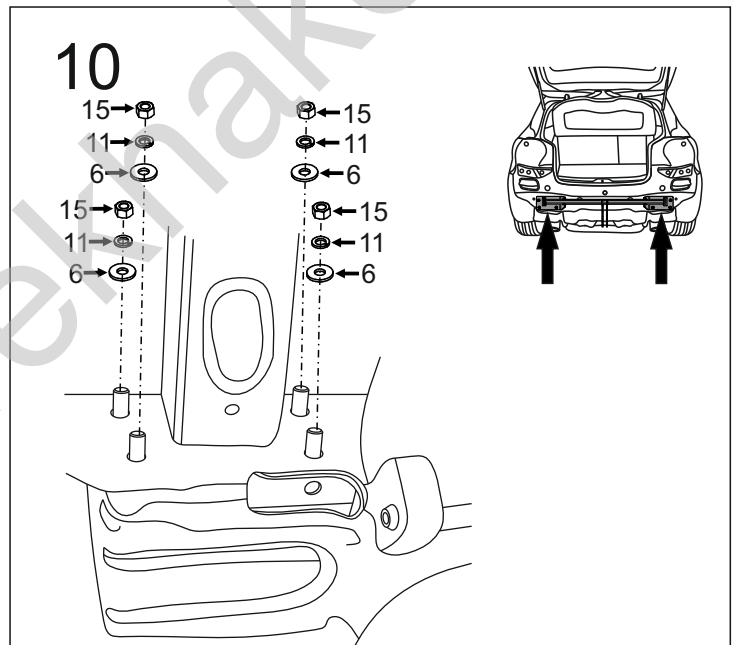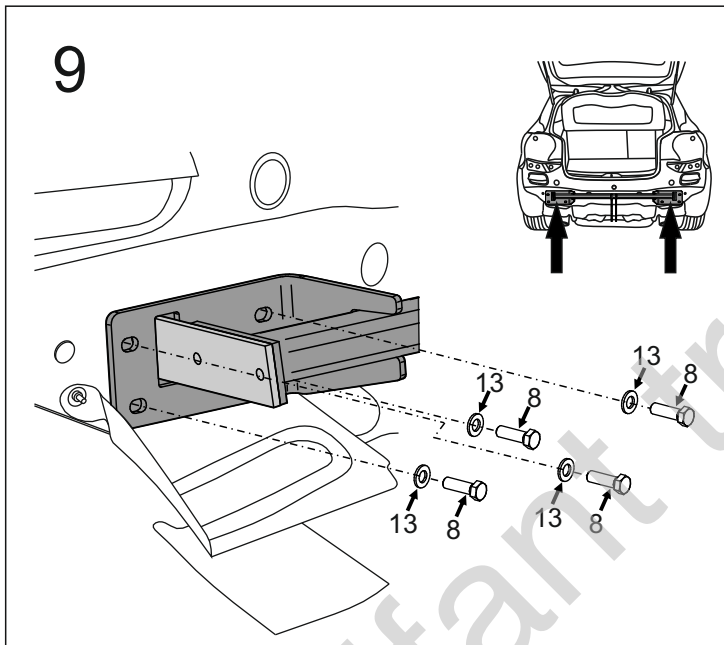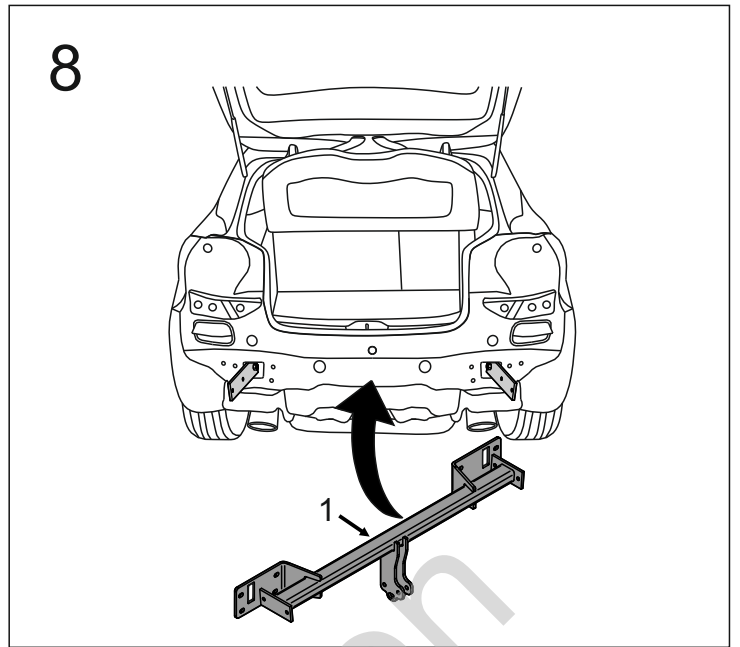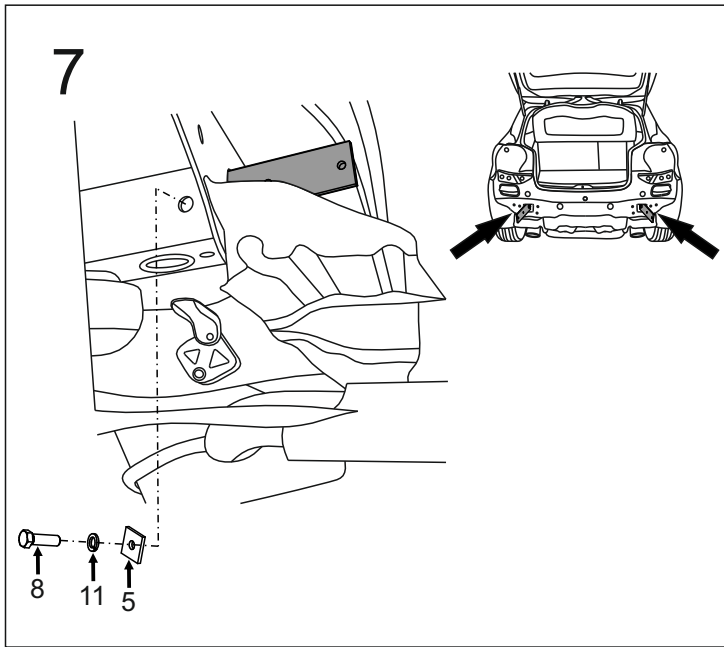

13

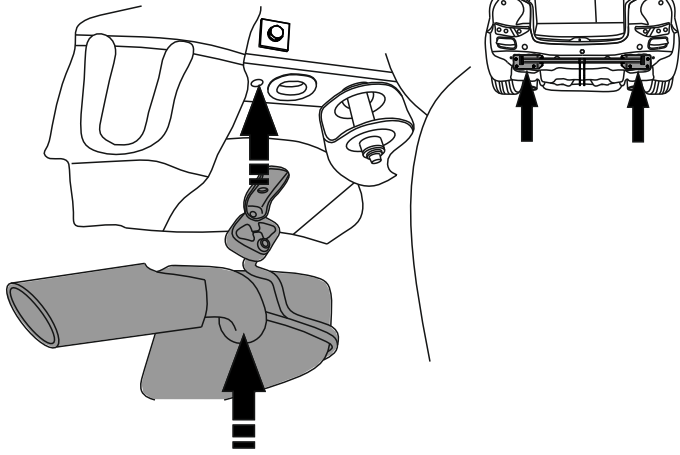

14

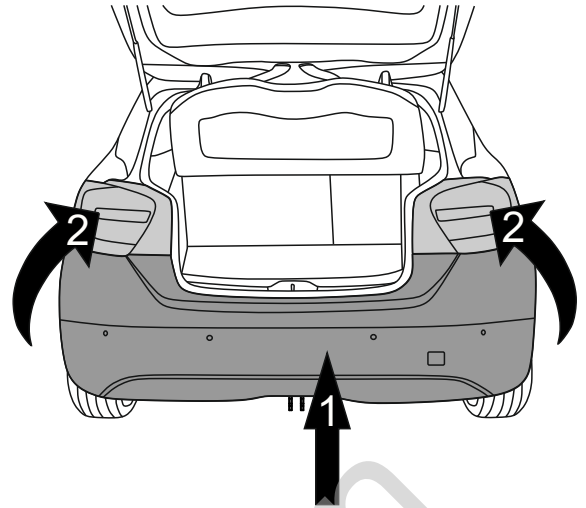

15

