

**Mitsubishi L200 (Pickup)**  
**Fiat Fullback (Pickup)**

**(2015 - 08/2019)**  
**(2015 - 08/2019)**

**M-335**


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.




YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>



YES	NO
<input type="checkbox"/>	<input checked="" type="checkbox"/>

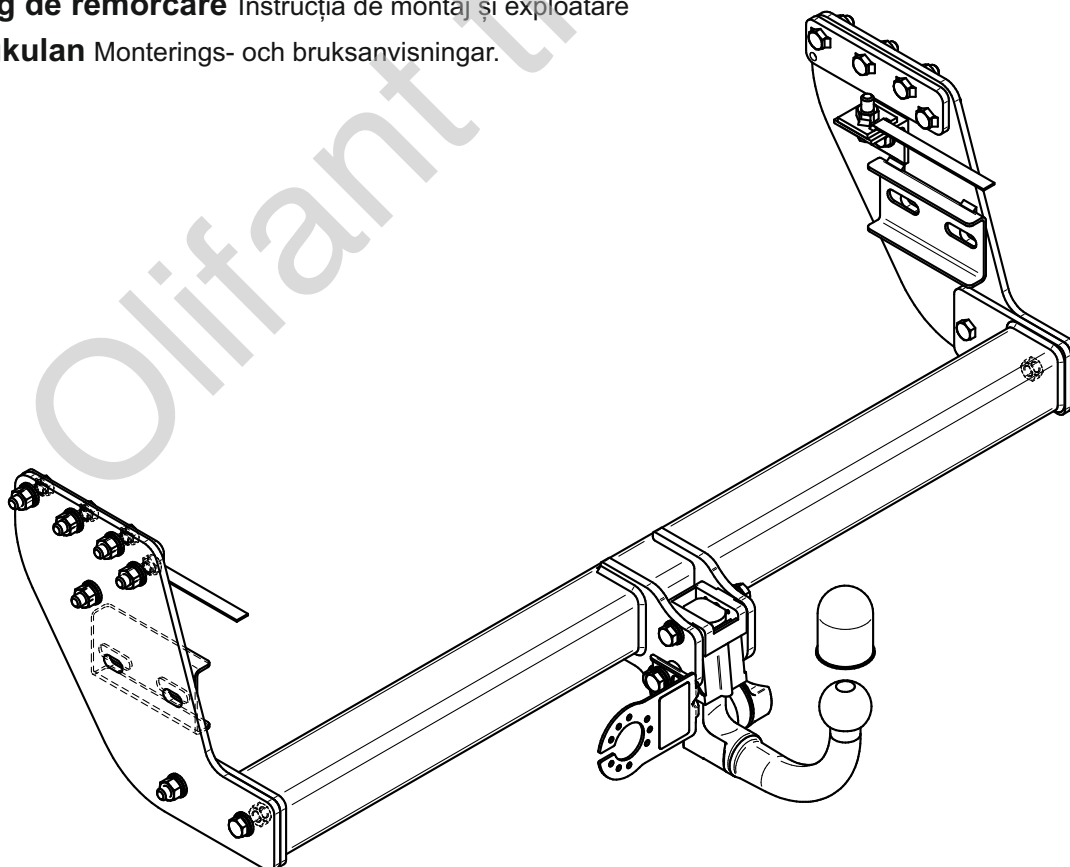

Typ: M-335  
 A50-X  
 E20 55R-01 4910  
 D = 14,8 kN  
 S = 125 kg






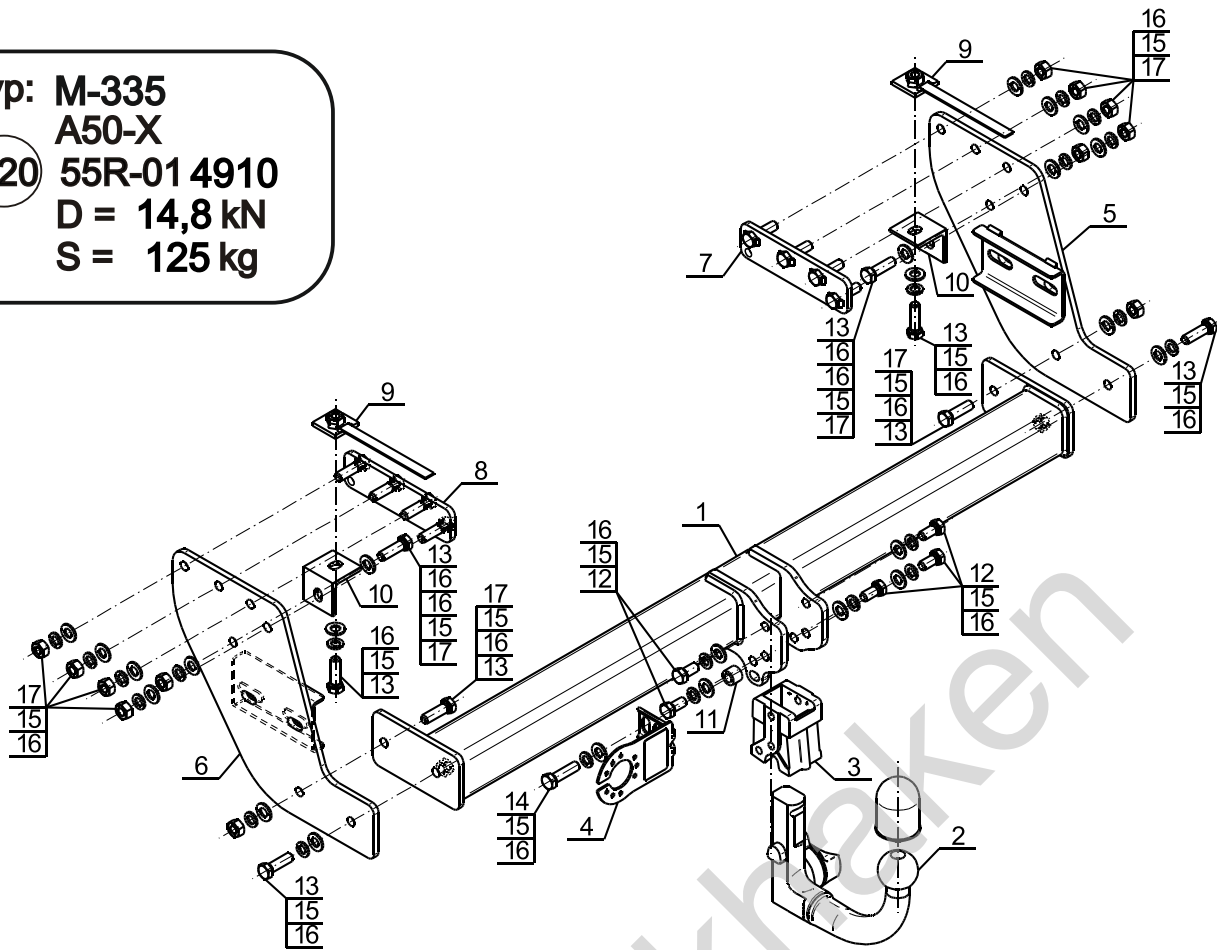








1		x1
2	(ACS-6023)	x1
3		x1
4		x1
5		x1
6		x1

7		x1
8		x1
9		x2
10		x2
11	Ø20/Ø12,5x15	x1
12	M12x25 (PN/M-82105) (8.8)	x5
13	M12x40 (PN/M-82105) (8.8)	x8
14	M12x45 (PN/M-82105) (8.8)	x1
15	Ø12,2	x22
16	Ø13,0	x24
17	M12 (8)	x12




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

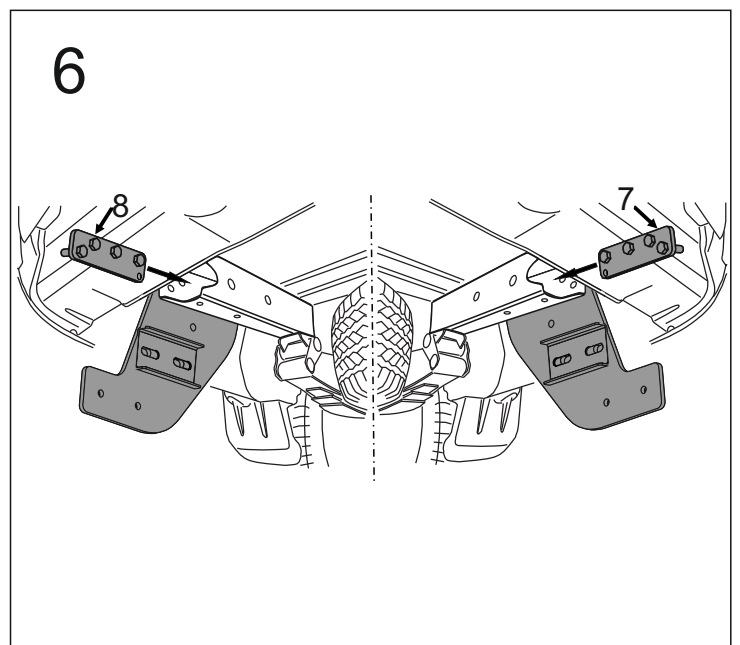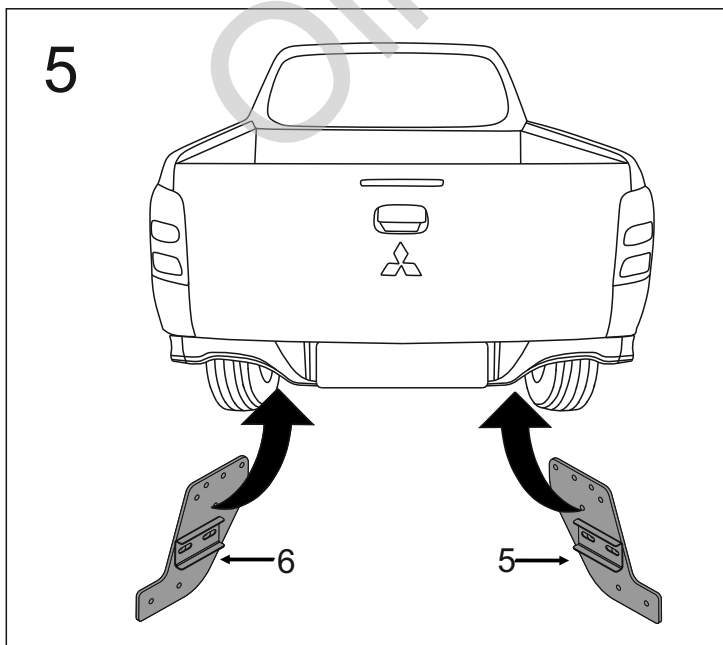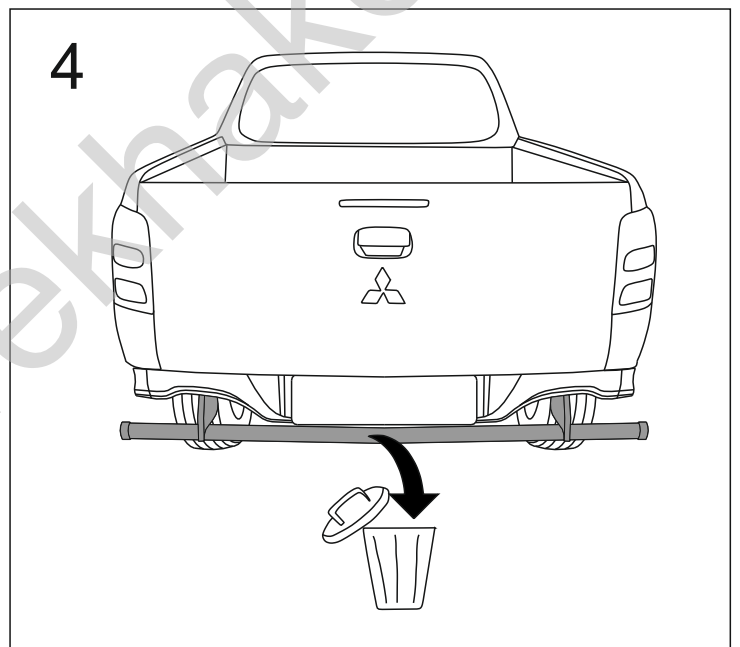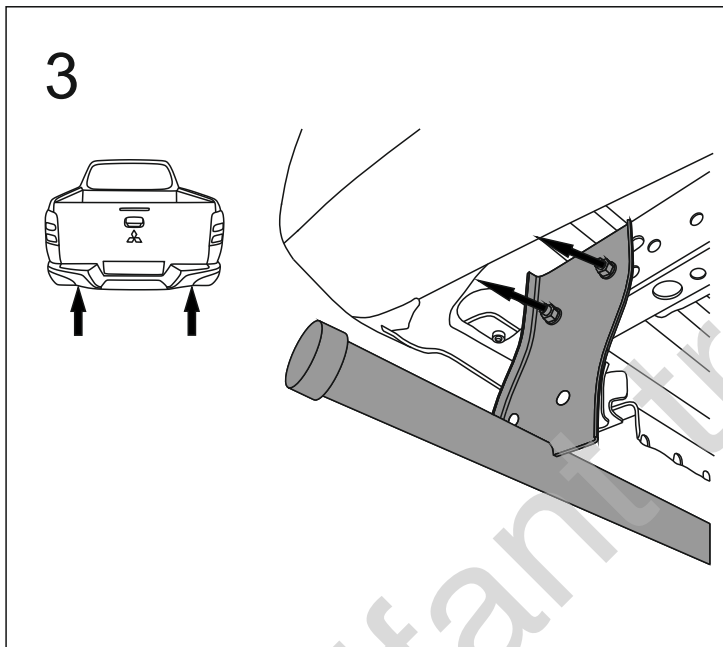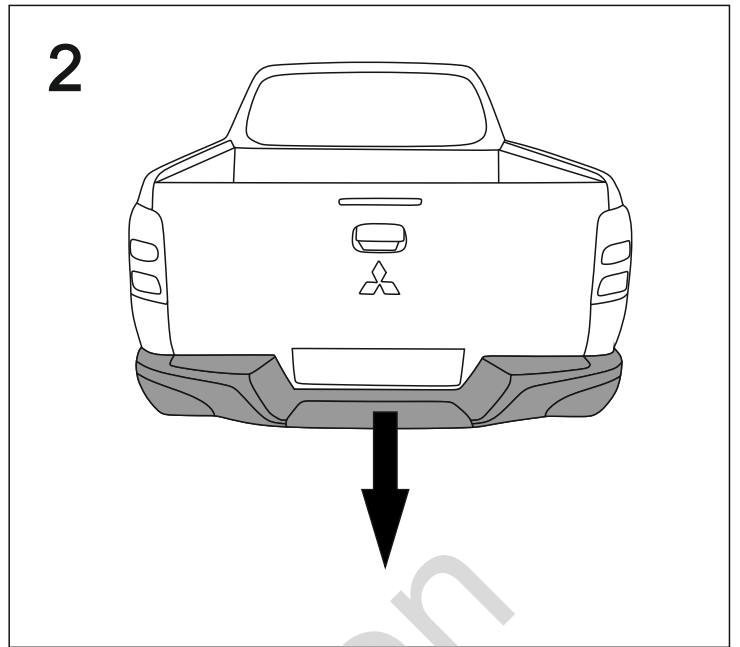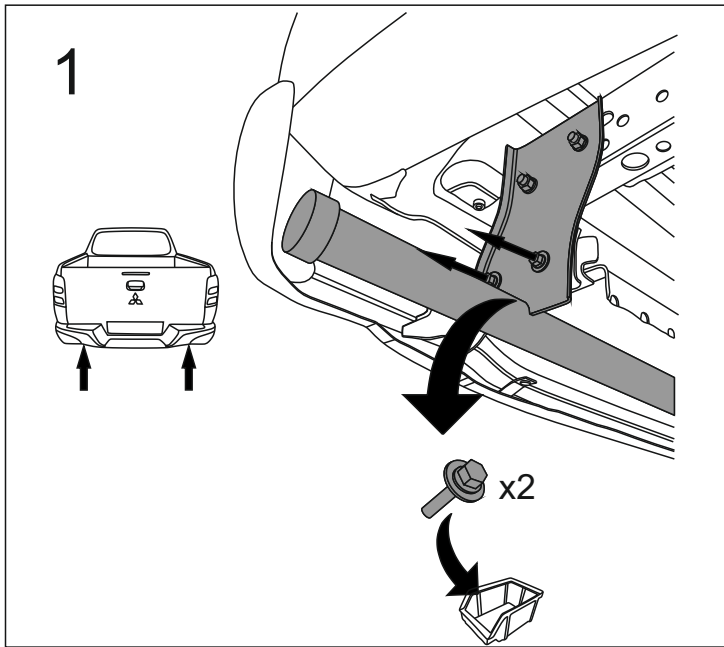


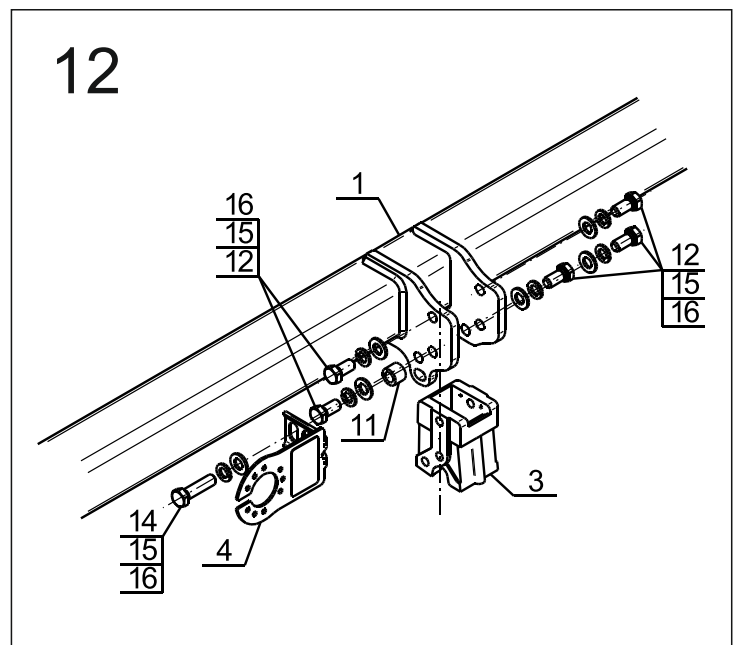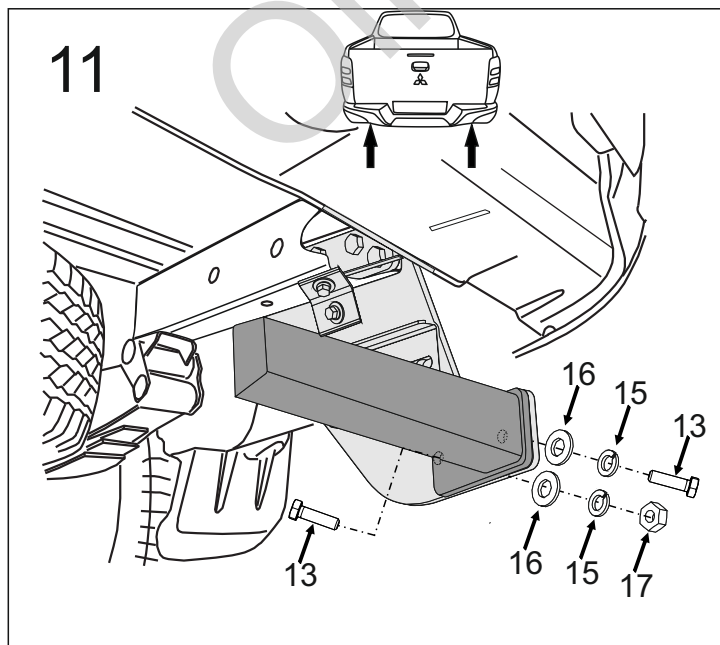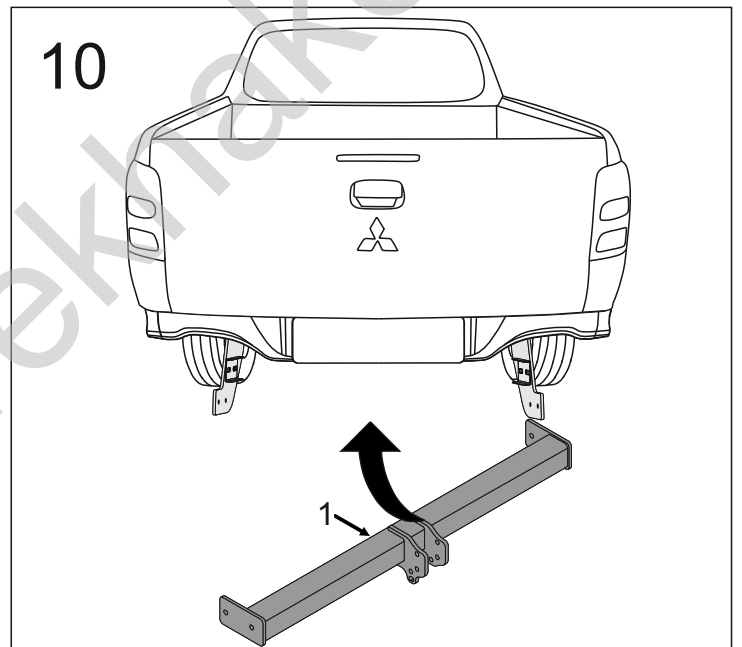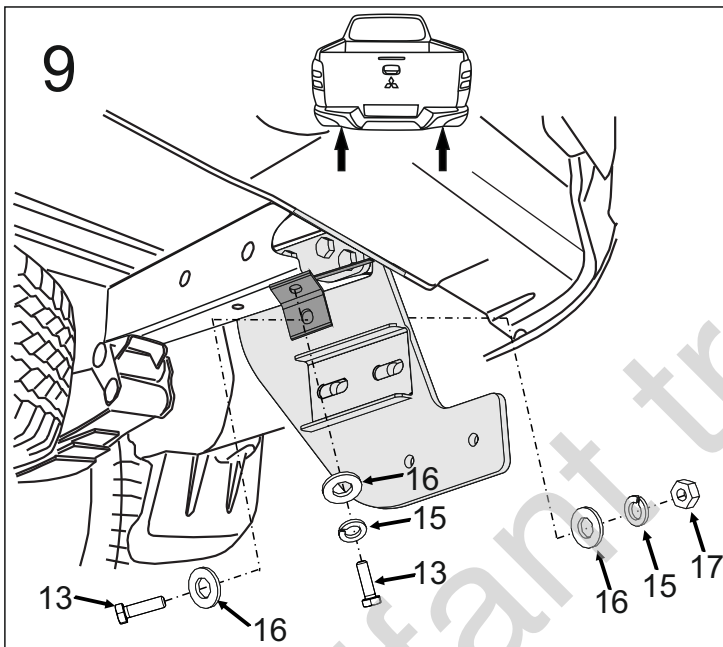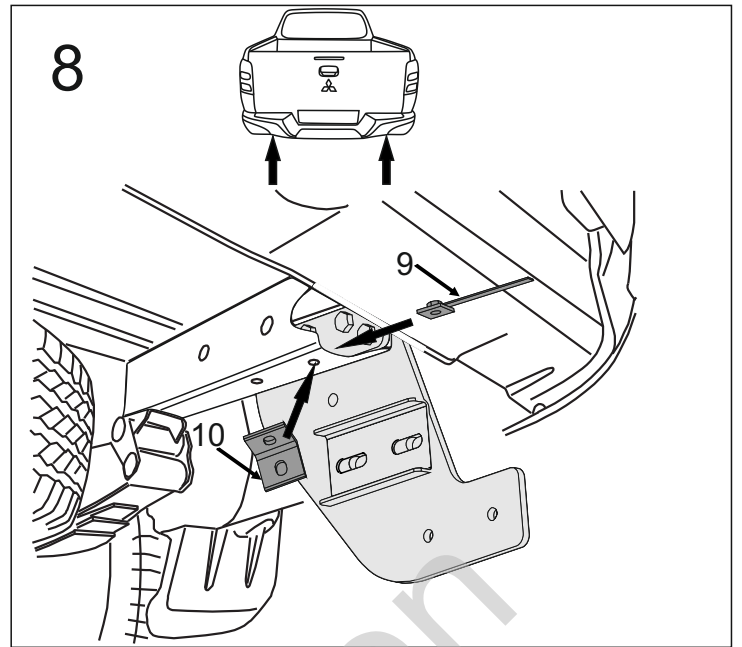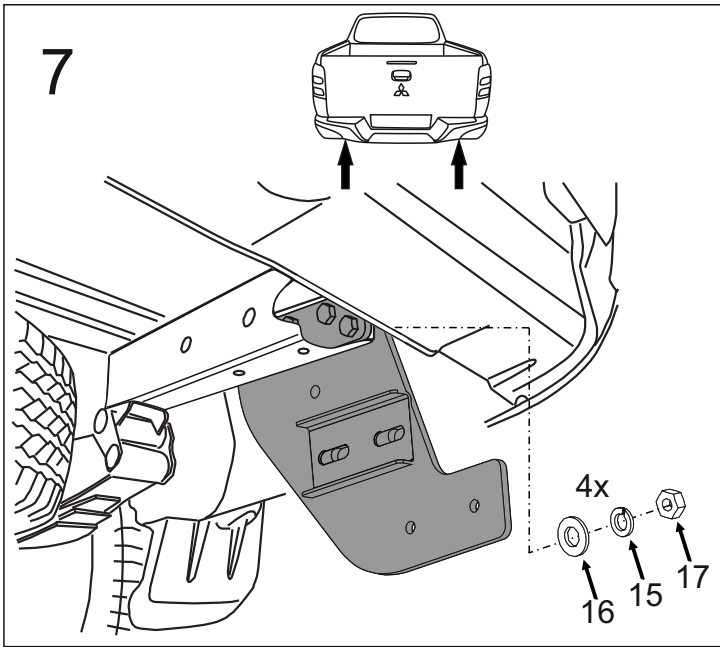


13

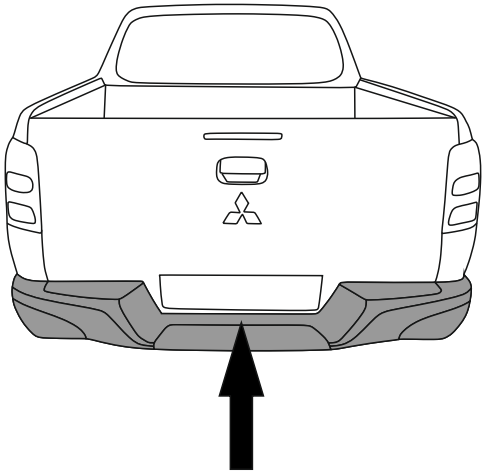

14

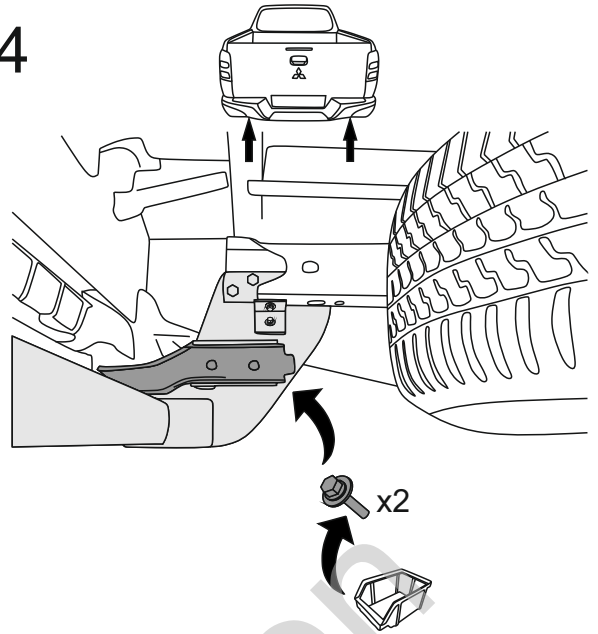

15

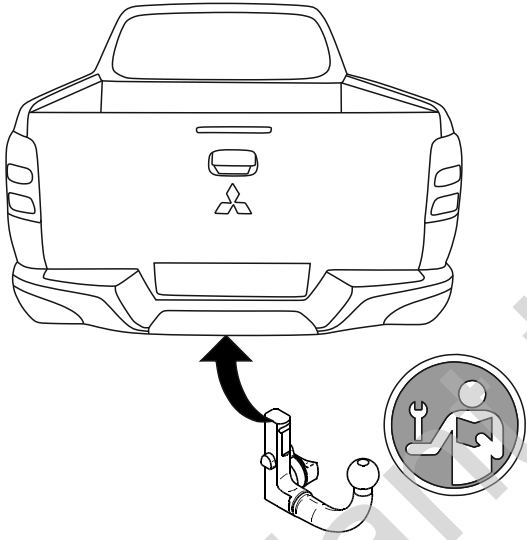

16

