

Opel Zafira Tourer 5D
~~(CNG, Flex-Fix)~~

(01/2012 - 2019)

O-234

PL Zaczep Kulowy Instrukcja montażu i eksploatacji

GB Tow bar Installation and operating instructions

D Die Anhängerkupplung Montage- und Gebrauchsanleitung

ES Gancho de remolque Las instrucciones de instalación y de operación

RU Фаркоп Инструкция по установке и эксплуатации ТСУ

FR Attelage Notice de montage et d'utilisation

IT Gancio traino Istruzioni di montaggio

CZ Tažné zařízení Návod na montáž a použití

RO Cârlig de remorcare Instrucția de montaj și exploatare

SE Dragkulan Monterings- och bruksanvisningar.




YES

NO





YES

NO

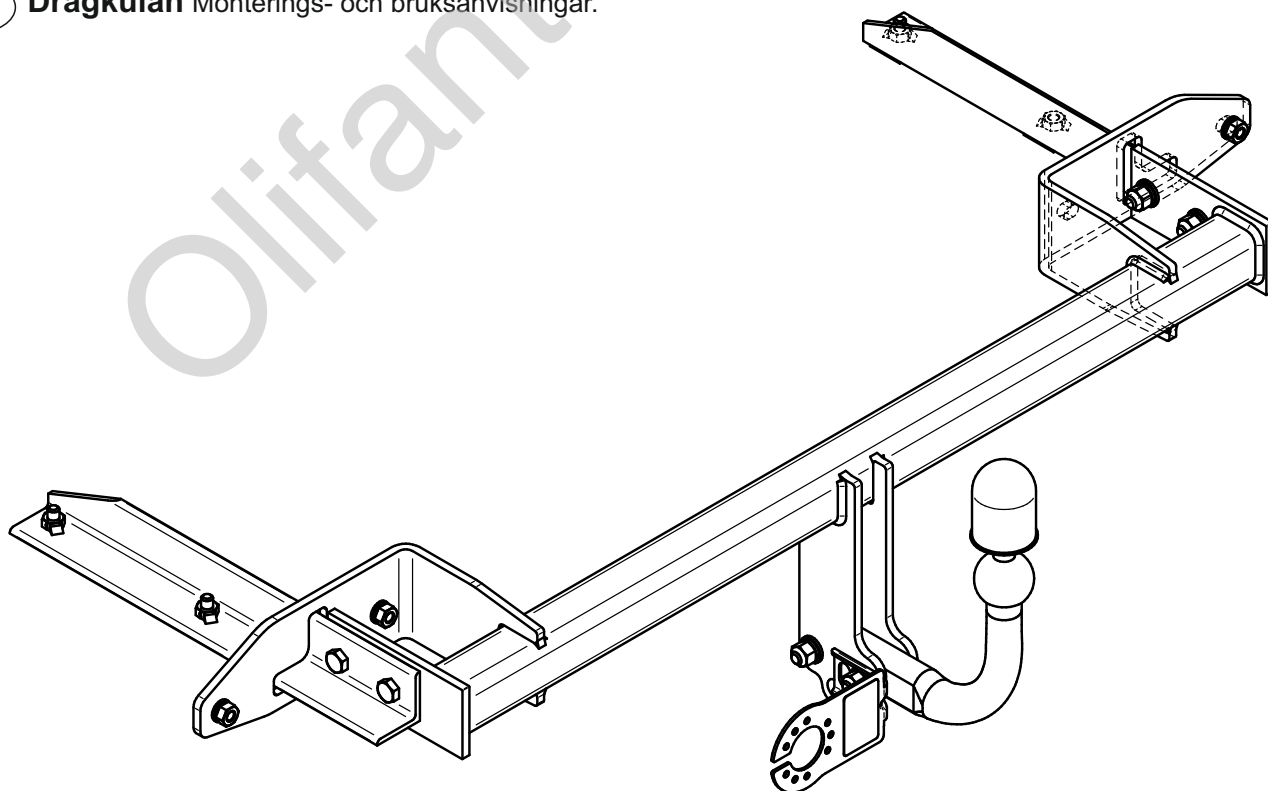




Typ: O-234
 A50-X
 E20 55R-01 3109
 D = 9,9 kN
 S = 75 kg

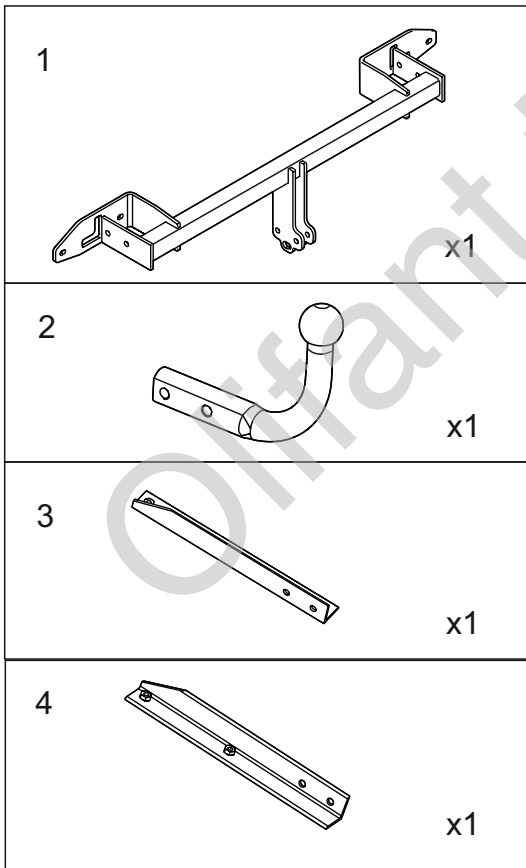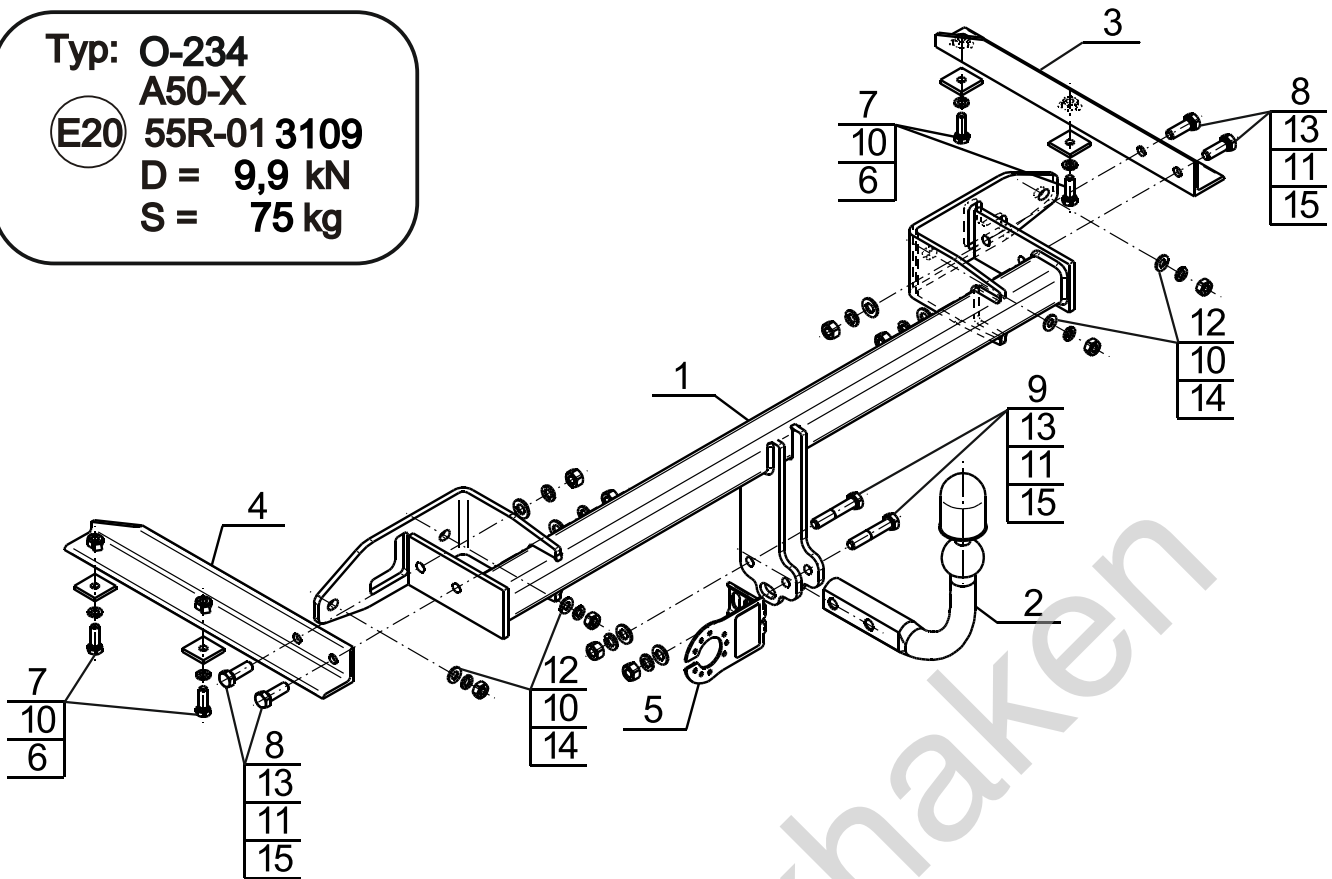

5		x1
6	35x35x5/Ø10,5	x4
7	M10x30 (PN/M-82105) (8.8)	x4
8	M12x35 (PN/M-82105) (8.8)	x4
9	M12x65 (PN/M-82101) (8.8)	x2
10	Ø10,2	x8
11	Ø12,2	x6
12	Ø10,5	x4
13	Ø13,0	x6
14	M10 (8)	x4
15	M12 (8)	x6



8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)

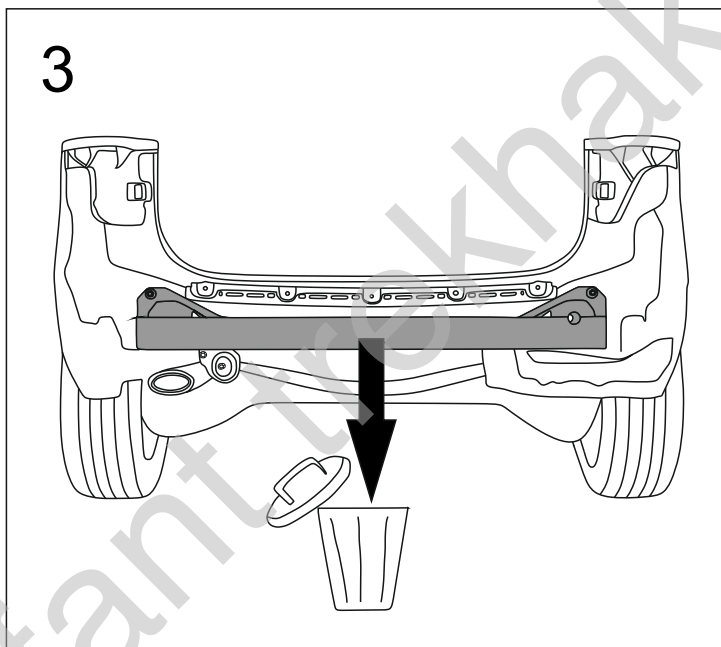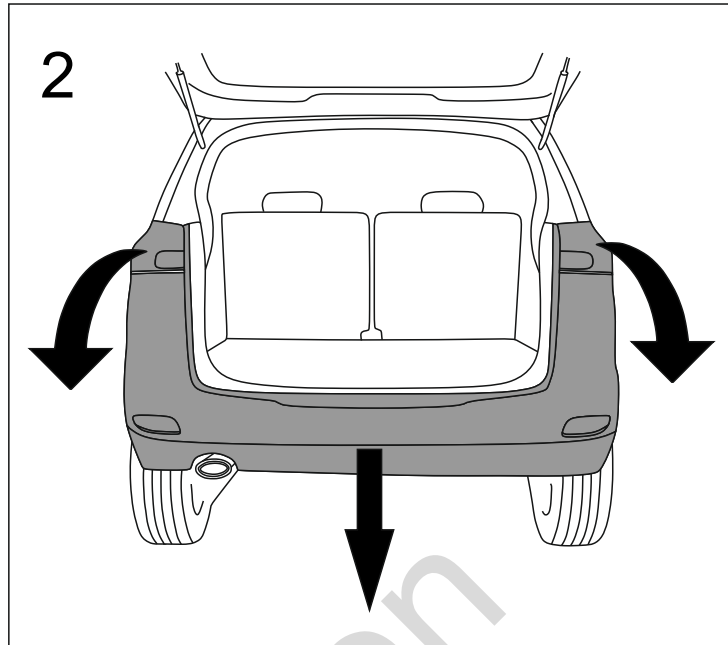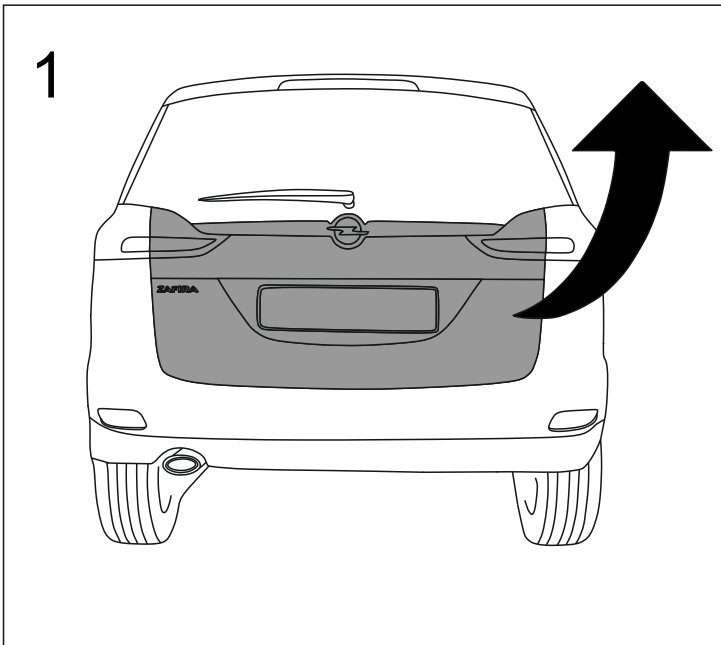







4

STEINHOF STEINHOF Sp. z o.o. Sp. K.	
Opel Zafira Tourer 5D (012012-)	
Cat. no: O-234	
Typ: O-234 A020-X 55R-01 3109 D = 9,24 kN S = 75 kg R = 1500 kg	


10	19
↓	↓
15	22

STEINHOF STEINHOF Sp. z o.o. Sp. K.	
Opel Zafira Tourer 5D (012012-)	
Cat. no: O-234	
Typ: O-234 A020-X 55R-01 3109 D = 9,24 kN S = 75 kg R = 1500 kg	


5
↓
22

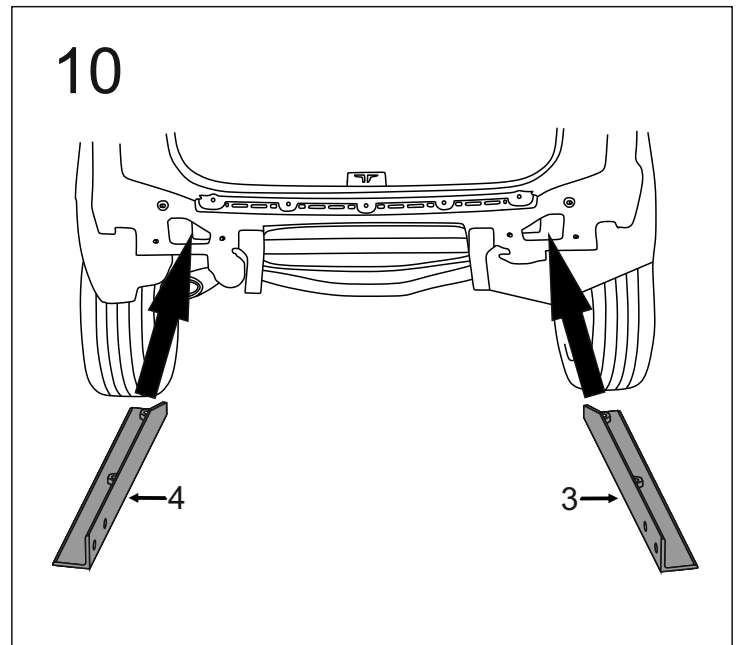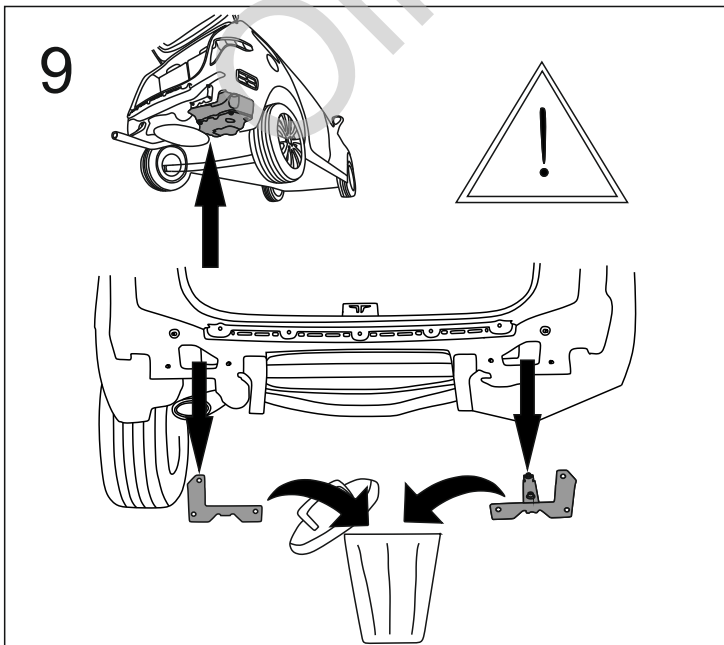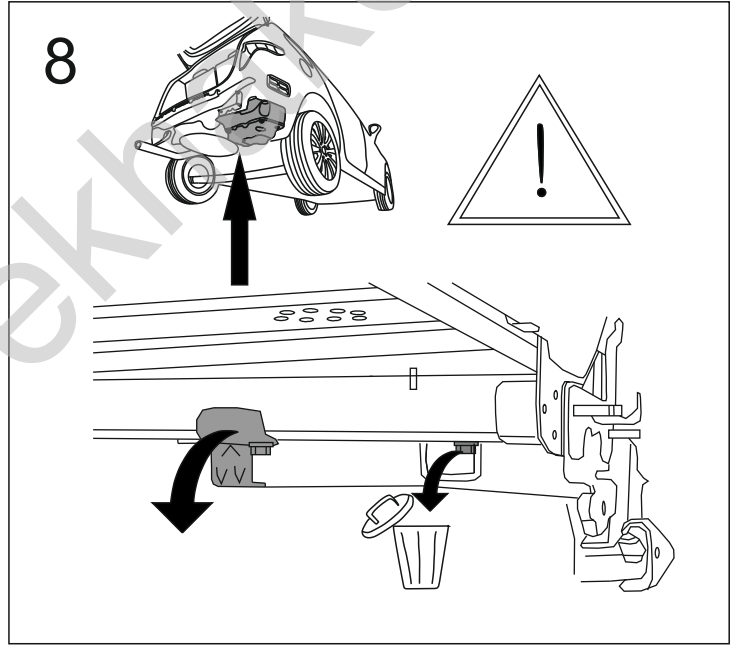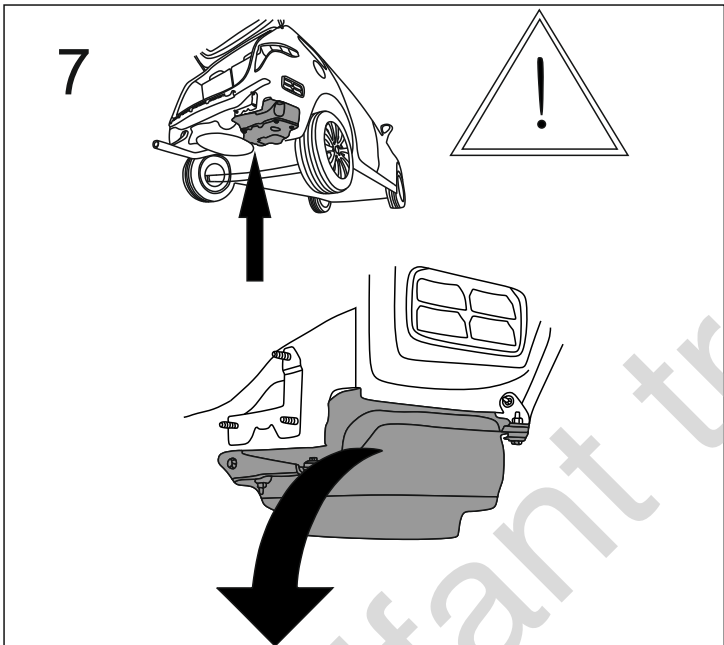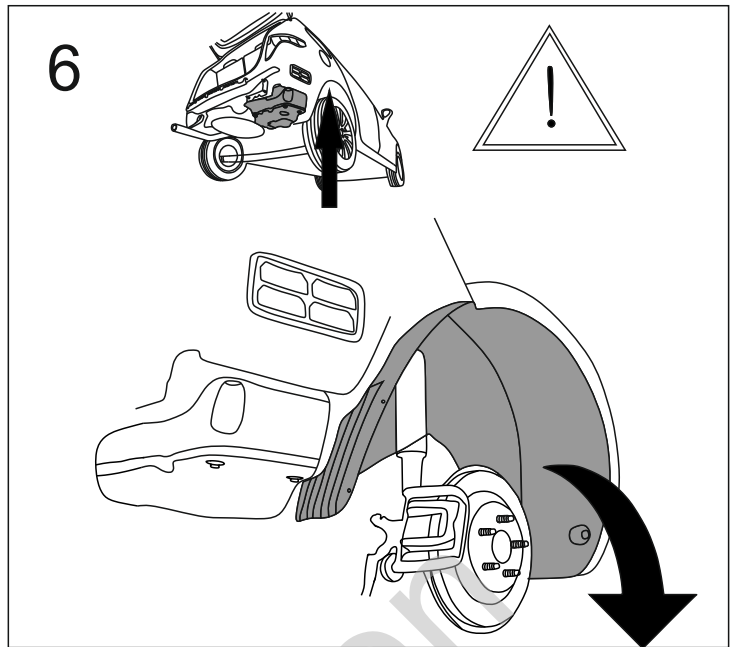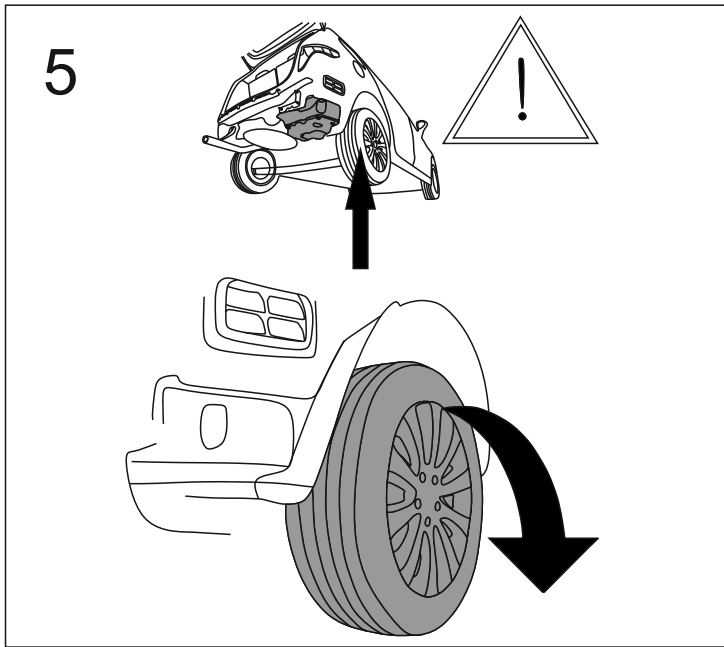


11

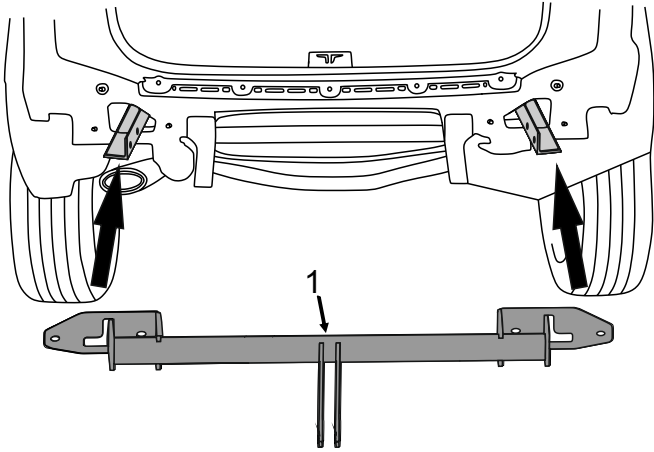


12






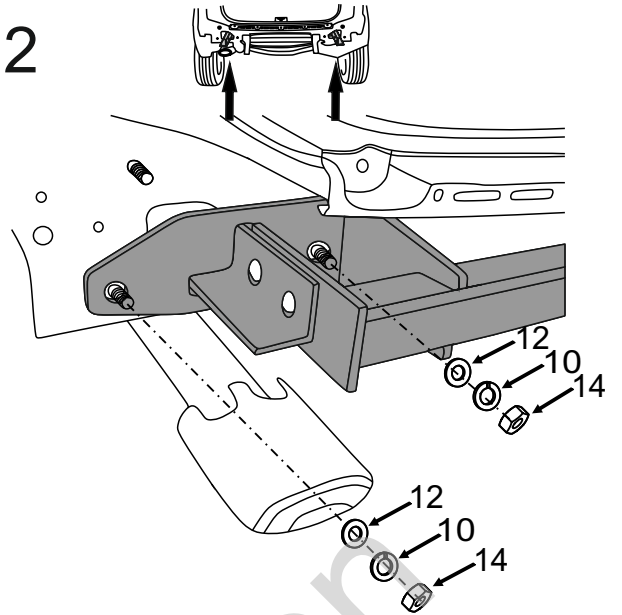


13

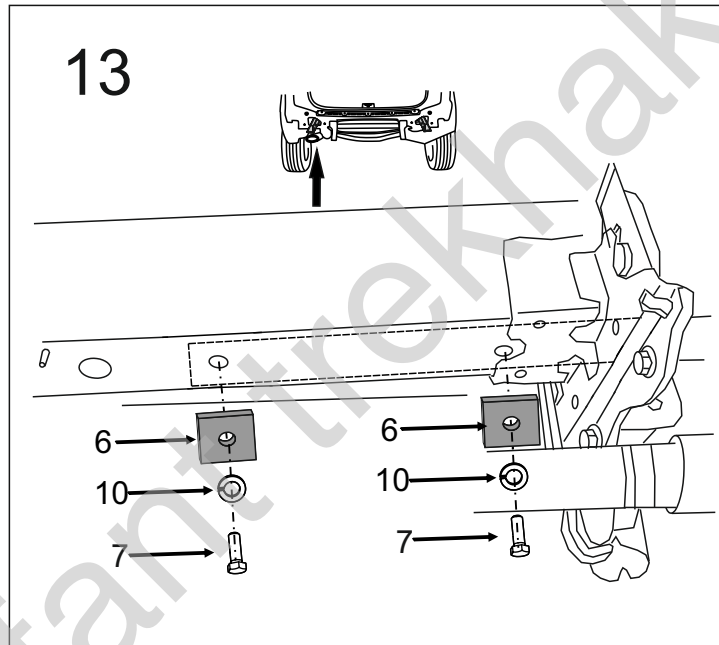


14

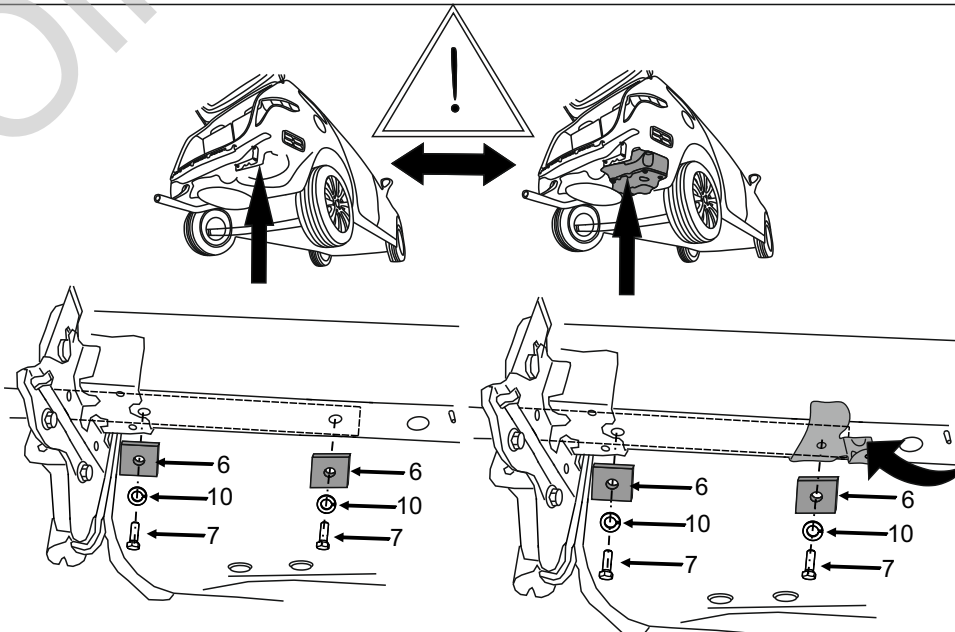


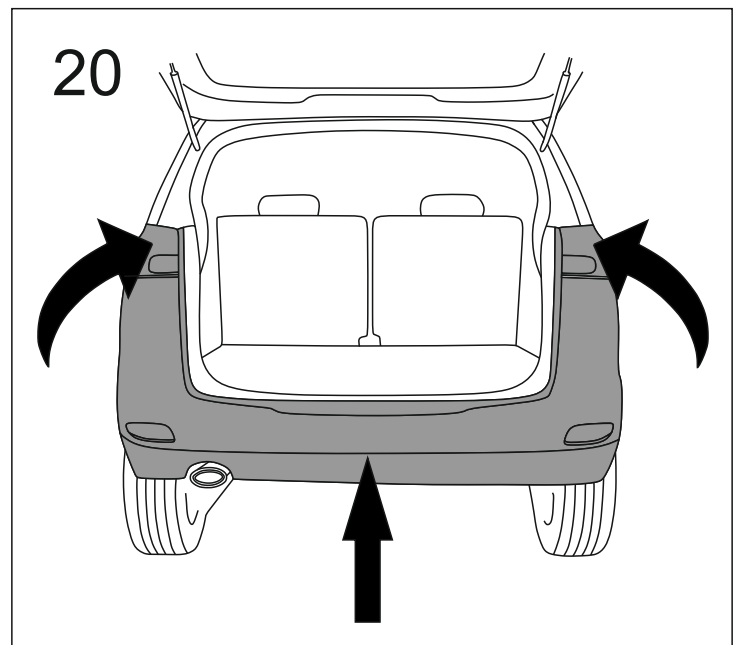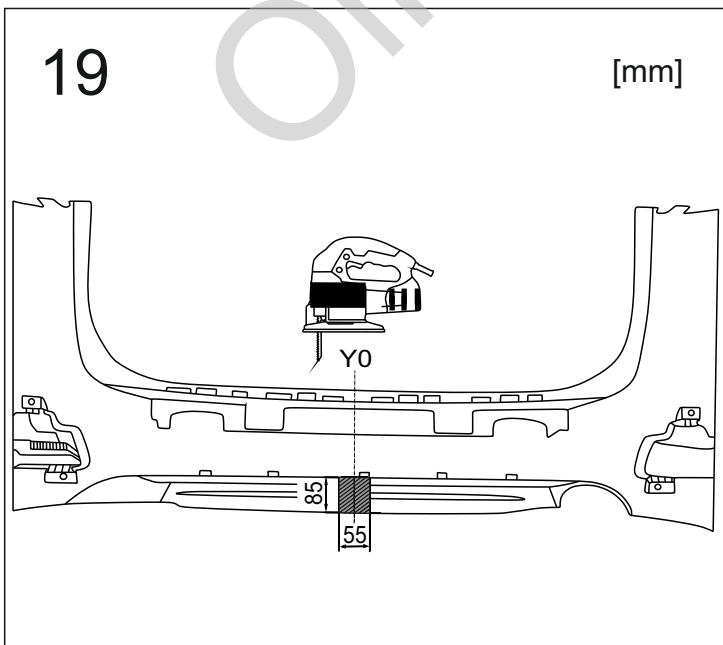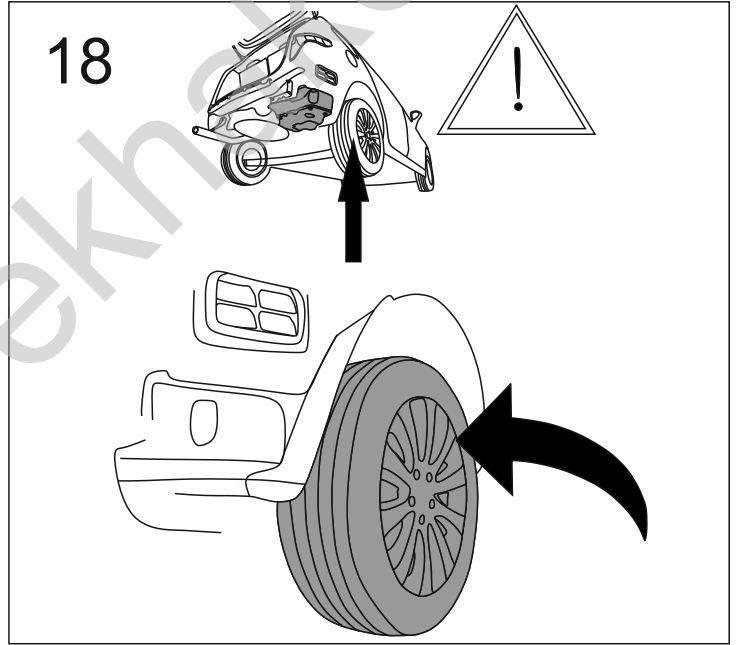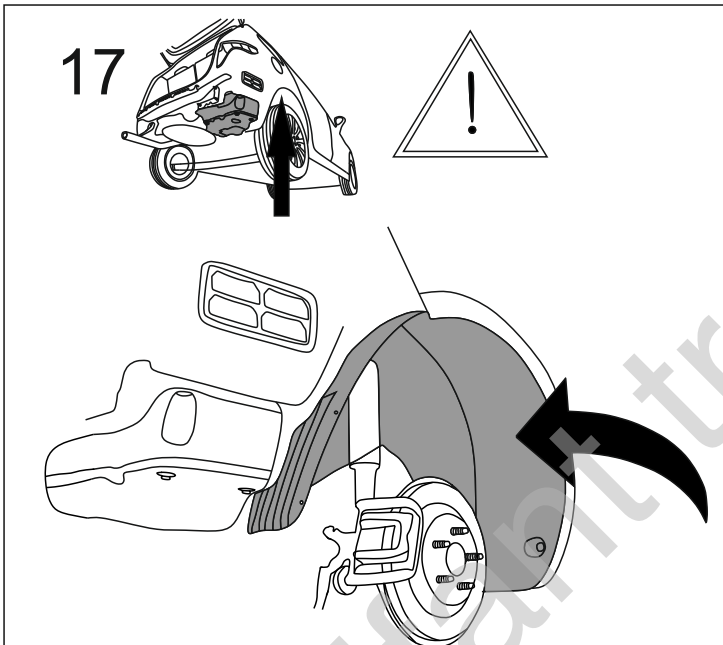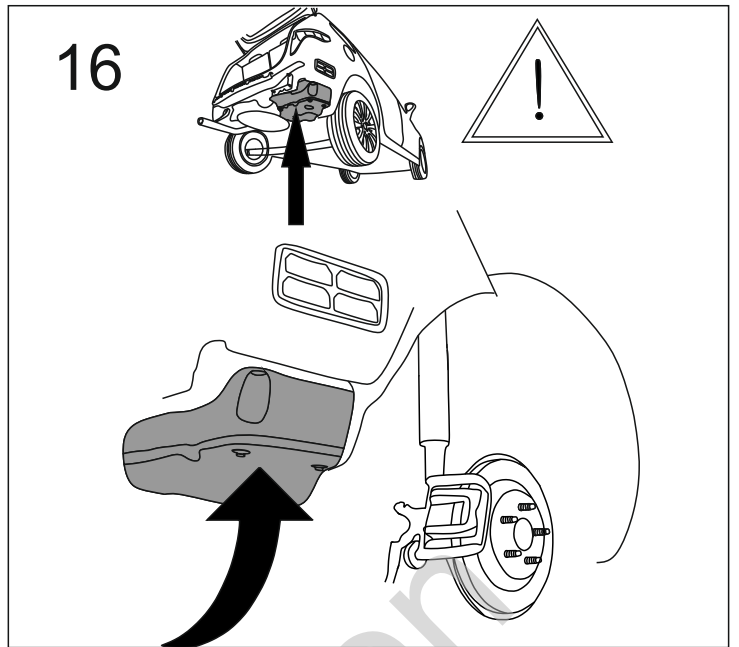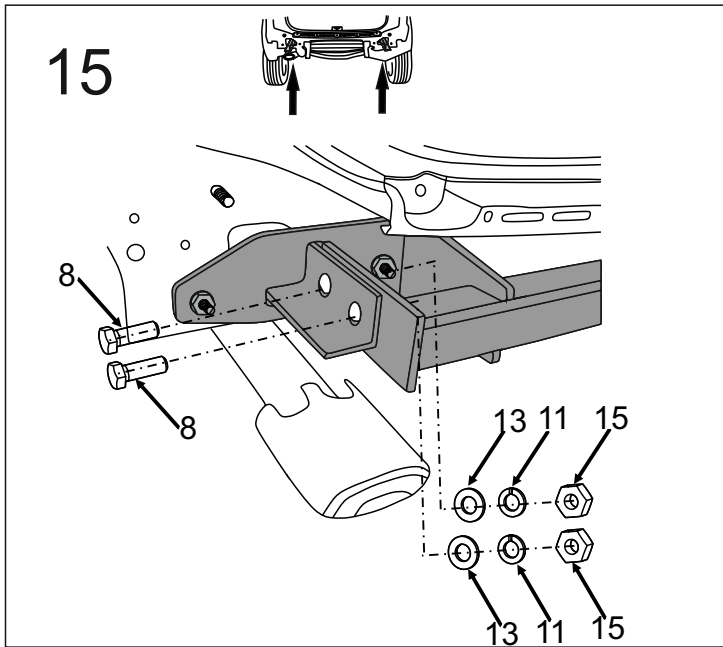

21

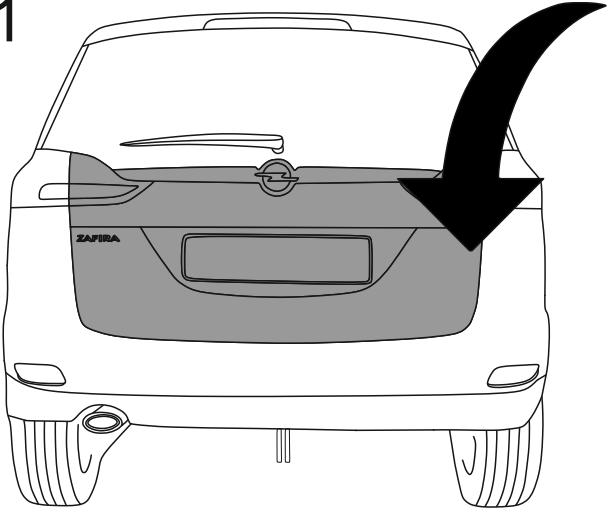

22

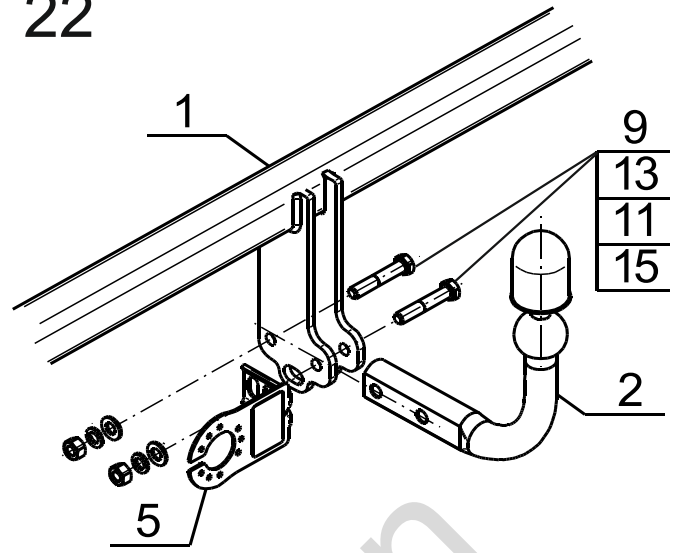

Olifant trekhaken