

Seat Arona (KJ7, KJP),  
~~(CNG/FGI)~~

(07/2017 - →)

S-119


- PL** Zaczep Kulowy Instrukcja montażu i eksploatacji
- GB** Tow bar Installation and operating instructions
- D** Die Anhängerkupplung Montage- und Gebrauchsanleitung
- ES** Gancho de remolque Las instrucciones de instalación y de operación
- RU** Фаркоп Инструкция по установке и эксплуатации ТСУ
- FR** Attelage Notice de montage et d'utilisation
- IT** Gancio traino Istruzioni di montaggio
- CZ** Tažné zařízení Návod na montáž a použití
- RO** Cârlig de remorcare Instrucția de montaj și exploatare
- SE** Dragkulan Monterings- och bruksanvisningar.




YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>




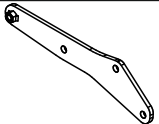
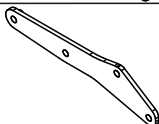






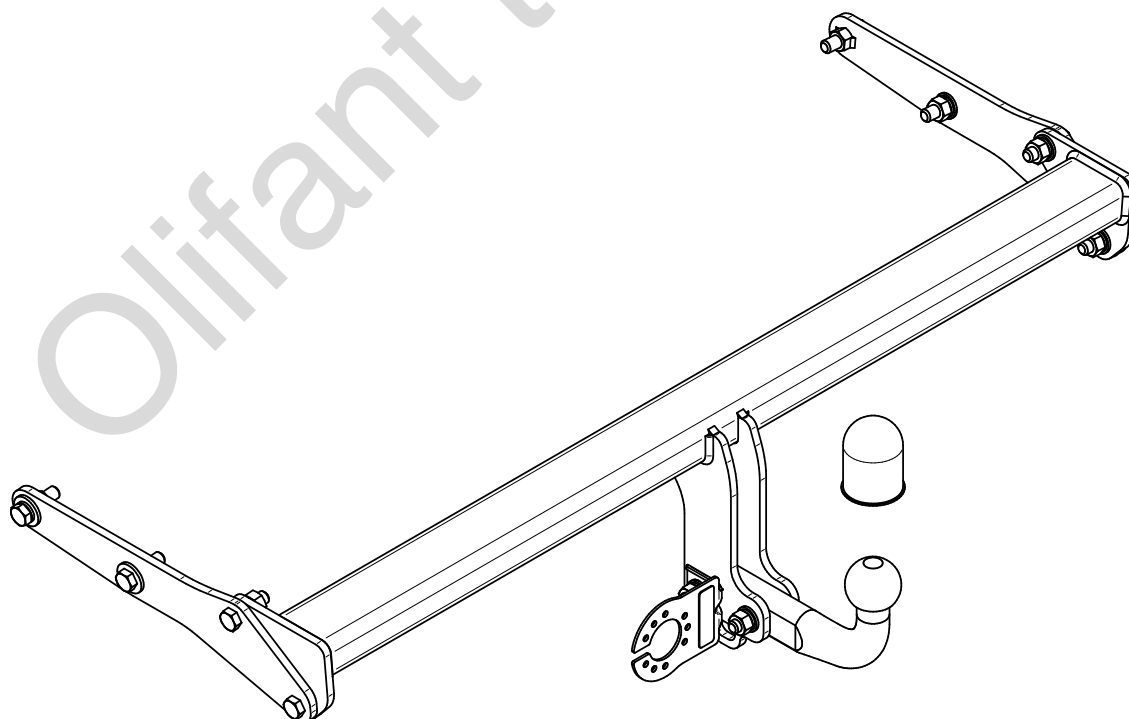

YES	NO
<input type="checkbox"/>	<input checked="" type="checkbox"/>

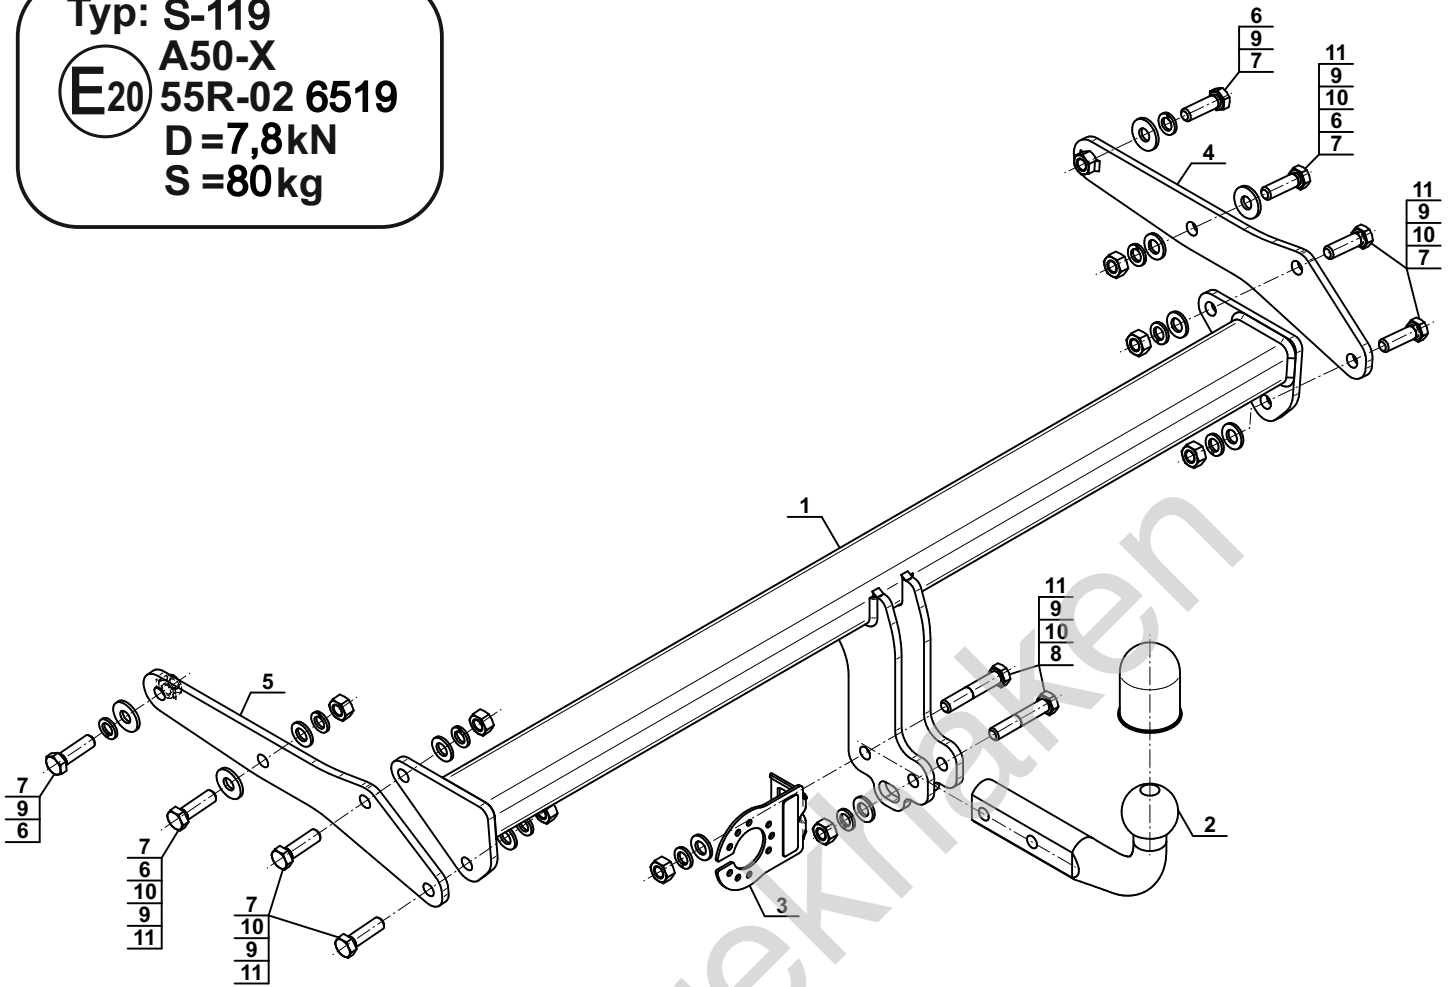

Typ: S-119  
 A50-X  
 E20 55R-02 6519  
 D = 7,8kN  
 S = 80kg

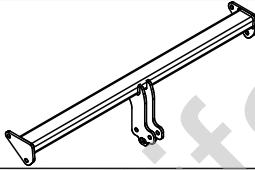


1		x1
2		x1
3		x1
4		x1
5		x1

6	 Ø30/Ø12,5x3	x4
7	 M12x40 (PN/M-82105) (8.8)	x8
8	 M12x65 (PN/M-82101) (8.8)	x2
9	 Ø12,2	x10
10	 Ø13,0	x8
11	 M12 (8)	x8




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

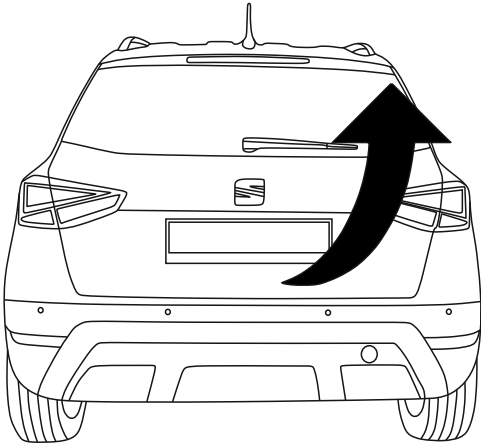


2

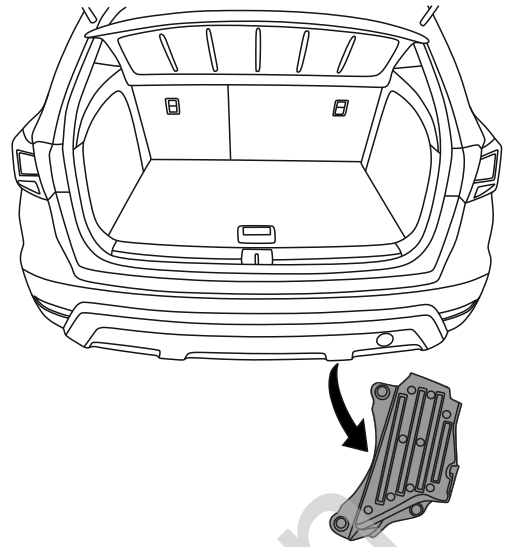


3

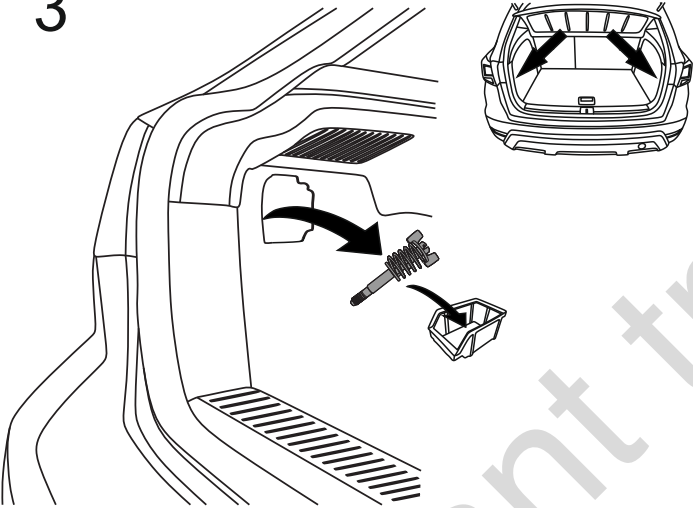


4






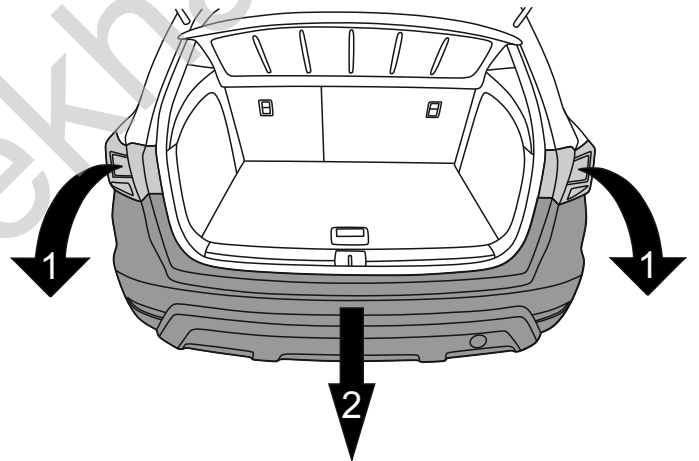


5


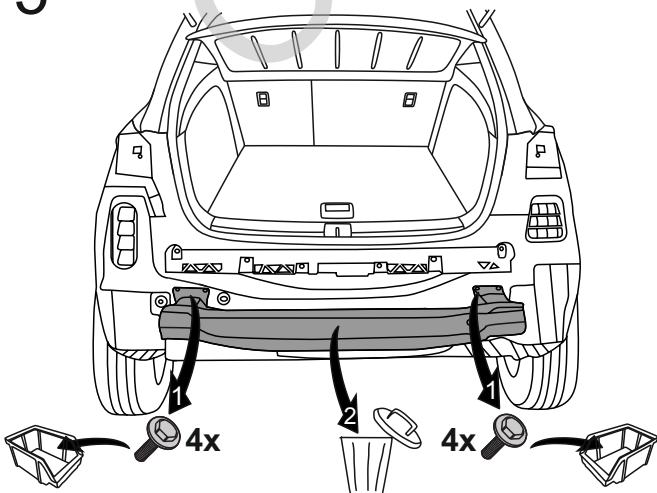


6


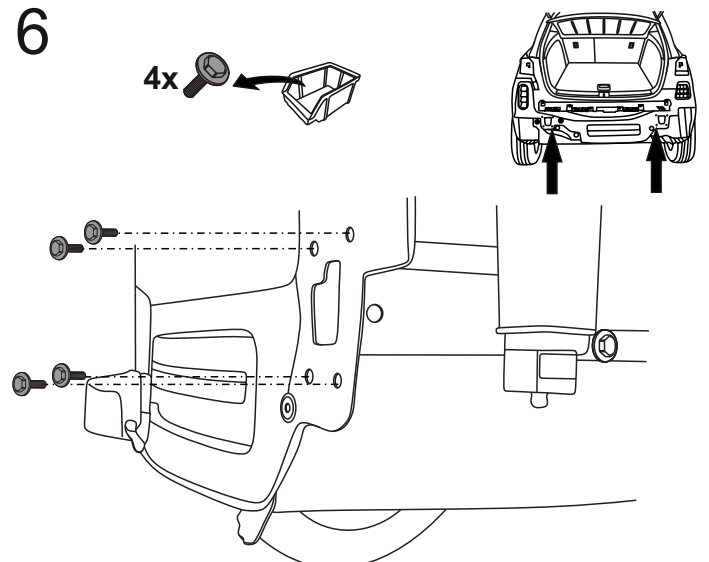


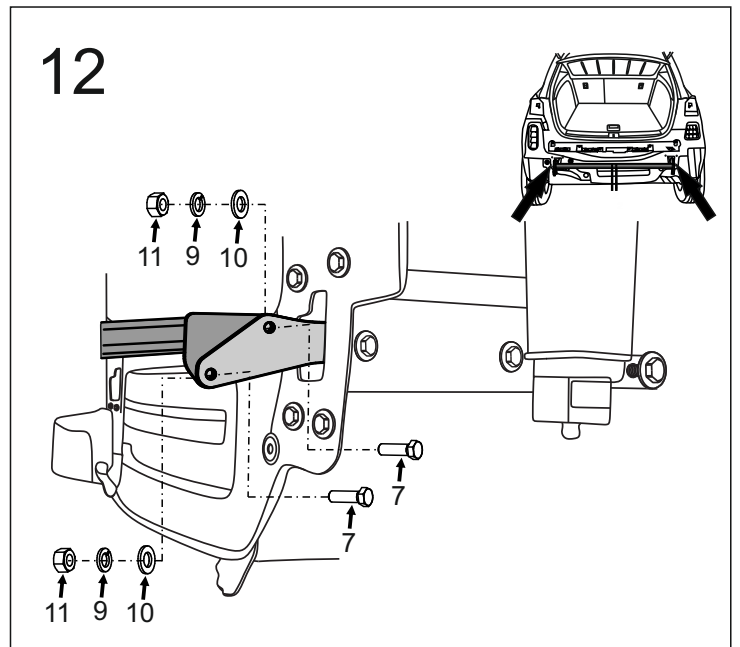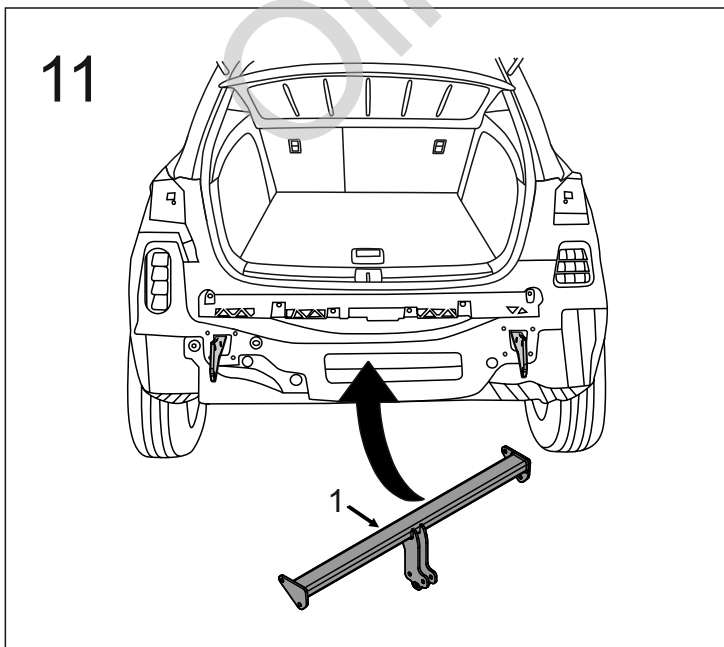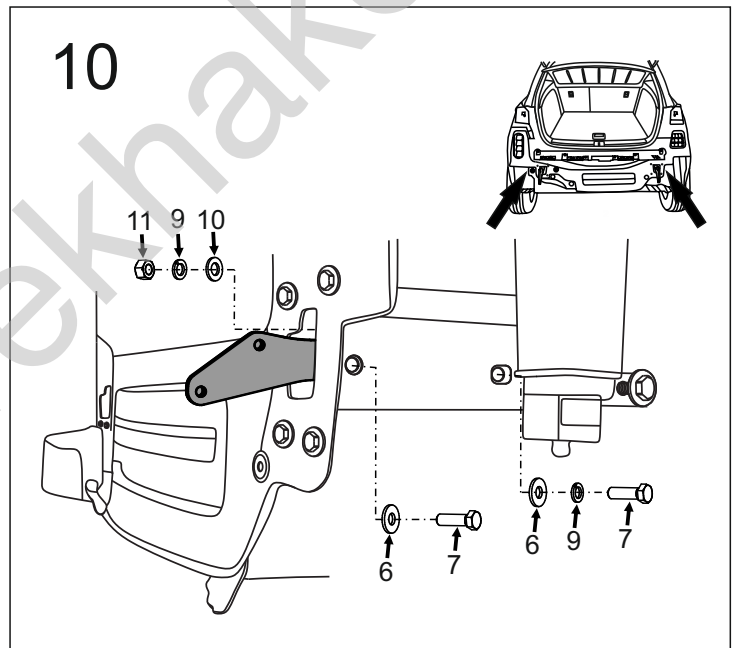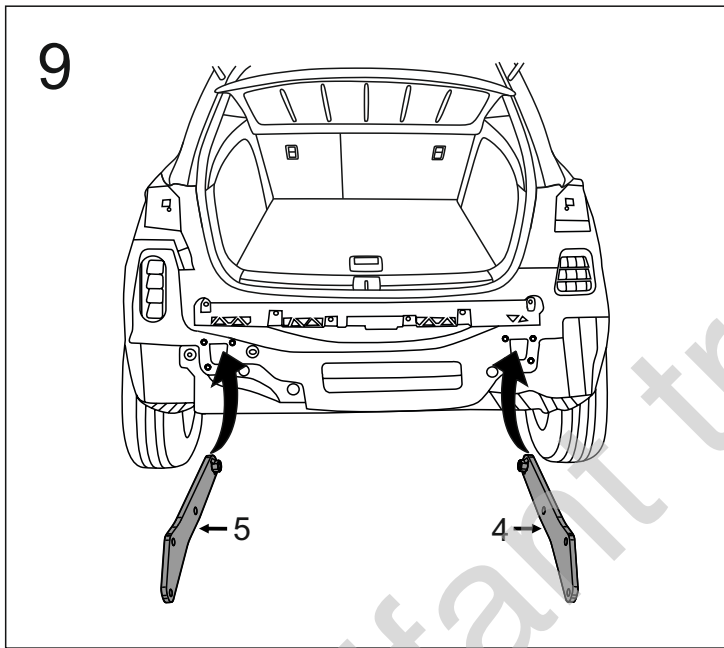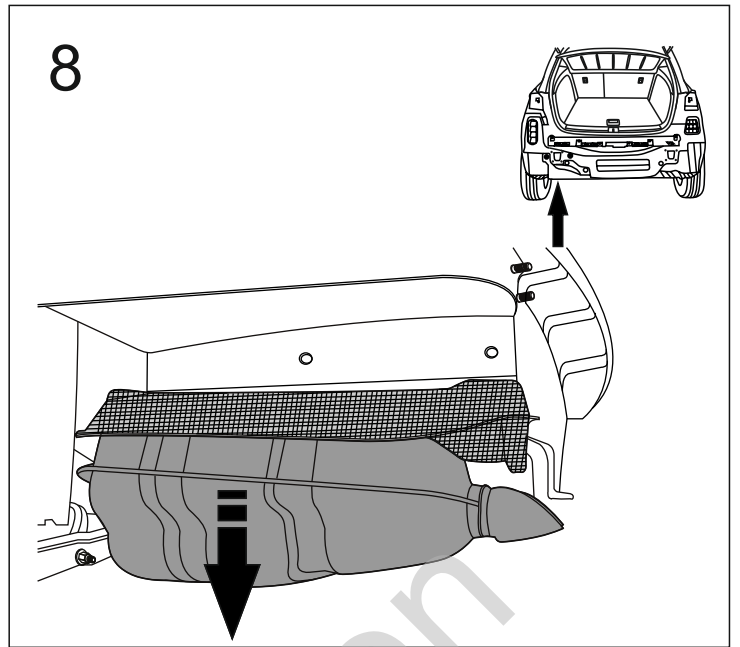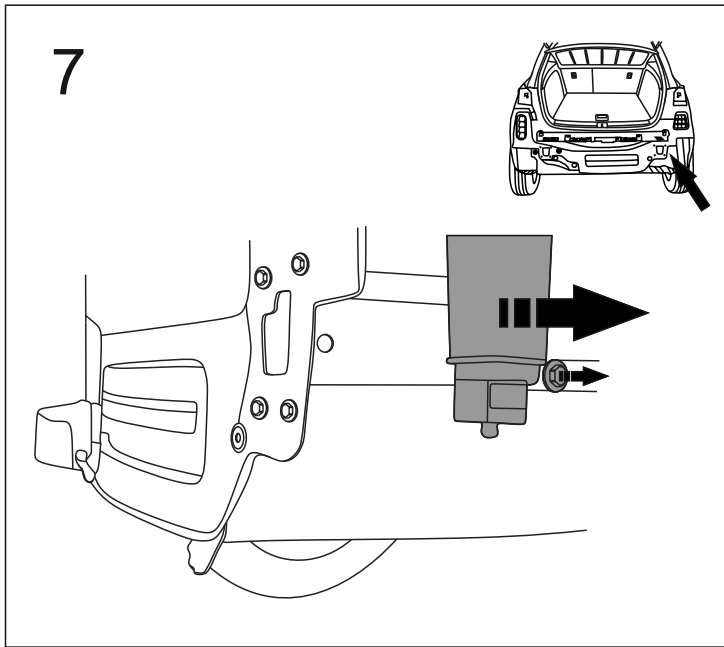


13

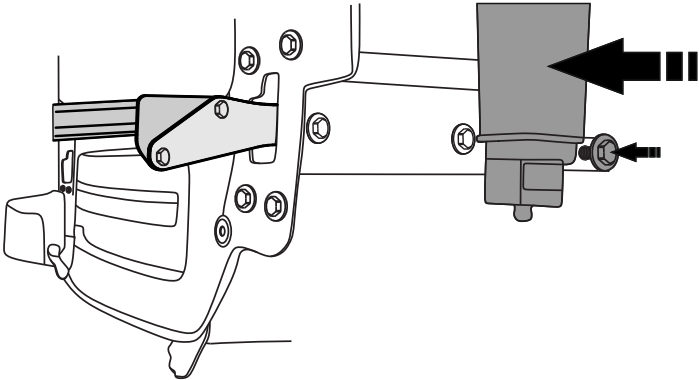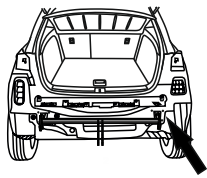



14

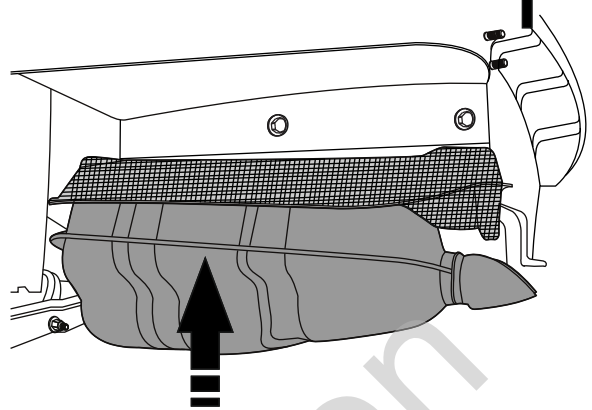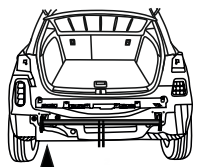


15

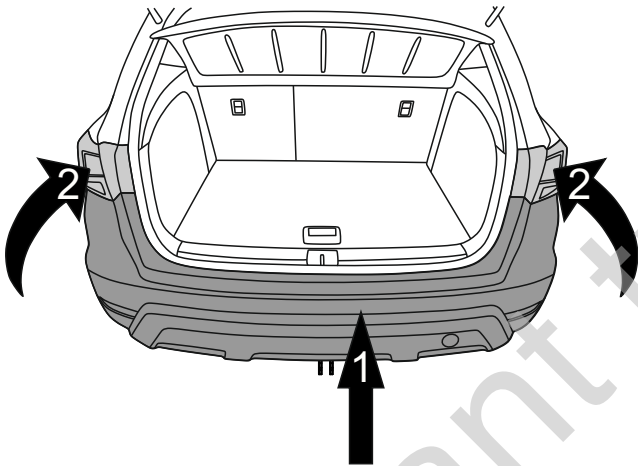

16

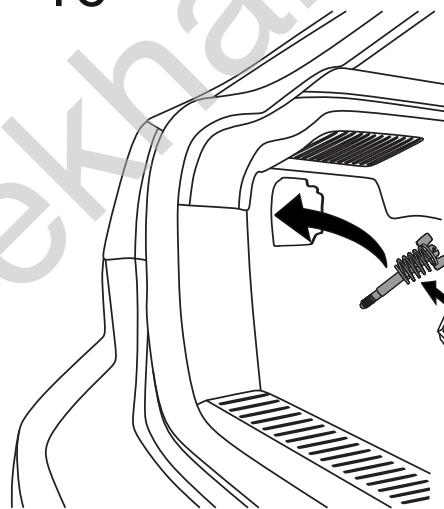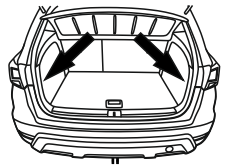

17

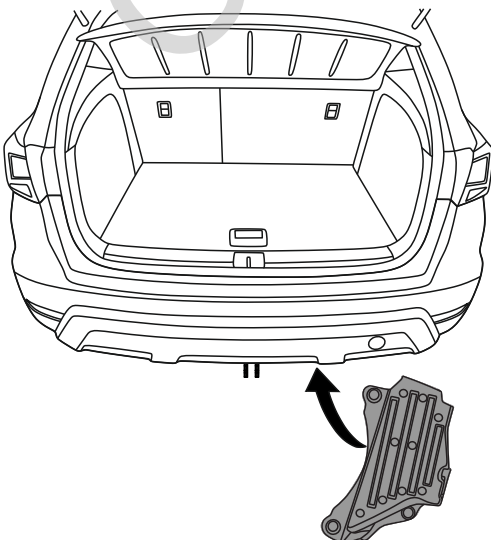

18

