

Subaru Forester (SJ)

(2013 - 2018)

S-370


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
GB **Tow bar** Installation and operating instructions
D **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
ES **Gancho de remolque** Las instrucciones de instalación y de operación
RU **Фаркоп** Инструкция по установке и эксплуатации ТСУ
FR **Attelage** Notice de montage et d'utilisation
IT **Gancio traino** Istruzioni di montaggio
CZ **Tažné zařízení** Návod na montáž a použití
RO **Cârlig de remorcare** Instrucția de montaj și exploatare
SE **Dragkulan** Monterings- och bruksanvisningar.




YES NO
☒ ☐



YES NO
☒ ☐

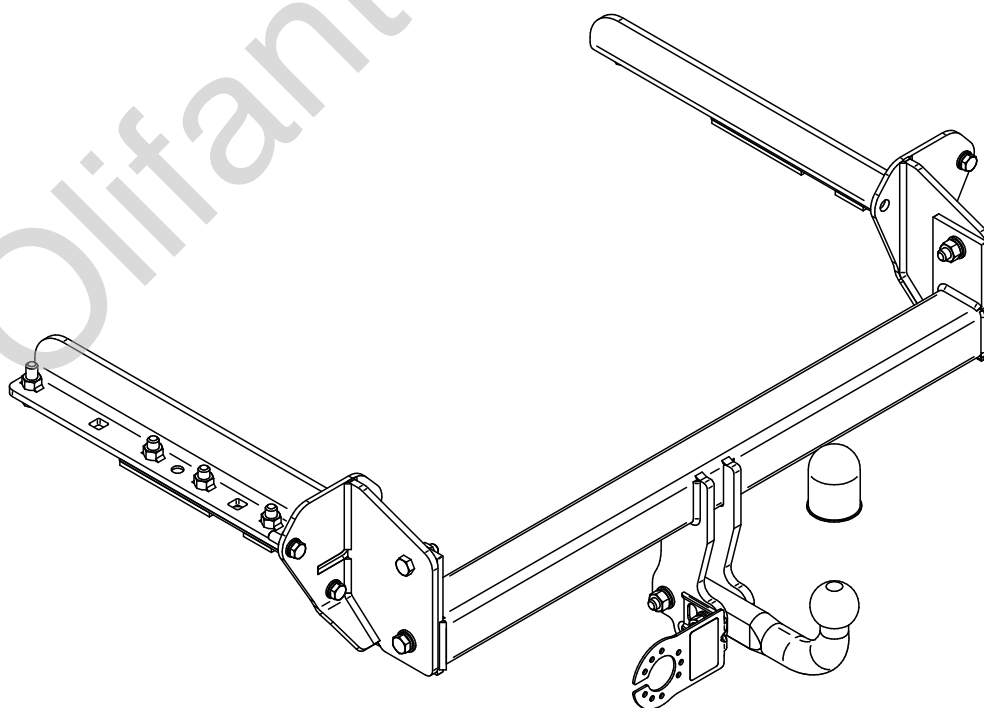

Typ: S-370
A50-X
E20 55R-01 3646
D = 10,5kN
S = 90kg

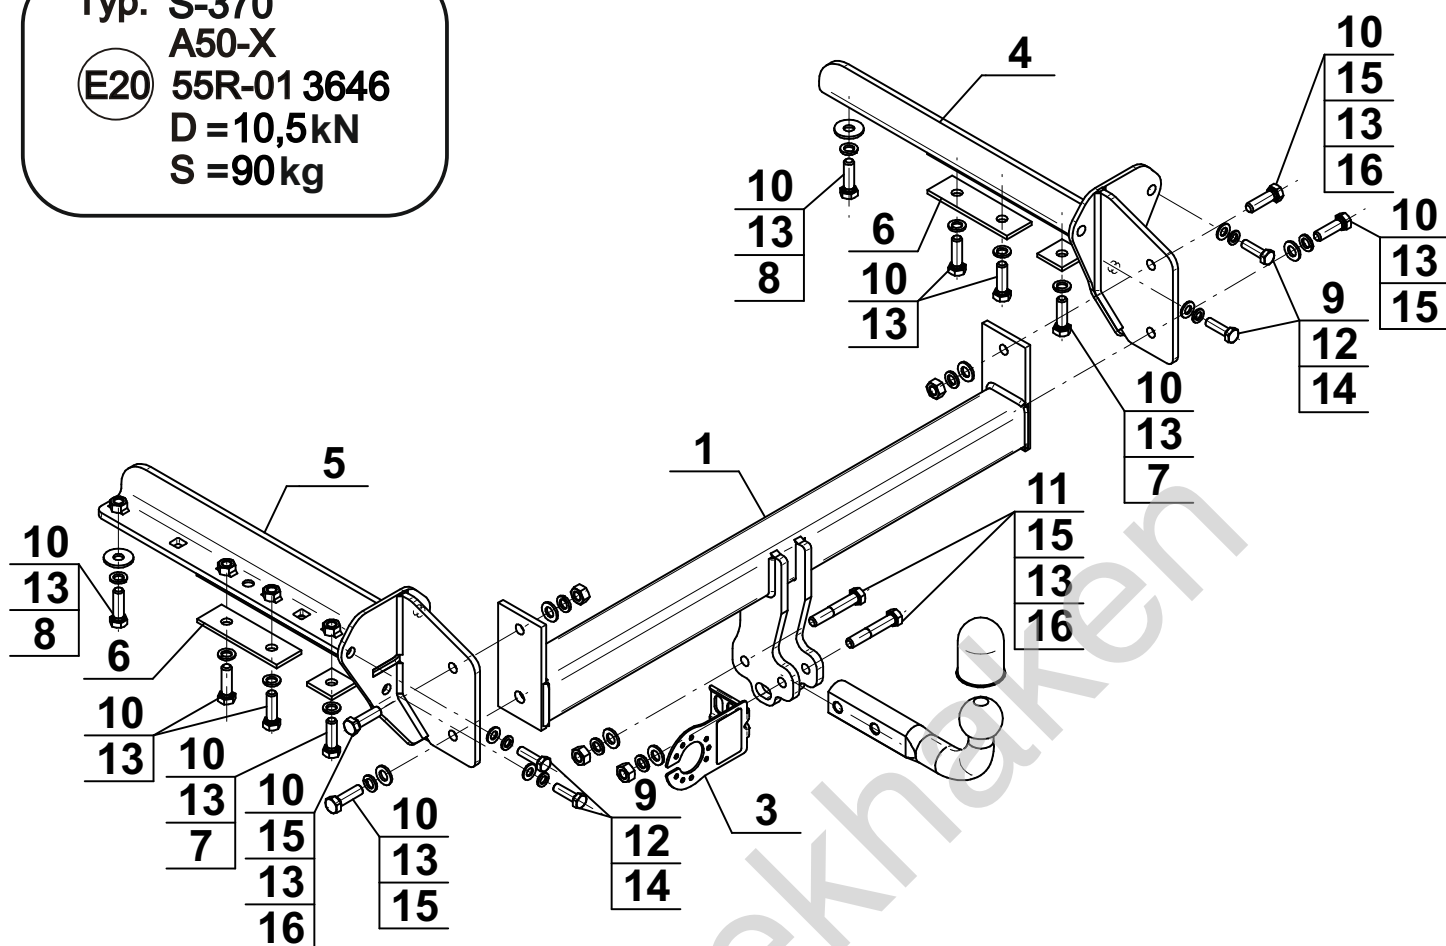


1		x1
2		x1
3		x1
4		x1
5		x1
6		x2

7		40x5x40/Ø13,0	x2
8		Ø34/Ø12,5x3	x2
9		M10x1,25x35 (PN/M-82105) (8.8)	x4
10		M12x40 (PN/M-82105) (8.8)	x12
11		M12x70 (PN/M-82101) (8.8)	x2
12		Ø10,2	x4
13		Ø12,2	x14
14		Ø10,5	x4
15		Ø13,0	x6
16		M12 (8)	x4




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

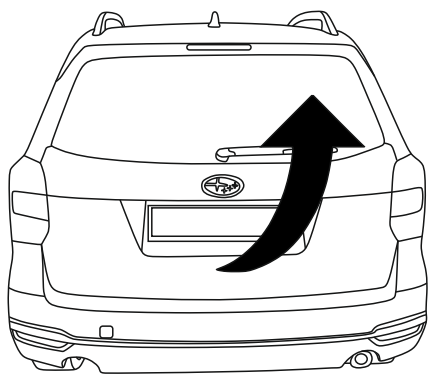


2

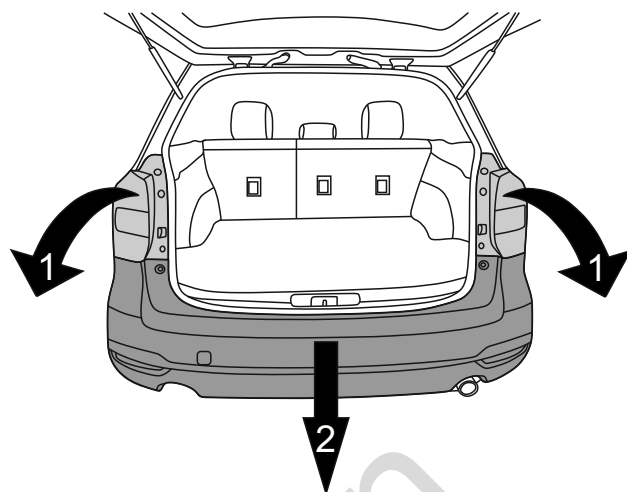


3

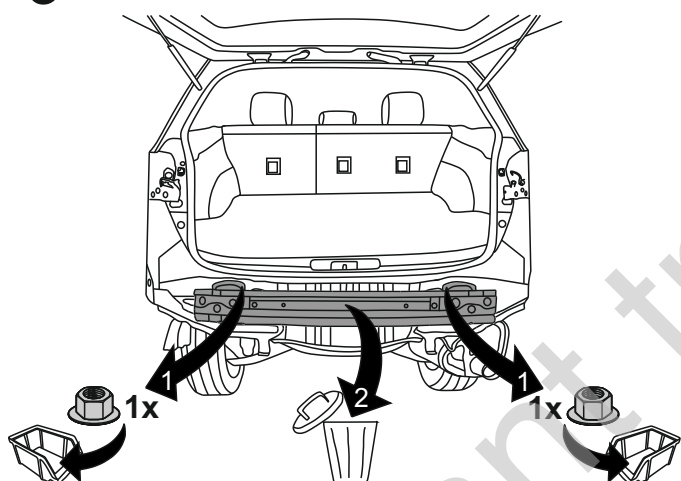


4

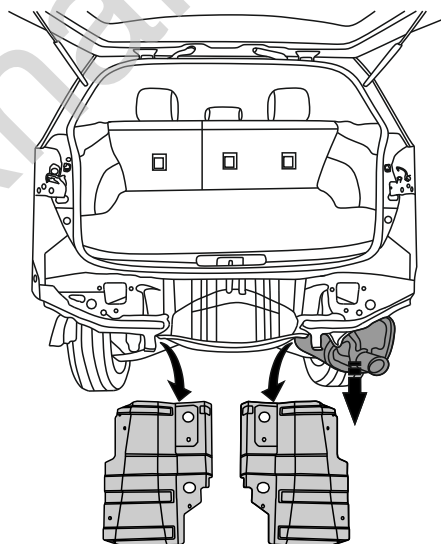


5

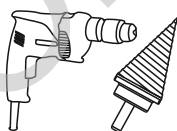


Ø30mm

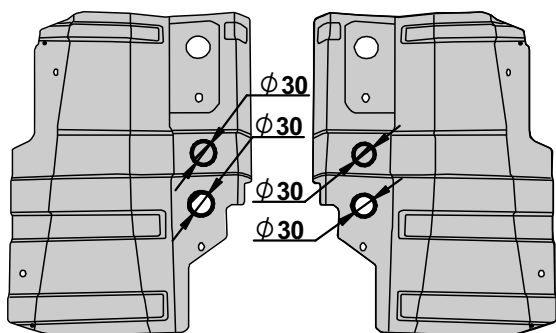


6

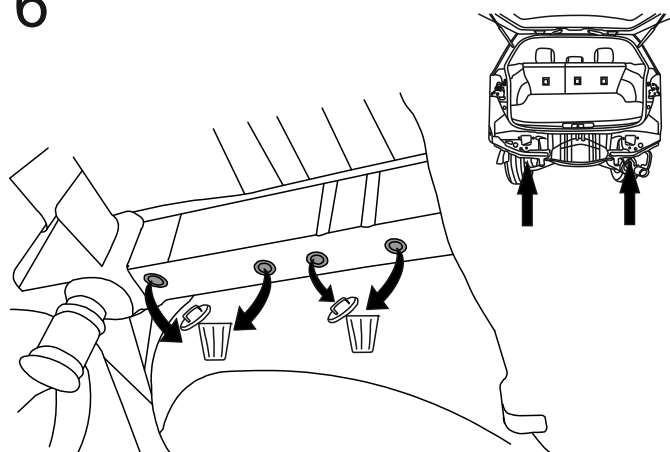


7

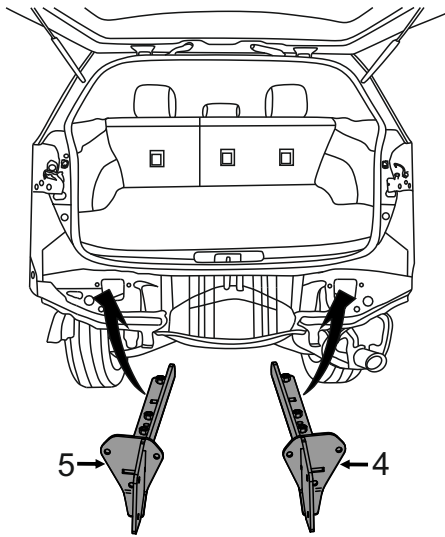


8

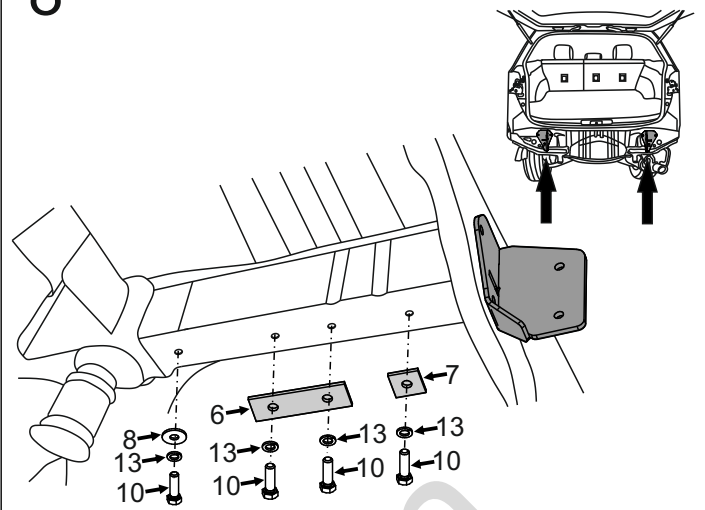


9

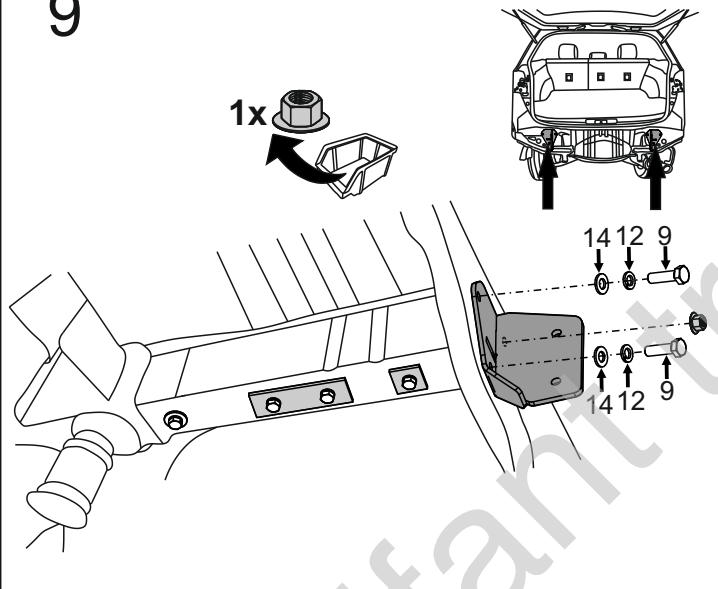


10

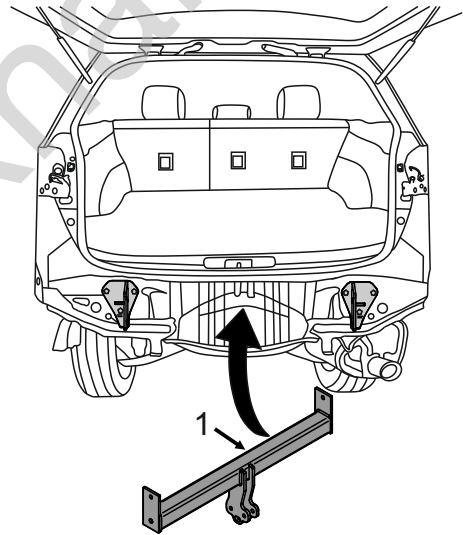


11

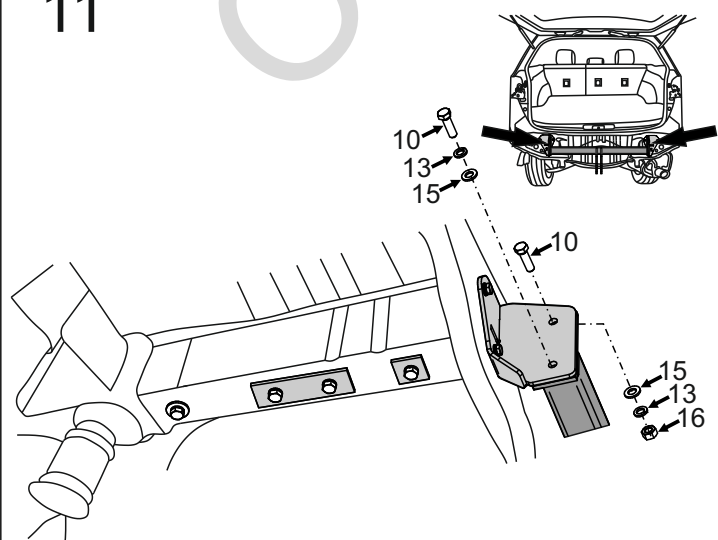


12

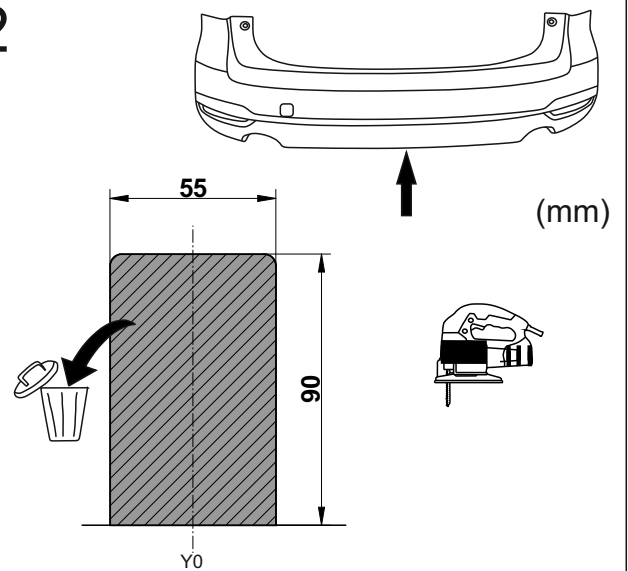

13

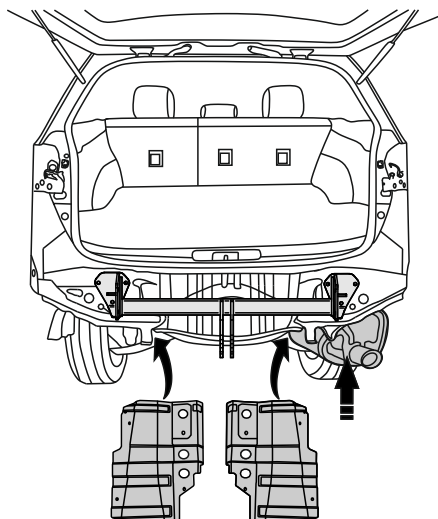

14

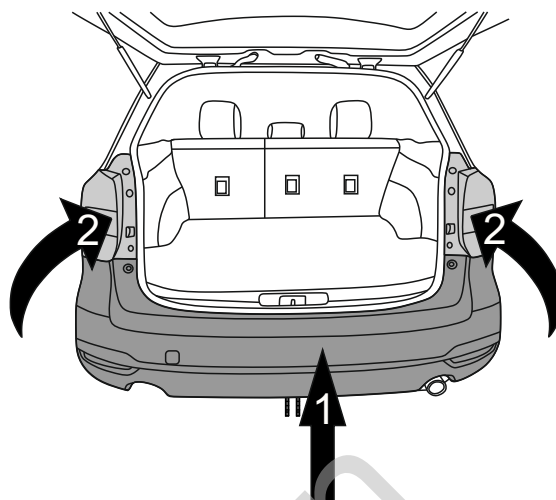

15

