

Toyota Land Cruiser (J150)

(11/2009 - →)

T-168



- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.



YES ☒ NO ☐



YES ☒ NO ☐

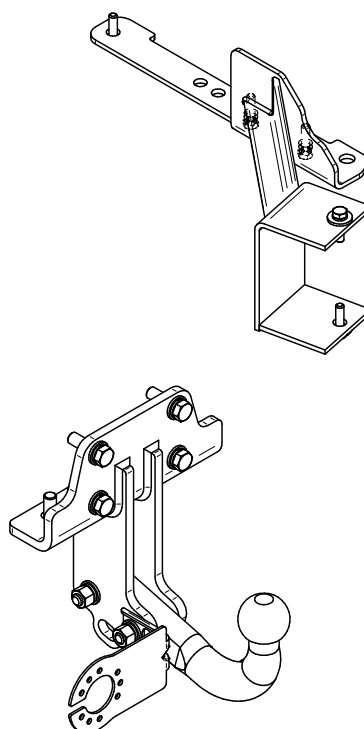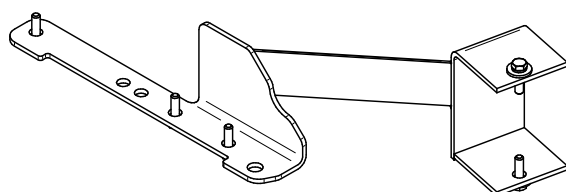

Typ: T-168


A50-X

e20 00-1425

E20 55R-01 2792

D = 15,0kN

S = 120kg

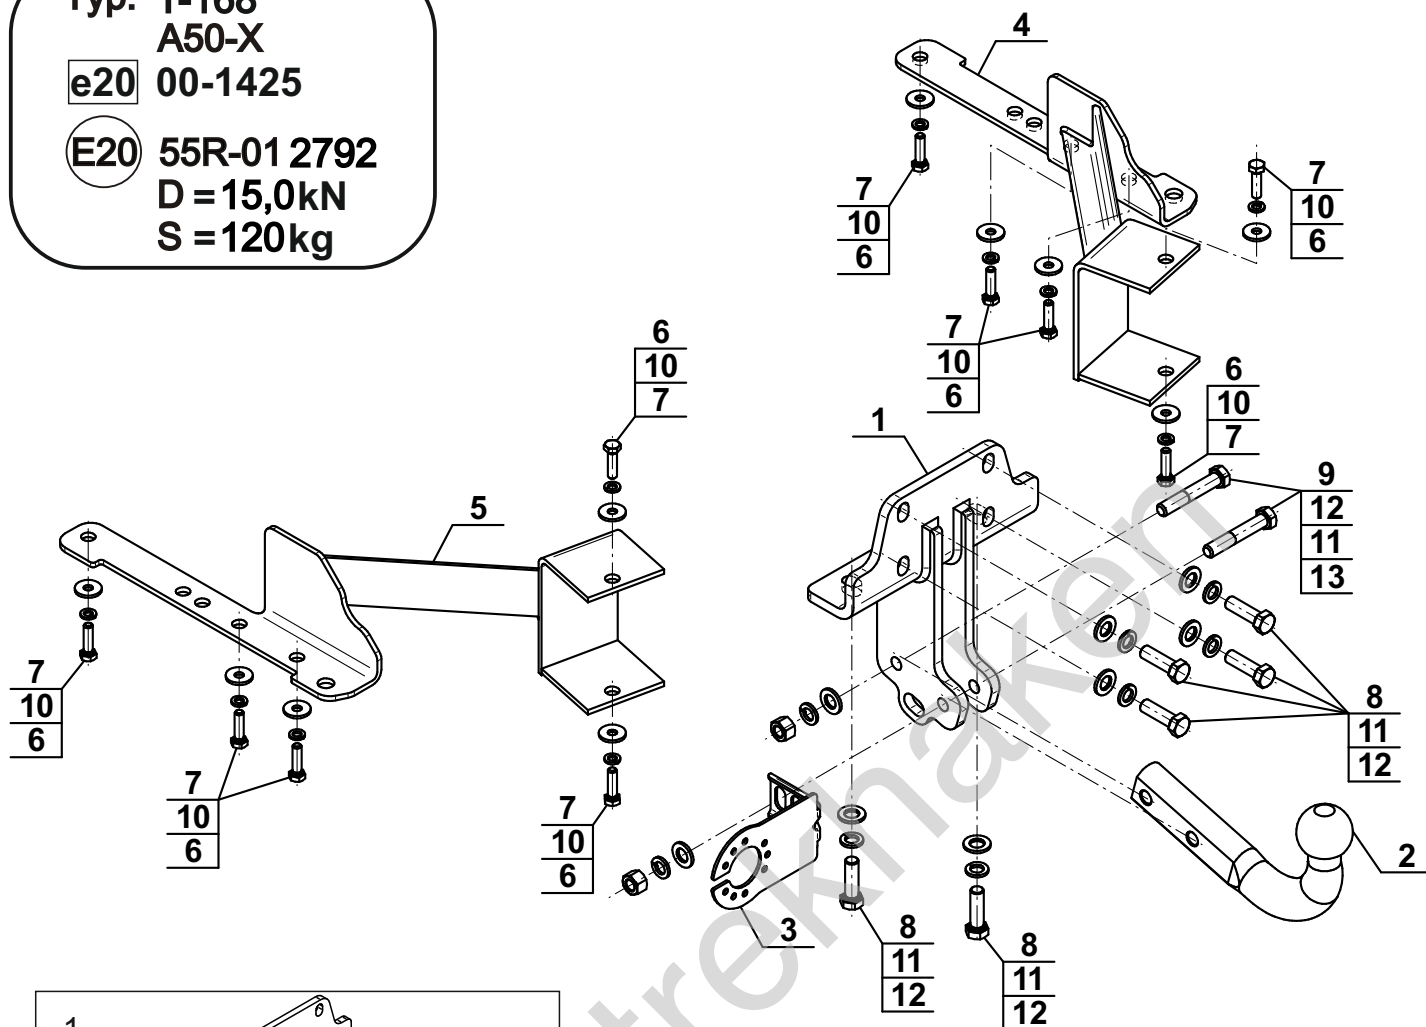


1		x1
2		x1
3		x1
4		x1
5		x1

6		Ø24/Ø8,5x2,5	x10
7		M8x30 (PN/M-82105) (8.8)	x10
8		M12x1,25x40 (PN/M-82105) (8.8)	x6
9		M12x70 (PN/M-82101) (8.8)	x2
10		Ø8,2	x10
11		Ø12,2	x8
12		Ø13,0	x8
13		M12 (8)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

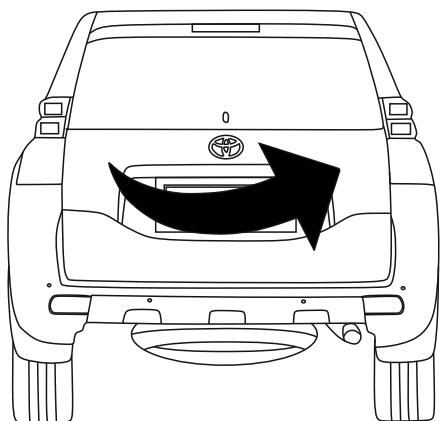


2

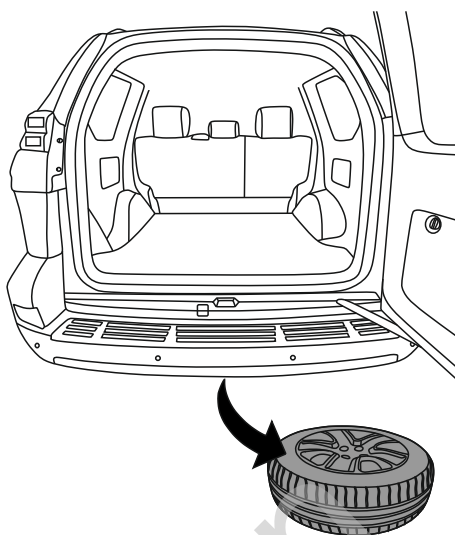


3

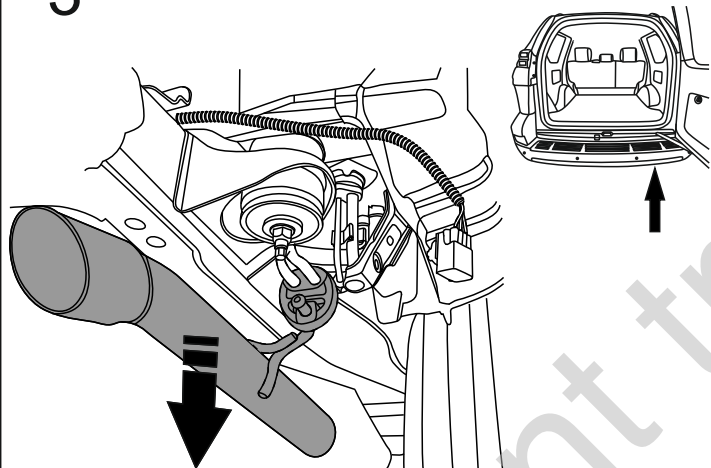


4

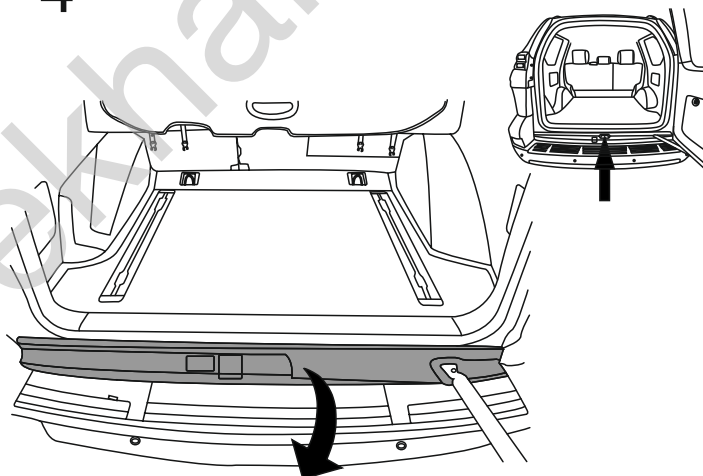


5

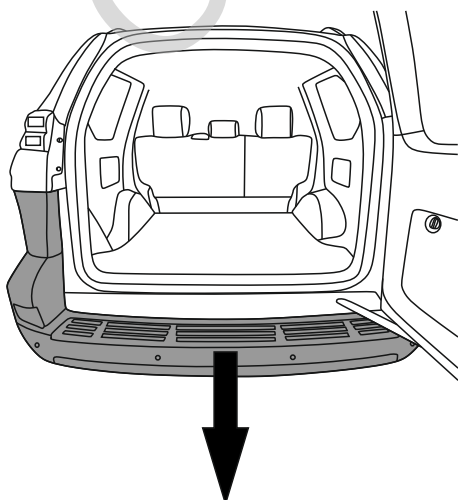


6

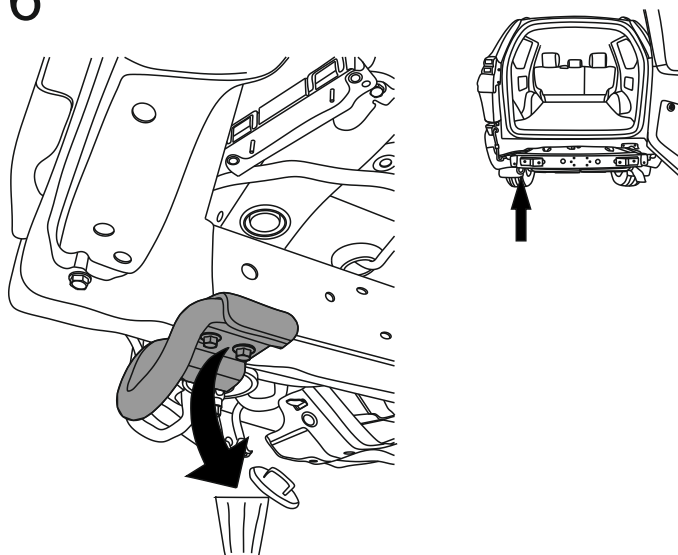


7

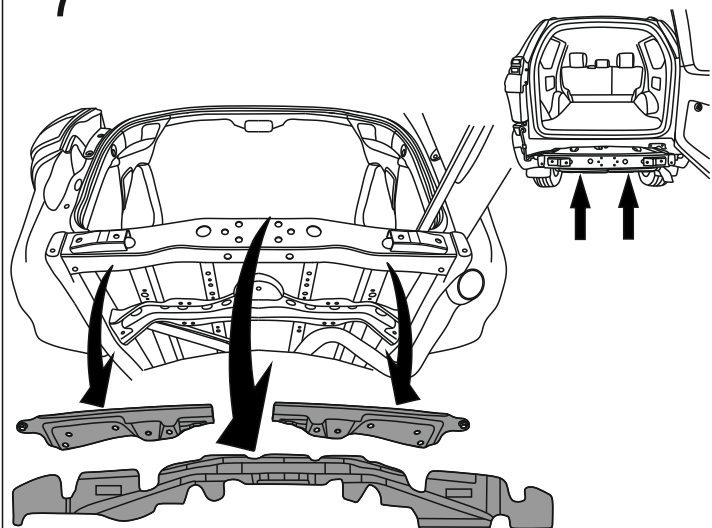


8

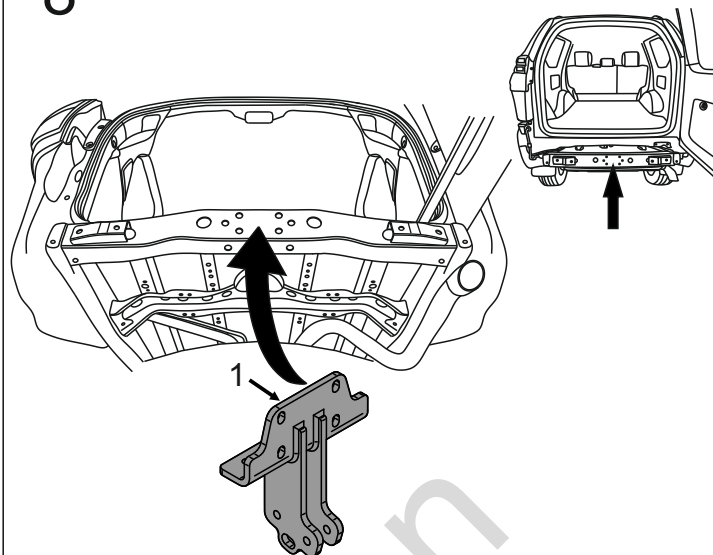


9

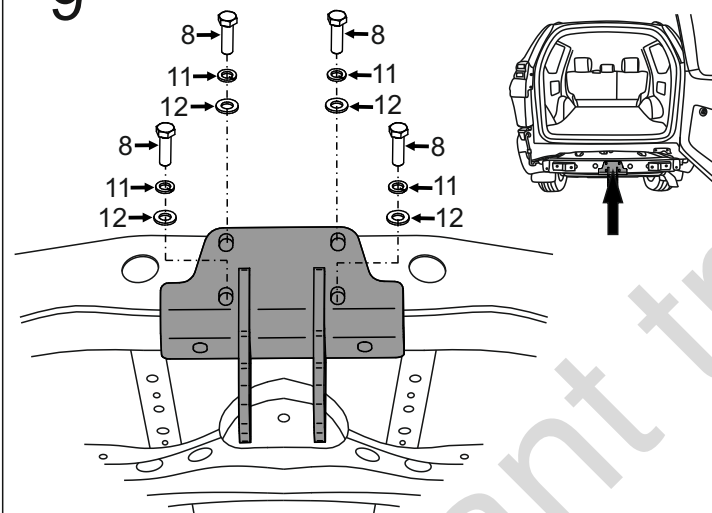


10

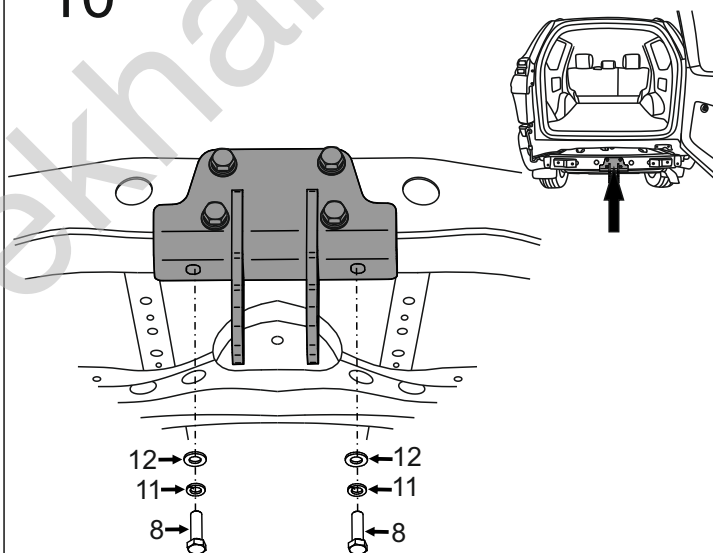


11

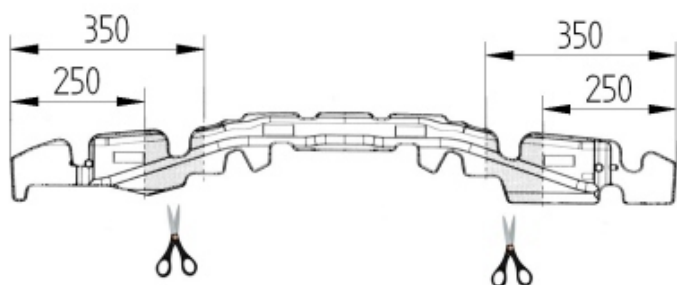


12

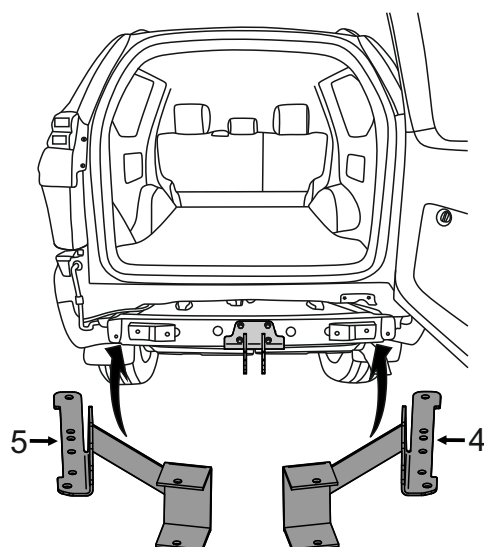


13

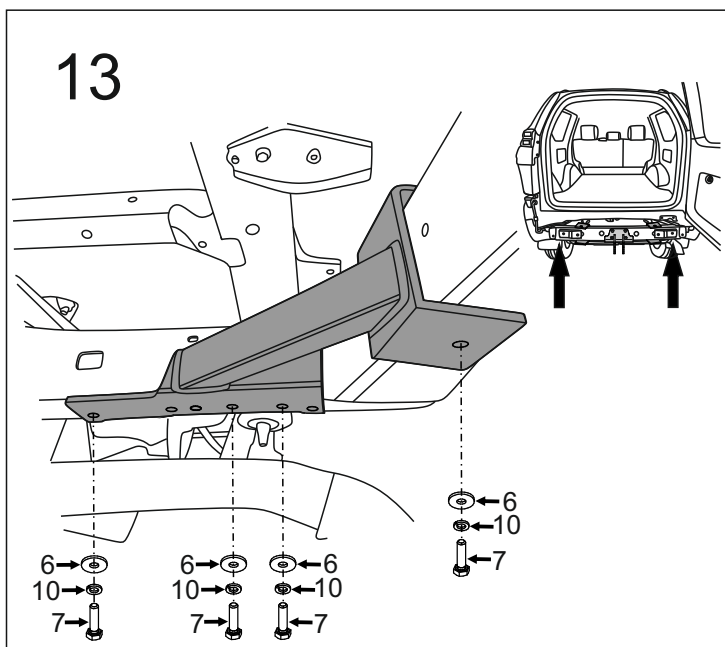


14

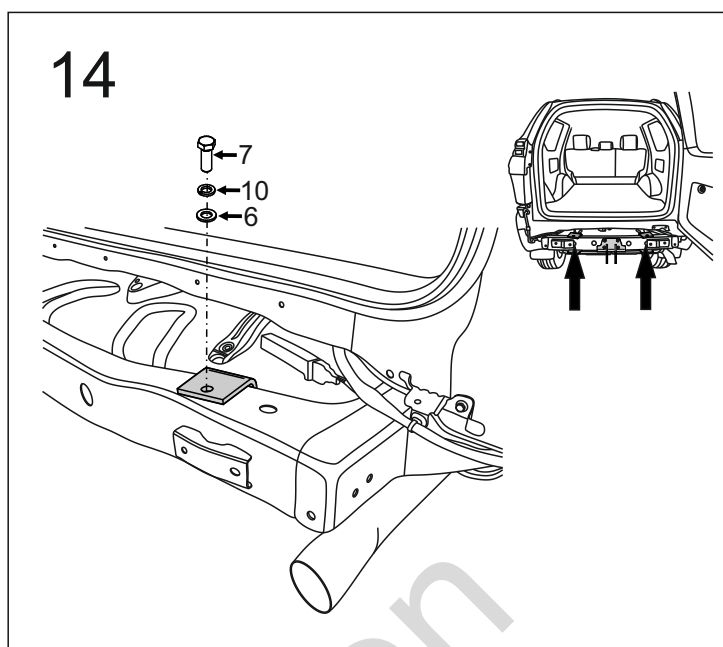


15

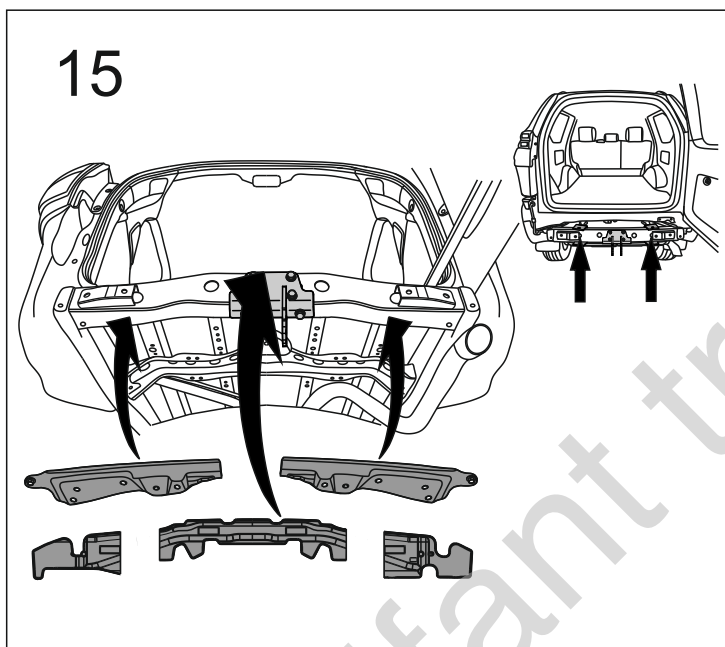


16

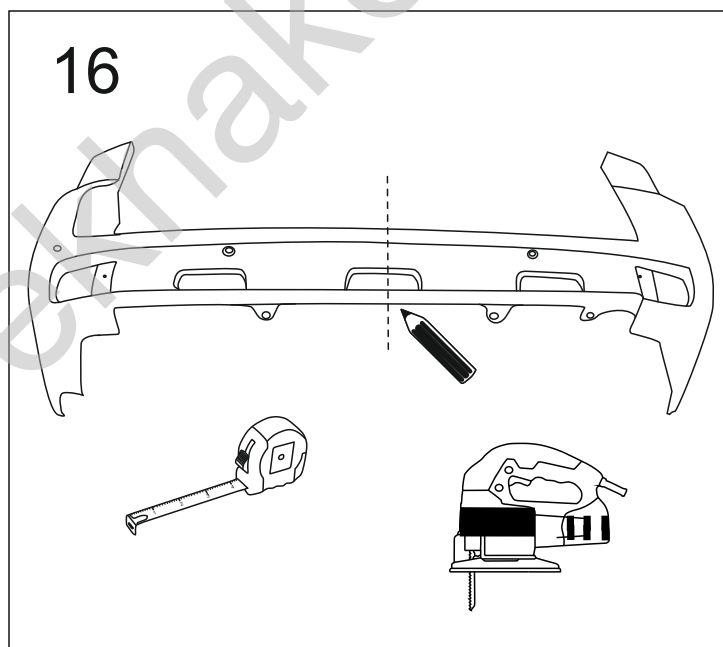


17

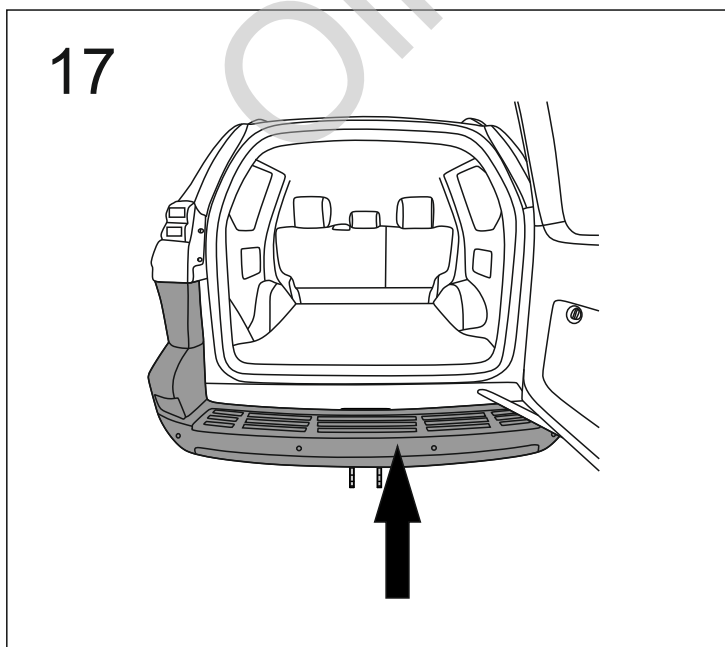


18

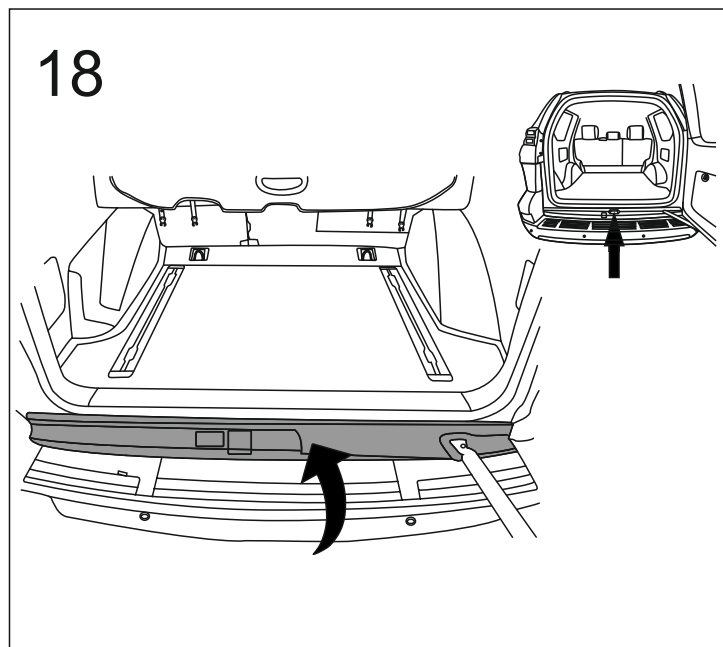

19

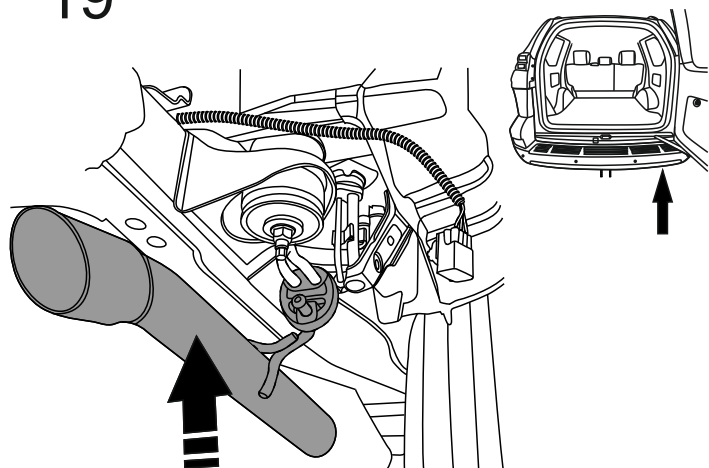

20

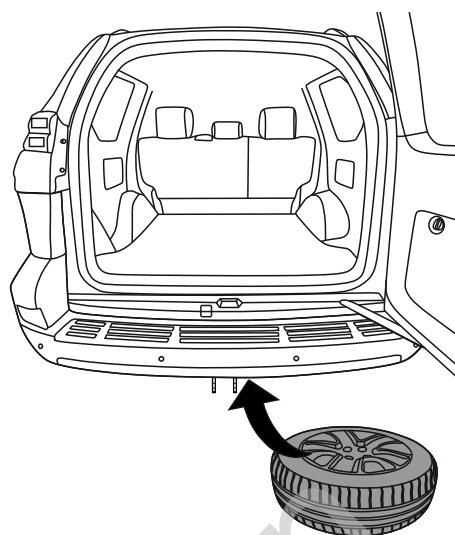

21

