

**VW Caddy III (+Maxi) (02/2004 - 06/2015)**  
**VW Caddy IV (+Maxi) (07/2015 - 2020)**  
**VW Caddy Alltrack (05/2015 - 2020)**  
**Kombi (SAB), Furgon (SAA)**

**V-028**


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.





YES  NO



YES  NO

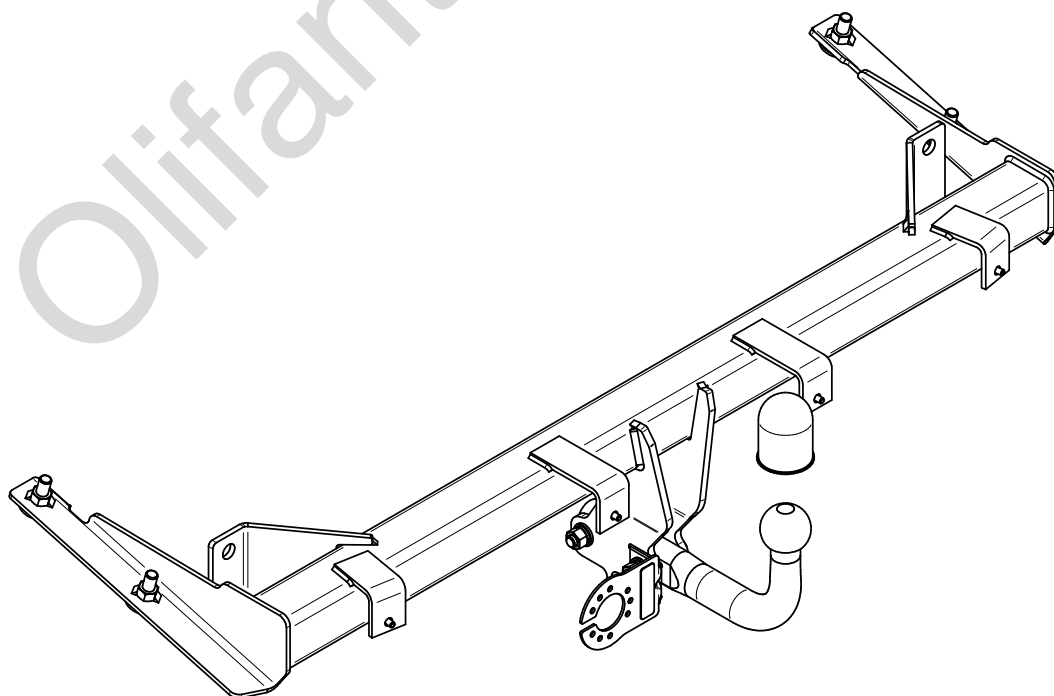

Typ: V-028  
 A50-X  
 (E20) 55R-01 1356  
 D = 9,4 kN  
 S = 80 kg

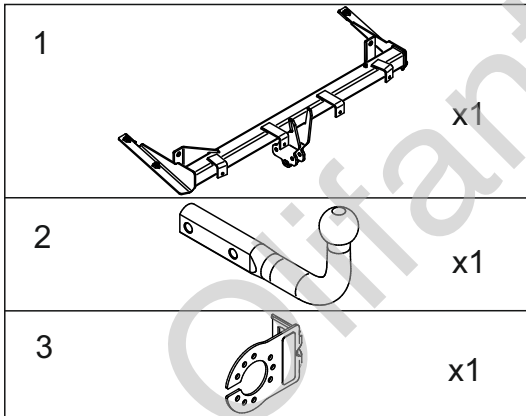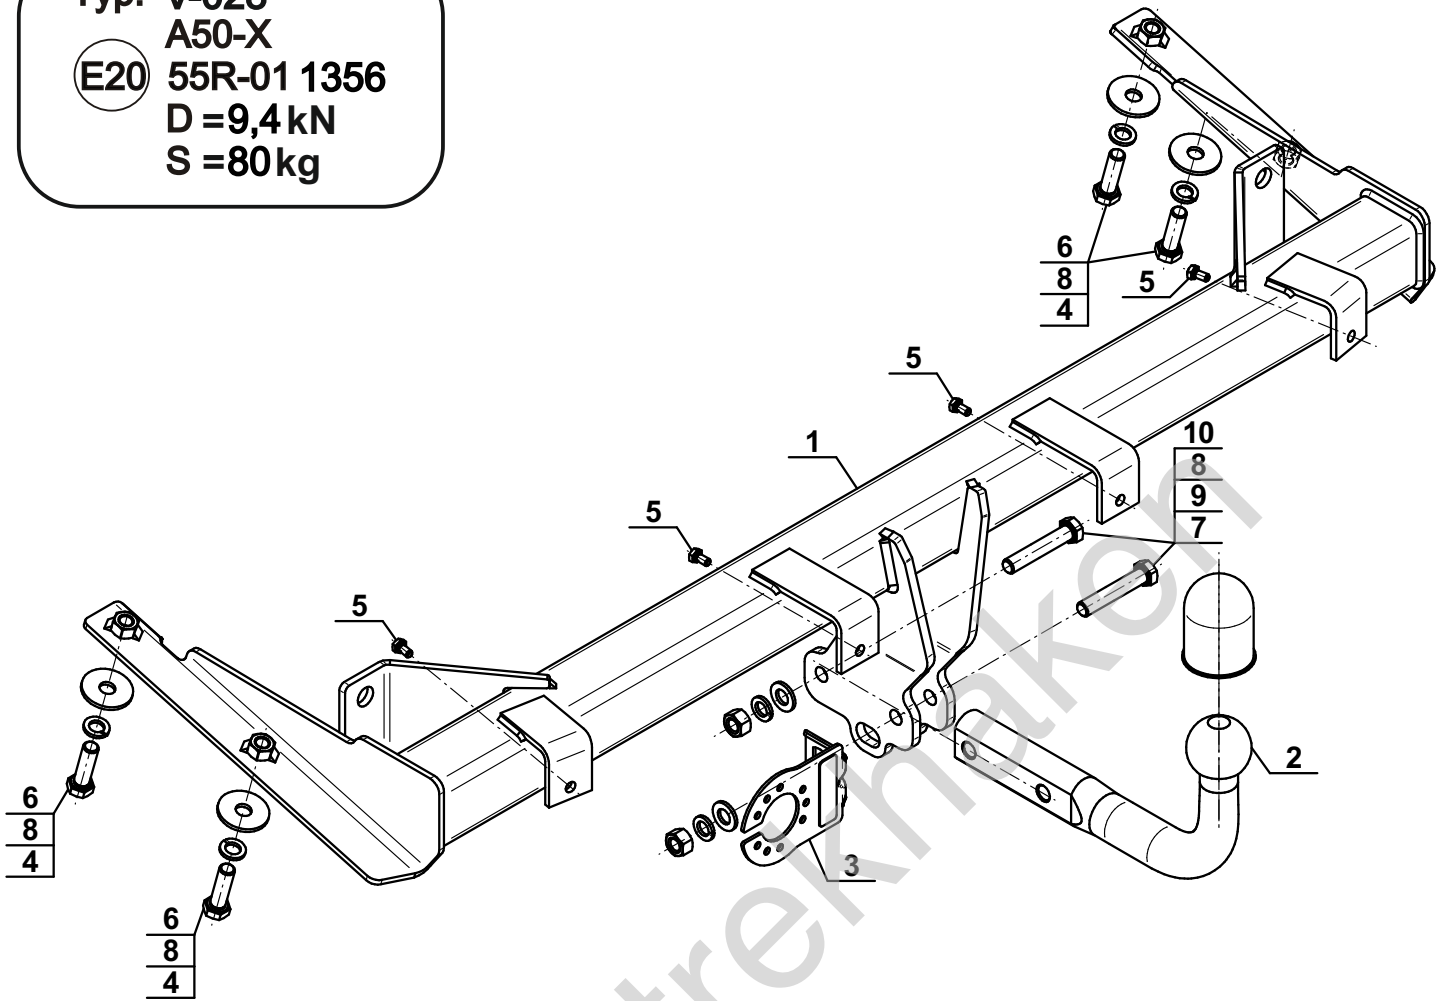


4		Ø40/Ø12,5x3	x4
5		M6x16 (PN/M-82105)	x4
6		M12x40 (PN/M-82105) (8.8)	x4
7		M12x65 (PN/M-82101) (8.8)	x2
8		Ø12,2	x6
9		Ø13,0	x2
10		M12 (8)	x2




8.8	
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)
M12 - 85 (Nm)	


1

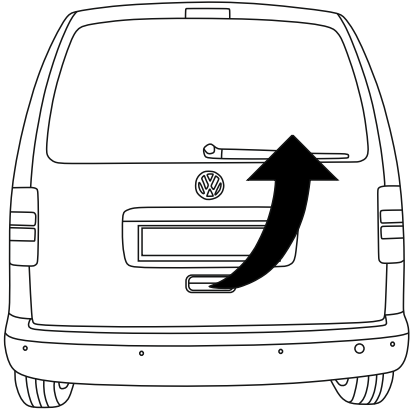


2

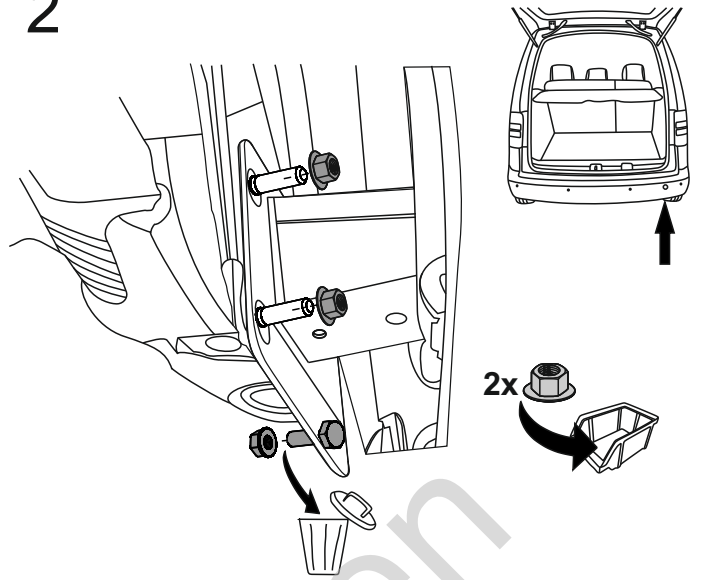


3

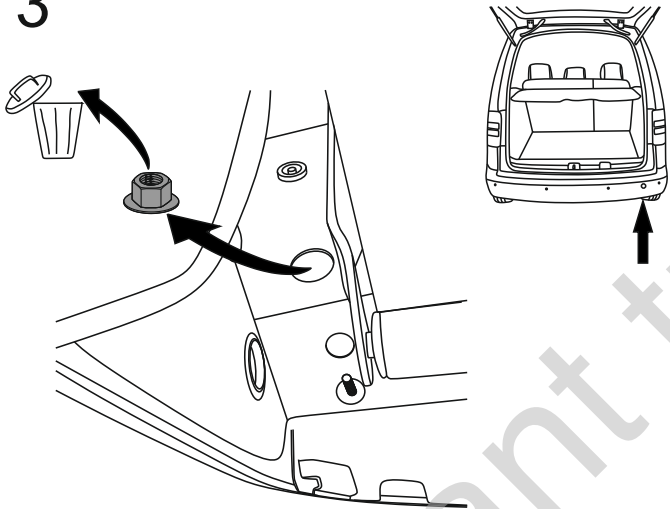

4

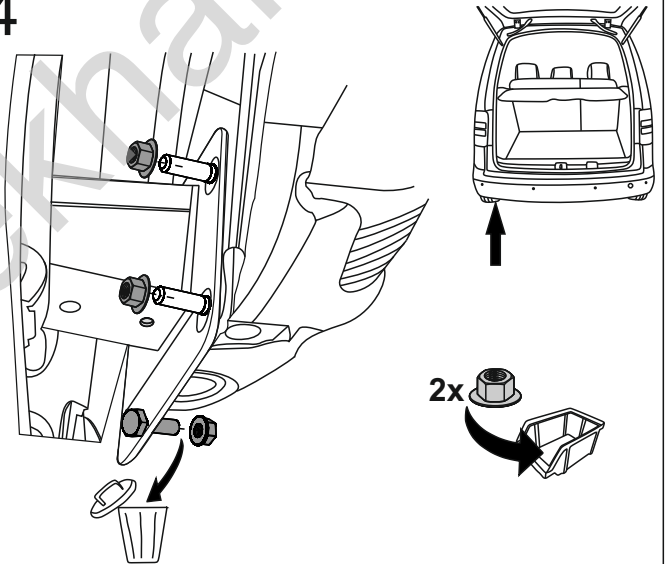

5

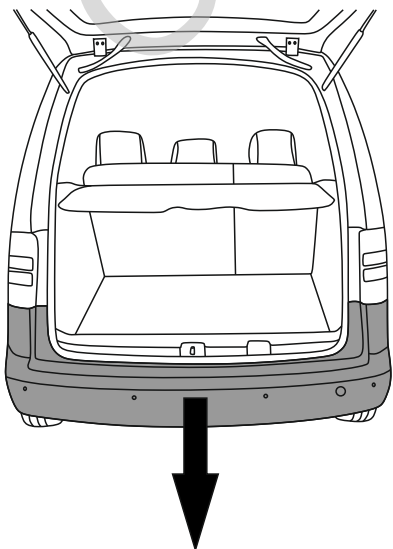

6

