


**Volkswagen Passat CC**

**(2008 - 2012)**


**V-097**

- PL** **Urządzenie sprzęgające** Instrukcja montażu i eksploatacji
- GB** **Coupling device** Installation and operating instructions
- D** **Kupplungsvorrichtung** Montage- und Gebrauchsanleitung
- ES** **Del dispositivo de acoplamiento** Las instrucciones de instalación y de operación
- RU** **Тягово-цепное устройство** Инструкция по установке и эксплуатации
- FR** **Dispositif d'accouplement** Notice de montage et d'utilisation
- IT** **Dispositivo accoppiamento** Istruzioni di montaggio
- CZ** **Spojovacího zařízení Tažné** Návod na montáž a použití
- RO** **Dispozitiv de cuplare** Instrucția de montaj și exploatare
- SE** **Kopplingsanordningens** Monterings- och bruksanvisningar.

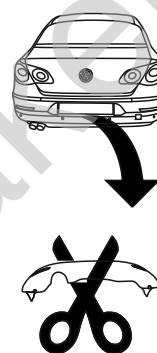

YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>

YES	NO
<input checked="" type="checkbox"/>	<input type="checkbox"/>

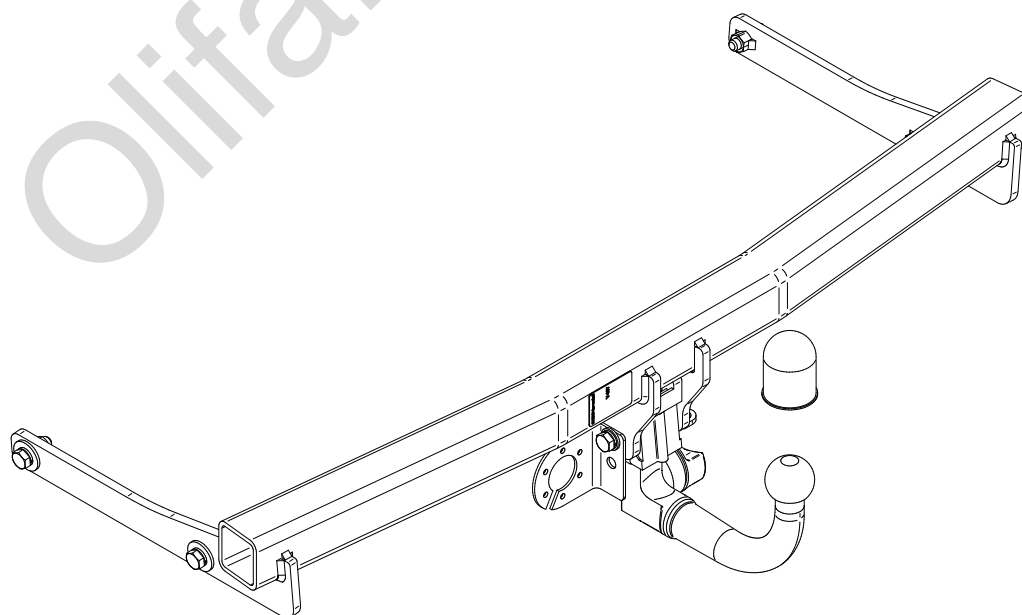


Typ: V-097

F

(E20) 55R-01 5370

D = 11,3kN

S = 90kg

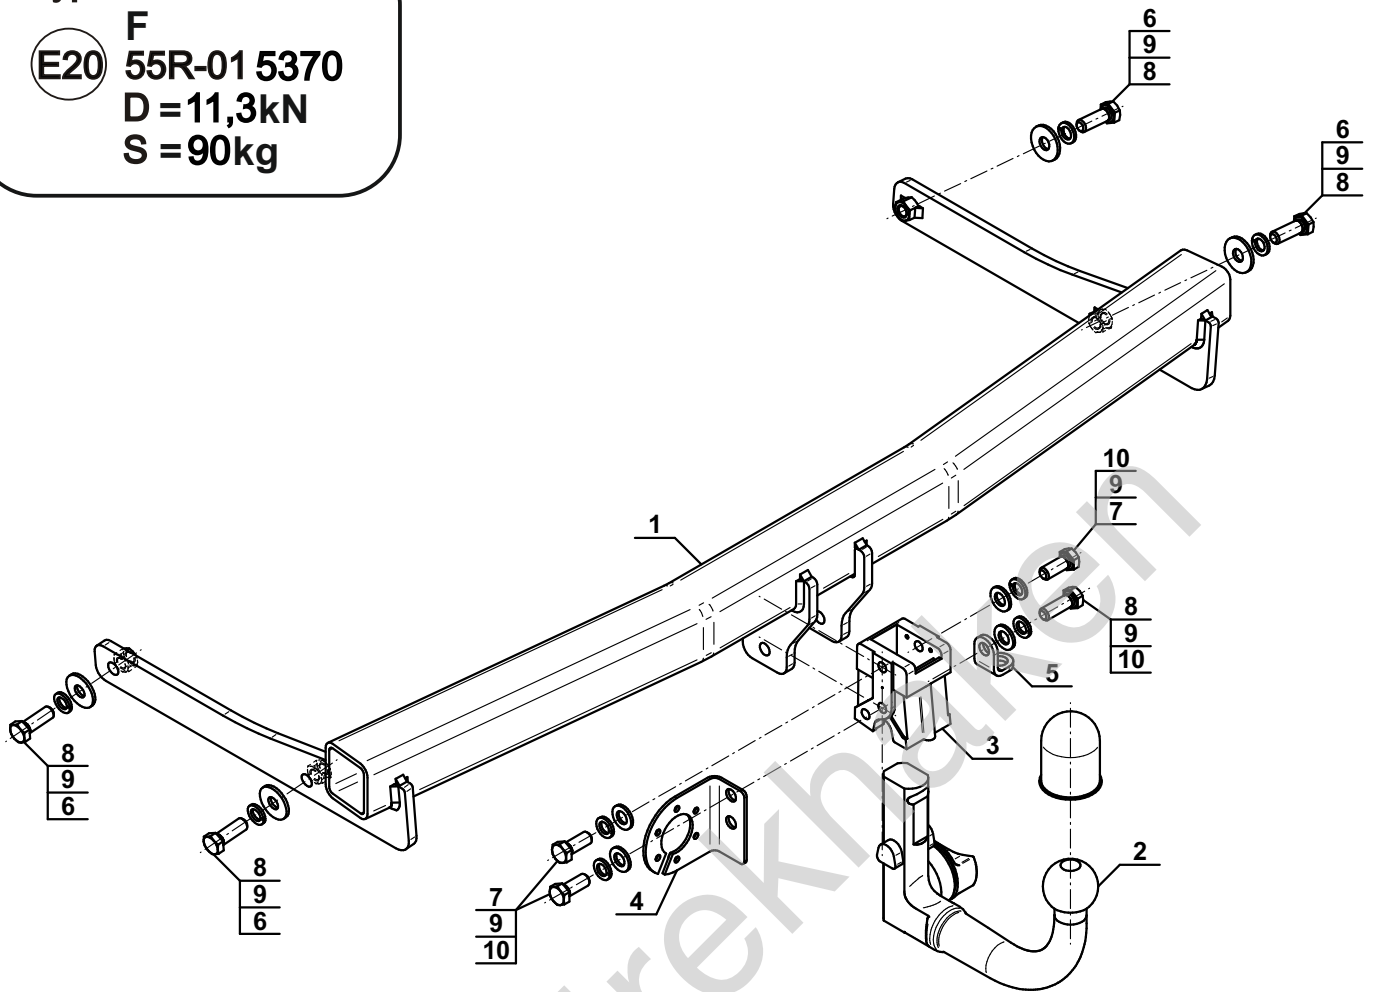


1		x1
2		x1
3		x1
4		x1

5		x1
6	Ø34/Ø12,5x3	x4
7	M12x30 (PN/M-82105) (8.8)	x3
8	M12x35 (PN/M-82101) (8.8)	x5
9	Ø12,2	x8
10	Ø13,0	x4




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

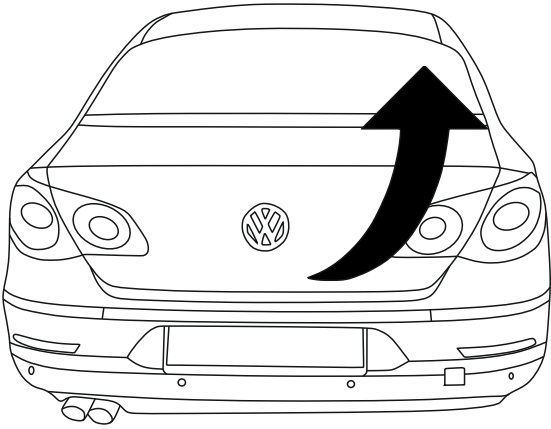


2

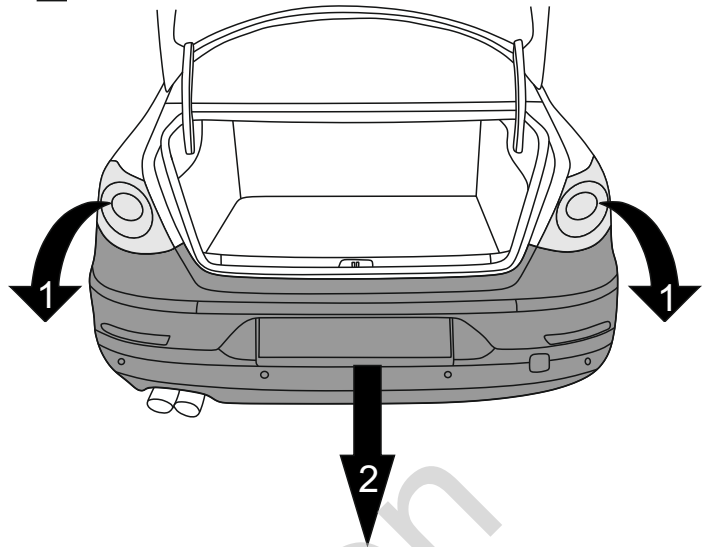


3

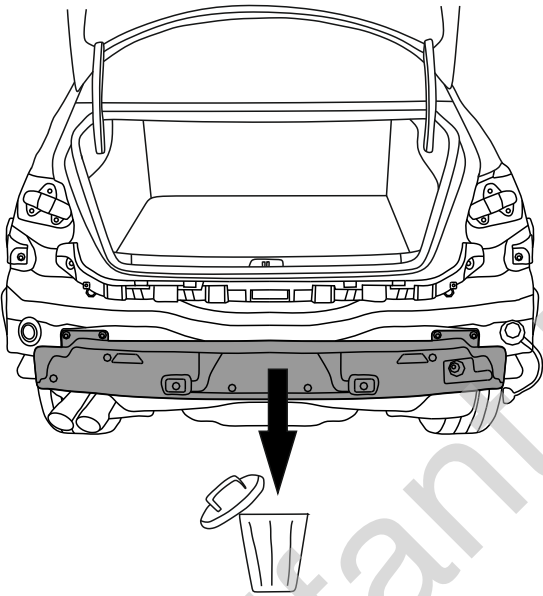


4






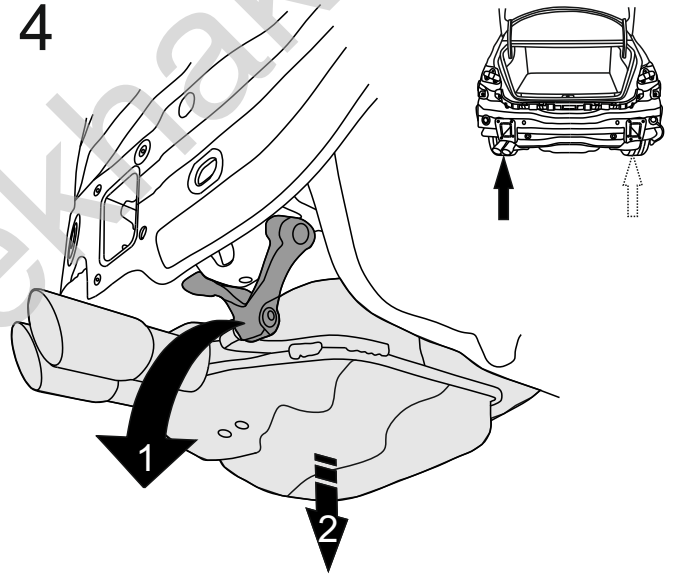


5

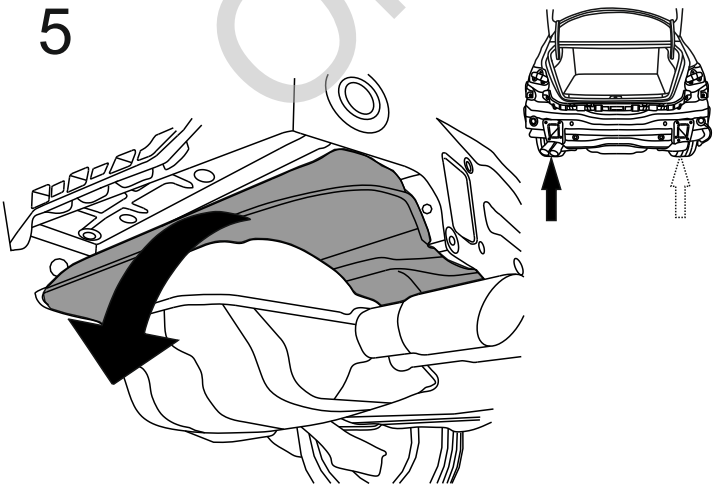


6

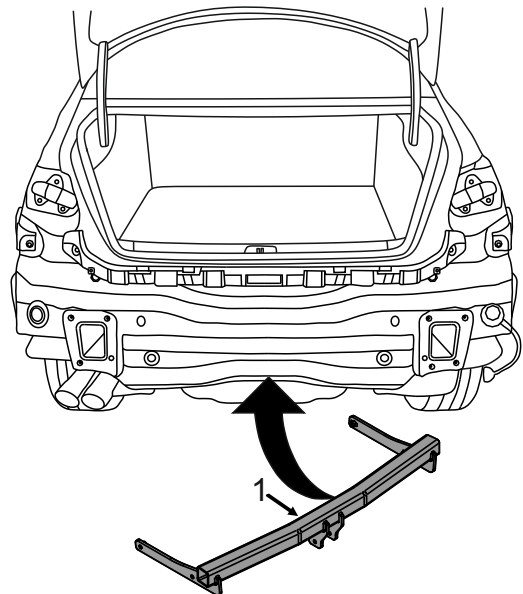

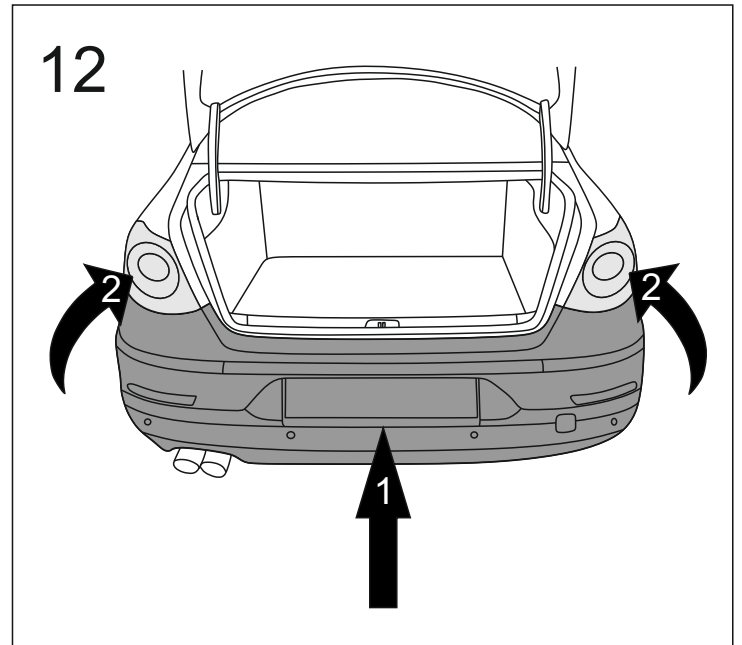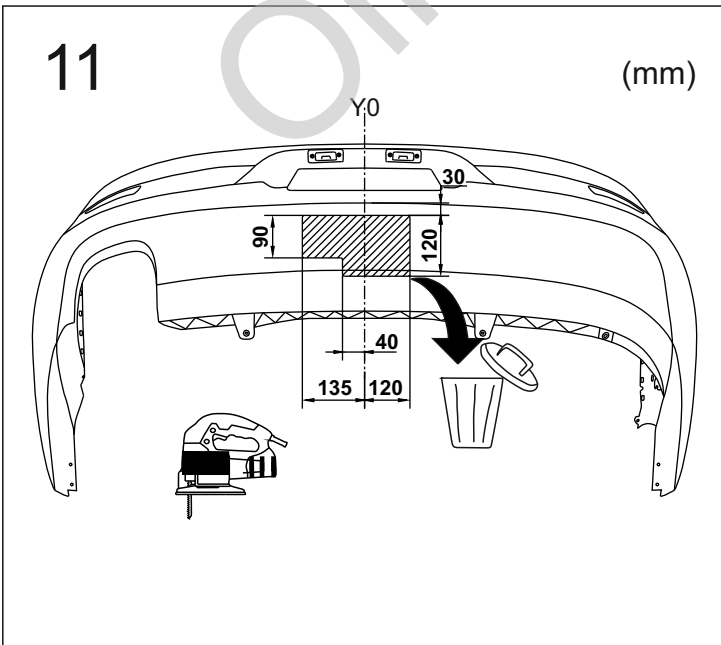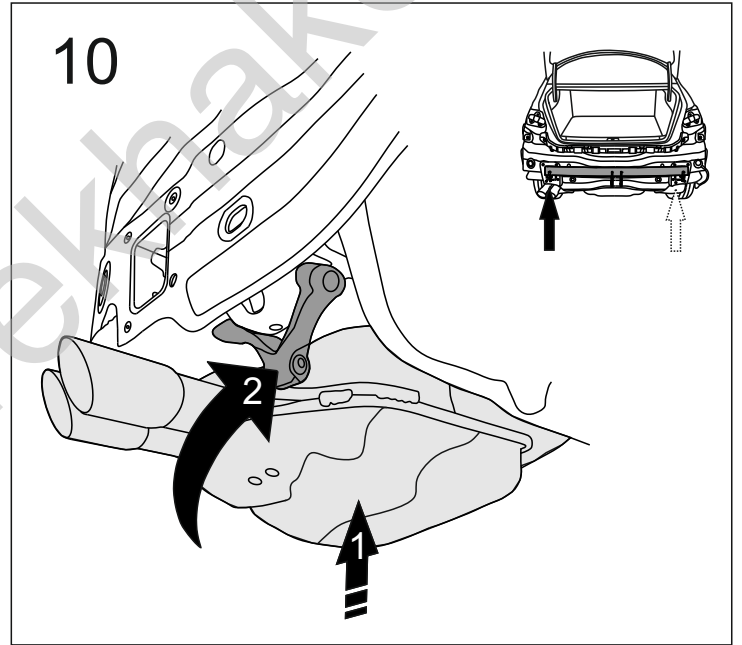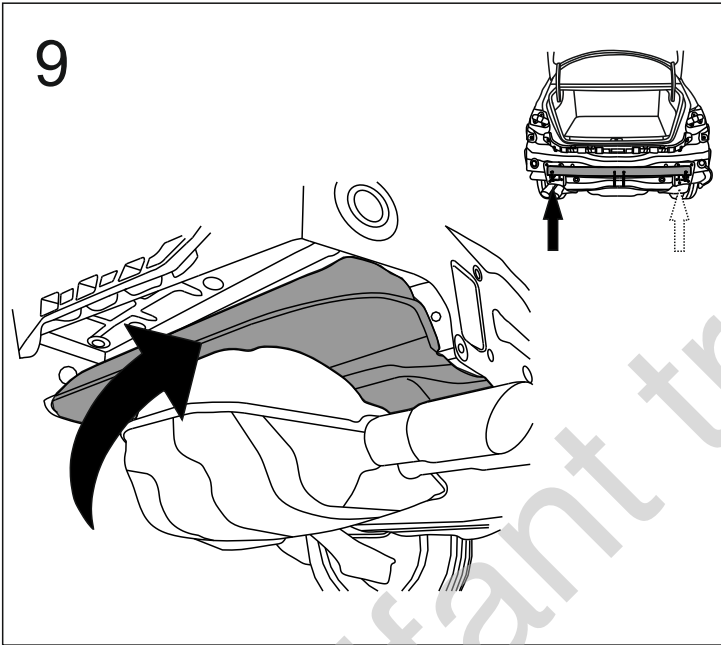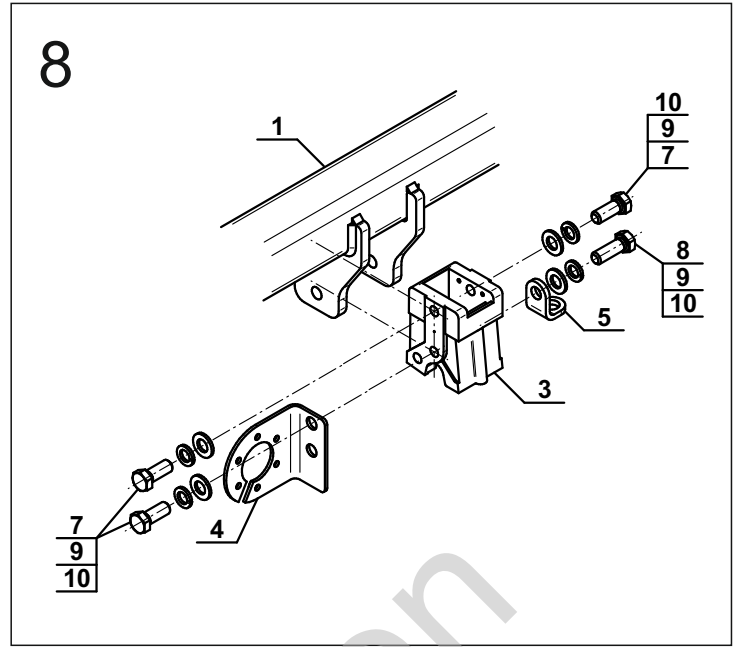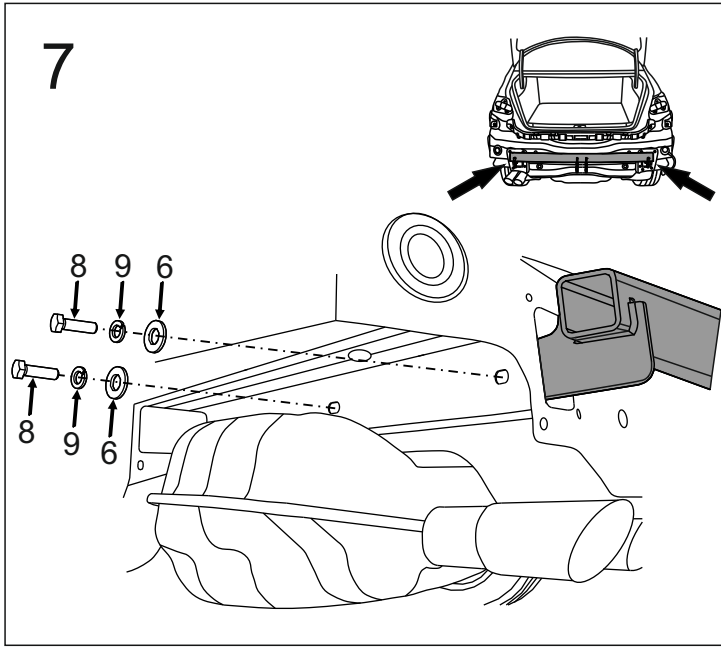

13

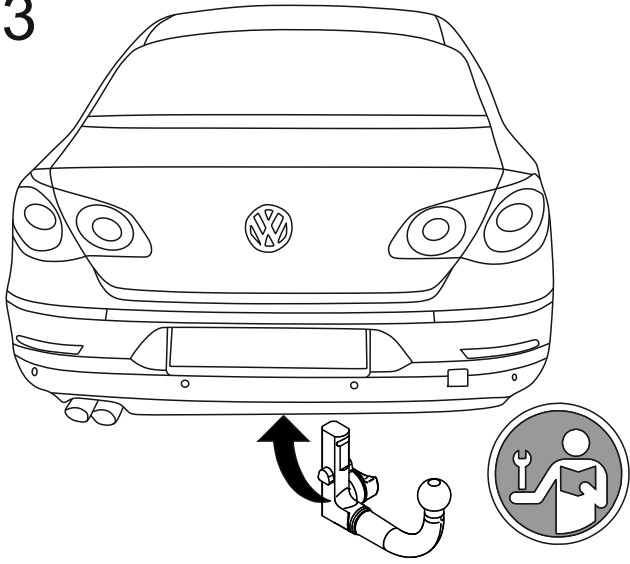

Olifant trekhaken