

Volvo XC60 I (~~R-Design~~),
(~~Momentum~~)

(2008 - 2017)

V-285


- PL** Zaczep Kulowy Instrukcja montażu i eksploatacji
- GB** Tow bar Installation and operating instructions
- D** Die Anhängerkupplung Montage- und Gebrauchsanleitung
- ES** Gancho de remolque Las instrucciones de instalación y de operación
- RU** Фаркоп Инструкция по установке и эксплуатации ТСУ
- FR** Attelage Notice de montage et d'utilisation
- IT** Gancio traino Istruzioni di montaggio
- CZ** Tažné zařízení Návod na montáž a použití
- RO** Cârlig de remorcare Instrucția de montaj și exploatare
- SE** Dragkulan Monterings- och bruksanvisningar.




YES NO



YES NO

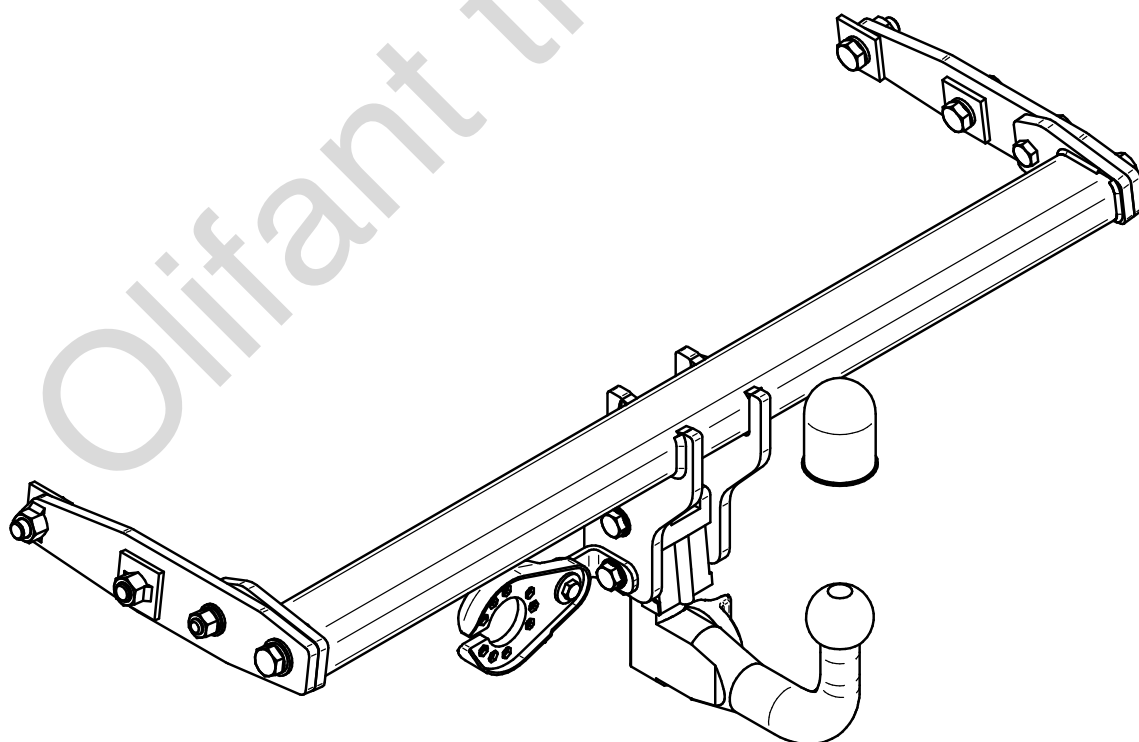

Typ: V-285
 A50-X
 e20 00-1364
 D = 11,0 kN
 S = 90 kg

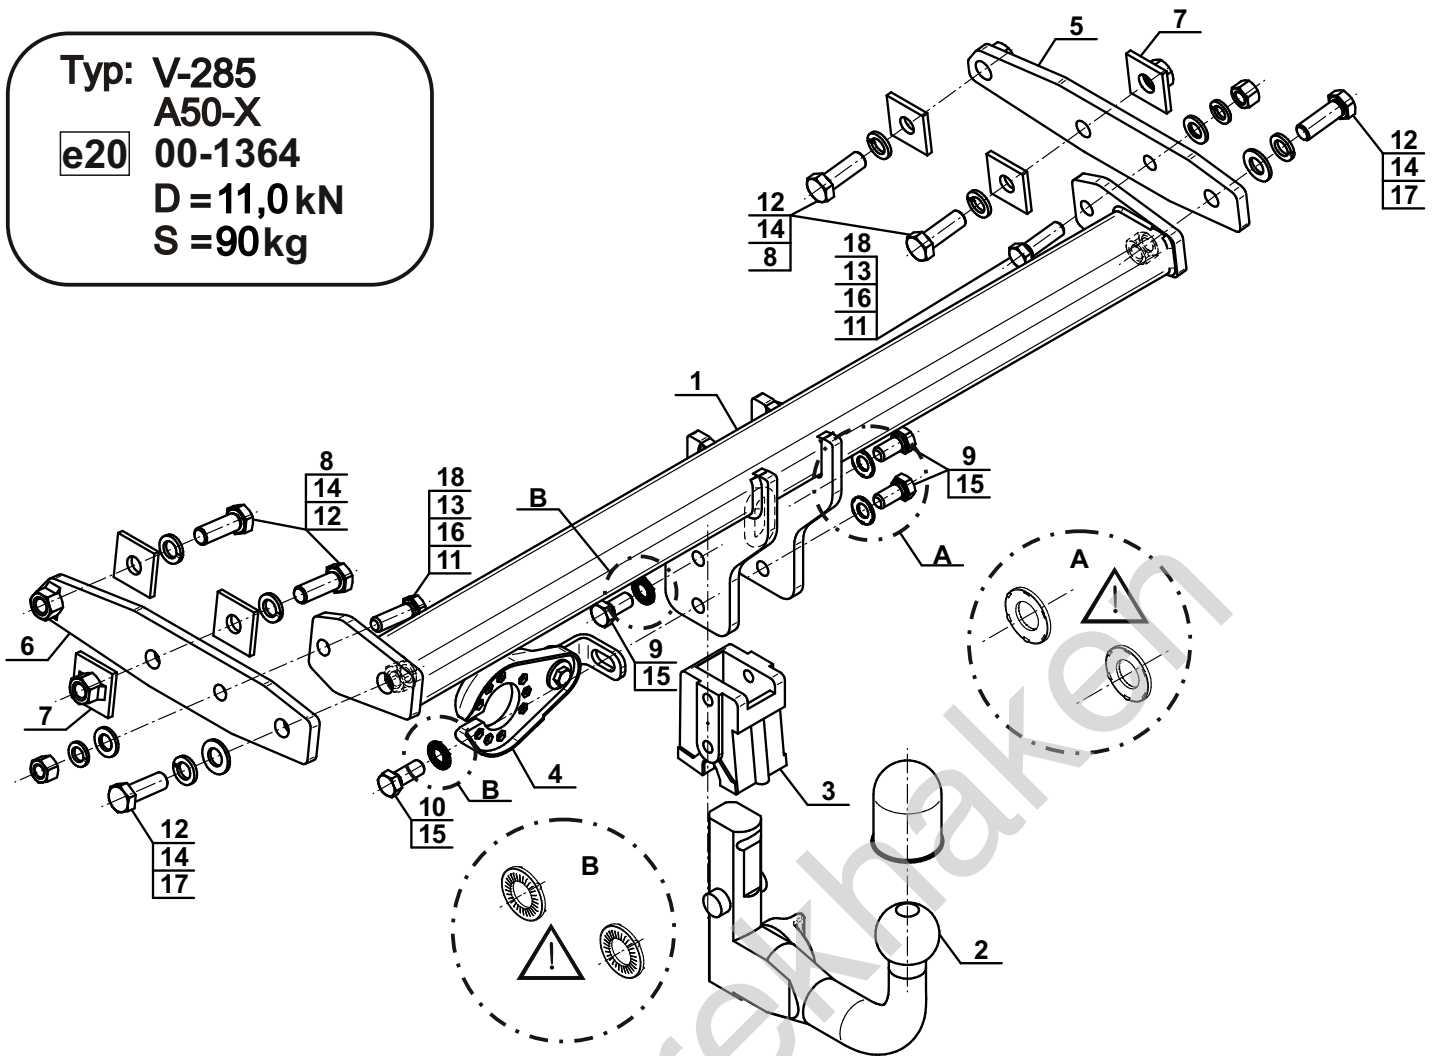


1		x1
2	(ACS-6023 / W10-6023) 	x1
3		x1
4	(CZ-050.00) 	x1
5		x1
6		x1
7		x2

8		40x40x5/Ø15	x4
9		M12x25 (PN/M-82105) (8.8)	x3
10		M12x30 (PN/M-82105) (8.8)	x1
11		M12x40 (PN/M-82105) (8.8)	x2
12		M14x40 (PN/M-82105) (8.8)	x6
13		Ø12,2	x2
14		Ø14,2	x6
15		Ø12,4 (NFE 25-511)	x4
16		Ø13,0	x2
17		Ø15,0	x2
18		M12 (8)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

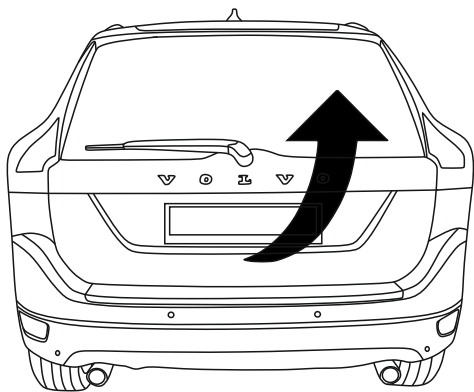


2

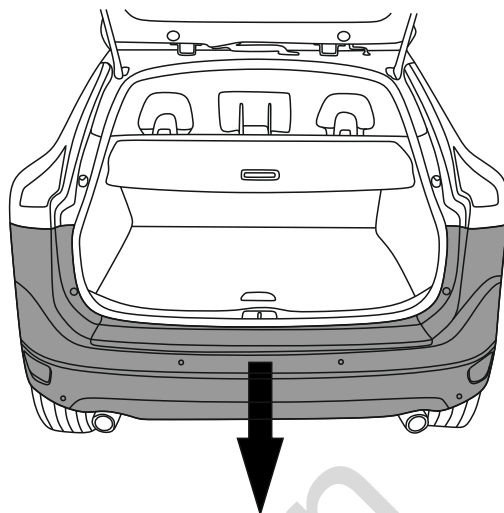


3

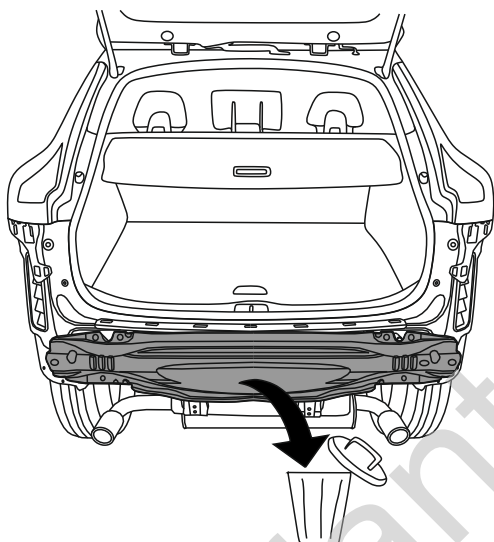

4

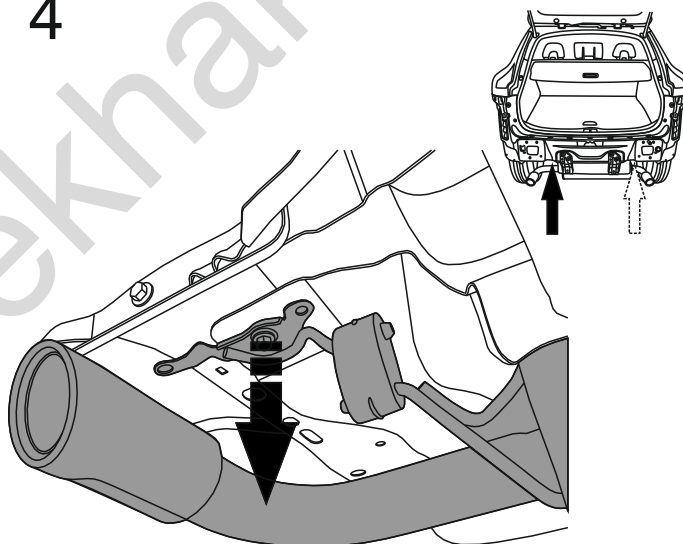

5

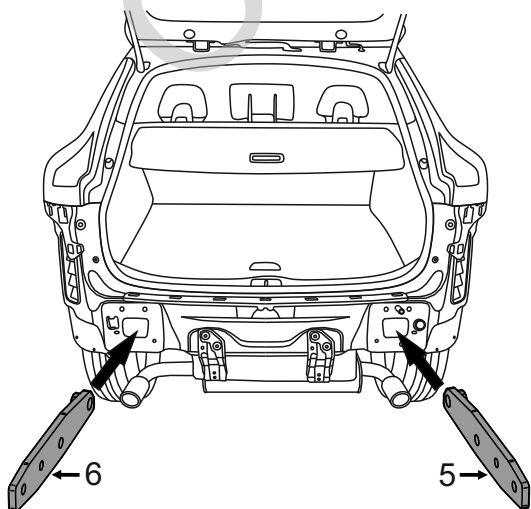

6

