

Volvo S60 (4D)
Volvo V60 (Kombi/Estate)

(08/2010 - 06/2018)
(11/2010 - 06/2018)

V-292


- PL** **Zaczep Kulowy** Instrukcja montażu i eksploatacji
- GB** **Tow bar** Installation and operating instructions
- D** **Die Anhängerkupplung** Montage- und Gebrauchsanleitung
- ES** **Gancho de remolque** Las instrucciones de instalación y de operación
- RU** **Фаркоп** Инструкция по установке и эксплуатации ТСУ
- FR** **Attelage** Notice de montage et d'utilisation
- IT** **Gancio traino** Istruzioni di montaggio
- CZ** **Tažné zařízení** Návod na montáž a použití
- RO** **Cârlig de remorcare** Instrucția de montaj și exploatare
- SE** **Dragkulan** Monterings- och bruksanvisningar.





YES NO



YES NO

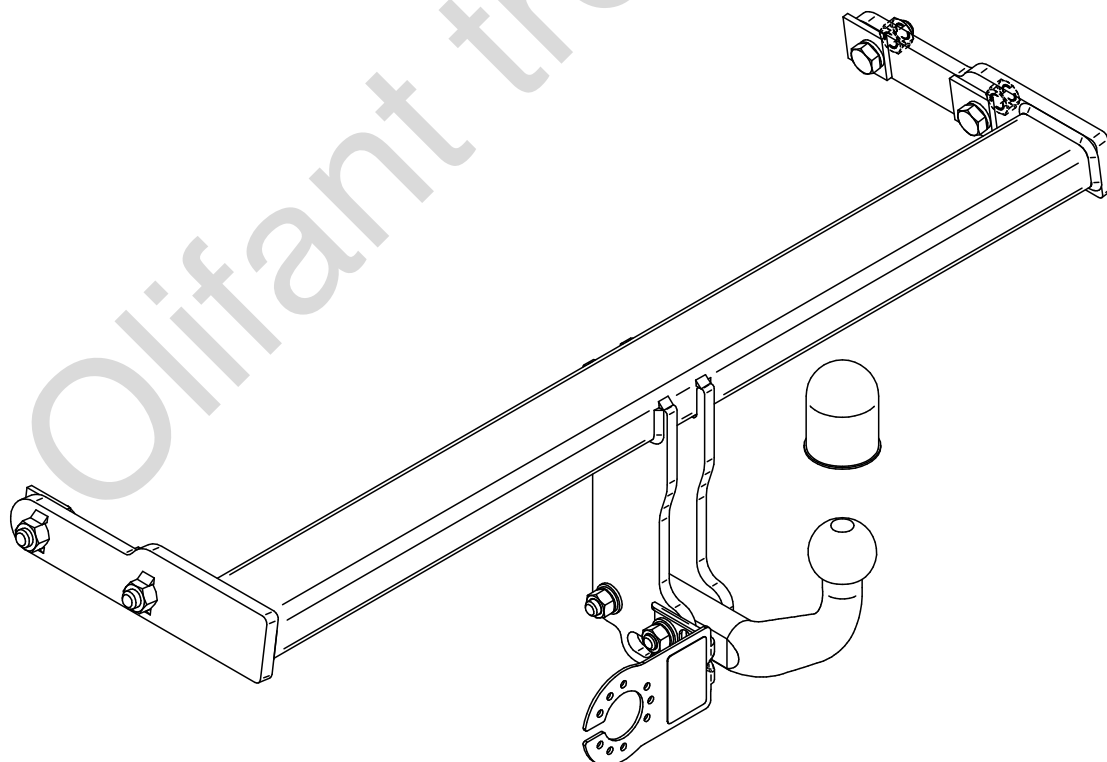

Typ: V-292
 A50-X
 e20 00-1581
 D = 10,2kN
 S = 80kg

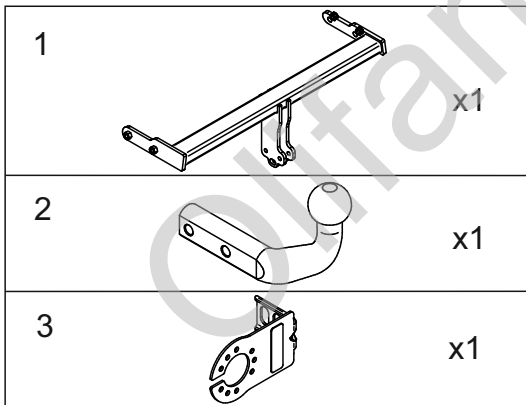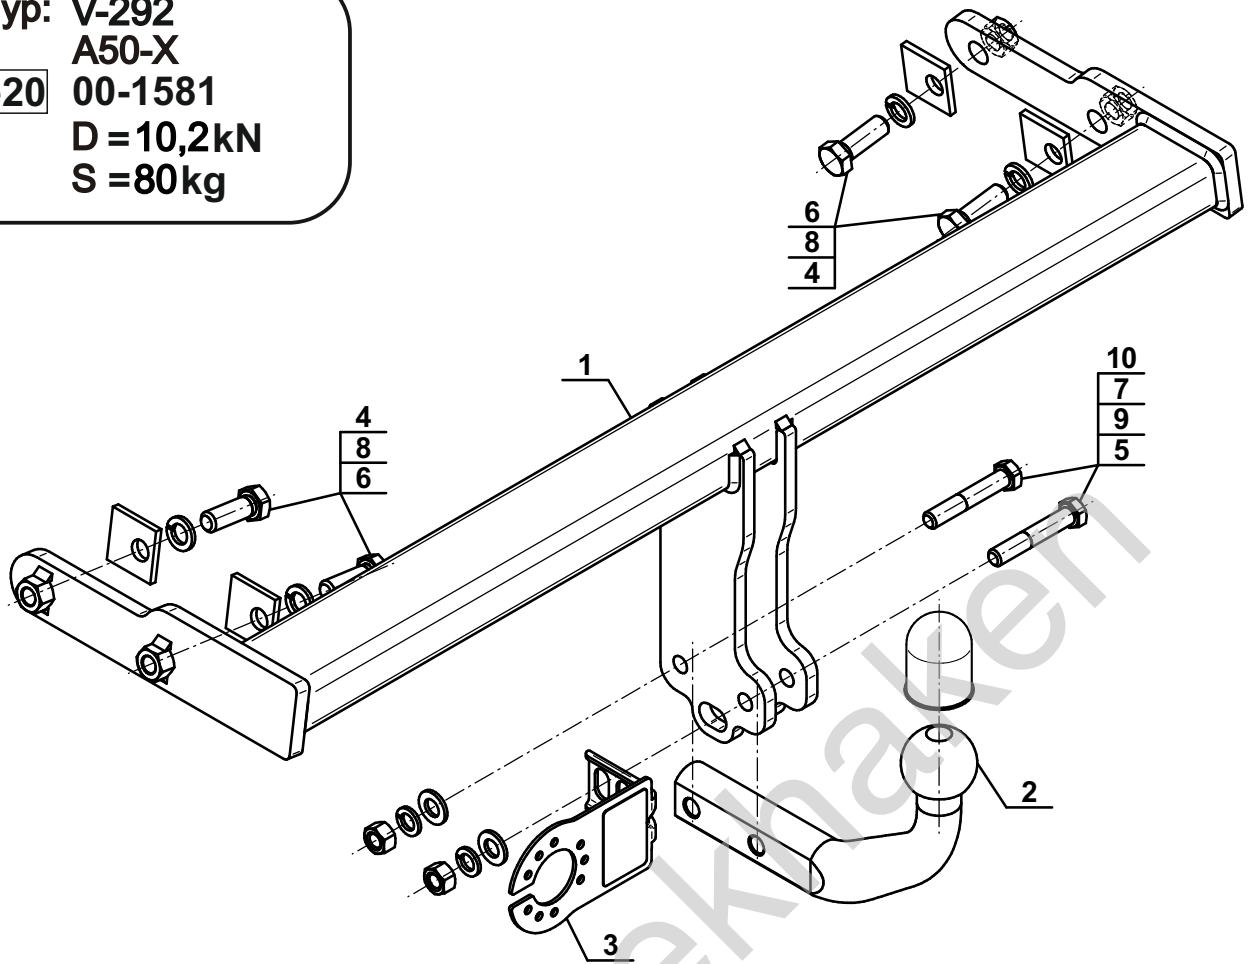


4		40x40x5/Ø15	x4
5		M12x70 (PN/M-82101) (8.8)	x2
6		M14x40 (PN/M-82105) (8.8)	x4
7		Ø12,2	x2
8		Ø14,2	x4
9		Ø13,0	x2
10		M12 (8)	x2




8.8	
M6 - 10 (Nm)	M12 - 85 (Nm)
M8 - 25 (Nm)	M14 - 135 (Nm)
M10 - 50 (Nm)	M16 - 200 (Nm)


1

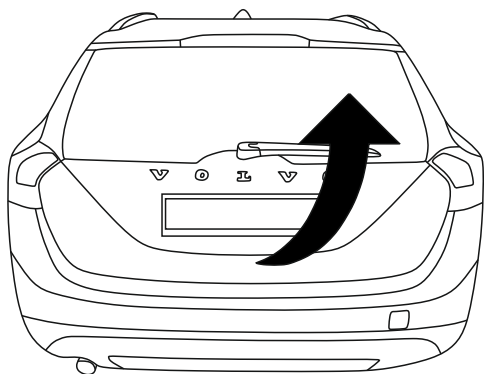


2

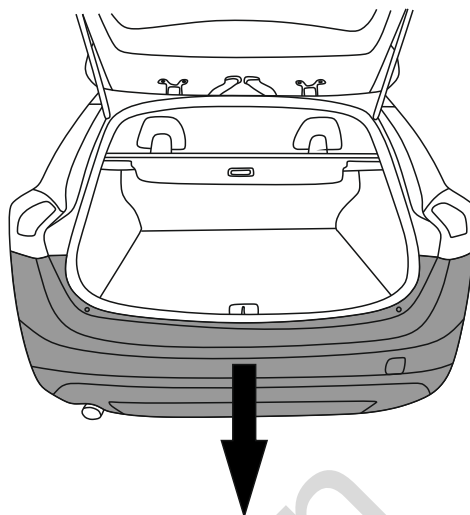


3

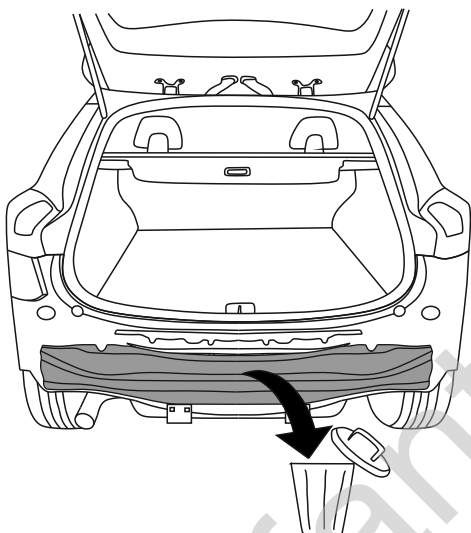

4

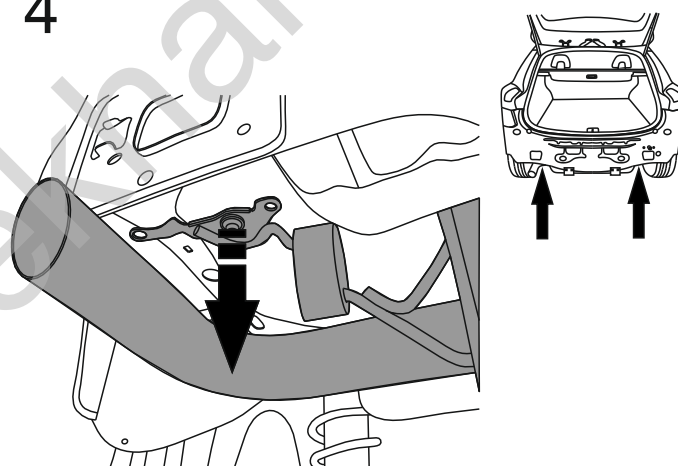

5

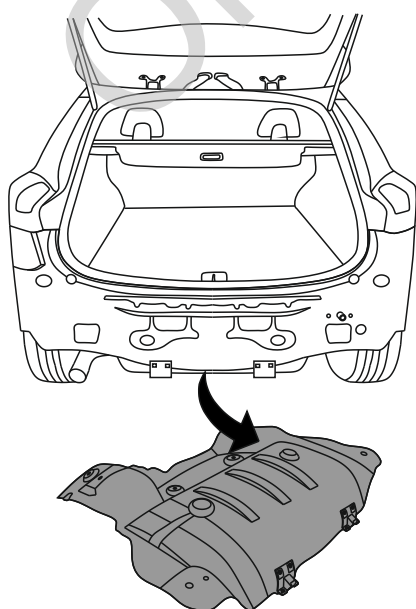

6

